

REPAIR SHEET

BRAND

RYOBI

DESCRIPTION


MODEL NO.

PBLPH01

MFG. NO.

317945008

 18 Volt Brushless Power Head

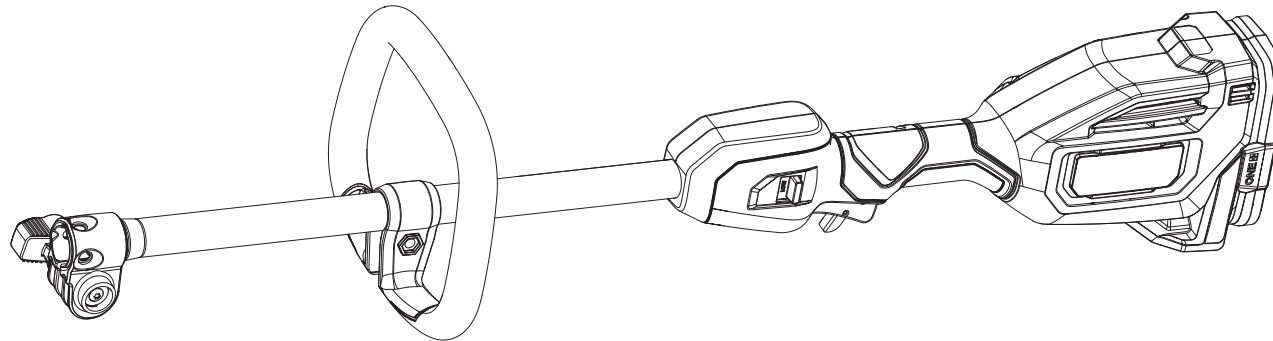


TTI OUTDOOR POWER EQUIPMENT, INC.

P.O. Box 1288, Anderson, SC 29622 ■ 1-800-525-2579 ■ www.ryobitools.com

9-08-25 (Rev:01)

 The model number and manufacturing location will be found on a label attached to the product. Always mention this information in all communications regarding this product and when ordering parts.

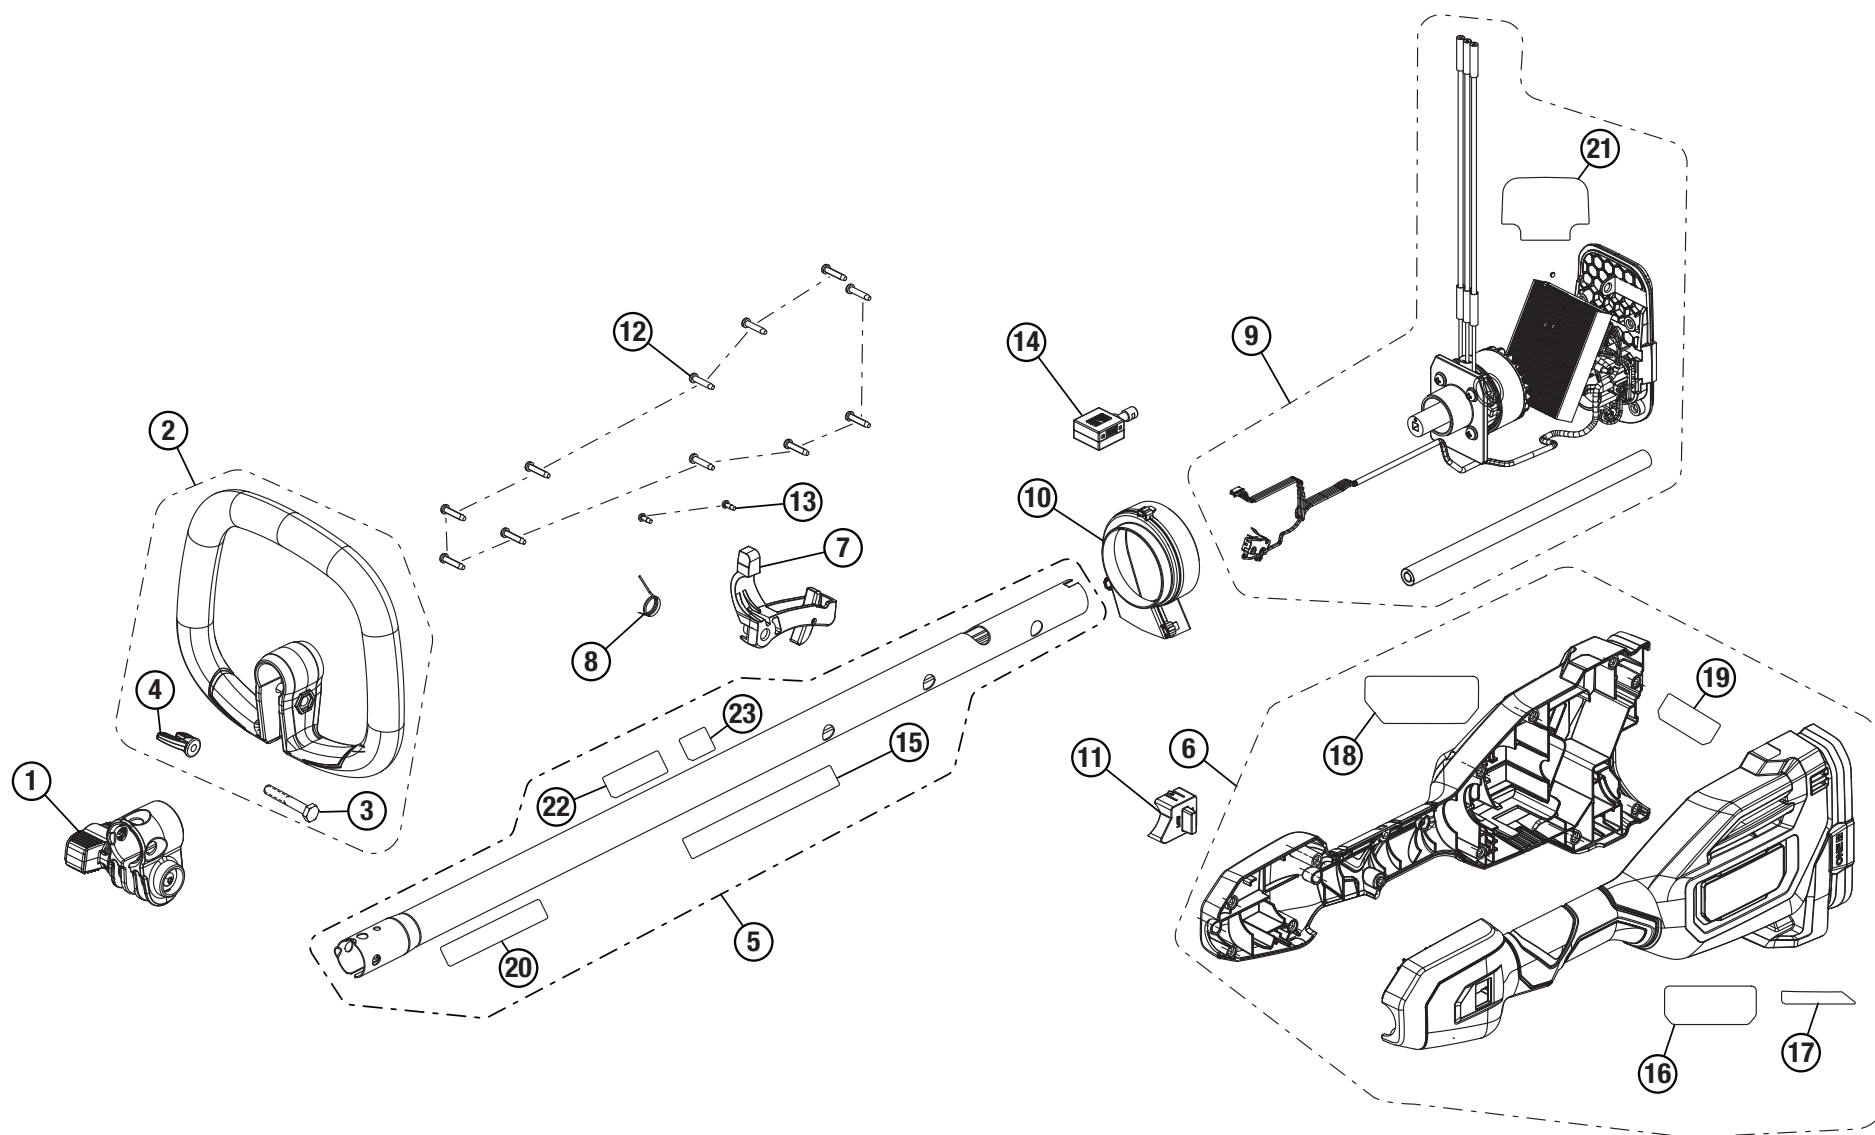



PBLPH01

PARTS LIST

KEY NO.	PART NO.	description	QTY.
1	315386002	Quick Connect Boom Clamp Assembly	1
2	308991003	Assist Handle & Faster Assembly	1
3	660643008	Screw Cap (Hex Hd.)	1
4	518949001	Wing Nut (1/4-20 UNC)	1
5	205828005	Upper Steel Boom Assembly (Inc. Key Nos. 15, 20, 22 & 23)	1
6	205826003	Rear Handle Assembly (Inc. Key Nos. 16-19)	1
7	315841002	Trigger & Lock Out Button Assembly	1
8	694572001	Spring	1
9	205435015	Motor, Gear Box, Switch & Contact Plate Assembly (Inc. Key No. 21)	1
10	205443015	Motor Cooling Volute Assembly	1
11	539255002	High-Low Speed Switch Trigger	1
12	661864007	Screw (M4 x 18 mm)	11
13	660203052	Screw (M3 x 1.058, PH Hd.)	2

KEY NO.	PART NO.	description	QTY.
14	760777004	Signal Switch	1
15	941263529	HP Brushless Ryobi Label	1
16	941201158	ONE+ Ryobi Label	1
17	941263530	Whisper Label	1
18	941263531	Warning Label	1
19	941201181	Brushless 32 mm Standard Label	1
20	941263388	Attachment Label	1
21	941263528	Data Label	1
22	941263532	QR Code Label	1
23	940779563	Handle Position Label	1
	Not Shown:		
	999000542	Operator's Manual	