

RY142012 QUICK REFERENCE GUIDE




WARNING:


This Quick Reference Guide is not a substitute for reading the operator's manual. To reduce the risk of injury or death, user must read and understand operator's manual before using this product. All page references refer to the operator's manual.

FIRST TIME ASSEMBLY

- 1** Place the trigger handle holder on the handle and secure with included screw. To install handle, press the release button, then push all the way down into unit. Use two of the included screws found in accessories bag to screw into each side of the housing to attach the handle assembly to the unit. (see page 8).

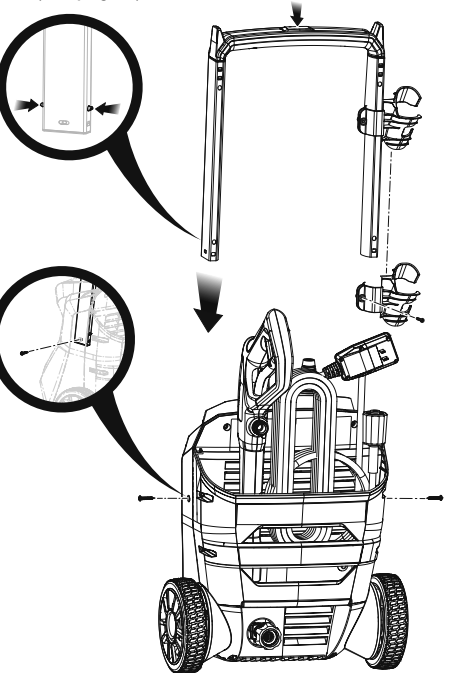


- 2** Connect the spray wand to the trigger handle (see page 8).

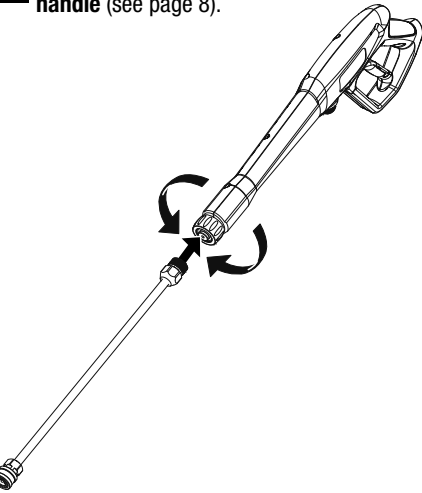


RYOBI


- 3** Connect the high pressure hose to the trigger handle (see page 8).

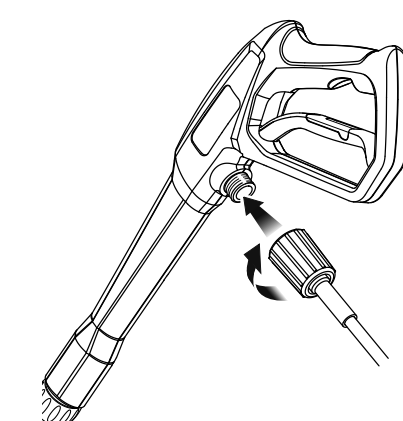

- 4** Connect the high pressure hose to the pump (see page 8).

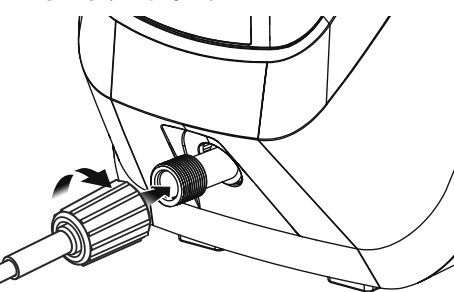

- 5** Connect the garden hose to the pressure washer (see page 9).

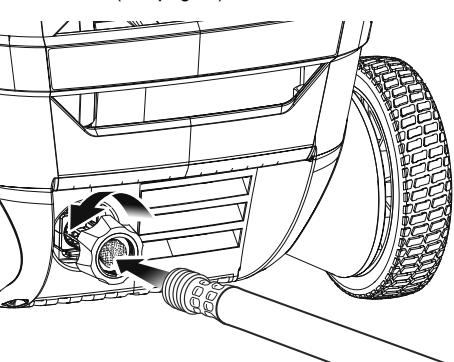

Completely uncoil garden hose or remove completely from reel to prevent kinks.


Turn water faucet on fully.

Make sure there are no leaks.


With no nozzle installed, squeeze the trigger to relieve air pressure. Hold the trigger until a steady stream of water appears.

STARTING THE UNIT

- 1** Connect the pressure washer to the power supply. Press the reset button on the plug to make sure the unit is ready for operation (see page 10).

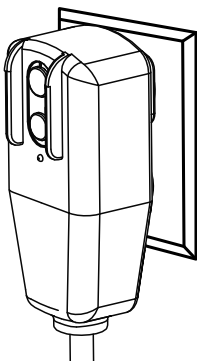

If using an extension cord, arrange a drip loop to avoid the possibility of the tool plug getting wet (see pages 2 and 7).

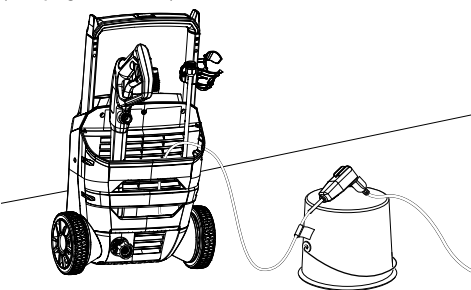


USE ONLY THIS SIZE EXTENSION CORD WHEN USING THIS PRODUCT:


Cord Length	Wire Size (A.W.G.)
25 ft.	14
50 ft.	12
100 ft.	Not Allowed

NOTE: A.W.G. = American Wire Gauge

- 2** Press button ON to start the motor (see page 10).

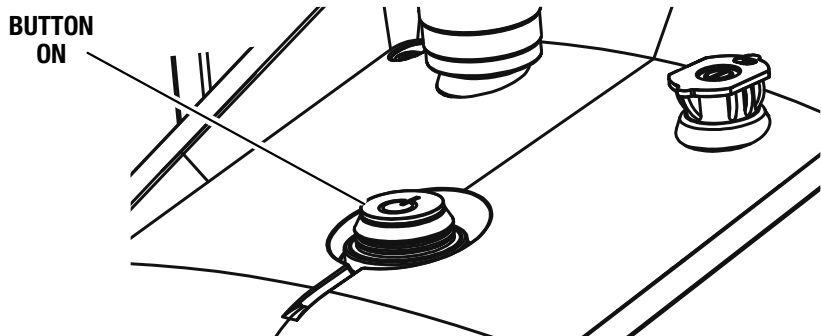


- 3** When finished, press button OFF to stop the motor (see page 10).

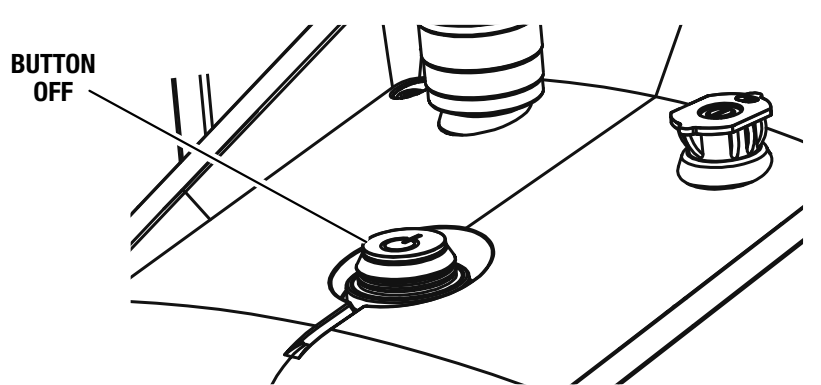


Your pressure washer has been performance tested to ensure high quality standards are met.
There may be residual water in the pump.

USING SOAP

- 1** Remove the spray wand. Fill foamer with soap. Attach foamer to trigger handle (see page 12).

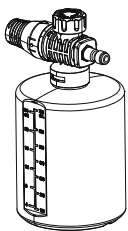

- 2** Squeeze trigger and wait approx. 5 seconds for soap (see page 12).

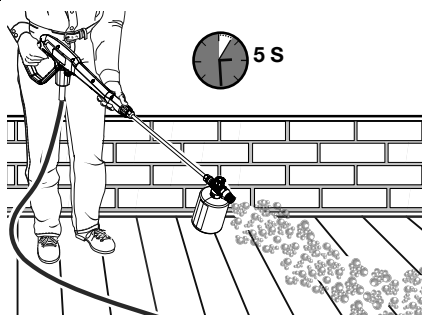

Use of foamer will activate soap injector at a 20:1 dilution ratio.

WARNING! Never use bleach or solvent-based detergent.

- Will damage your pump
- Will void your warranty
- Will damage plants/shrubs

NOZZLE SELECTION GUIDE

Use the chart below to determine the correct nozzle for your job.

TURBO NOZZLE 15° FOAMER	HIGH PRESSURE (NO SOAP)		LOW PRESSURE (FOAMER)
	Turbo Nozzle	15°	Short Range
ABRASIVE			
GENTLE			
Concrete, Brick, Masonry	✓	✓	✓
Siding, Gutters, House		✓	✓
Fencing, Deck, Patio		✓	✓
Lawn Equipment, Boat, RV		✓	✓
✓ Recommended Nozzle ✓ Use With Caution for Certain Applications			

BEFORE STORING THE UNIT

- 1** Always add Pump Protector to the unit after each use and before storing. This will significantly improve pump life (see pages 11 - 12). Pump protector is available from your local retailer. For further assistance, call customer service at 1-800-525-2579. To add, follow the instructions provided by the Pump Protector manufacturer.



Make the most of your purchase! Go to www.ryobitools.com and register your new tool online. For questions about operating or maintaining your product please call, 1-800-525-2579.