

REPAIR SHEET

BRAND

RYOBI

MODEL NO.

 
RY40HPPH02

MFG. NO.

317945009

DESCRIPTION

40 Volt Brushless Power Head

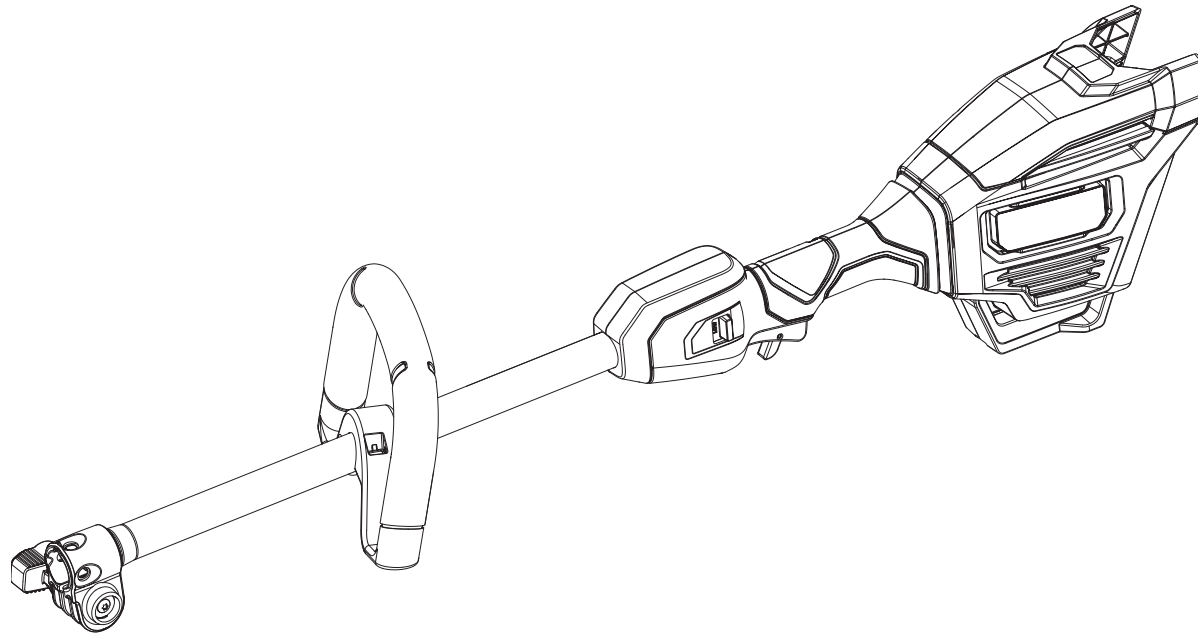


TTI OUTDOOR POWER EQUIPMENT, INC.

P.O. Box 1288, Anderson, SC 29622 ■ 1-800-525-2579 ■ www.ryobitools.com

9-04-25 (Rev:01)

 The model number and manufacturing location will be found on a label attached to the product. Always mention this information in all communications regarding this product and when ordering parts.

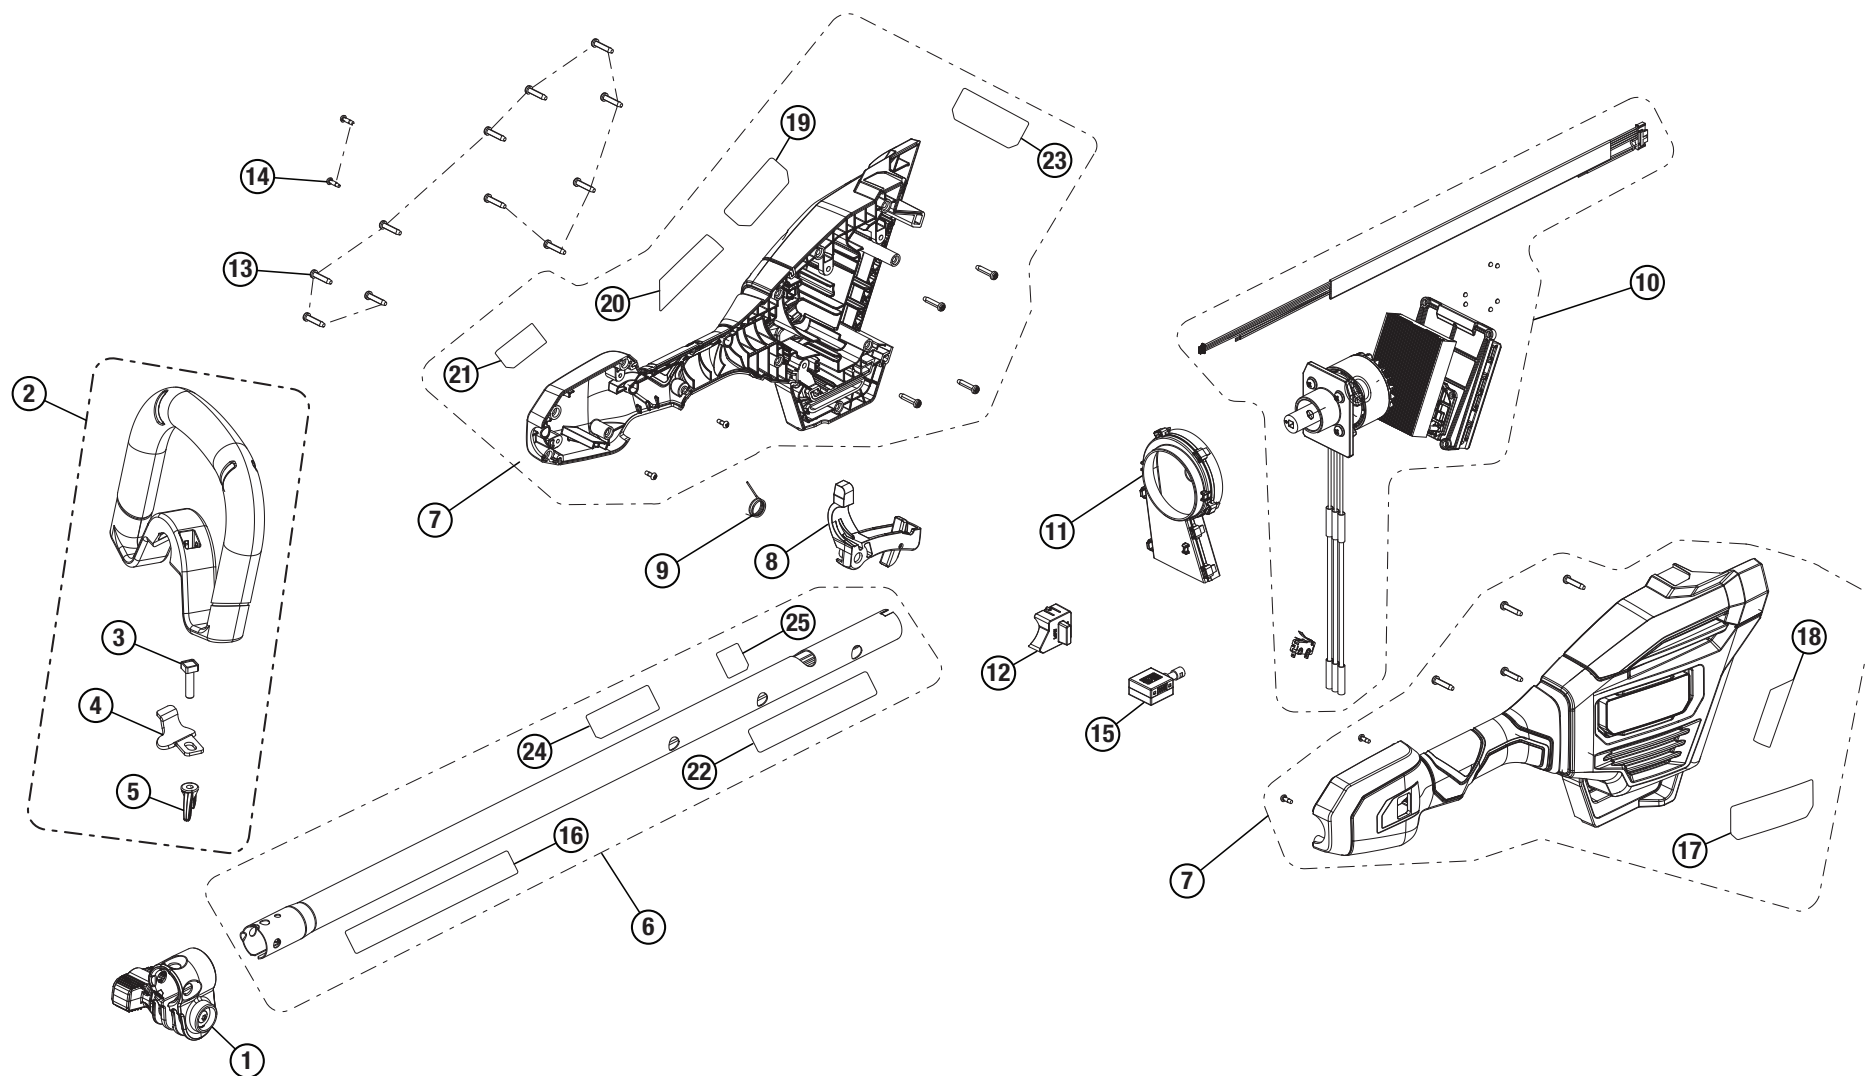



RY40HPPH02

PARTS LIST

KEY NO.	PART NO.	DESCRIPTION	QTY.
1	315386002	Quick Connect Boom Clamp Assembly	1
2	308056009	Assist Handle Assembly	6
3	660857001	Screw	1
4	639167001	Steel Clamp	1
5	518949001	Wing Nut	1
6	205828006	Upper Steel Boom Assembly (Inc. Key Nos. 16, 22, 24 & 25)	1
7	205826004	Rear Handle Assembly (Inc. Key Nos. 17-21 & 23)	1
8	315841002	Trigger & Lock Out Button Assembly	1
9	694572001	Spring	1
10	205435016	Motor, Gear Box, Switch & Contact Plate Assembly	1
11	205443016	Motor Cooling Volute Assembly	1
12	539255002	High-Low Speed Switch Trigger	1
13	661864007	Screw (M4 x 18 mm, T15)	1
14	660005006	Screw (M3 x 10 mm)	2

KEY NO.	PART NO.	DESCRIPTION	QTY.
15	760777004	Signal Switch	2
16	941263388	Guard Adjustment Label	1
17	941201175	40V HP Label	1
18	941263538	Whisper Label	1
19	941263539	Warning Label	1
20	941263541	Data Label	1
21	941263540	Icon Label	1
22	941263367	Attachment Label	1
23	940779887	Brushless 44 mm Standard Label	1
24	941263536	QR Code Label	1
25	940779563	Handle Position Label	1
	Not Shown:		
	999000283	Operator's Manual	