


RY803000E QUICK REFERENCE GUIDE

⚠ WARNING:


This Quick Reference Guide is not a substitute for reading the operator's manual. To reduce the risk of injury or death, user must read and understand operator's manual before using this product. All page references refer to the operator's manual.

FIRST TIME ASSEMBLY


1 Install the handle (see page 7).

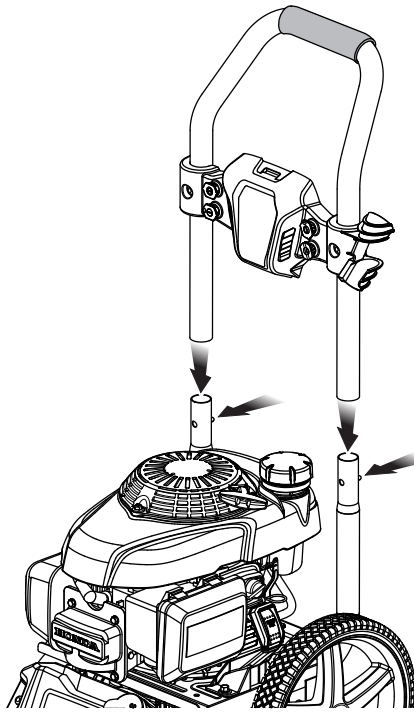

 
2 Connect the spray wand to the trigger handle (see page 7).

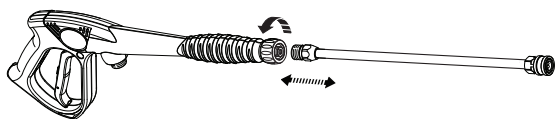


3 Remove the cap from the plug on the battery. Connect the starter cable on the pressure washer to the connection port on the battery, making sure the plug is fully seated. (See page 7)
NOTE: Fully charge the battery prior to use (see page 15).

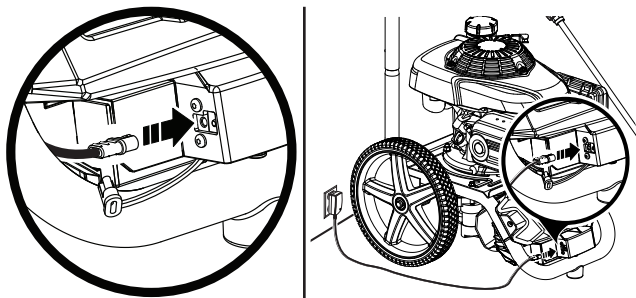

4 Connect the high pressure hose to the trigger handle (see page 8).

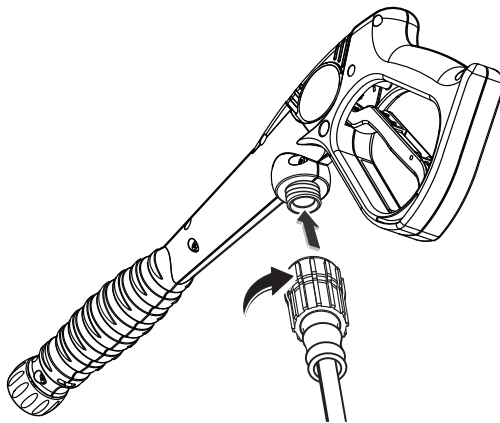


5 Connect the high pressure hose to the pump (see page 8).

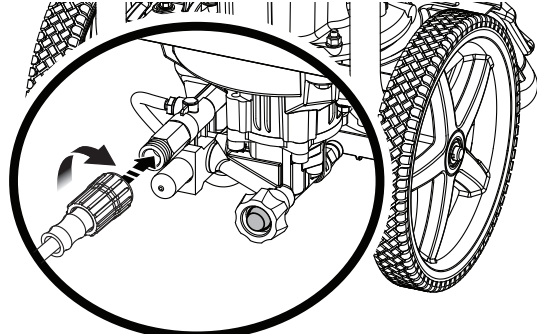

Completely uncoil and straighten high pressure hose to prevent kinks.

6 Connect your garden hose to the pressure washer (see page 8).

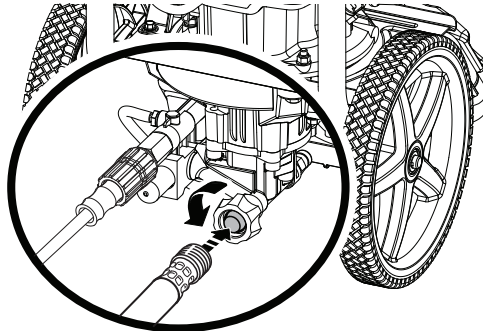

Completely uncoil garden hose or remove completely from reel to prevent kinks.



Turn water faucet on fully.




Make sure there are no leaks.



With no nozzle installed, squeeze the trigger to relieve air pressure. Hold the trigger until a steady stream of water appears.

7 Pour all but 2 oz. of the provided lubricant into the engine through the oil fill hole. Check and add additional lubricant as needed until the level reaches the upper portion of the hatched area on the dipstick. Do not overfill. (See page 10)

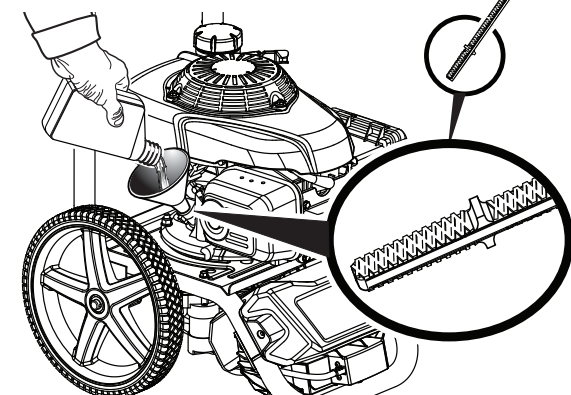


Turn the fuel valve to OFF before adding lubricant.



Set unit on flat surface so engine is level. Remove dipstick, wipe clean, put back in hole (but don't screw in) and check lubricant level.

DO NOT OVERTILT THE UNIT!

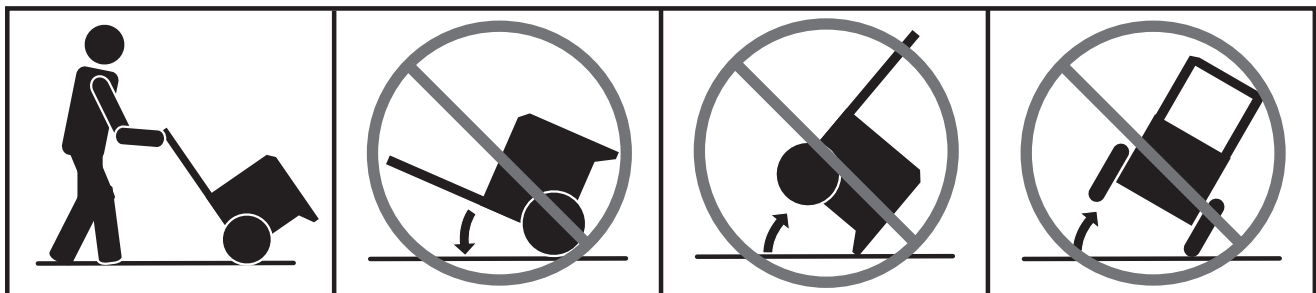


STARTING THE UNIT (COLD START)

1 Add fuel (see page 10).

NOTICE:

Do not use E15 or E85 fuel in this product. It is a violation of federal law and will damage the unit and void your warranty. Only use unleaded gasoline containing up to 10% ethanol.

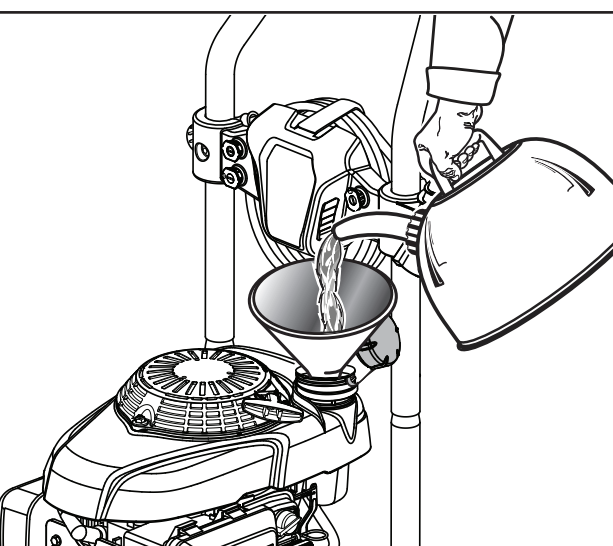


This is a 4-cycle engine. Do not mix fuel and lubricant together.




Mix fuel stabilizer with gasoline according to manufacturer's directions prior to filling the tank.

2 Turn the fuel valve to open (see page 11).

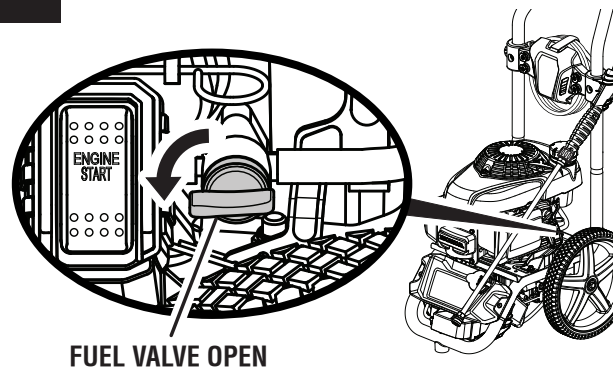


FUEL VALVE OPEN

3 Pull choke lever all the way out to start position (see page 11).

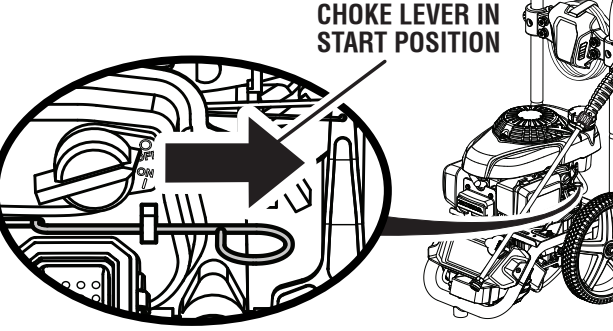


CHOKE LEVER IN START POSITION

4 Put on/off switch in ON position (see page 11).

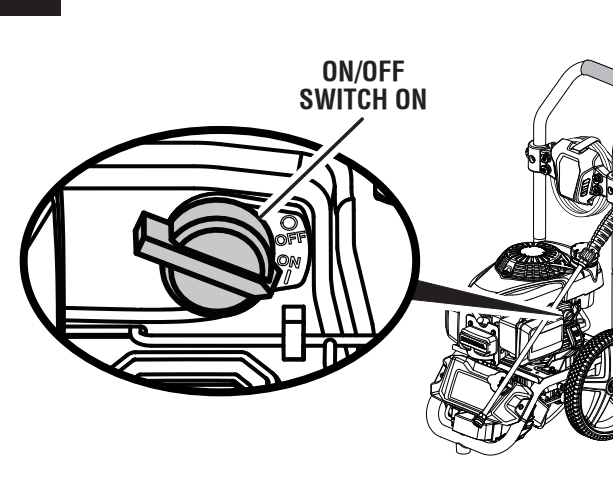


ON/OFF SWITCH ON

5 Push the start button to start engine. Engine can also be started by pulling the recoil starter grip until engine starts. (see page 11)

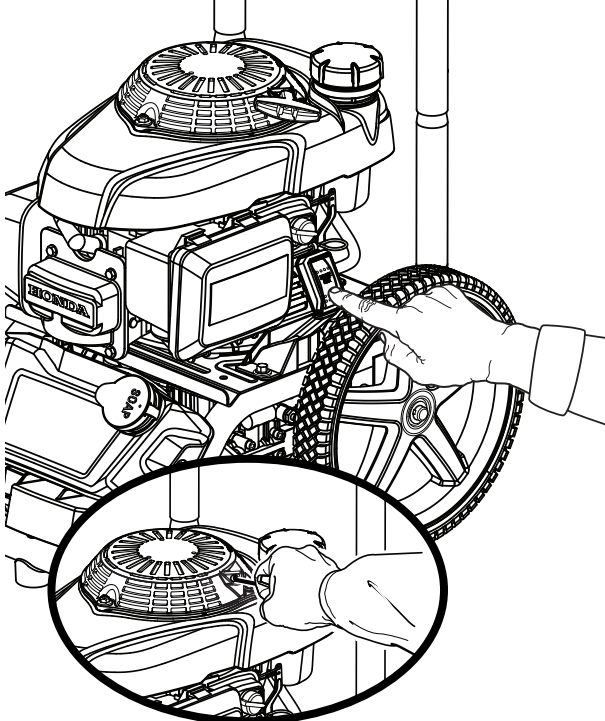


6 Allow engine to run for several seconds, then push in choke to the run position (see page 11).

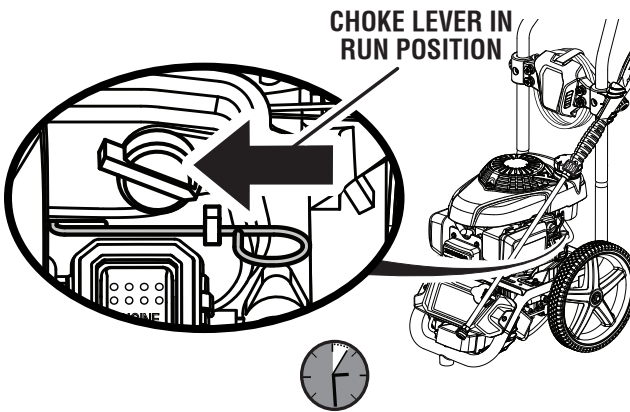

CHOKE LEVER IN RUN POSITION

RESTARTING THE UNIT (HOT RESTART)

1 Push the start button to start engine. Engine can also be started by pulling the recoil starter grip until engine starts. (see page 11)

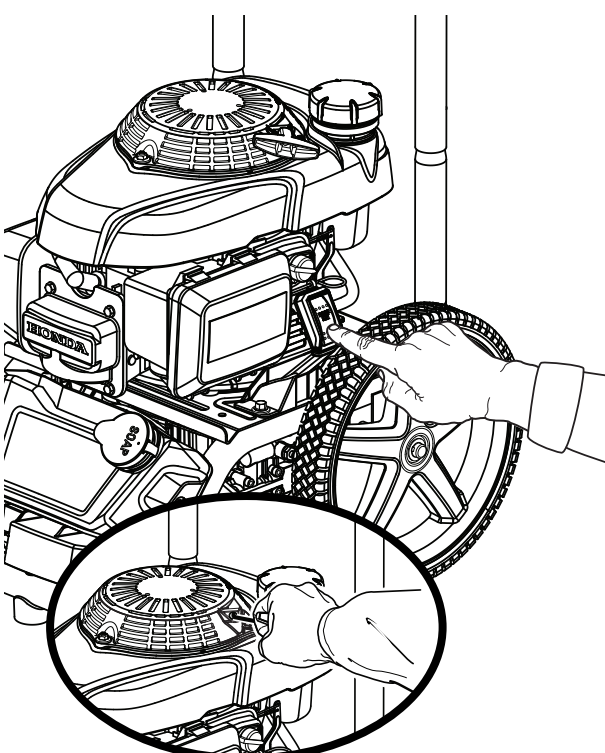


If the engine does not start:

- check for enough fuel;
- may need to adjust choke position;
- try starting again.

There may be residual water in the pump and/or lubricant in the engine due to performance testing.

USING DETERGENT


1 Pour pressure washer detergent in soap tank (see page 13).

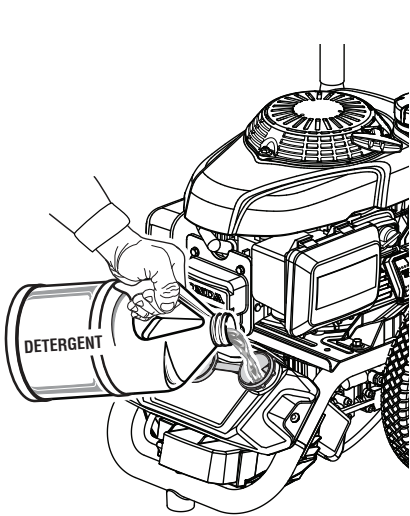

2 Install blue or black soap nozzle (see page 12).



3 Squeeze trigger and wait approx. 5 seconds for soap (see page 13).

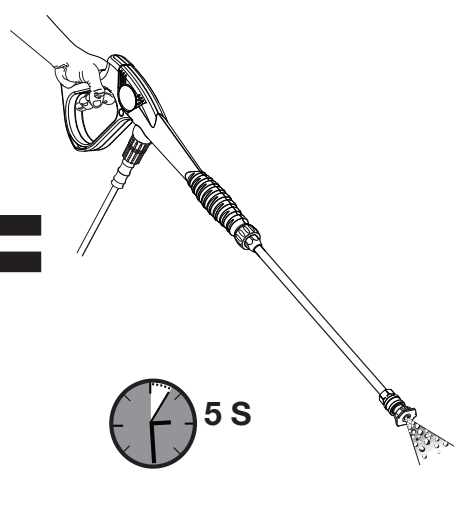

Use of soap nozzle will activate soap injector at a 20:1 dilution ratio.

WARNING! Never use bleach or solvent-based detergent.

- Will damage your pump
- Will void your warranty
- Will damage plants/shrubs

NOZZLE SELECTION GUIDE

Use the chart below to determine the correct nozzle for your job.

0°	25°	40°	SOAP	HIGH PRESSURE (NO SOAP WHEN USING THESE NOZZLES)			LOW PRESSURE (FOR SOAP OR GENTLE RINSE)
				0° Red	25° Green	40° White	Blue or Black Soap Nozzle
ABRASIVE				GENTLE			
Concrete, Brick, Masonry				✓	✓	✓	✓
Siding, Gutters, House					✓	✓	✓
Fencing, Deck, Patio					✓	✓	✓
Lawn Equipment, Boat, RV					✓	✓	✓
				✓ Recommended Nozzle ✓ Use With Caution for Certain Applications			

BEFORE STORING THE UNIT

1 Always add Pump Protector to the unit after each use and before storing. This will significantly improve pump life. (See page 13)
Pump Protector is available from your local retailer. For further assistance, call customer service at 1-800-860-4050.
To add, follow the instructions provided by the Pump Protector manufacturer.



Make the most of your purchase! Go to www.ryobitools.com and register your new tool online. For questions about operating or maintaining your product, please call 1-800-860-4050.