


RY80533 QUICK REFERENCE GUIDE

**WARNING:**
This Quick Reference Guide is not a substitute for reading the operator's manual. To reduce the risk of injury or death, user must read and understand operator's manual before using this product. All page references refer to the operator's manual.

FIRST TIME ASSEMBLY


1

Install the handle (see page 7).

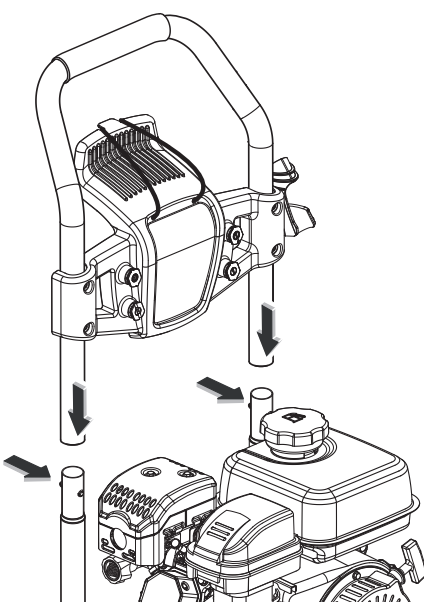


2

Connect the spray wand to the trigger handle (see page 7).

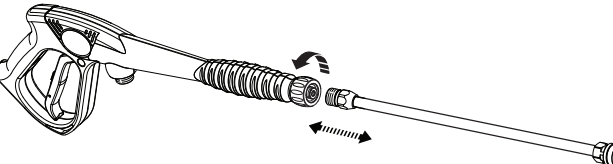


3

Connect the high pressure hose to the trigger handle (see page 7).

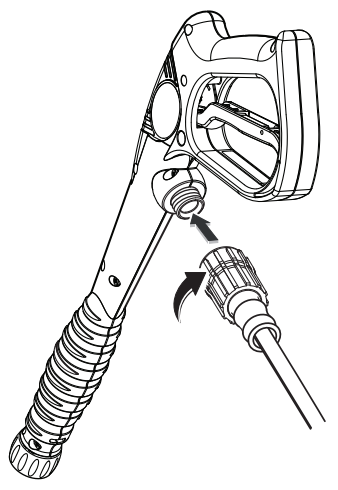

4

Connect the high pressure hose to the pump (see page 7).

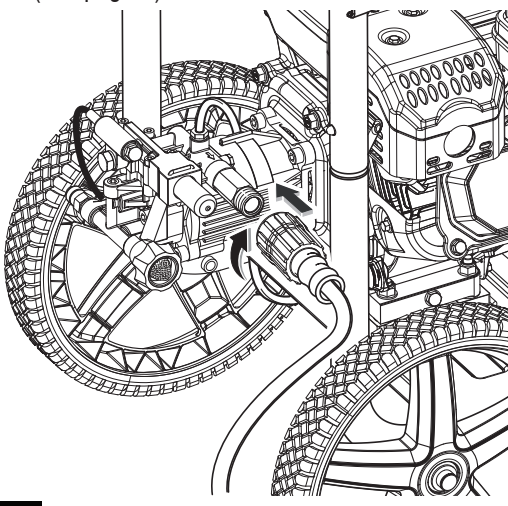




Completely uncoil and straighten high pressure hose to prevent kinks.

5

Connect your garden hose to the pressure washer (see page 8).

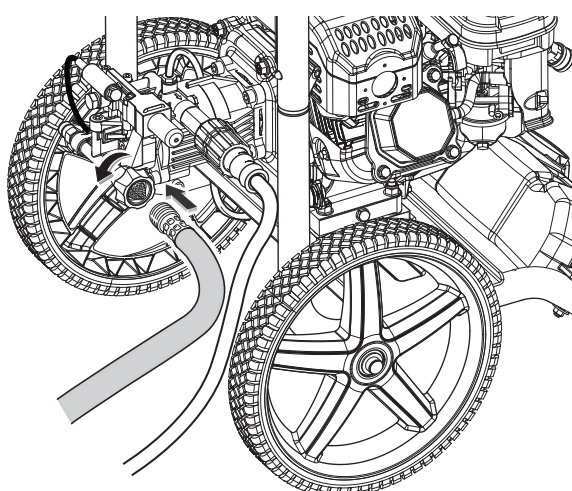



Completely uncoil garden hose or remove completely from reel to prevent kinks.



Turn water faucet on fully.




Make sure there are no leaks.



With no nozzle installed, squeeze the trigger to relieve air pressure. Hold the trigger until a steady stream of water appears.

6

Add entire bottle of lubricant provided to the pressure washer (see page 9).

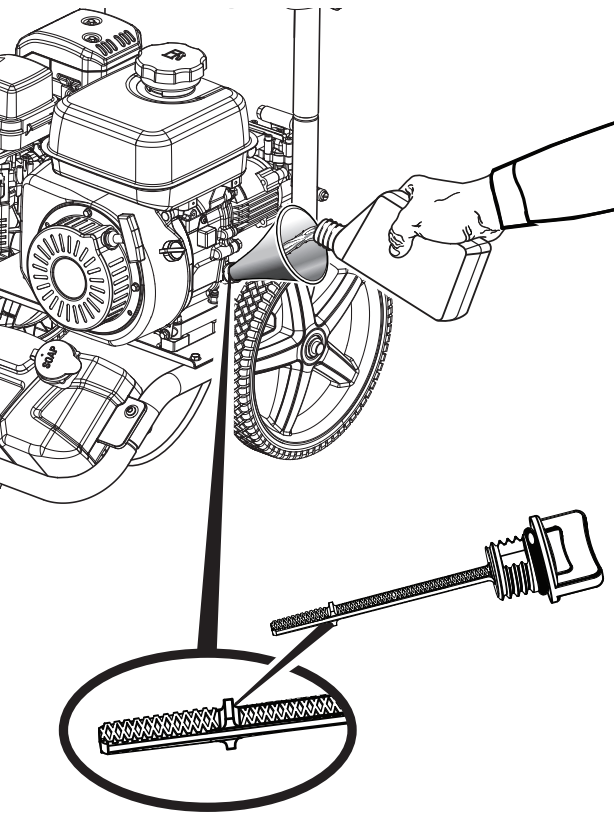



Turn the fuel valve to OFF before adding lubricant.




Set unit on flat surface so engine is level. Remove dipstick, wipe clean, put back in hole (but don't screw in) and check oil level.

DO NOT OVERTILT THE UNIT!





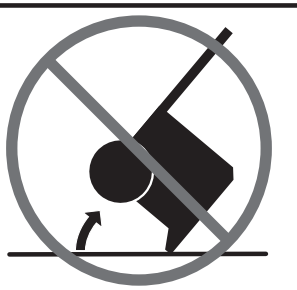




STARTING THE UNIT (COLD START)

1

Add fuel (see page 10).


NOTICE:

Do not use E15 or E85 fuel in this product. It is a violation of federal law and will damage the unit and void your warranty. Only use unleaded gasoline containing up to 10% ethanol.

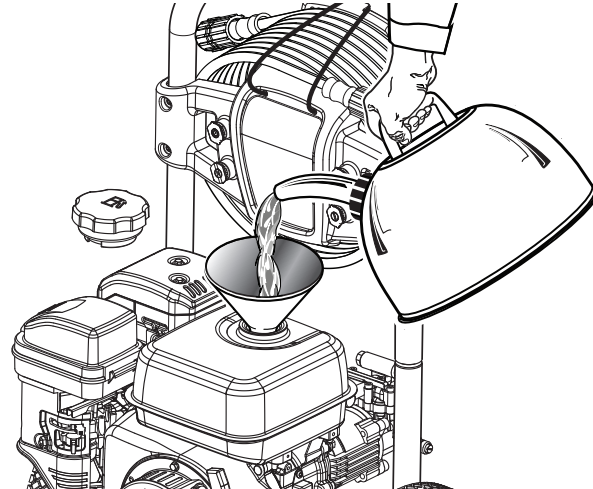


2

Move the fuel valve to OPEN (see page 10).

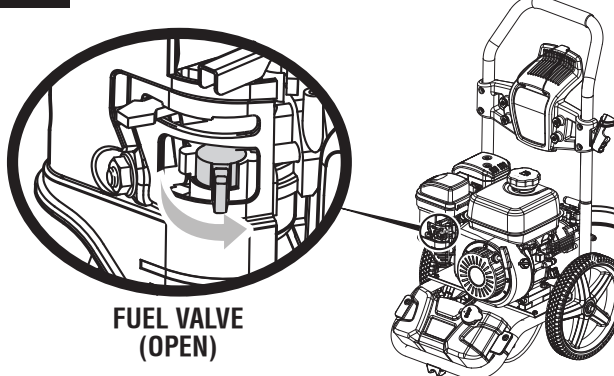


5

Pull starter grip and rope to start (see page 10).

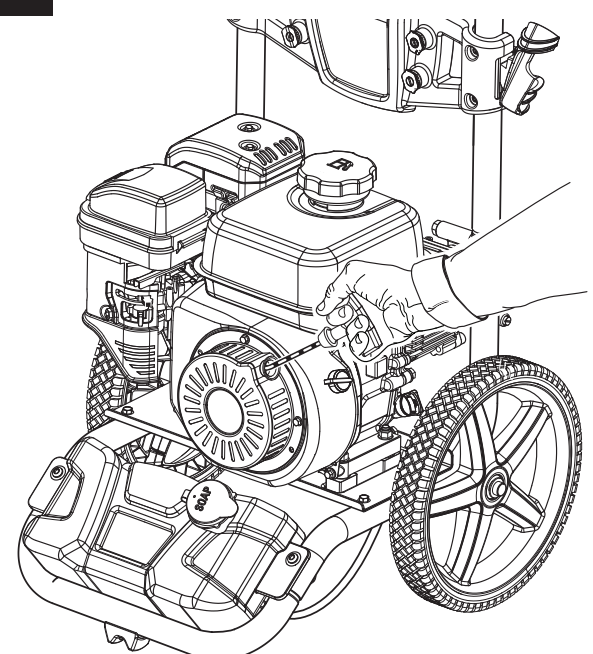

6


Allow engine to run for several seconds, then move choke lever to RUN position (see page 10).

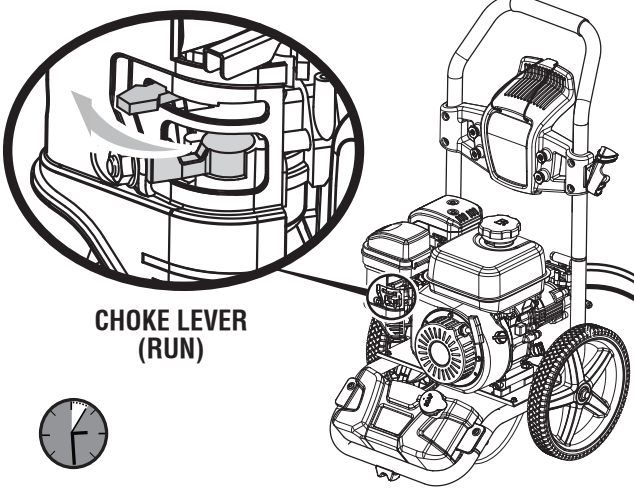

RESTARTING THE UNIT (HOT RESTART)

1


Pull starter grip and rope to start (see page 10).

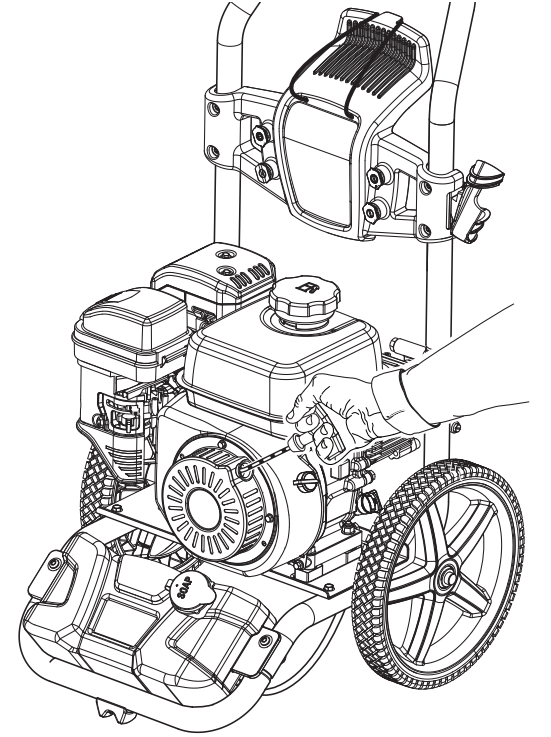

USING DETERGENT

1

Pour pressure washer detergent in soap tank (see page 12).

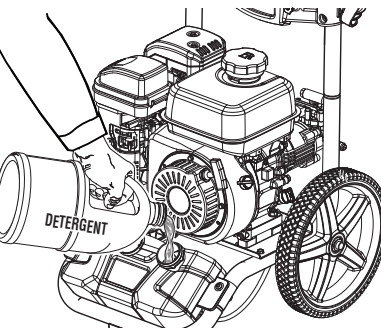


2

Install blue soap nozzle (see page 11).



3

Squeeze trigger and wait approx. 5 seconds for detergent (see page 12).

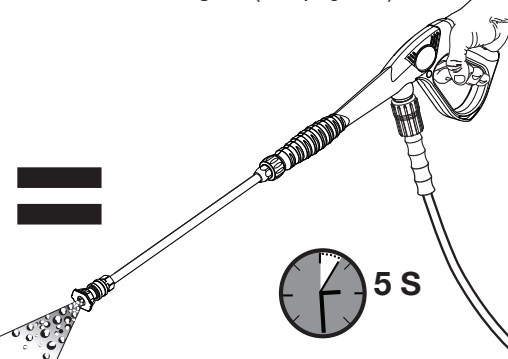



Use of soap nozzle will activate soap injector at a 20:1 dilution ratio.


WARNING!

Never use bleach or solvent-based detergent.

• Will damage your pump

• Will void your warranty

• Will damage plants/shrubs

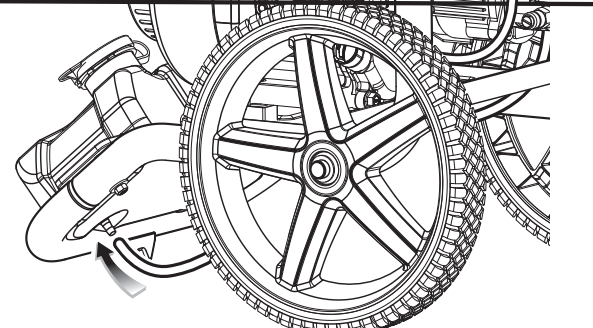

If soap injection hose comes loose from pressure washer, reattach it here.

NOZZLE SELECTION GUIDE

Use the chart below to determine the correct nozzle for your job.

	0°	25°	40°	SOAP				
					HIGH PRESSURE (NO SOAP WHEN USING THESE NOZZLES)			LOW PRESSURE (FOR SOAP OR GENTLE RINSE)
					0° Red	25° Green	40° White	Blue Soap Nozzle
					↑	▼	▼	•••
	ABRASIVE			GENTLE				
Concrete, Brick, Masonry		✓	✓	✓	✓			
Siding, Gutters, House			✓	✓				✓
Fencing, Deck, Patio			✓	✓				✓
Lawn Equipment, Boat, RV			✓	✓			✓	✓
					✓ Recommended Nozzle ✓ Use With Caution for Certain Applications			

BEFORE STORING THE UNIT

1

Always add Pump Protector to the unit after each use and before storing. This will significantly improve pump life. (See page 13)
Pump Protector is available from your local retailer. For further assistance, call customer service at 1-800-860-4050.
To add, follow the instructions provided by the Pump Protector manufacturer.



Make the most of your purchase! Go to www.ryobitools.com and register your new tool online. For questions about operating or maintaining your product, please call, 1-800-860-4050.