 


Shark BlastBOSS[®] Cordless Blower

AB2000 Series

OWNER'S GUIDE

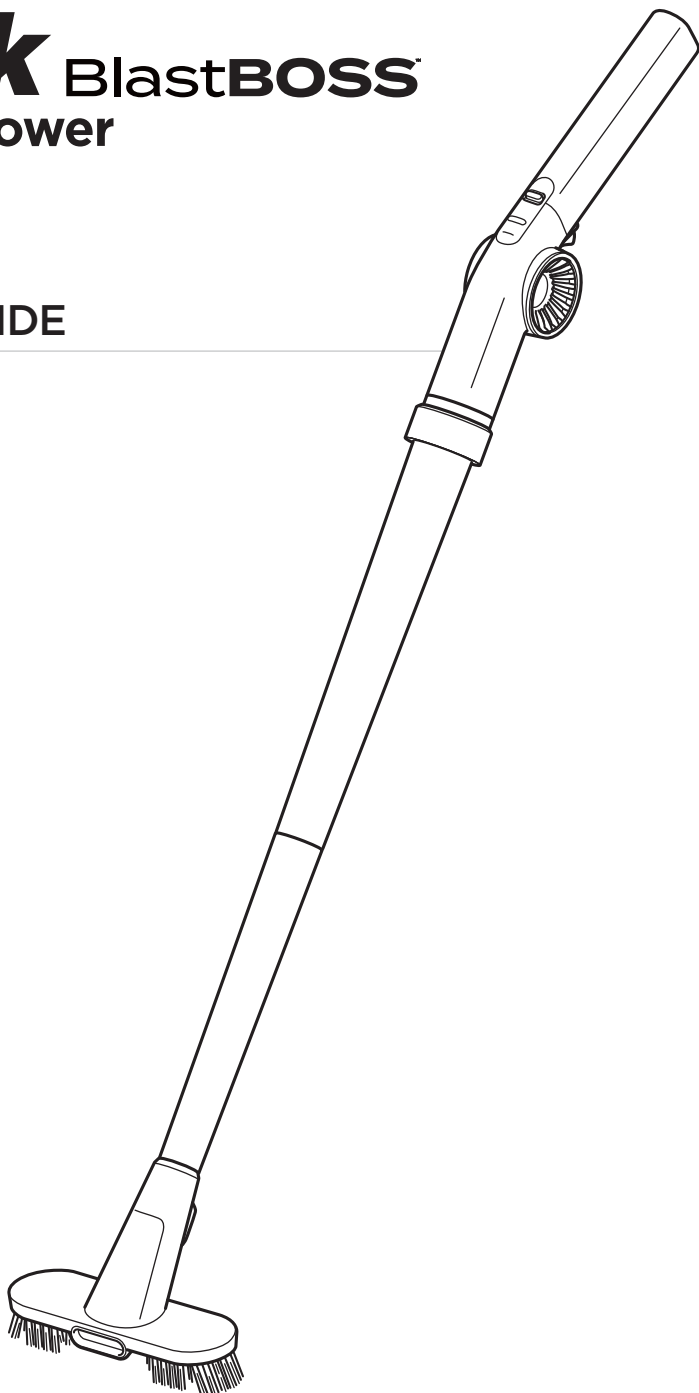

Shark® BlastBoss™ AB2000 Series

IMPORTANT SAFETY INSTRUCTIONS



WARNING: READ ALL SAFETY WARNINGS, INSTRUCTIONS, ILLUSTRATIONS AND SPECIFICATIONS PROVIDED WITH THIS MACHINE. FAILURE TO FOLLOW ALL INSTRUCTIONS LISTED BELOW MAY RESULT IN ELECTRIC SHOCK, FIRE AND/OR SERIOUS INJURY. SAVE ALL WARNINGS AND INSTRUCTIONS FOR FUTURE REFERENCE.

When using an electrical machine, to reduce the risk of fire, electric shock, injury, or property damage, basic precautions should always be followed, including the following.



WORK AREA SAFETY

- 1 a) Keep work area clean and well lit. Cluttered or dark areas invite accidents.
- b) **DO NOT** operate the machine in explosive atmospheres, such as in the presence of flammable liquids, gases or dust. Machines create sparks which may ignite the dust or fumes.
- c) Keep children and bystanders away while operating the machine. Distractions can cause you to lose control.

ELECTRICAL SAFETY

- 2 a) The plug must match the outlet. Never modify the plug in any way. **DO NOT** use any adapter plugs with grounded power tools. Unmodified plugs and matching outlets will reduce risk of electric shock.
- b) Avoid body contact with grounded surfaces, such as pipes, radiators, ranges and refrigerators. There is an increased risk of electric shock if your body is grounded.
- c) **DO NOT** expose power tools to rain or wet conditions. Water entering a power tool will increase the risk of electric shock.
- d) **DO NOT** abuse the cord. Never use the cord for carrying, pulling or unplugging the machine. Keep cord away from heat, oil, sharp edges, or moving parts. Damaged or entangled cords increase the risk of electric shock.
- e) When operating the machine outdoors, use an extension cord suitable for outdoor use. Use of a cord suitable for outdoor use reduces the risk of electric shock.
- f) If operating the machine in a damp location is unavoidable, use a RESIDUAL CURRENT DEVICE (RCD) protected supply. Use of an RCD reduces the risk of electric shock. **NOTE** The term "RESIDUAL CURRENT DEVICE (RCD)" may be replaced by the term "ground fault circuit interrupter (GFCI)" or "earth leakage circuit breaker (ELCB)."

PERSONAL SAFETY

- 3 a) Stay alert, watch what you are doing and use common sense when operating the machine. Do not use a power tool while you are tired or under the influence of drugs, alcohol or medication. A moment of inattention while operating this machine may result in serious personal injury.
- b) Use personal protective equipment. Always wear eye protection. Protective equipment such as a dust mask, non-skid safety shoes, a hard hat, or hearing protection used for appropriate conditions will reduce personal injuries.
- c) Prevent unintentional starting. Ensure the switch is in the Off position before connecting to power source and/or battery pack or picking up or carrying the machine. To prevent accidental starts, do not carry the machine with your finger on the trigger or with the power button in the On position.
- d) Remove any adjusting key or wrench before turning on the power. A wrench or a key left attached to a rotating part of the machine may result in personal injury.
- e) **DO NOT** overreach. Keep proper footing and balance at all times. This enables better control of the machine in unexpected situations.

POWER TOOL USE AND CARE

- 4 a) **DO NOT** force the power tool. Use the correct power tool for your application. The correct power tool will do the job better and safer at the rate for which it was designed.
- b) **DO NOT** use the power tool if the switch does not turn it on and off. Any power tool that cannot be controlled with the switch is dangerous and must be repaired.
- c) Disconnect the plug from the power source and/or remove the BATTERY pack, if detachable, from the power tool before making any adjustments, changing accessories, or storing power tools. Such preventive safety measures reduce the risk of starting the power tool accidentally.
- d) Store idle power tools out of the reach of children and do not allow persons unfamiliar with the power tool or these instructions to operate the power tool. Power tools are dangerous in the hands of untrained users.
- e) Maintain power tools and accessories. Check for misalignment or binding of moving parts, breakage of parts and any other condition that may affect the power tool's operation. If damaged, have the power tool repaired before use. Many accidents are caused by poorly maintained power tools.
- f) Keep cutting tools sharp and clean. Properly maintained cutting tools with sharp cutting edges are less likely to bind and are easier to control. Dress properly. Do not wear loose clothing or jewelry. Keep your hair and clothing away from moving parts. Loose clothes, jewelry or long hair can be caught in moving parts.
- g) Use the power tool, accessories and tool bits etc. in accordance with these instructions, taking into account the working conditions and the work to be performed. Use of the power tool for operations different from those intended could result in a hazardous situation. **DO NOT** let familiarity gained from frequent use of tools allow you to become complacent and ignore tool safety principles. A careless action can cause severe injury within a fraction of a second.

- h) Keep handles and grasping surfaces dry, clean and free from oil and grease. Slippery handles and grasping surfaces do not allow for safe handling and control of the tool in unexpected situations.

BATTERY & CHARGING

- 5 The battery is the power source for the machine. Carefully read and follow all charging instructions.
- 6 For AB2000 Series, use only the GQ20B-180100-AU charger.
- 7 Keep the battery away from all metal objects such as paper clips, coins, keys, nails, or screws. Shorting the battery terminals increases the risk of fire or burns.
- 8 Under abusive conditions, liquid may be ejected from the battery. Avoid contact with this liquid, as it may cause irritation or burns. If contact occurs, flush with water. If liquid contacts eyes, seek medical help.
- 9 Battery should not be stored at temperatures below 37.4°F (3°C) or above 104°F (40°C) to maintain long-term battery life.
- 10 **DO NOT** charge battery at temperatures below 40°F (5°C) or above 104°F (40°C). Charging improperly or at temperatures outside of the specified range may damage the battery and increase the risk of fire.
- 11 Store the machine indoors. **DO NOT** use or store it below 37.4°F (3°C). Ensure the machine is at room temperature before operating.
- 12 **DO NOT** expose the battery to fire or temperatures above 265°F (130°C) as it may cause explosion.
- 13 Use machines only with specifically designated battery packs. Use of any other battery packs may create a risk of injury and fire.
- 14 For AB2000 Series, use only Shark battery pack XBTR430US (14.72Vdc, 2750mAh, 40.48Wh).
- 15 **DO NOT** use a battery pack or machine that is damaged or modified. Damaged or modified batteries may exhibit unpredictable behavior resulting in fire, explosion or risk of injury.

SERVICE & REPAIR

- 16 Have servicing performed by a qualified repair person using only identical replacement parts. This will ensure that the safety of the product is maintained.
- 17 **DO NOT** modify or attempt to repair the machine or the battery pack (as applicable) except as indicated in the instructions for use and care.

DISPOSAL

- 18 The battery must be removed from the machine before it is scrapped.
- 19 The machine must be disconnected from the charging supply when removing the battery.
- 20 The battery is to be disposed of safely.

GENERAL USE:

- 21 Do not use the machine in bad weather conditions, especially when there is a risk of lightning. This decreases the risk of being struck by lightning.
- 22 Wear eye protection and ear protection. Adequate protective equipment will reduce the risk of personal injury.
- 23 While operating the machine, always wear non-slip and protective footwear. Do not operate when barefoot or wearing open sandals. This reduces the risk of injury to the feet.
- 24 Do not wear loose fitting clothing or articles such as scarves, strings, chains, ties, etc., that could get drawn into the air inlets. Tie back or cover long hair to make sure it does not get drawn into the air inlets. If any of these items are drawn into the air inlets, it can increase the risk of personal injury.
- 25 Keep bystanders away while operating the machine. Thrown debris can increase the risk of personal injury.
- 26 Never point the machine nozzle in the direction of people or pets or in the direction of windows. Use extra caution when blowing debris near solid objects, such as trees, automobiles, and walls that can cause debris to ricochet. Thrown objects can damage property and increase the risk of personal injury.
- 27 Do not use the machine to blow anything that is burning or smoking, such as cigarettes, matches or hot ashes. These ignition sources may increase the risk of fire.
- 28 Do not touch the fan while still in motion. Turn off the power and wait until the fan stops before removing any part that may give access to the fan. This reduces the risk of injury from moving parts.
- 29 When clearing jammed material or servicing the machine, make sure the power switch is off. Unexpected starting of the machine while clearing jammed material or servicing may result in serious personal injury.
- 30 This machine is intended to be used by the operator at ground level and not on ladders or any unstable support.
- 31 Inspect the machine for damage if there appears to be excessive vibration.

READ AND SAVE THESE INSTRUCTIONS

 


VISIT qr.sharkninja.com/AB2000SERIES OR
SCAN HERE
FOR FULL INSTRUCTIONS & REPLACEMENT PARTS

NOTE: Not all the accessories come with all units.
To order additional accessories, visit sharkaccessories.com


MAIN UNIT

- ① Handle/Battery Cover
- ② Mode Select Slider
- ③ Boost Button
- ④ Mode and Charge Indicator
- ⑤ Variable Speed Trigger
- ⑥ Charging Connection
- ⑦ Accessory Connection
- ⑧ Charger


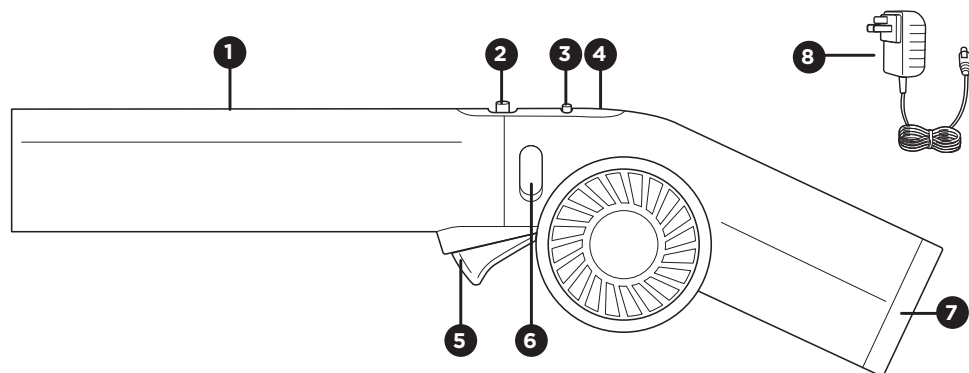


ACCESSORIES

 
- A Precision Nozzle
- B Extension Wand Upper
- C Extension Wand Lower
- D BlastBroom
- E Agitator Nozzle
- F Dusting Brush

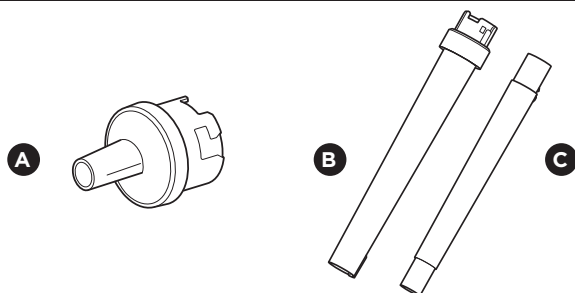

With select units only.

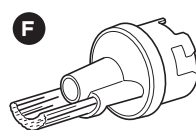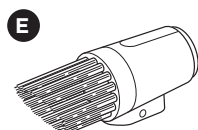  


NOZZLE ACCESSORY ASSEMBLY

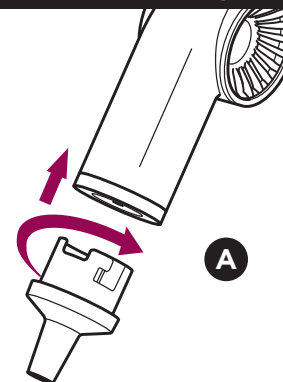 


Align indicator icons, insert accessory, and rotate to lock or unlock.

 
WAND ACCESSORY ASSEMBLY

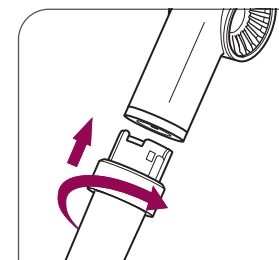

 Align the circle icons on the upper extension wand and the main unit. Insert the wand to reveal the arrow, then twist to lock into place.

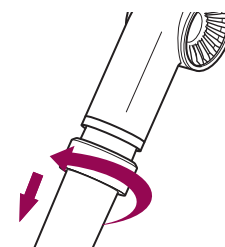

 To remove, slide down the collar on the upper wand, rotate the wand to unlock it, then slide it out.

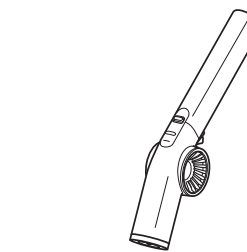

B

C

 
D

One-time connection

Click


Click

BATTERY & CHARGING

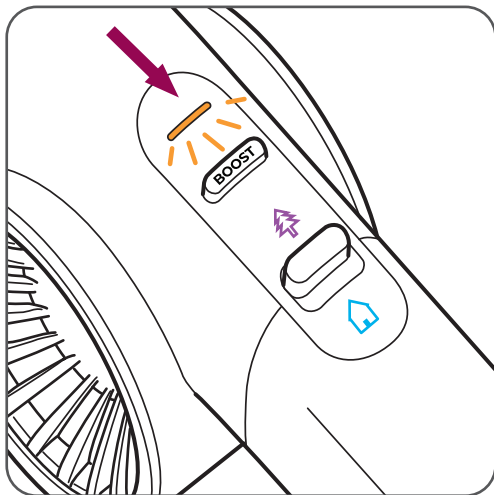


LED color indicates level of charge during use.

 White 100-30%
Orange 30-5%
Orange Flashing 5-0%

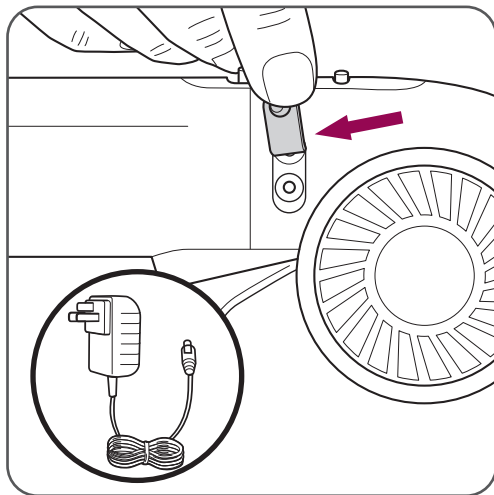


Open the charging port cover and insert the charger plug into the port.

 The LED indicator will pulse white during charging. A full charge takes approximately 3 hours.

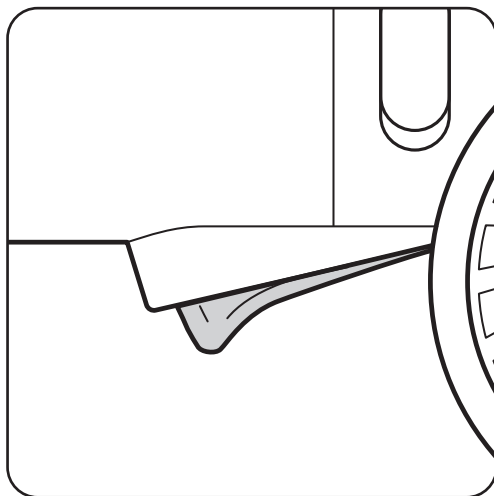


 When possible, use the variable speed trigger to reduce power for increased runtime.

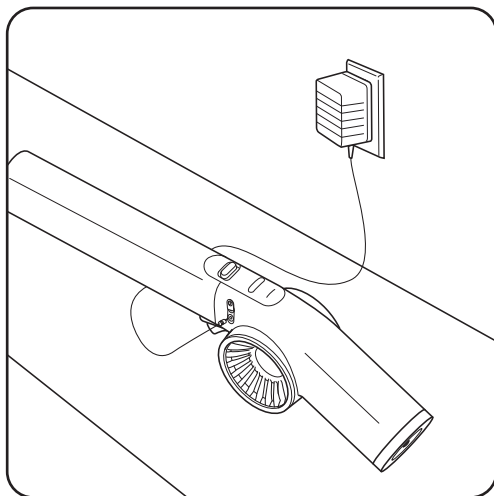


Always store and charge in a safe place, away from children or pets.

 
MODE AND POWER SETTINGS

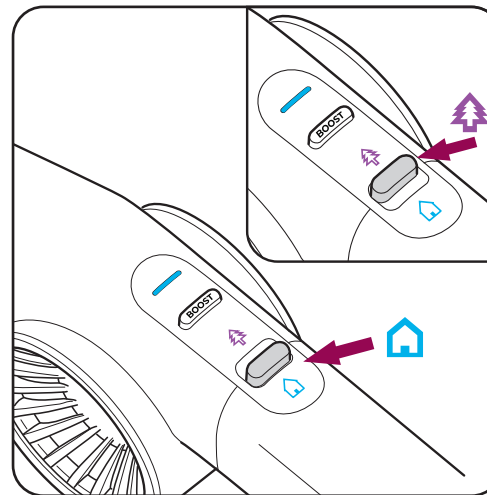

 
Slide the mode selector to choose indoor or outdoor mode. Indoor mode  offers more control. Outdoor mode  offers more power.

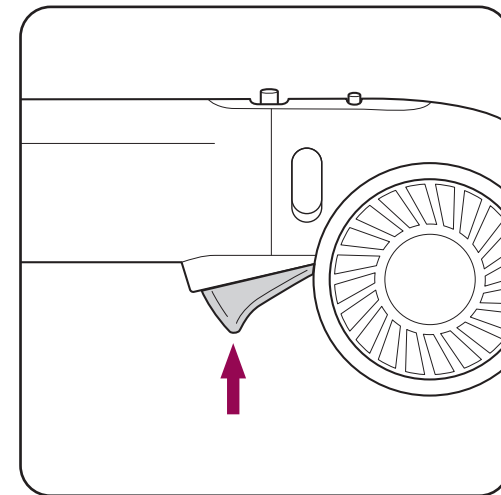

 Press the variable speed trigger to power the unit on.

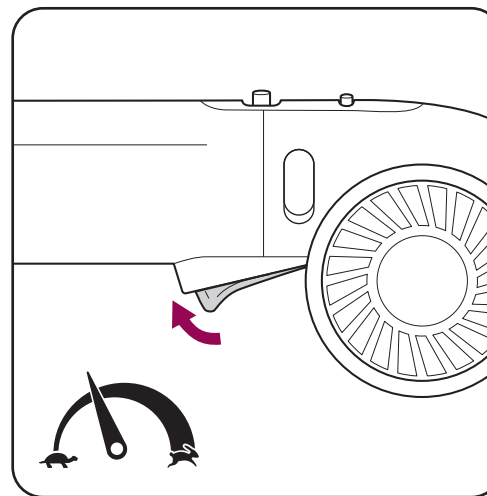

 Use the trigger to adjust the air power output. Press further to maximize airflow.

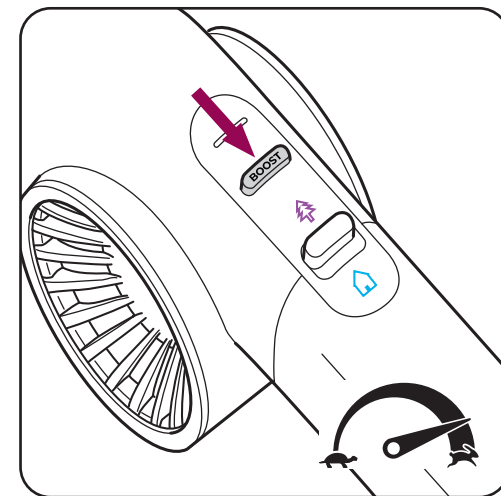

To enter Boost Mode, pull the trigger and press the Boost button. To exit Boost mode, fully release the trigger.

Minimum Runtimes:

 
Indoor mode: 49 minutes.
 Outdoor mode: 10 minutes.
 Boost mode: 7 minutes.

NOTE: After 15 seconds of inactivity, the unit will automatically turn off and enter standby mode.

TROUBLESHOOTING

If the unit is not functioning correctly or powering on:

1. Clear any blockages in the air inlets, air outlets, or accessories.
2. Make sure the unit is charged. (See the Battery Indicators table below.)
3. Charge the unit, if needed. If the unit is warm, allow it to cool down before charging.
4. Select a mode and pull the trigger to turn on power.
5. If the unit still doesn't turn on, consult the Error Warnings table below.

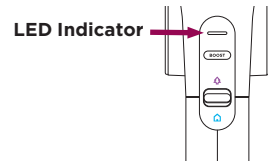

Battery Indicators			
Status	Status	LED Status	Time
	Indoor Mode	Blue	5 seconds
	Outdoor Mode	Purple	5 seconds
	Boost Mode	White Flashing	
	Battery charge 100-30%	Solid White	While unit is on
	Battery charge 30-5%	Solid Orange	While unit is on
	Battery charge 5-0%	Orange Flashing	While unit is on
	Unit Charging	White Pulsing	While unit is charging
	Unit Fully Charged (100%)	Solid White	5 minutes total

Error Warnings			
Status	Status	LED Status	Troubleshooting
	No battery pack installed	White blinking 0.5 seconds on, 0.5 seconds off.	Please contact Customer Service
	Charge over-current protection	Red and orange alternate: 1 second red on, 0.5 seconds orange on.	Please contact Customer Service
	Wrong charger	Red and green alternate: 0.5 seconds red on, 0.5 seconds green on.	Ensure you are using the charger that came in the box
	Motor fault	1 red blink + multiple blue blinks.	Please contact Customer Service

NOTE: If your unit still does not operate properly, contact Customer Service at **1-855-427-5127** or **support.sharkninja.com**.

Shark NINJA

TWO (2) YEAR LIMITED WARRANTY

The Two (2) Year Limited Warranty applies to purchases made from authorized retailers of **SharkNinja Operating LLC**. Warranty coverage applies to the original owner and to the original product only and is not transferable.

SharkNinja warrants that the unit shall be free from defects in material and workmanship for a period of two (2) years from the date of purchase when it is used under normal household conditions and maintained according to the requirements outlined in the Owner's Guide, subject to the following conditions and exclusions:

California residents only:

The Two (2) Year Limited Warranty period begins on the original date of delivery or pickup.

What is covered by this warranty?

1. The original unit and/or non-wearable components deemed defective, in SharkNinja's sole discretion, will be repaired or replaced up to two (2) years from the original purchase date.
2. In the event a replacement unit is issued, the warranty coverage ends six (6) months following the receipt date of the replacement unit or the remainder of the existing warranty, whichever is later. SharkNinja reserves the right to replace the unit with one of equal or greater value.

What is not covered by this warranty?

1. Normal wear and tear of wearable parts (such as brushes). Replacement parts are available for purchase at **sharkaccessories.com**.
2. Any unit that has been tampered with or used for commercial purposes.
3. Damage caused by misuse (e.g., water damage), abuse, negligent handling, failure to perform required maintenance, or damage due to mishandling in transit.
4. Consequential and incidental damages.
5. Defects caused by repair persons not authorized by SharkNinja. These defects include damages caused in the process of shipping, altering, or repairing the SharkNinja product (or any of its parts) when the repair is performed by a repair person not authorized by SharkNinja.
6. Products purchased, used, or operated outside North America.

How to get service

If your machine fails to operate properly while in use under normal household conditions within the warranty period, visit **support.sharkninja.com** for product care and maintenance self-help. Our Customer Service Specialists are also available at **1-855-427-5127** to assist with product support and warranty service options, including the possibility of upgrading to our VIP warranty service options for select product categories. We also ask that you register your product online at **registeryourshark.com** and have the product on hand when you call, so we may better assist you.

SharkNinja will cover the cost for the customer to send in the unit to us for repair or replacement. A fee of \$24.95 (subject to change) will be charged when SharkNinja ships the repaired or replacement unit.

 
How to initiate a warranty claim

You must call **1-855-427-5127** to initiate a warranty claim. In order to better assist you please register your product online at **registeryourshark.com** and have your product with you at the time of your call. You will need the receipt as proof of purchase. A Customer Service Specialist will provide you with return and packing instruction information.

How state law applies

This warranty gives you specific legal rights, and you also may have other rights that vary from state to state. Some states do not permit the exclusion or limitation of incidental or consequential damages, so the above may not apply to you.

REGISTER YOUR PURCHASE

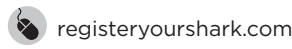

RECORD THIS INFORMATION

Model Number: _____

Date Code: _____

Date of Purchase: _____
(Keep receipt)

Store of Purchase: _____

TECHNICAL SPECIFICATIONS

Voltage: 14.72Vdc, 2750mAh, 40.48Wh.

Benefits of registering your product and creating an account:

- Get easier, faster product support and access to warranty information
- Access troubleshooting and product care instructions
- Be among the first to know about exclusive product promotions

TIP: You can find the model and serial numbers on the QR code label on the bottom of the back of the hand machine and battery.

NOTES



FCC WARNINGS

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to parts 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This Device complies with part 15 of the FCC rules. Operation is subject to the following conditions:
1 This device may not cause harmful interference
2 This device must accept any interference received, including interference that may cause undesired operation.
Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this device.

BATTERY REMOVAL AND DISPOSAL

This product uses a lithium-ion rechargeable and recyclable battery. When the battery no longer holds a charge, it should be removed from the machine and recycled. DO NOT incinerate or compost the battery.

When your lithium-ion battery needs to be replaced, dispose of it or recycle it in accordance with local ordinances or regulations. In some areas, it is illegal to place spent lithium-ion batteries in the trash or in a municipal solid waste stream. Return spent battery to an authorized recycling center or to retailer for recycling. Contact your local recycling center for information on where to drop off the spent battery.

The RBRC™ (Rechargeable Battery Recycling Corporation) seal on the lithium-ion battery indicates that the costs to recycle the battery at the end of its useful life have already been paid by SharkNinja. In some areas, it is illegal to place spent lithium-ion batteries in the trash or municipal solid waste stream and the RBRC program provides an environmentally conscious alternative.

RBRC, in cooperation with SharkNinja and other battery users, has established programs in the United States and Canada to facilitate the collection of spent lithium-ion batteries. Help protect our environment and conserve natural resources by returning the spent lithium-ion battery to an authorized SharkNinja service center or to your local retailer for recycling. You may also contact your local recycling center for information on where to drop off the spent battery, or call 1-855-427-5127.



PLEASE READ CAREFULLY AND KEEP FOR FUTURE REFERENCE.

This Owner's Guide is designed to help you get a complete understanding of your new Shark® BlastBoss™ Cordless Blower.

SharkNinja Operating LLC
US: Needham, MA 02494
CAN: Ville St-Laurent, QC H4S 1A7
1-855-427-5127
sharkninja.com

Illustrations may differ from actual product. We are constantly striving to improve our products; therefore the specifications contained herein are subject to change without notice.

This product may be covered by one or more U.S. patents. See sharkninja.com/patents for more information.

© 2026 SharkNinja Operating LLC.
BLASTBOSS and SHARK are trademarks of SharkNinja Operating LLC.
RBRC is a trademark of Rechargeable Battery Recycling Corporation.