

Please read enclosed safety instructions before using your Shark BlastBOSS™. Charge completely before first use.

SCAN THE QR CODE
for full instructions, or visit
<https://qr.sharkninja.com/ab2000>



QUICK START GUIDE

GETTING STARTED:

MAIN UNIT

- 1

Handle/Battery Cover
- 2

Mode Select Slider
- 3

Boost Button
- 4


LED Indicator
- 5

Variable Speed Trigger
- 6

Charging Port
- 7

Wand/Accessory Connection
- 8

Charger

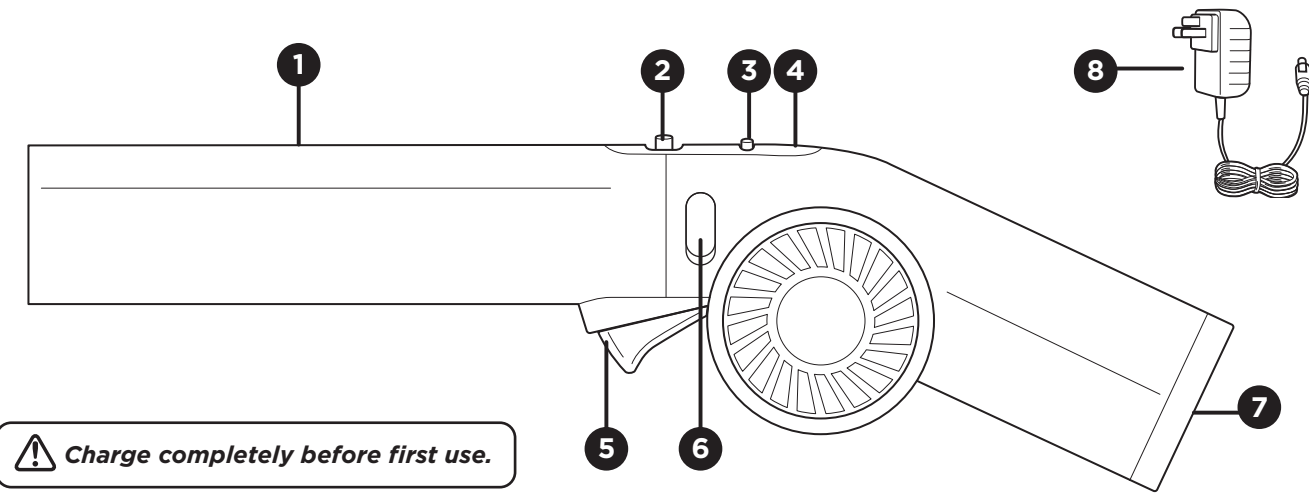

INCLUDED ACCESSORIES

- A

Precision Nozzle
- B

Extension Wand Upper
- C

Extension Wand Lower
- D

BlastBroom
- E

Agitator Nozzle


ADDITIONAL ACCESSORIES (SOLD SEPARATELY)

- F


Dusting Brush
- NOTE:** Not all accessories come with all units. To order additional accessories, visit sharkaccessories.com.

ACCESSORY CONNECTION & ASSEMBLY

NOZZLE ACCESSORY ASSEMBLY

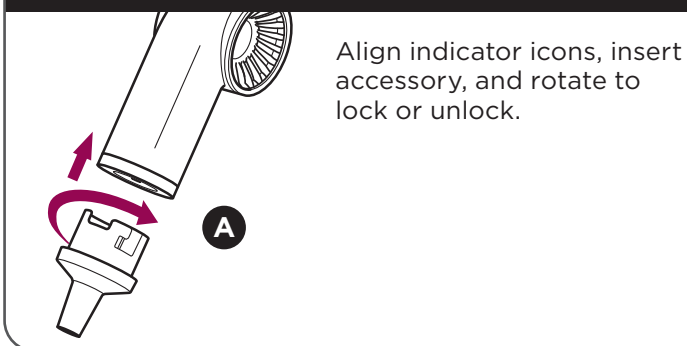


ACCESSORY	MODE	USES
Precision Nozzle (A)	 Indoor mode	Electronics, furniture, inflating air mattresses
Extension Wand (B & C)	 Outdoor mode	Ground-level clearing of dry leaves and garden debris
BlastBroom (D)		Attach to the wand for optimized airflow for clearing at ground level. Use bristles for agitating stuck-on debris
Agitator Nozzle (E)		Use with multi-reach wand for agitation of light debris

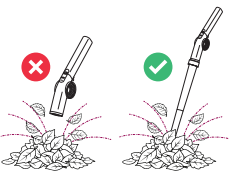


Use the wand outdoors to keep dirt and debris away from the inlet.

WAND ACCESSORY ASSEMBLY

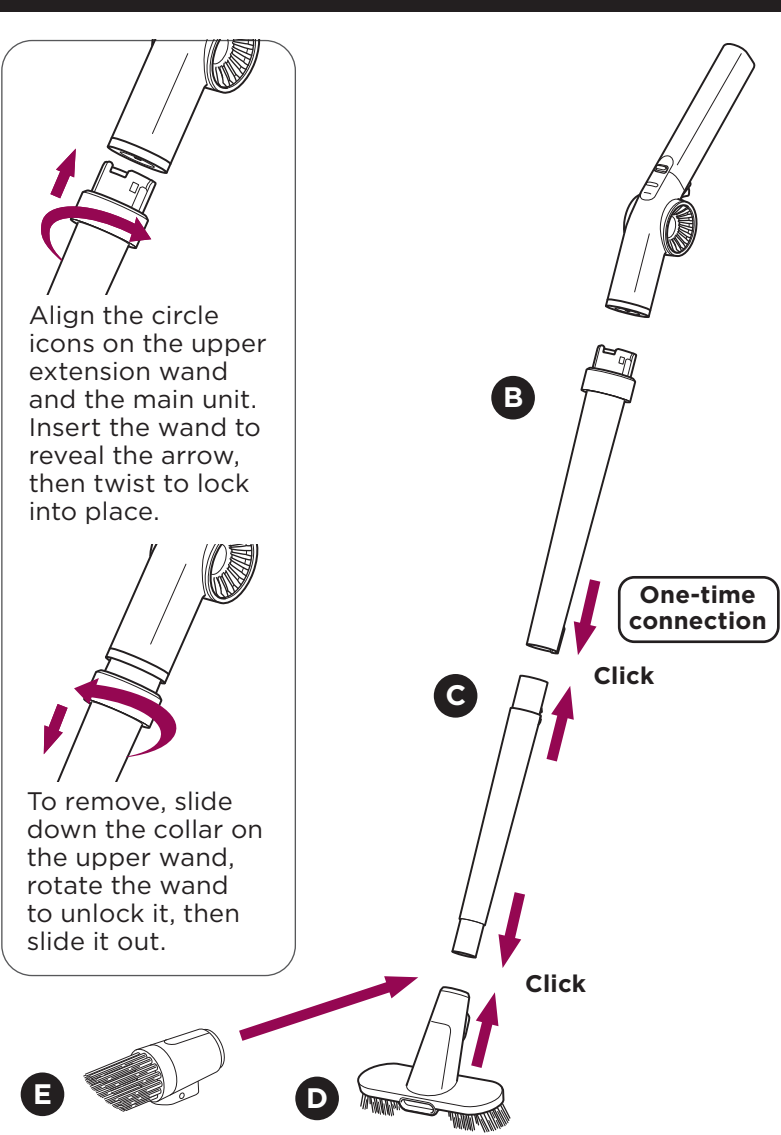


HOW TO USE →

POWER MODES

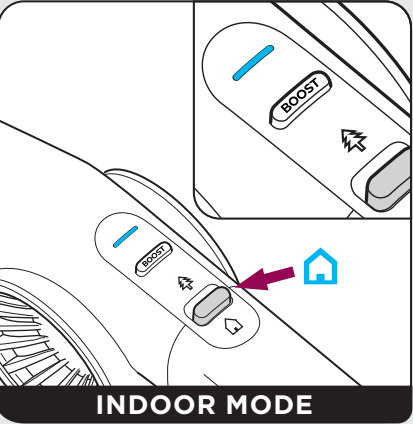


Select Indoor mode on the slider for precise, controlled airflow in confined spaces.

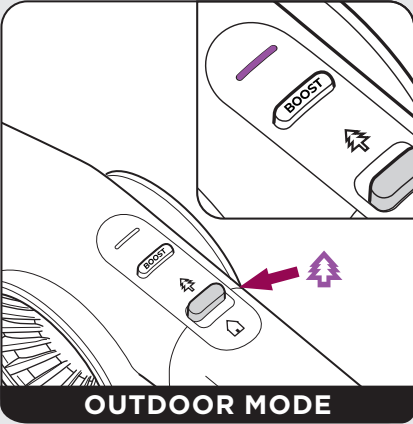


Select Outdoor mode on the slider for more power for big jobs outdoors.

POWER ON/OFF

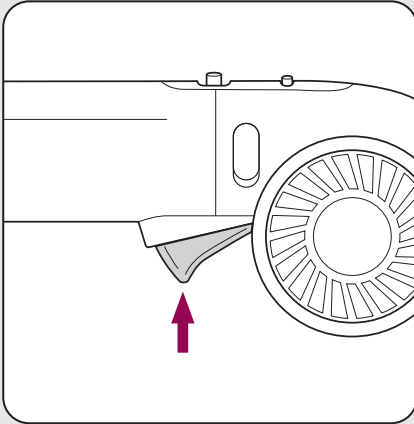


Press the variable speed trigger to power the unit on. To turn off power, release the trigger completely.

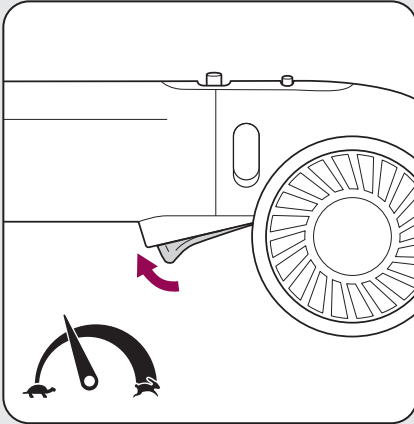


Control the power output by adjusting the position of the variable speed trigger.

NOTE: After 15 seconds of inactivity, the unit will enter standby mode.

BOOST MODE

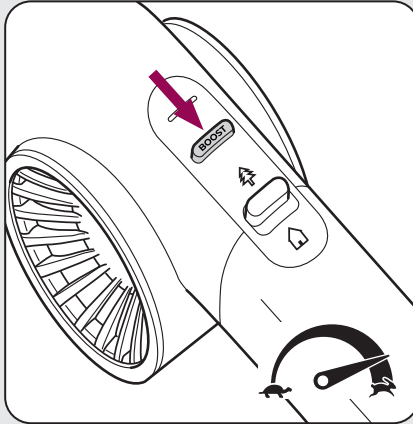


To activate Boost mode, pull the trigger and press the Boost button.

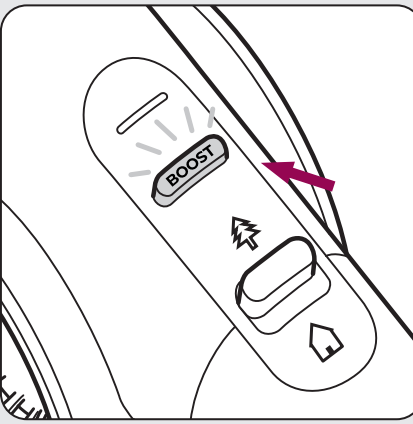


When Boost mode is active, the Boost button light will flash white. Boost mode will continue to run until you fully release the trigger.

NOTE: Boost mode consumes more battery power. Use Boost mode for an extra boost of power for tough jobs.

CHARGING AND STORAGE

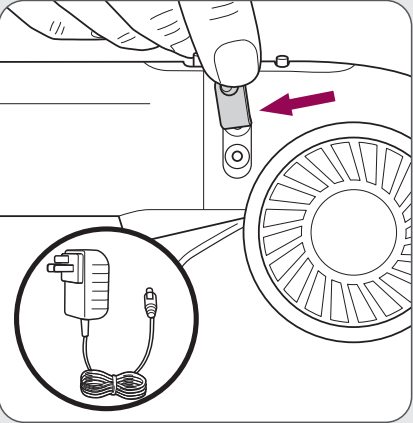


Open the charging port cover and insert the charger plug into the port. The LED indicator will pulse white during charging. A full charge takes approximately 3 hours.

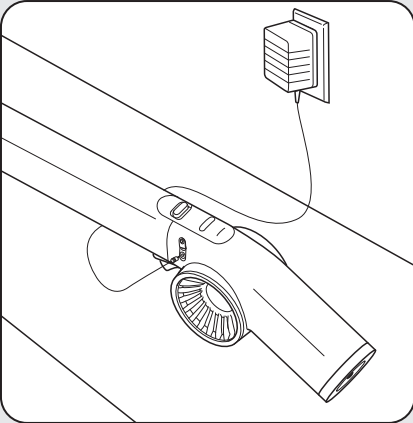


Always store and charge in a safe place, away from children or pets.

BATTERY USAGE

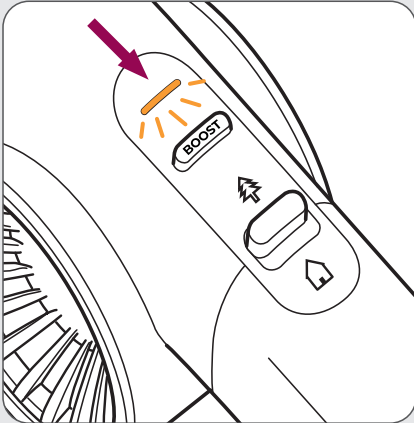


LED indicates level of charge during use.
White 100-30%
Orange 30-5%
Orange Flashing 5-0%

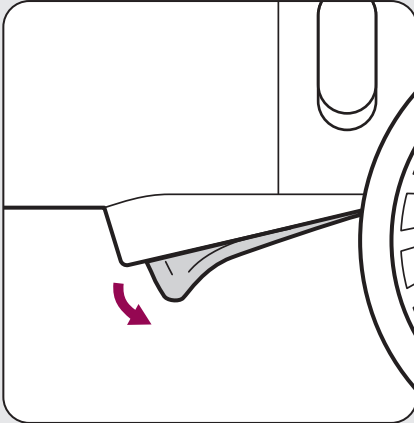

When possible, use the variable speed trigger to reduce power for increased runtime.

Minimum Runtimes:
Indoor mode: 49 minutes.
Outdoor mode: 10 minutes.
Boost mode: 7 minutes.

LED INDICATORS

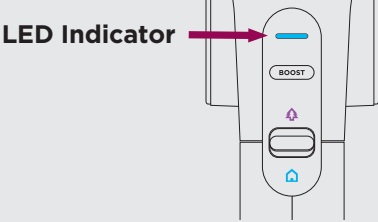

LED	Definition	LED Status	Time
	Indoor mode	Blue	5 Seconds
	Outdoor mode	Purple	5 Seconds
	Battery Charge 100-30%	Solid White	While Unit is on
	Battery Charge 30-5%	Solid Orange	While Unit is on
	Battery Charge 5-0%	Orange Flashing	While Unit is on
	Unit Charging	White Pulsing	While Unit is Charging
	Unit Fully Charged (100%)	Solid White	5 Minutes Total

For troubleshooting help, please visit sharkninja.com.