

IMPORTANT SAFETY INSTRUCTIONS

SUITABLE FOR OUTDOOR USE & HOUSEHOLD USE ONLY.

NOTE: Before every use with the misting attachment, empty and rinse the hose to prevent stagnant water from being misted.

⚠ WARNING

TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK, OR INJURY: READ ALL THESE INSTRUCTIONS BEFORE USE.

⚠ **WARNING: SLIPPERY SURFACE. IMPROPER USE AND/OR LEAKS CAN RESULT IN A SLIPPERY SURFACE AND A FALL HAZARD.**

1. This appliance is operated by a rechargeable battery. ONLY recharge the battery with the charger supplied with the unit, battery charger for use only with model GQ36-120300-AUO power supply from Dongguan Gangqi Electronics Co., Ltd. or with model ZDO36T120300US from E-TEK, or with model AJJ3-1 from Anlian. A charger that may be suitable for one type of battery may create a risk of fire when used with another battery.
2. Do not attempt to destroy, remove, or disassemble the battery pack from the machine. Do not incinerate battery cells. Consult your local waste authority for information regarding available recycling and/or disposal options.
3. This appliance comes with a remote control which contains 2 AAA batteries. Dispose of batteries properly. Always keep batteries away from children (choke hazard). Even used batteries can cause injury.
4. To reduce the risk of electric shock, connect only to an outlet provided with a ground fault circuit interrupting (GFCI) device.
5. The fan should be used on a stable and level surface.
6. Never use this fan near pools, bathtubs, showers, basins, or other vessels containing water.
7. Do not operate any unit with a damaged power supply wire or battery charger. Discard the unit or return to an authorized service facility for examination and/or repair.
8. Do not run cord under carpeting. Do not cover charge cord with throw rugs, runners, or similar coverings. Do not route charger cord under furniture or appliances. Keep charger cord away from high-traffic areas. Place charger in an area where the cord will not be tripped over.
9. If the charger cord is damaged, it should be replaced.
10. This appliance is not intended for use by anyone (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
11. Children should be supervised to ensure that they DO NOT play with the appliance.
12. Cleaning and user maintenance shall not be made by children without supervision.
13. Prior to cleaning or other maintenance, the appliance must be unplugged from the electrical outlet.
14. Only use Shark® branded accessories.
15. Do not use if appliance is not working as it should, or has been dropped, damaged, left outdoors, or dropped into water.
16. Turn off all controls before plugging in or unplugging the appliance.
17. Unplug from electrical outlet when not in use and before any maintenance or cleaning.
18. Hand wash exterior/hard plastic/non-electronic parts with water only. Do not immerse. Cleaning with chemicals could damage the unit.
19. Do not attempt to repair or adjust any electrical or mechanical functions of this appliance, as this may cause danger and void the warranty.
20. Remove and immediately recycle or dispose of used batteries according to local regulations and keep away from children. Do NOT dispose of batteries in household trash or incinerate.
21. Even used batteries may cause severe injury or death.
22. Call a local poison control center for treatment information.
23. Compatible battery type is AAA.
24. The nominal battery voltage is 1.5V.
25. Non-rechargeable batteries are not to be recharged.
26. Do not force discharge, recharge, disassemble, heat above 60°C, or incinerate. Doing so may result in injury due to venting, leakage, or explosion resulting in chemical burns.
27. Ensure the batteries are installed correctly according to polarity (+ and -).
28. Do not mix old and new batteries, different brands or types of batteries, such as alkaline, carbon-zinc, or rechargeable batteries.
29. Remove and immediately recycle or dispose of batteries from equipment not used for an extended period of time according to local regulations.

30. Always completely secure the battery compartment. If the battery compartment does not close securely, stop using the product, remove the batteries, and keep them away from children.
31. Do not apply any fragrance or scented products onto any part of the fan during use or maintenance.

⚠ **WARNING: Not suitable for use with solid-state speed controls.**

LITHIUM BATTERY SAFETY WARNINGS ⚠ ⚠

LITHIUM BATTERIES STORE A LARGE AMOUNT OF ENERGY AND WILL VENT FIRE OR EXPLODE IF MISTREATED.

1. DO NOT DO ANY OF THE FOLLOWING TO THE BATTERY PACK:
 - a. Open
 - b. Drop
 - c. Short-circuit
 - d. Puncture
 - e. Incinerate
 - f. Expose to temperatures
2. Keep battery pack dry.
3. Charge battery pack only according to its charger's instructions.
4. Inspect battery pack before every use: do not use or charge if damaged.

BATTERY REMOVAL AND DISPOSAL

This product contains an integral lithium battery (not replaceable), and the remote control uses 2 AAA batteries. When the remote batteries no longer have a charge, they should be removed from the remote and recycled. DO NOT incinerate or compost the product with its integral battery or the remote batteries. When your remote batteries need to be replaced, dispose of them or recycle them in accordance with local ordinances or regulations. In some areas, it is illegal to place spent batteries in the trash or in a municipal solid waste stream. Return spent battery to an authorized recycling center or to retailer for recycling. Contact your local recycling center for information on where to drop off the spent battery.

POWER SUPPLY SAFETY

1. Read and follow all instructions that are on the product or provided with the product.
2. Do not use an extension cord.
3. Do not use within 10 feet of a pool and do not use in a bathroom.
4. **WARNING: Risk of Electric Shock.** When used outdoors, install only to a covered Class A GFCI protected receptacle that is weatherproof with the power unit connected to the receptacle. If one is not provided, contact a qualified electrician for proper installation. Ensure that the power unit and cord do not interfere with closing the receptacle cover.

FCC WARNINGS

Note: This equipment has been tested and complies with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. To see if this equipment interferes with radio or television reception, try turning the equipment off and on.

To correct any interference:

- Reorient or relocate the receiving antenna.
- Increase the distance between the equipment and the receiver.
- Connect the equipment to a different outlet than the receiver.
- Consult the dealer or an experienced technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to two conditions:

1. This device may not cause harmful interference, and
2. this device must accept any interference received, including interference that may cause undesired operation.

Caution: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

IC Statement:

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

1. This device may not cause interference.
2. This device must accept any interference, including interference that may cause undesired operation of the device.

READ AND SAVE THESE INSTRUCTIONS

QUICK START GUIDE

WHAT'S INCLUDED

Includes:

- Fan Head
- Remote
- Charger



Charger

(Reference image only)



Fan Head

(Already assembled)



Remote

Remote Pairing Instructions

Turn the unit on by pressing the power button on top of the fan head, then check to see if the remote functions properly.

If the remote is not functioning, try the following:

1. Press and hold the power button on the fan head for 5 seconds. While the LEDs are flashing, press the fan speed up button on the remote.



2. If the remote still doesn't work, try replacing the batteries in the remote and repeat the connection process above.

FEATURES

CORDLESS

This is a 2-in-1 fan that can be used with or without the cord.

OUTDOORS

This fan can be enjoyed indoors or outdoors.
DO NOT CHARGE OR USE IN THE RAIN.

OSCILLATION AND TILT

Direct the airflow by choosing between 3 electronic oscillation angles and manually adjusting the vertical tilt up to 55° degrees.

BREEZEBOOST™ MODE

Activate the extra-powerful BreezeBoost Mode for maximum-strength air flow.

REMOTE STORAGE

You can store the remote on the convenient magnetic mount on back of the fan head.

HOW TO USE YOUR FAN

Fan Speeds	1-5	Press  on the fan head or <  > arrows on the remote to switch between fan speeds 1-5. LED lights will indicate selected fan speed.			
	BreezeBoost Mode	For maximum-strength airflow, press and hold  on the fan head for 3 seconds, or press  on the remote. During cordless use, fan speed will automatically decrease after 20 minutes to save battery power.			
Oscillation	1 - 45° angle 2 - 90° angle 3 - 180° angle			Press  on the fan head or <  > arrows on the remote to toggle between oscillation angles. LED lights will indicate which angle is selected.	
	Horizontal Angle Adjust	Press the <   > arrows on the remote to change the horizontal angle of the fan in 18° increments.			
Approximate Runtime	MAXIMUM CORDLESS RUNTIME: 24 hours on fan speed 1. AVERAGE CORDLESS RUNTIME: 6 hours on fan speed 3. MAXIMUM CORDLESS PERFORMANCE: 1 hour 48 minutes on fan speed 5. PLUGGED IN: Indefinite runtime; fan will charge while operating.				
Charge Time	FROM 0% TO FULLY CHARGED BATTERY: 5-6 hours.				
Battery Indicator	 70%-100%: green light.		 6%-29%: red light steady.		
	 30%-69%: amber light.		 5% and below: red light blinking.		



If the fan is unplugged and not used for 24 hours, the remote will enter IDLE mode to preserve battery. To turn off IDLE mode, use the buttons on the fan head.

FOR MORE INFORMATION

visit qr.sharkclean.com/fa150series or

SCAN HERE

USING YOUR
SMARTPHONE CAMERA



FOR FULL INSTRUCTIONS OR
TO PURCHASE ACCESSORIES.

© 2026 SharkNinja Operating LLC.
SHARK is a registered trademark
of SharkNinja Operating LLC.
BREEZEBOOST is a trademark of
SharkNinja Operating LLC.

FA150_QSG_REV_Mv7