

Shark™ **FLEX**BREEZE™

FA200IN Series

OWNER'S GUIDE



IMPORTANT INFORMATION

REGISTER YOUR PURCHASE



sharkninja.in



Scan QR code using mobile device



RECORD THIS INFORMATION

Model Number: _____

Serial Number:

Date of Purchase: _____
(Keep receipt)

Store of Purchase: _____

TECHNICAL SPECIFICATIONS

AC Voltage: 220 - 240V~ 50/60Hz

DC Voltage: 12V =

Watts: 36W

Battery Capacity: 3800 mAh

Benefits of registering your product and creating an account:

- Get easier, faster product support and access to warranty information
- Access troubleshooting and product care instructions
- Be among the first to know about exclusive product promotions

TIP: You can find the model and serial numbers on the QR code label on the underside of the fan head.

BATTERY REMOVAL AND DISPOSAL

This product contains an integral lithium battery (non-replaceable), and the remote control uses a lithium coin battery (replaceable). **DO NOT** incinerate or compost the product with its integral battery or the remote battery. When the fan battery can no longer hold a charge, dispose of it or recycle it (with integral battery) in accordance with local ordinances or regulations. Remove, replace, and dispose of or recycle the spent remote battery likewise. In some areas, it is illegal to place spent lithium batteries in the trash or in a municipal solid waste stream. Return spent battery to an authorized recycling center or to retailer for recycling. Contact your local recycling center for information on where to drop off the spent battery.

PLEASE READ CAREFULLY AND KEEP FOR FUTURE REFERENCE.

This Owner's Guide is designed to help you get a complete understanding of your new Shark™ fan.

IMPORTANT SAFETY INSTRUCTIONS

SUITABLE FOR OUTDOOR USE & HOUSEHOLD USE ONLY.

WARNING

**TO REDUCE THE RISK OF FIRE,
ELECTRIC SHOCK, OR INJURY: READ
ALL THESE INSTRUCTIONS BEFORE
USE.**

1. This appliance is operated by a rechargeable battery. **ONLY** recharge the battery with the charger supplied with the unit, battery charger for use only with model ZD036T120300IN power supply from Dongguan Gangqi Electronics Co., Ltd. A charger that may be suitable for one type of battery may create a risk of fire when used with another battery.
2. **DO NOT** attempt to destroy, remove, or disassemble the battery pack from the machine. **DO NOT** incinerate battery cells. Consult your local waste authority for information regarding available recycling and/or disposal options.
3. This appliance comes with a remote control which contains a coin battery. Dispose of batteries properly. Always keep batteries away from children (choke hazard). Even used batteries can cause injury.
4. To reduce the risk of electric shock, connect only to an outlet provided with a ground fault circuit interrupting (GFCI) device.
5. The fan should be used on a stable and level surface.
6. Never use this fan near pools, bathtubs, showers, basins, or other vessels containing water.
7. **DO NOT** operate any unit with a damaged power supply wire or battery charger. Discard the unit or return to an authorized service facility for examination and/or repair.
8. **DO NOT** run cord under carpeting. **DO NOT** cover charge cord with throw rugs, runners, or similar coverings. **DO NOT** route charger cord under furniture or appliances. Keep charger cord away from high-traffic areas. Place charger in an area where the cord will not be tripped over.
9. If the charger cord is damaged, it should be replaced.
10. This appliance is not intended for use by anyone (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or

instruction concerning use of the appliance
by a person responsible for their safety.

11. Children should be supervised to ensure that they **DO NOT** play with the appliance.
12. Cleaning and user maintenance shall not be made by children without supervision.
13. Prior to cleaning or other maintenance, the appliance must be unplugged from the electrical outlet.
14. Only use Shark™ branded accessories.
15. **DO NOT** use if appliance is not working as it should, or has been dropped, damaged, left outdoors, or dropped into water.
16. Turn off all controls before plugging in or unplugging the appliance.
17. Unplug from electrical outlet when not in use and before any maintenance or cleaning.
18. Hand wash exterior/hard plastic/non-electronic parts with water only. **DO NOT** immerse. Cleaning with chemicals could damage the unit.
19. **DO NOT** attempt to repair or adjust any electrical or mechanical functions of this appliance, as this may cause danger and void the warranty.

BATTERY REMOVAL AND DISPOSAL

1. Remove and immediately recycle or dispose of used batteries according to local regulations and keep away from children. **DO NOT** dispose of batteries in household trash or incinerate.
2. Even used batteries may cause severe injury or death.
3. Call a local poison control center for treatment information.
4. Compatible battery type is FA200-2S2P.
5. The nominal battery voltage is 3V.

⚠ WARNING

- **INGESTION HAZARD:** This product contains a button cell or coin battery.
- **DEATH** or serious injury can occur if ingested.
- A swallowed button cell or coin battery can cause **Internal Chemical Burns** in as little as 2 hours.
- **KEEP** new and used batteries **OUT OF REACH OF CHILDREN.**
- **Seek immediate medical attention** if a battery is suspected to be swallowed or inserted inside any part of the body.



- 6. DO NOT** force discharge, recharge, disassemble, heat above (manufacturer's specified temperature rating) or incinerate.

- Doing so may result in injury due to venting, leakage or explosion resulting in chemical burns.
- Ensure the batteries are installed correctly according to polarity (+ and -).
 - DO NOT** mix old and new batteries, different brands or types of batteries, such as alkaline, carbon-zinc, or rechargeable batteries.
 - Remove and immediately recycle or dispose of batteries from equipment not used for an extended period of time according to local regulations.
 - Always completely secure the battery compartment. If the battery compartment does not close securely, stop using the product, remove the batteries, and keep them away from children.

WARNING: Not suitable for use with solid-state speed controls.

LITHIUM BATTERY SAFETY WARNINGS  
LITHIUM BATTERIES STORE A LARGE AMOUNT OF ENERGY AND WILL VENT FIRE OR EXPLODE IF MISTREATED.

- DO NOT** DO ANY OF THE FOLLOWING TO THE BATTERY PACK:
 - Open
 - Drop
 - Short-circuit
 - Puncture
 - Incinerate
 - Expose to temperatures
- Keep battery pack dry.
- Charge battery pack only according to its charger's instructions.
- Inspect battery pack before every use: **DO NOT** use or charge if damaged.

BATTERY REMOVAL AND DISPOSAL

This product contains an integral lithium battery (not replaceable), and the remote control uses a lithium coin battery. When the remote battery no longer has a charge, it should be removed from the remote and recycled. **DO NOT** incinerate or compost the product with its integral battery or the remote battery. When your remote battery needs to be replaced, dispose of it or recycle it in accordance with local ordinances or regulations. In some areas, it is illegal to place spent lithium batteries in the trash or in a municipal solid waste stream. Return spent battery to an authorized recycling center or to retailer for recycling. Contact your local recycling center for information on where to drop off the spent battery.

POWER SUPPLY SAFETY

- Read and follow all instructions that are on the product or provided with the product.
- DO NOT** use an extension cord.
- DO NOT** use within 10 feet of pool and **DO NOT** use in a bathroom.
- WARNING: Risk of Electric Shock.** Use only as described.

 
CAUTION: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

WARNING: Not for use with receptacles that are weatherproof only when the receptacle is covered (attachment plug cap not inserted and receptacle cover closed).

WARNING: RISK OF ELECTRIC SHOCK. MOUNT THE UNIT AT A HEIGHT GREATER THAN 0.3 M FROM THE GROUND SURFACE.

 **WARNING:** Contains coin battery.

WHAT'S INSIDE

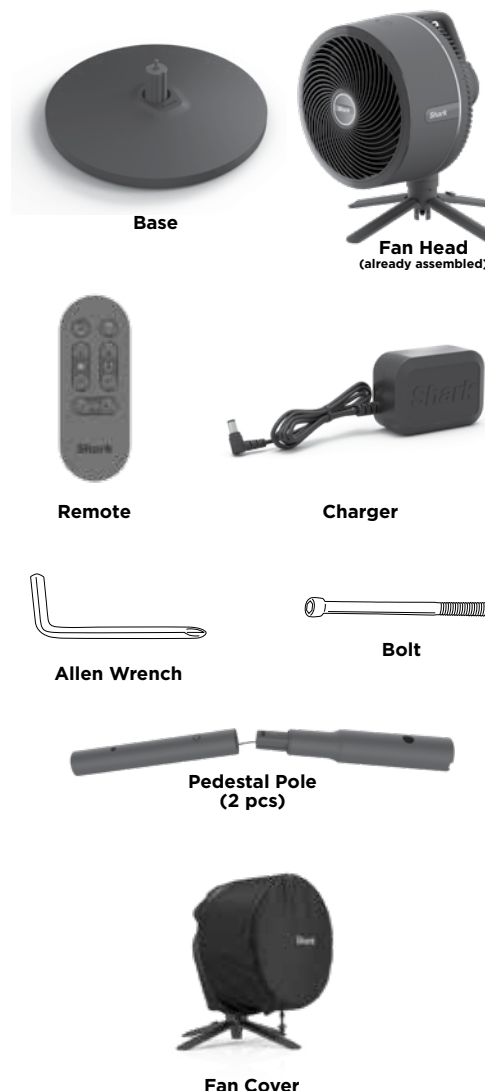


Remote Pairing Instructions

Turn the unit on by pressing the power button on top of the fan head and check if the remote functions properly.

If the remote is not functioning, try the following:

 - Check to ensure the battery saver paper is removed from the remote.
- Try connecting the remote to the fan by pressing and holding the power button on the fan head for 5 seconds. While the LEDs are flashing, press the fan speed up button on the remote.
- If the remote still doesn't work, then try replacing the batteries in the remote and repeat the connection process above.

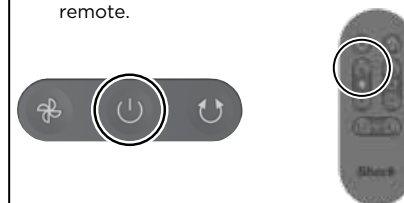


ACCESSORIES

Different fan models come with different accessories. To purchase an accessory that was not included, go to sharkninja.in.

SAVE THESE INSTRUCTIONS

 
ASSEMBLING YOUR FAN

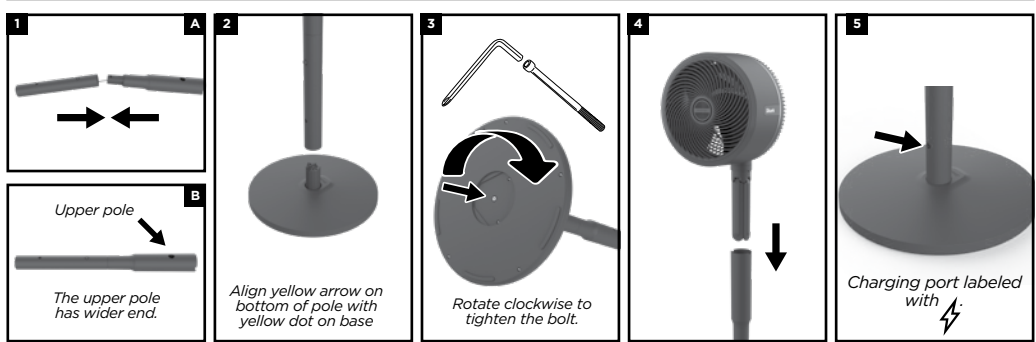

- Align and insert the **Upper Pole** into the **Lower Pole** until it clicks into place.
- Align the yellow dot on the assembled pole with the yellow arrow on the **Base**, then slide the pole down onto the base. Make sure the pole is installed completely and securely.
- Turn the base on its side, then insert the **Bolt** in the bottom of the **Base**. Use the **Allen wrench** to rotate the bolt on the bottom of the base. Rotate the bolt counterclockwise to loosen it, then remove it.
- CAUTION:** finger pinch risk. Holding the fan by the handle, insert the legs of the fan head into the top of the assembled pole until they click into place.
- Charge fan to 100% battery power** before use without the cord. **First use:** before using remote control, press **Power Button** on fan. Fan is operable while charging.


FEATURES

CORDLESS	OUTDOORS	OSCILLATION & TILT	NATURAL BREEZE	TIMER MODE
This is a 2-in-1 fan that can be used with or without the cord.	This fan can be enjoyed indoors or outdoors. DO NOT CHARGE OR USE IN THE RAIN.	This fan offers up to 180 degrees of oscillation as well as up to 55 degrees of vertical tilt.	NaturalBreeze modes simulate the pulse of wind patterns - perfect for an outdoor feel, indoors.	Set the timer to turn off the fan automatically.

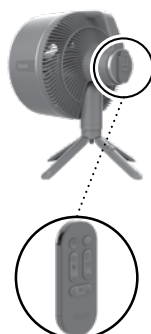 HOW TO USE YOUR FAN			REMOTE STORAGE
Fan Speeds	Press on the fan head or < > arrows on the remote to switch between fan speeds. LED lights will indicate selected fan speed.		Store the remote on the back of the fan head when not in use. 
	Strong Breeze Mode 	(REMOTE ONLY) Press and hold for 3 seconds for strong breeze mode.	
	Gentle Breeze Mode 	(REMOTE ONLY) Press and hold for 3 seconds for gentle breeze mode.	
Oscillation	Press on the fan head or < > arrows on the remote to toggle between oscillation settings. LED lights will indicate which setting is selected.		
Timer	Setting 1: 1 Hour Setting 2: 2 Hours Setting 3: 3 Hours Setting 4: 4 Hours Setting 5: 5 Hours	(REMOTE ONLY). Press to switch between timer settings 1-5 hours. LED lights will appear to indicate how many hours the timer is set for. LEDs will switch off after 20 seconds. To check how long is left on your timer, press and the LED lights will appear.	
Horizontal Angle Adjust	Press the < > arrows on the remote to change the horizontal angle of the fan in 18° increments.		To preserve battery life, the fan will enter IDLE mode if left unplugged and powered off for 24 hours. In IDLE mode, the remote cannot be used to turn on the fan. To turn off IDLE mode, press the power button on top of the fan head.
Runtime	MAXIMUM CORDLESS RUNTIME: 24 hours on fan speed 1. MAXIMUM CORDLESS PERFORMANCE: 6 hours on fan speed 3. PLUGGED IN: Indefinite runtime; fan will charge while operating.		
Charge Time	FROM 0% TO FULLY CHARGED BATTERY: 5 hours		
Battery Indicator	Fully Charged Battery: White 99% to 51% Battery: Green 50% to 21% Battery: Amber 20% to 6% Battery: Red Flashing Red Battery Under 5%		

To preserve battery life, the fan will enter IDLE mode if left unplugged and powered off for 24 hours. In IDLE mode, the remote cannot be used to turn on the fan. To turn off IDLE mode, press the power button on top of the fan head.

 CHARGING THE FAN

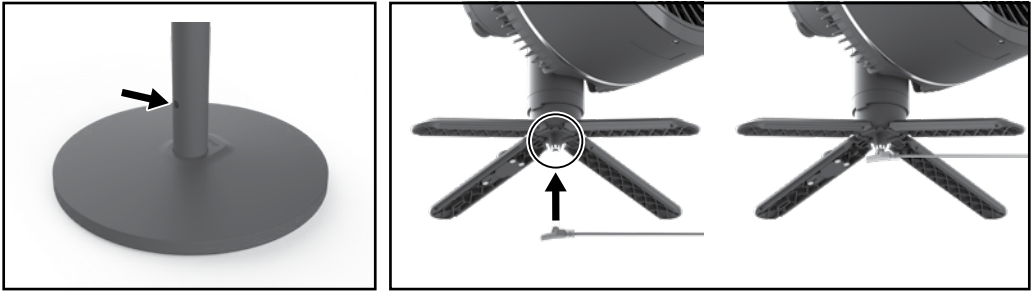

PEDESTAL MODE: To charge the fan in pedestal mode, insert the **CHARGER PLUG** into the charging port near the bottom of the **POLE**.

TABLETOP MODE: To charge the fan in tabletop mode, insert the **CHARGER PLUG** into the charging port under the centre shaft of the fan, between the 4 support legs. **DO NOT CHARGE OR USE IN THE RAIN.**

VERTICAL ADJUSTMENT

To adjust the vertical height of your fan head, use the handle to tilt the head up or down. The Shark™ Fan has a vertical range of 55 degrees.



FAN HEAD TILTED UP



FAN HEAD TITLED DOWN

BATTERY LIFE - 5 FAN SPEEDS


Settings	Runtime
Fan Speed 1	24.0 hours
Fan Speed 1 + Oscillation	12.0 hours
Fan Speed 2	14.0 hours
Fan Speed 2 + Oscillation	8.0 hours
Fan Speed 3	6.0 hours
Fan Speed 3 + Oscillation	4.5 hours

Runtime subject to 12% variability.

Settings	Runtime
Fan Speed 4	3.0 hours
Fan Speed 4 + Oscillation	2.5 hours
Fan Speed 5	2.0 hours
Fan Speed 5 + Oscillation	1.7 hours

TABLETOP MODE

 To convert the fan to portable, tabletop mode:

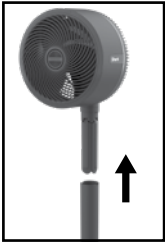

To detach the fan from the pole, press the Lift-Away button, then slide the fan head off the pole.

 


Spread out the four support legs until they click into place. Place the fan on a flat, level surface and begin use.


DISASSEMBLY




1. Release the fan head by pressing the lift away button and carefully remove the fan from the pole.

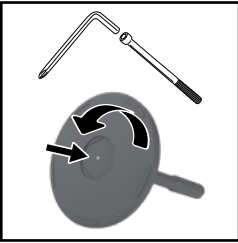

 2. Turn the pedestal base on its side to access the bolt on the bottom. Use the included Allen wrench to rotate the bolt counterclockwise, then remove the bolt.

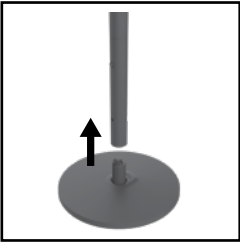

 3. Carefully lift the pole to remove it from the base.

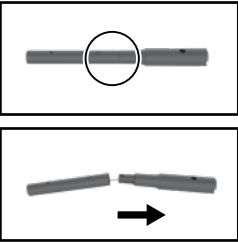

4. Press the small button on the lower pole to detach the poles from one another. Carefully fold as needed for storage. DO NOT strain the cord.

If grill screw, bolt, or Allen wrench have been lost, see Hardware Specs section for information on how to replace any hardware.

STORAGE

STORAGE TYPE	INSTRUCTIONS
Short-term storage indoors (<24 hours)	1. Carefully disassemble the fan OR place the assembled fan in the desired storage location. Ensure it is out of reach of children and pets. 2. Place the assembled fan in the desired storage location. Ensure it is out of the reach of children and pets. If there is inclement weather, it is recommended to bring fan indoors.
Long-term storage indoors (>24 hours)	1. Carefully disassemble the fan OR place the assembled fan in the desired storage location. Ensure it is out of reach of children and pets. 2. Store the fan indoors when not in use for long periods of time. Ensure it is stored out of reach of children.

SETTINGS

- Before first use, pull out the plastic tab from the battery compartment of the remote control.
- To preserve battery life, the fan will enter IDLE mode if left unplugged and powered off for 24 hours. In IDLE mode, the remote cannot be used to turn on the fan. To turn off IDLE mode and turn on the power, press the power button on top of the fan head.
- The LED lights on the fan head display will only remain illuminated for 20 seconds after a setting adjustment is made, before turning off to save battery.
- For information on how to activate or deactivate **LOCK MODE** for fan maintenance, please see the Maintenance section.
- Remote may be less effective when used outdoors.

POWER ON/OFF

 
To turn the fan on or off, press the **POWER** button on the remote or the **POWER** button on the fan head.



5-SPEED MODELS

ON
OFF

DISPLAY

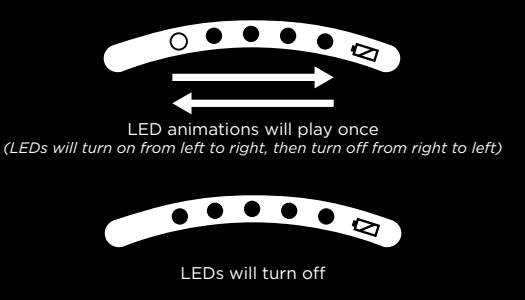

FAN SPEEDS

Changing the **FAN SPEED** will increase or decrease the airflow of the fan. There are 5 fan speed settings. To change the speed, press the fan icon on the fan head to cycle through the different speeds. With the remote, press the up or down arrows to change speeds.



SPEED	DISPLAY (5-SPEED MODELS)	BEST FOR
1		Quiet operation
2		Moderate cooling
3		Balance of noise level and fan power
4		Air circulation
5		High power cooling


OSCILLATION



Choose between oscillation settings to best suit your needs. 5-speed models have 3 options for angle of oscillation, while 3-speed models have one option. To change the oscillation settings, press the up/down arrow on the **REMOTE**. To do so on the fan head, press the oscillation  icon to cycle through the settings. To turn off oscillation, press the down arrow on the remote or the oscillation  icon on the fan head until no LEDs are illuminated.

DISPLAY (5-SPEED MODELS)	ANGLE	BEST FOR
	45°	Circulating air in small area, 1-2 people
	90°	Circulating air in moderate area, 3-4 people
	180°	Circulating air in large area, 5+ people

 HORIZONTAL ANGLE ADJUST



You can use the remote control to change the horizontal angle of the fan from a distance. Press the left or right arrows on the remote to adjust the horizontal angle of the fan in 18° increments.

Note: The LEDs on the fan head will not illuminate when you use this feature.

TROUBLESHOOTING AND FREQUENTLY ASKED QUESTIONS


GENERAL USE	Why is the remote not working?	When using the remote control, make sure it is pointed directly at the LEDs on the front of the fan. The fan may have entered IDLE mode. To preserve battery life, the fan will enter IDLE mode if left unplugged and powered off for 24 hours. In IDLE mode, the remote cannot be used to turn on the fan. To turn off IDLE mode and turn on the power, press the power button on top of the fan head. If your remote has lost its connection to the fan, you can easily reconnect it. Press and hold the power button on the fan head for 5 seconds, then press the fan speed up button on the remote while the LEDs on the fan head are flashing. If the remote still doesn't work, then try replacing the batteries in the remote.
	Why are the remote and UI buttons not working?	Make sure the fan has battery power by pressing the Power button. If the Battery LED indicator blinks red, then the fan needs to be charged. When the fan is charging, the Battery LED will blink green. See the Battery Life and How To Use Your Fan sections for more detailed information on runtimes and battery indicators. If all the LEDs are flashing, the fan may be in Lock mode, which deactivates the fan to allow you to safely maintain it. To turn off Lock mode, press the Oscillation (🌀) icon on the fan and hold it down for 8 seconds. When Lock mode is successfully deactivated, the LEDs will display the Power On pattern. See the Maintenance section for more information.
	Why is the fan rattling?	Ensure that the fan blade cap is fully installed before operating the fan. Please see the Maintenance section for more details.
	The second LED indicator and the Battery LED (in amber) are flashing. What is wrong?	This error state indicates an issue with the voltage of the charger. Please be sure to only use the provided Shark™ charging cable and power supply.
MAINTENANCE	Why do I have to activate Lock mode before maintenance?	The fan must be in Lock mode when any maintenance is performed. Lock mode prevents the fan from accidentally powering on.
	How often should I clean the fan?	We recommend cleaning the fan every 6 months or as needed. See Maintenance section for more information.

MAINTENANCE


We recommend cleaning the fan every 6 months or as needed. To avoid accidental damage to the fan components and decreased performance, DO NOT use any fragrance or scented products during maintenance.

If grill screw, bolt, or Allen wrench have been lost, see the Hardware Specs section for information on how to replace any hardware.

 
- **LOCK MODE** must be activated prior to performing maintenance. This will temporarily block all fan functions until deactivated. Lock mode prevents the fan from accidentally powering on.

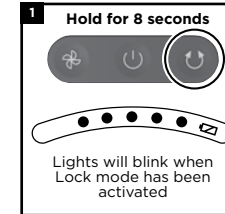

 1. Turn on Lock mode before performing maintenance for safety. To activate, hold down the **OSCILLATION** icon on the fan head for 8 seconds.

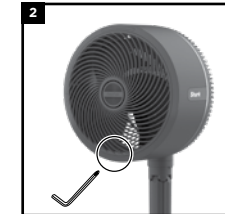

 
2. Place the fan upright on a flat, level surface in tabletop mode. Use the Phillips-head end of your Allen wrench to loosen the screw at the bottom of the **FAN GRILL**. Set screw aside.

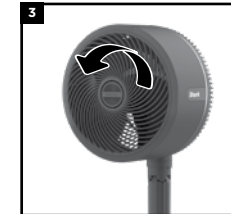


3. Rotate the **FAN GRILL** counterclockwise to remove it from the fan head. Set grill aside.



 
4. Remove the fan blade cap. Hold the fan blades in place while rotating the fan blade cap clockwise to remove it from the shaft.

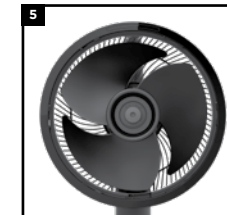

 
5. Gently pull to remove the **FAN BLADES**. With a slightly damp cloth, wipe down the interior parts of the fan.

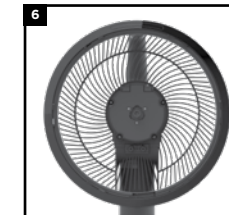

 
6. Carefully replace the **BLADES** onto the centre shaft.

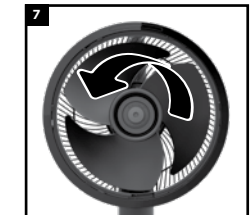

 
7. Reinstall the fan blade cap. Hold the fan blades in place while rotating the fan blade cap counterclockwise to reinstall it to the shaft.

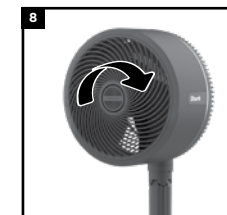

 8. Rotate the **FAN GRILL** clockwise to secure it to the fan head.

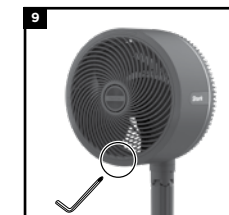

 9. Place the fan upright on a flat, level surface. Use the Phillips-head end of your Allen wrench to replace and tighten the screw at the bottom of the **FAN GRILL**.

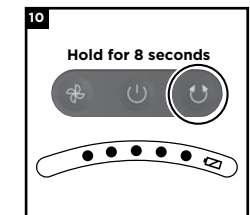

10. Turn off Lock mode by pressing the Oscillation icon for 8 seconds.




HARDWARE SPECS

Grill Screw	
For securing the grill to the fan	
Drive Type	Phillips
Thread Size / Pitch	M3 x 0.5mm
Length	16mm


Screwdriver	
For driving the screw	
Drive Type	Phillips
Size	No. 1

Bolt	
For securing base to pole	
Drive Type	Hex
Thread Size / Pitch	M6 x 1mm
Length	85mm

Allen Wrench	
For driving the bolt	
Drive Type	Hex
Size	5mm

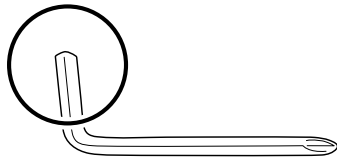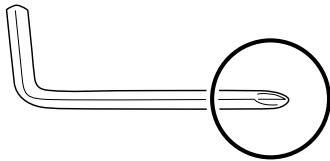   

AVAILABLE ACCESSORIES

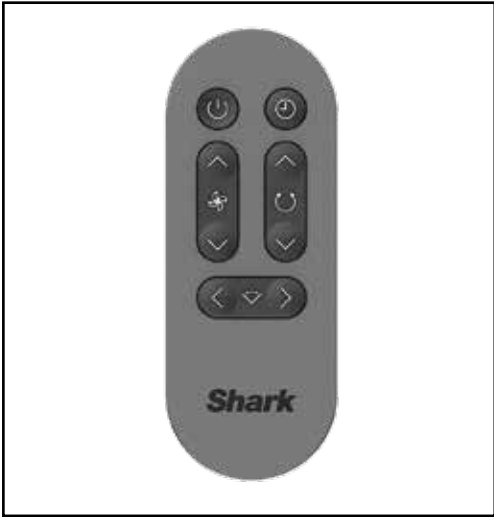 

Remote Control
Use the remote control to operate your fan from a distance.



Fan Cover

TWO (2) YEAR LIMITED WARRANTY

The warranty commences on the date of purchase and expires at the end of the two (2)-year period. In the unlikely event of a defect due to faulty materials or workmanship within the warranty period we will replace the defective/faulty part with a new part/product, free of charge, or if the unit is deemed defective/faulty we replace the unit with an equivalent or upgraded model, at our discretion.

For warranty claims, you will need to submit a proof of purchase in the form of a valid receipt that displays date and place of purchase.

Replacement items will be covered by the limited warranty for the balance of the warranty period from the original date of purchase.

Any personal data collected through this warranty process will be used for warranty-related purposes and for marketing communications, subject to the customer's right to opt out. All data will be handled in accordance with applicable data protection laws.

Your warranty is subject to the following conditions:

- **DO NOT** operate the appliance with a damaged plug or cord, or if the unit has been dropped, damaged or dropped in water.
- To avoid the risk of electric shock, do not disassemble or attempt to repair the appliance on your own. If the supply cord is damaged, it must be replaced by a qualified electrician to avoid a hazard. Incorrect re-assembly or repair can cause a risk of electric shock or injury to persons when the appliance is used.
- The item has not been misused, abused, neglected, altered, modified or repaired by anyone.
- The item has been subjected to fair wear and tear.
- The item has not been used for trade, professional or hire purposes.
- The item has not sustained damage through foreign objects, substances or accident.
- Any parts/product which are replaced will become the property of Shark Ninja.
- The company reserves the absolute right to amend, extend, cancel, and/ or discontinue terms and conditions or any part thereof without giving any reason or prior notice to the customer.
- Force Majeure: The company shall not be liable for the non-performance of its obligation under this terms and conditions where such failure is due to a force majeure event i.e. any act of God, orders, restrictions, or regulations of Government(Central or State), war, working conditions, hostilities, riots, civil commotion, strike, lock-out, lockdown, pandemic, labour trouble, explosion, or any other cause or circumstances of whatsoever nature beyond control.
- Any dispute shall be subject to the exclusive jurisdiction of Bengaluru Courts .

What is covered by this warranty?

This warranty applies only to the original purchaser, who bought the product from an authorised retailer and may not be transferred. Proof of purchase is required.

- The original unit and/or non-wearable parts deemed defective, in SharkNinja's sole discretion, will be repaired or replaced up to two (2) years from the original purchase date.
- In the event a replacement unit is issued, the warranty coverage ends six (6) months following the receipt date of the replacement unit or the remainder of the existing warranty, whichever is later. SharkNinja reserves the right to replace the unit with one of equal or greater value.
- This warranty applies only to products purchased in India from authorized sellers and is valid for service within India. No international warranty is offered.

What is not covered?

- Accessories supplied with the item.
- Components that are subject to natural wear and tear (including, but not limited to, batteries, fuse, belt, brush rolls, filters etc.) caused by normal use in accordance with operating instructions. Replacement parts are available for purchase at www.sharkninja.in or reach out to us at customerservice@sharkninja.in.
- In case, model number, serial number, or production date code on the product has been altered, removed, or is no longer legible.
- Unauthorised/ improper maintenance/ handling or overload is excluded from this warranty.
- Repairs or alterations carried out by repair persons not authorized by SharkNinja.
- Accidental damage including, but not limited to, transit, weather, electrical outages or power sags/surges.
- Damage resulting from use not in accordance with the rating plate.
- Removal of blockages. If a blockage does occur, please refer to the trouble shooting guide within your Shark Operating manual.
- Use of parts and accessories that are not genuine Shark components.
- Products purchased, used, or operated outside India.

Waste Electrical and Electronic Equipment (WEEE)



- This symbol (with or without a solid bar) means that according to local laws and regulations your product and/or its battery shall be disposed of separately from household waste. When this product reaches its end of life, the user may choose to hand over the product to a competent recycling organization. Proper recycling of your product will protect human health and the environment.
- If you are unsure what to do with e-waste, please contact your local authorities, retailer, or household waste disposal service.
- For more information on safe disposal and recycling you may log on to <https://www.sharkninja.in/legal/e-waste-management> or contact our Toll Free No: 1800-296-0076

 
Reduction of Hazardous Substances

- This device and any electrical accessories are compliant with local applicable rules on the restriction of the use of certain hazardous substances in electrical and electronic equipment. For declarations of conformity about REACH, please visit our website www.sharkninja.in

Contact Us

If you have any questions, or would like to claim your warranty, please contact us as follows:

Website: www.sharkninja.in
Email: customerservice@sharkninja.in
Toll Free Telephone: 1800-296-0076



Illustrations may differ from actual product. We are constantly striving to improve our products; therefore the specifications contained herein are subject to change without notice.

For SharkNinja U.S. Patent information, visit sharkninja.com/patents