

Shark FLEXBREEZE[®] PRO MIST FAN FA305A

QUICK START GUIDE



FOR MORE INFORMATION

visit qr.sharkclean.com/fa300series or

SCAN HERE
USING YOUR SMARTPHONE CAMERA



© 2026 SharkNinja Operating LLC, Needham, MA 02494.
FLEXBREEZE and SHARK are registered trademarks of SharkNinja Operating LLC.
1-877-581-7375 Sharkninja.com
FA305A_QSG_MP_Mv3_260330

IMPORTANT SAFETY INSTRUCTIONS

SUITABLE FOR OUTDOOR USE & HOUSEHOLD USE ONLY.

NOTE: Before every use, empty and rinse the misting hose and water tank to prevent stagnant water from being misted.

WARNING

TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK, OR INJURY: READ ALL THESE INSTRUCTIONS BEFORE USE.



The misting feature is suitable for OUTDOOR USE ONLY.

DO NOT attempt to mist indoors as this could cause slippery conditions or water damage.

1. This appliance is operated by a rechargeable battery. ONLY recharge the battery with the charger supplied with the unit, battery charger for use only with model GQ36-120300-AUO power supply from Dongguan Gangqi Electronics Co., Ltd. with model AJJ301 from Anlian or with model ZD036T120300US from E-TEK. A charger that may be suitable for one type of battery may create a risk of fire when used with another battery.
2. Do not attempt to destroy, remove, or disassemble the battery pack from the machine. Do not incinerate battery cells. Consult your local waste authority for information regarding available recycling and/or disposal options.
3. This appliance comes with a remote control which contains a coin battery. Dispose of batteries properly. Always keep batteries away from children (choke hazard). Even used batteries can cause injury.
4. To reduce the risk of electric shock, connect only to an outlet provided with a ground fault circuit interrupting (GFCI) device.
5. The fan should be used on a stable and level surface.
6. Never use this fan near pools, bathtubs, showers, basins, or other vessels containing water.
7. Do not operate any unit with a damaged power supply wire or battery charger. Discard the unit or return to an authorized service facility for examination and/or repair.
8. Do not run cord under carpeting. Do not cover charge cord with throw rugs, runners, or similar coverings. Do not route charger cord under furniture or appliances. Keep charger cord away from high-traffic areas. Place charger in an area where the cord will not be tripped over.
9. If the charger cord is damaged, it should be replaced.
10. This appliance is not intended for use by anyone (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
11. Children should be supervised to ensure that they DO NOT play with the appliance.
12. Cleaning and user maintenance shall not be made by children without supervision.
13. Prior to cleaning or other maintenance, the appliance must be unplugged from the electrical outlet.
14. Only use Shark branded accessories.
15. Do not use if appliance is not working as it should, has been damaged, or dropped into water.
16. Turn off all controls before plugging in or unplugging the appliance.
17. Unplug from electrical outlet when not in use and before any maintenance or cleaning.
18. Hand wash exterior/hard plastic/non-electronic parts with damp cloth and water only.
19. Do not attempt to repair or adjust any electrical or mechanical functions of this appliance, as this may cause danger and void the warranty.
20. Remove and immediately recycle or dispose of used batteries according to local regulations and keep away from children. Do NOT dispose of batteries in household trash or incinerate.
21. Even used batteries may cause severe injury or death.
22. Call a local poison control center for treatment information.
23. Compatible battery type is AAA.
24. The nominal battery voltage is 1.5V.
25. Non-rechargeable batteries are not to be recharged.
26. Do not force discharge, recharge, disassemble, heat above 140°F (60°C), or incinerate. Doing so may result in injury due to venting, leakage, or explosion resulting in chemical burns.
27. Ensure the batteries are installed correctly according to polarity (+ and -).
28. Do not mix old and new batteries, different brands or types of batteries (such as alkaline or carbon-zinc) or non-rechargeable and rechargeable batteries.
29. Always follow the warning information on the batteries and in the manuals of devices.
30. Only use the recommended battery types.
31. Keep batteries away from children.
32. Unpacked batteries shall not lie about in bulk.
33. When changing batteries, always replace all batteries with new ones of identical type and brand.
34. **DO NOT** swallow batteries.
35. **DO NOT** throw batteries into water.
36. **DO NOT** throw batteries into fire.
37. Avoid deep discharge.
38. **DO NOT** short-circuit batteries.
39. Use recommended charging time and current.
40. **DO NOT** open or disassemble batteries.
41. **DO NOT** expose the remote to long periods of rain or moisture.
42. **DO NOT** direct mist toward electrical wiring or devices.
43. Remove and immediately recycle or dispose of batteries from equipment not used for an extended period of time according to local regulations.
44. Always completely secure the battery compartment. If the battery compartment does not close securely, stop using the product, remove the batteries, and keep them away from children.
45. The misting feature is suitable for **OUTDOOR USE ONLY**. **DO NOT** attempt to mist indoors as this could cause slippery conditions or water damage.
46. Never attempt to mist substances other than filtered or clean tap water. **DO NOT** use warm or hot water. Only use cold or room temperature water.
47. **DO NOT** handle live electrical products while in range of the misting stream.
48. Keep non-waterproof electronic equipment and appliances out of the misting stream.
49. **WARNING: CHOKING HAZARD.** Always keep nozzles and any other small parts out of the reach of children.
50. Do not apply any fragrance or scented products onto any part of the fan during use or maintenance.



WARNING: Not suitable for use with solid-state speed controls.

LITHIUM BATTERY SAFETY WARNINGS

LITHIUM BATTERIES STORE A LARGE AMOUNT OF ENERGY AND WILL VENT FIRE OR EXPLODE IF MISTREATED.

1. DO NOT DO ANY OF THE FOLLOWING TO THE BATTERY PACK:

- a. Open
- b. Drop
- c. Short-circuit
- d. Puncture
- e. Incinerate
- f. Expose to temperatures

2. Keep battery pack dry.

3. Charge battery pack only according to its charger's instructions.

4. Inspect battery pack before every use: do not use or charge if damaged.

BATTERY REMOVAL AND DISPOSAL

This product contains an integral lithium battery (not replaceable), and the remote control uses 2 AAA batteries. When the remote batteries no longer have a charge, they should be removed from the remote and recycled. DO NOT incinerate or compost the product with its integral battery or the remote batteries. When your remote batteries need to be replaced, dispose of them or recycle them in accordance with local ordinances or regulations. In some areas, it is illegal to place spent lithium batteries in the trash or in a municipal solid waste stream. Return spent batteries to an authorized recycling center or to retailer for recycling. Contact your local recycling center for information on where to drop off the spent batteries.

POWER SUPPLY SAFETY

1. Read and follow all instructions that are on the product or provided with the product.
2. Do not use an extension cord.
3. Do not use within 10 feet of pool and do not use in a bathroom.
4. **WARNING: Risk of Electric Shock.** When used outdoors, install only to a covered Class A GFCI protected receptacle that is weatherproof with the power unit connected to the receptacle. If one is not provided, contact a qualified electrician for proper installation. Ensure that the power unit and cord do not interfere with closing the receptacle cover.

FCC WARNINGS

Note: This equipment has been tested and complies with the limits for a Class B digital device - pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

To see if this equipment interferes with radio or television reception, try turning the equipment off and on.

To correct any interference:

- Reorient or relocate the receiving antenna.
- Increase the distance between the equipment and the receiver.
- Connect the equipment to a different outlet than the receiver.
- Consult the dealer or an experienced technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to two conditions:

1. This device may not cause harmful interference, and
2. this device must accept any interference received, including interference that may cause undesired operation.

Caution: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

IC Statement:

 
 
This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

1. This device may not cause interference.
2. This device must accept any interference, including interference that may cause undesired operation of the device.

READ AND SAVE THESE INSTRUCTIONS

ASSEMBLING YOUR FAN

INCLUDES: • Allen Wrench • Bolt • Fan Head • Water Tank • Remote
Multi-Tool • Base • 2-Piece Pole • Hose • Charging Cable

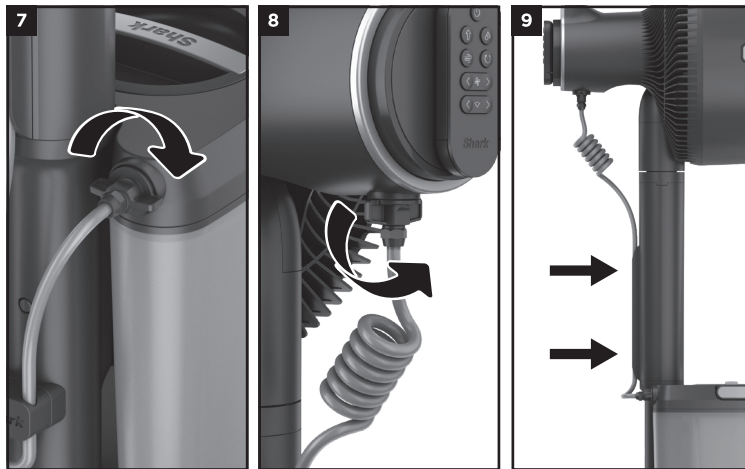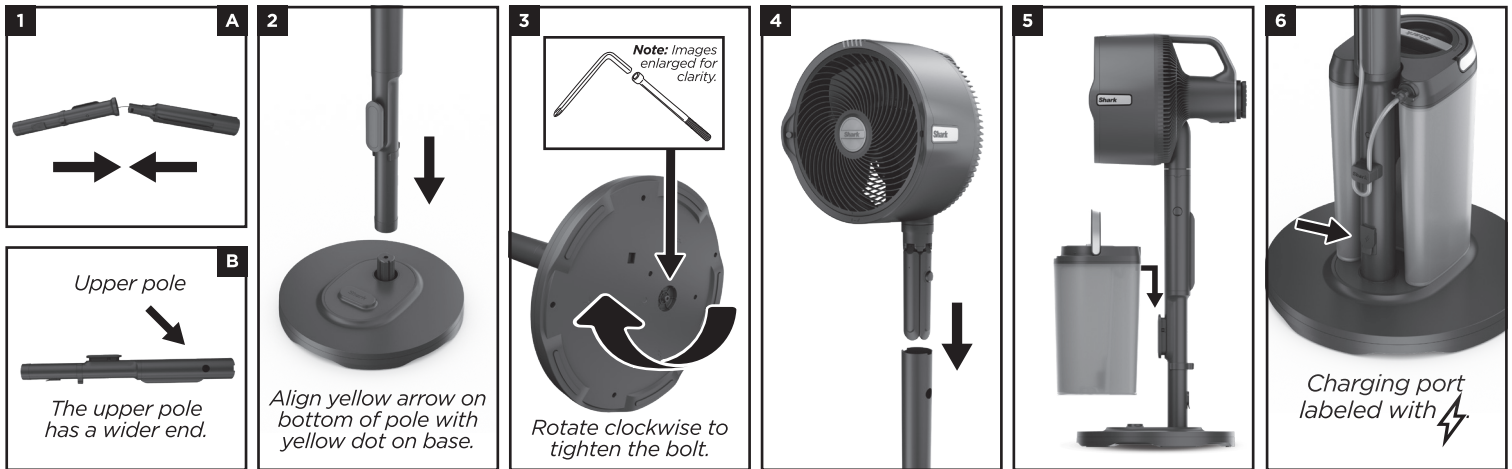

FEATURES

CORDLESS

This is a 2-in-1 fan that can be used with or without the cord.

OUTDOORS

This fan can be enjoyed indoors or outdoors.

DO NOT CHARGE OR USE IN THE RAIN

BREEZEBOOST™ & NATURALBREEZE™

Activate the extra-powerful BreezeBoost™ for maximum strength airflow, or use one of the NaturalBreeze modes to simulate wind conditions.

OUTDOOR MISTING

Integrated misting enabled through a portable water tank, 2 misting nozzles, and 3 misting modes. The misting feature is suitable for **OUTDOOR USE ONLY**.

OSCILLATION & TILT

Direct the airflow by choosing between 3 electronic oscillation angles and manually adjusting the vertical tilt up to 55° degrees.

REMOTE STORAGE

You can store the remote on the convenient magnetic mount on back of the fan head.

TABLETOP MODE

To convert the fan to portable, tabletop mode:



Note: To avoid accidental damage to your fan, ensure the hose is disconnected from the back of the fan head before converting to tabletop mode.

CHARGING YOUR FAN

 


PEDESTAL MODE: To charge the fan in pedestal mode, insert the **CHARGE PLUG** into the charging port near the bottom of the **POLE**.



TABLETOP MODE: To charge the fan in tabletop mode, insert the **CHARGER PLUG** into the charging port under the center shaft of the fan, between the 4 support legs. **DO NOT CHARGE OR USE IN THE RAIN.**

REMOTE STORAGE

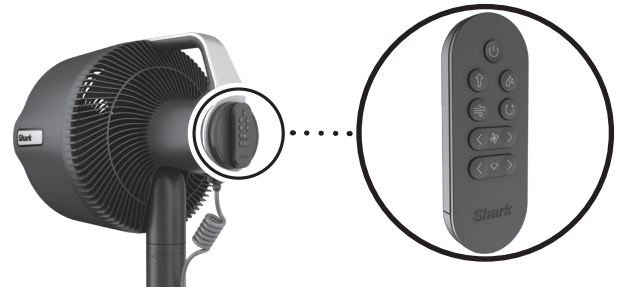

If the fan is unplugged and not used for 24 hours the remote will enter IDLE mode to preserve battery. To turn off IDLE Mode, use the buttons on the fan head.

HOW TO USE YOUR FAN

Fan Speeds	Press  on the fan head or    on the remote to switch between fan speeds. LED lights will indicate selected fan speed.	
	BreezeBoost™ Mode	For maximum-strength airflow, press  on the remote or  on the fan head again. During cordless use, fan speed will automatically decrease after 20 minutes to save battery power
	NaturalBreeze Modes	To activate STRONG breeze mode, press  once on the REMOTE, or press  on the fan head an additional time. To activate GENTLE breeze mode, press  a 2nd time on the REMOTE, or press  on the fan an additional time.
Oscillation Settings	Press  on the fan head or    on the remote to toggle between oscillation settings. LED lights will indicate which setting is selected.	
Horizontal Angle Adjust	Press the   arrows on the remote to change the horizontal angle of the fan in 18° increments.	
Outdoor Misting Settings	1-3	Press  once to turn on high-pressure consistent mist. Press  a 2nd time to switch to the low-pressure consistent mist mode. Press  a 3rd time to switch to the low-pressure interval mist mode.
Runtime	Fan ONLY	MAXIMUM CORDLESS RUNTIME: 24 hours on fan speed 1. AVERAGE CORDLESS RUNTIME: 6 hours on fan speed 3. MAXIMUM CORDLESS PERFORMANCE: 2 hours on fan speed 5. PLUGGED IN: Indefinite runtime; fan will charge while operating.
	Fan + Outdoor Misting	MAXIMUM MISTING RUNTIME: 16-hour high-pressure consistent misting on fan speed 1 (refilling the water tank every hour). AVERAGE MISTING RUNTIME: 4-hour high-pressure consistent misting on fan speed 3 (refilling the water tank every hour). MAXIMUM MISTING PERFORMANCE: 1-hour high-pressure consistent misting on fan speed 5
Charge Time	FROM 0% TO FULLY CHARGED BATTERY: 5-6 hours	
Battery Indicator	 70%-100%: green light  30%-69%: amber light  6%-29%: red light steady  5% and below: red light blinking	

VERTICAL TILT

To adjust the vertical height of the fan head, use the handle to manually tilt the head up or down.

The fan has a vertical range of 55° degrees.



Fan head tilted UP



 
Fan head tilted DOWN

REMOTE PAIRING INSTRUCTIONS


Turn the unit on by pressing the power button on top of the fan head, and check if the remote functions properly.

If the remote is not functioning, try the following:

1. Make sure the 2 AAA batteries are placed in the remote in the correct orientation.

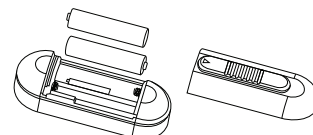

 2. To pair the remote with the fan, press the Power button on the fan head and hold it in for 5 seconds. When the LED lights on the fan start flashing, press the Fan Speed Up arrow on the remote.

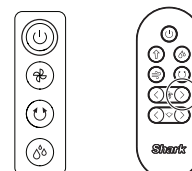

3. If the remote still doesn't work, then try replacing the batteries in the remote and repeat the connection process above.