

IMPORTANT SAFETY INSTRUCTIONS

HOUSEHOLD USE ONLY

⚠ WARNING

TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK, OR INJURY:

READ ALL THESE INSTRUCTIONS BEFORE USE.

1. This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature. Unplug or disconnect the appliance from the power supply before servicing.
2. **DO NOT** operate any unit with a damaged cord or plug. Discard the unit or return to an authorized service facility for examination and/or repair.
3. **DO NOT** run cord under carpeting. **DO NOT** cover cord with throw rugs, runners, or similar coverings. **DO NOT** route cord under furniture or appliances. Keep cord away from high-traffic areas to avoid tripping hazards.
4. If the power cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons in order to avoid a hazard.
5. This appliance is not intended for use by anyone (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
6. Children should be supervised to ensure that they **DO NOT** play with the appliance.
7. Cleaning and user maintenance shall not be made by children without supervision.
8. Prior to cleaning or other maintenance, the appliance must be unplugged from the electrical outlet.
9. **DO NOT** handle plug or appliance with wet hands.
10. **DO NOT** use without filter in place.
11. Only use Shark® branded filters and accessories.
12. **DO NOT** damage the power cord:
 - a) **DO NOT** pull or carry appliance by the cord or use the cord as a handle.
 - b) **DO NOT** unplug by pulling on cord. Grasp the plug, not the cord.
 - c) **DO NOT** stand the appliance on the power cord, close a door on the cord, pull the cord around sharp corners, or leave the cord near heated surfaces.
13. **DO NOT** use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce airflow.
14. **DO NOT** use if airflow is restricted. If the air paths become blocked, turn the appliance off and unplug from electrical outlet. Remove all obstructions before you plug in and turn on the unit again.
15. **DO NOT** use if appliance is not working as it should, or has been dropped, damaged, left outdoors, or dropped into water.
16. **DO NOT** place appliance on unstable surfaces such as chairs or tables.
17. **DO NOT** use in the following areas:
 - a) Wet or damp surfaces
 - b) Outdoor areas
 - c) Spaces that are enclosed and may contain explosive or toxic fumes or vapors (lighter fluid, gasoline, kerosene, paint, paint thinners, mothproofing substances, or flammable dust)
18. Turn off all controls before plugging in or unplugging the appliance.
19. Unplug from electrical outlet when not in use and before any maintenance or cleaning.

20. Hand-wash with water only. Washing with cleaning chemicals could damage the unit.

21. Make sure filter is in place after routine maintenance.

22. Not suitable for use with solid-state speed controls.

HP230 SERIES ONLY: ODOR NEUTRALIZER TECHNOLOGY

23. Observe the following when interacting with the odor neutralizer technology cartridge.
- a) **DO NOT** attempt to disassemble odor neutralizer technology cartridge.
 - b) Avoid direct contact with the fragrance pod in the cartridge.
 - c) **DO NOT** directly inhale from the odor neutralizer technology cartridge.
 - d) Keep away from children and pets.
 - e) Keep away from heat, sparks, and open flame.
 - f) **DO NOT** place in direct sunlight.

HP230 SERIES ONLY: ODOR CARTRIDGE FIRST AID

- a) Avoid contact with fabrics and finished surfaces.
 - b) Eye contact: Remove contact lenses if present. Rinse continuously with water for several minutes.
 - c) Skin contact: Wash hands thoroughly after handling. If irritation or rash develops, seek medical advice/attention.
 - d) Inhalation: Move person to fresh air if they are experiencing any respiratory symptoms. If symptoms persist, seek medical advice/attention.
 - e) Ingestion: **DO NOT** induce vomiting. Seek medical advice/attention.
24. Dispose of batteries properly. Keep batteries away from children at all times. Even used batteries can cause injury.

 
⚠ WARNING: Chemical Burn Hazard. Keep batteries away from children.

This product contains a lithium button/coin cell battery. If a new or used lithium button/coin cell battery is swallowed or enters the body, it can cause severe internal burns and can lead to death in as little as 2 hours. When not changing batteries, keep the battery compartment completely closed. If the battery compartment does not close securely, stop using the product, remove the batteries, and keep them away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

READ AND SAVE THESE INSTRUCTIONS

visit qr.sharkclean.com/hp200series or

SCAN HERE
USING YOUR SMARTPHONE CAMERA

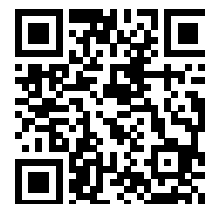

**FOR FULL INSTRUCTIONS OR
TO PURCHASE ACCESSORIES.**

 
Please be sure to read and save the warnings on other side prior to using your air purifier.

QUICK START GUIDE

SETTING UP YOUR AIR PURIFIER




1. **DO NOT** plug in your air purifier immediately. Carefully turn the air purifier upside down and place it on a level surface. Rotate the filter door counterclockwise to unlock it, take out the filter, and remove the filter from the plastic packaging.

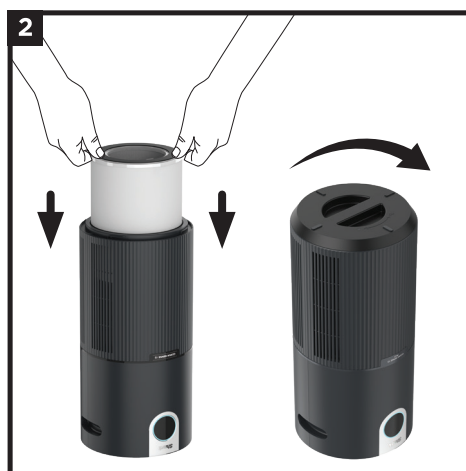

2. Reinstall the filter and twist the filter door clockwise until it clicks into place.

Odor Neutralizer Technology

 
Some purifiers come with an Odor Neutralizer Technology cartridge. If your unit has Odor Neutralizer Technology, locate the odor cartridge and follow the installation instructions on the packaging.

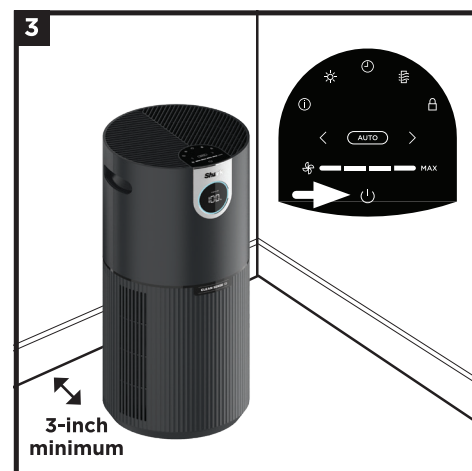

3. Set up the air purifier on a level surface, at least 3 inches (8 cm) from walls and objects. Plug the air purifier into an electrical outlet and press the power button on the top of the panel.

UNDERSTANDING YOUR AIR QUALITY

 When the unit is powered on, it will begin to analyze the air quality, indicated by the rotating lights. After a few seconds, the unit will display the current air quality.

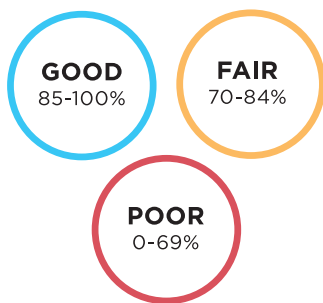

PRESS ⓘ TO SWITCH BETWEEN AIR QUALITY VIEWS

CLEAN AIR Percentage of air that is clean.	PM 1.0 Total particles that are the size of allergens.	PM 2.5 Total particles that are the size of smoke.	PM 10 Total particles that are the size of dust.	TIME TO CLEAN Estimated hours and minutes until air is clean.

LOWER AIR QUALITY HAPPENS

Potential causes:

- Cooking
- Smoke
- Dust
- Burning Food
- Pollen
- Cleaning

TRY THESE TIPS TO MAXIMIZE PRODUCT PERFORMANCE:

AUTO

Run on Auto Mode — Fan speeds will adjust automatically. As air quality decreases, the fan speed will increase.



Optimize Performance in Eco Mode — After 100% clean air status is achieved for 10 minutes in Auto Mode, your air purifier will enter Eco Mode. The HEPA filter life will be optimized.



Mute Beeping — To control your air purifier's beeping, hold the Air Info and Child Lock Buttons at the same time for two seconds. ⓘ + 🔒 = 🔕



Check Remaining Filter Life — Press this button to display your air purifier's remaining filter life as a percentage.



Activate Child Lock Settings — Press this button for 2 seconds to control child lock settings.

* Allergens refers to non-living matter.

FOR MORE INFORMATION:

visit qr.sharkclean.com/hp200series or

SCAN HERE
USING YOUR SMARTPHONE CAMERA



FOR FULL INSTRUCTIONS OR
TO PURCHASE ACCESSORIES.