

Please be sure to read and save the warnings on other side prior to using your unit.


QUICK START GUIDE

How to set up and use the IA3000 Series Shark® POWERDETECT Speed™ Clean & Empty Vacuum.




ASSEMBLY


1. Slide the **Wand** onto the neck of the **Floor Nozzle** until it clicks into place.
2. Align the **Hand Vacuum** nozzle opening with the top of the wand and slide it on until it clicks into place.
3. Make sure the **Dock** is facing upright. Slide the **Charging Post** over the mount on front of dock until it clicks.
4. Place the dock on the floor near a wall outlet. Plug the **Power Cord** into the outlet.
5. Store the crevice tool accessory on the mount on the dock.

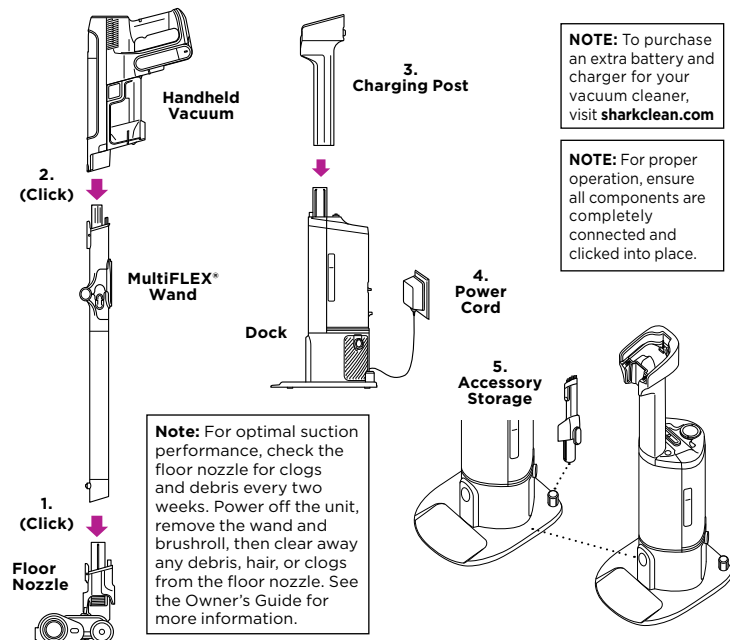

EMPTYING THE DOCK DUST BIN

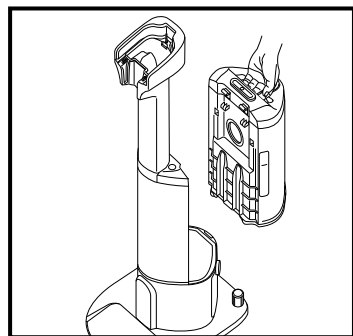


1. To remove the bin, press the dust bin release button and lift the bin out by the handle.

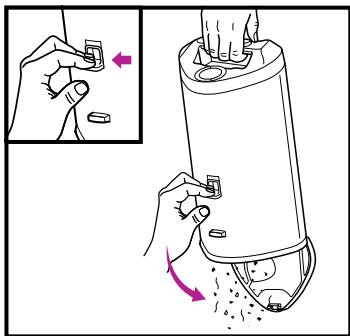

2. To empty the bin, hold it over the trash and press the release button on the side. The bottom will open to release the debris.

AUTO-EMPTY DOCK CHARGING

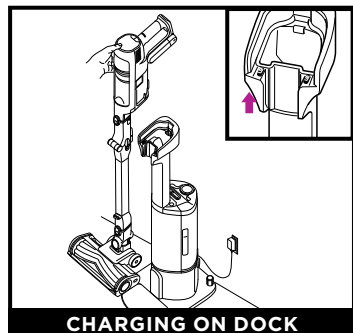


CHARGING ON DOCK

To charge the vacuum on the dock, make sure the dock is plugged into the wall and place the vacuum on the dock cradle.

NOTE: Vacuum battery does not come fully charged. Please charge battery before use.

QUIET MODE ACTIVATION

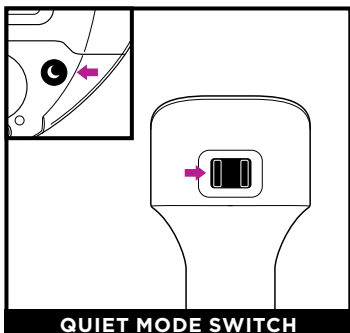

QUIET MODE SWITCH

Use Quiet Mode to dock and charge the vacuum silently, without automatic evacuation. To activate Quiet Mode, move the slider to the right.


Slider will not move to Quiet Mode until evacuation is complete. If slider is in the middle position, undock the unit and move slider to the right.

POWER ON/OFF



Press the **On/Off** button on the handle to turn on power. To turn off power, press the button again.

MODE SELECTION BUTTON

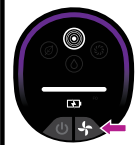

To toggle between **ECO**, **DETECT**, and **BOOST** modes, press the mode selection button.

BATTERY CHARGING INFORMATION



MODES EXPLAINED





ECO MODE Maximizes runtime.



DETECT MODE SENSES YOUR ENVIRONMENT TO OPTIMIZE YOUR CLEANING EXPERIENCE.


Detect technology is **ONLY** activated in Detect mode and is activated automatically when the unit is in use.

Dirt Detect: Identifies dirtier high-traffic areas and automatically boosts suction power to pull in hidden dirt.

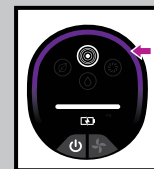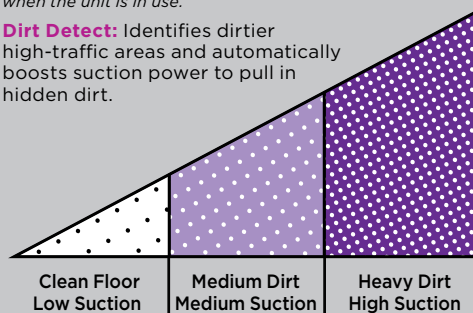

NOTE: UI lights are synced with Dirt Detect and show current suction level.

ADDITIONAL DETECT TECHNOLOGY

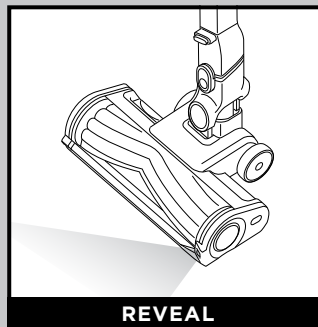

REVEAL


Reveal: On hard floors **ONLY**. The Reveal light illuminates the cleaning path so you can more easily spot dirt and debris.

Floor Detect™: The brushroll responds to surface changes and automatically adjusts to optimize your clean.




BOOST MODE Maximizes suction.

IMPORTANT: FILTER CLEANING

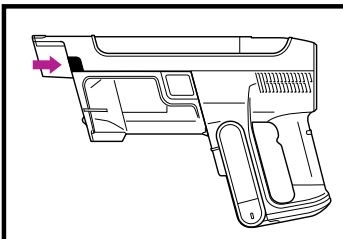

1. To access the HEPA filter, detach the dust cup from the hand vac. Press the Dust Cup Empty button, then slide off the dust cup.
2. Grip the filter by the tab and slide

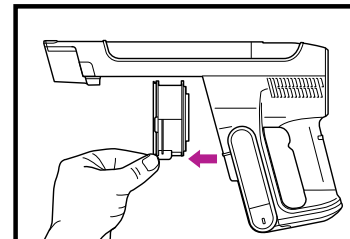

- it out of the hand vac.
3. Rinse the filter with water only and allow it to air-dry completely before reinserting it back into the hand vac.

NOTE: Rinse the HEPA filter at least once a month to maintain suction power. More frequent cleaning may be necessary with heavy use. To clean the filter, rinse it with water only and allow it to air-dry completely for up to 48 hours before reinstalling. Tap off loose dirt between washes when needed.

IMPORTANT: DO NOT use soap when cleaning the filters. Use water only.
NOTE: Make sure all filters are installed before use. The vacuum will not have suction power if the post-motor filter is not installed.

Shark® POWERDETECT Speed™ Clean & Empty IA3000 Series

IMPORTANT SAFETY INSTRUCTIONS



WARNING: TO REDUCE THE RISK OF INJURY, USER MUST READ INSTRUCTION MANUAL • HOUSEHOLD USE ONLY

⚠️ WARNING

When using an electrical appliance, to reduce the risk of fire, electric shock, injury, or property damage, basic precautions should always be followed, including the following:

1. This vacuum consists of a motorized nozzle, wand, and handheld vacuum. These components contain electrical connections, electrical wiring, and moving parts that potentially present risk to the user.
2. Before each use, carefully inspect all parts for any damage. If a part is damaged, discontinue use.
3. Use only identical replacement parts.
4. This vacuum contains no serviceable parts.
5. Use only as described in this manual. **DO NOT** use the vacuum for any purpose other than those described in this manual.
6. With the exception of the filters and dust cup, **DO NOT** expose any parts of the vacuum to water or other liquids.
7. Keep the appliance and its cord out of reach of children. **DO NOT** allow the appliance to be used by children. **DO NOT** allow to be used as a toy. Close supervision is necessary when used near children.

GENERAL USE

8. This appliance can be used by persons with reduced physical, sensory, or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Cleaning and user maintenance shall not be made by children.
9. Always turn off the vacuum before connecting or disconnecting any current carrying hoses, motorized nozzles, chargers, batteries, or other electrical or mechanical parts.
10. **DO NOT** handle plug or vacuum with wet hands.
11. **DO NOT** use without dust cup, HEPA and pre-motor filters, and brushroll in place.
12. Only use Shark® branded filters and accessories. Failure to do so will void the warranty.
13. **DO NOT** put any objects into nozzle or accessory openings. **DO NOT** use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce airflow.
14. **DO NOT** use if nozzle or accessory airflow is restricted. If the air paths or the motorized floor nozzle become blocked, turn the vacuum off. Remove all obstructions before you turn on the unit again.
15. Keep nozzle and all vacuum openings away from hair, face, fingers, uncovered feet, or loose clothing.
16. **DO NOT** use if vacuum is not working as it should, or has been dropped, damaged, left outdoors, or dropped into water.
17. Use extra care when cleaning on stairs.
18. **DO NOT** leave the vacuum unattended while powered on.
19. When powered on, keep the vacuum moving over the carpet surface at all times to avoid damaging the carpet fibers.
20. **DO NOT** place vacuum on unstable surfaces such as chairs or tables.
21. **DO NOT** use to pick up:
 - a) Liquids.
 - b) Large objects.
 - c) Hard or sharp objects (glass, nails, screws, or coins).
 - d) Large quantities of dust (including drywall, fireplace ash, or embers). **DO NOT** use as an attachment to power tools for dust collection.
 - e) Smoking or burning objects (hot coals, cigarette butts, or matches).
 - f) Flammable or combustible materials (lighter fluid, gasoline, or kerosene).
 - g) Toxic materials (chlorine bleach, ammonia, or drain cleaner).

22. **DO NOT** use in the following areas:

- a) Poorly lit areas.
- b) Wet or damp surfaces.
- c) Outdoor areas.
- d) Spaces that are enclosed and may contain explosive or toxic fumes or vapors (lighter fluid, gasoline, kerosene, paint, paint thinners, mothproofing substances, or flammable dust).

23. Turn off the vacuum before plugging in or unplugging the charger.

24. Turn off the vacuum before any adjustment, cleaning, maintenance or troubleshooting.

25. During cleaning or routine maintenance, **DO NOT** cut anything other than hair, fibers, or string wrapped around the brushrolls.

26. Allow all filters to air-dry completely before replacing in the vacuum to prevent liquid from being drawn into electric parts.

27. **DO NOT** modify or attempt to repair the vacuum or the battery yourself, except as indicated in this manual. **DO NOT** use the battery or vacuum if it has been modified or damaged. Damaged or modified batteries may exhibit unpredictable behavior resulting in fire, explosion, or risk of injury.

28. Always turn off this appliance before connecting or disconnecting motorized nozzle or hand tool.

BATTERY PACK

29. The battery is the power source for the vacuum. Carefully read and follow all charging instructions.
30. To prevent unintentional starting, ensure it is powered off before picking up or carrying the vacuum. **DO NOT** carry the appliance with your finger on the power switch.
31. Use only XDCKIA3000 or XDCKIA3000NO charging dock. Use of incorrect charger may result in no charging and/or unsafe conditions.
32. Keep the battery away from all metal objects such as paper clips, coins, keys, nails, or screws. Shorting the battery terminals increases the risk of fire or burns.
33. Under abusive conditions, liquid may be ejected from the battery. Avoid contact with this liquid, as it may cause irritation or burns. If contact occurs, flush with water. If liquid contacts eyes, seek medical help.
34. Battery should not be stored at temperatures below 3°C (37.4°F) or above 104°F (40°C) to maintain long-term battery life.
35. **DO NOT** charge battery at temperatures below 5°C (40°F) or above 104°C (104°F). Charging improperly or at temperatures outside of the specified range may damage the battery and increase the risk of fire.
36. Store the appliance indoors. **DO NOT** use or store it below 3°C (37.4°F). Ensure the appliance is at room temperature before operating.
37. **DO NOT** expose the battery to fire or temperatures above 265°F (130°C) as it may cause explosion.
38. Use appliances only with specifically designated battery packs. Use of any other battery packs may create a risk of injury and fire.
39. Disconnect the battery pack from the appliance before making any adjustments, changing accessories, or storing appliance. Such preventive safety measures reduce the risk of starting the appliance accidentally.
40. For IA3000 Series, use only with Shark battery pack XIABTR540US.
41. If the charging cord plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. **DO NOT** force into outlet or try to modify to fit.
42. To reduce the risk of shock and unintended operation, turn off power and remove the Li-Ion battery before servicing.



READ AND SAVE THESE INSTRUCTIONS

VISIT qr.sharkclean.com/IA3000seriesmanual OR

SCAN HERE

FOR FULL INSTRUCTIONS & REPLACEMENT PARTS