



QUICK START GUIDE

SETTINGS

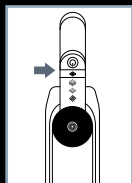

Mode Selection: To toggle between modes, press the **mode select** button on the handle.


- **Detect:** Select Detect mode to activate DuoClean Detect™.
- **Manual Surface Modes:** Select one of the manual surface modes to clean without Detect technology.
- **Passive Nozzle Mode:** Hold the mode button for 2 seconds to stop the brushroll for suction-only cleaning on thin or delicate carpets. Hold again to restart the brushroll.

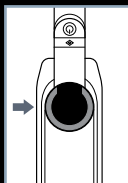

Dirt Detect is indicated by the light ring on the control panel:


White: Standard Cleaning
Purple: Cleaning Boost

CLEANING MODES

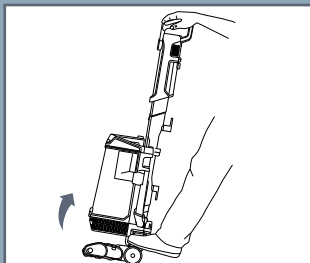


UPRIGHT

Upright mode delivers maximum cleaning power. Use it for tough jobs like deep-cleaning plush carpets or removing embedded pet hair.

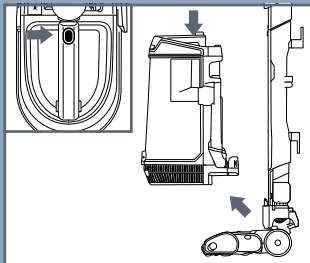

STICK MODE

Stick mode gives you ultra-maneuverable and powerful cleaning for all your everyday messes. Press the pod release button to detach the pod and enter stick mode.

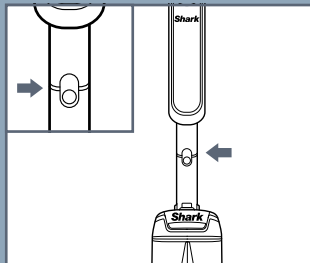


HANDHELD MODE

Handheld mode for powerful, lightweight cleaning on above-floor surfaces. Detach the hand vac by pressing the handheld release button.

AUTO EMPTY


When the pod and handheld vac are connected, the hand vac will **automatically empty** itself into the pod dust cup.

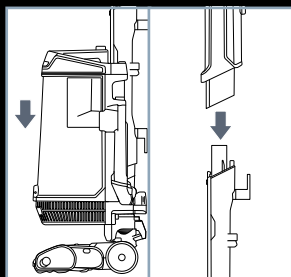

To start the auto-empty cycle, reattach the pod and hand vac until they click into place. When the emptying cycle starts, do not turn off power or remove the hand vac until the cycle is complete and the vac makes a chiming sound—always wait for the chime.

HANDHELD FILTER MAINTENANCE

Press the dust cup release button and slide the dust cup out of the hand vac, then slide out the filter housing.

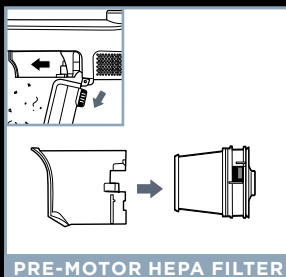

PRE-MOTOR HEPA FILTER

Press the tabs on both sides of the housing and pull out the filter. To clean the filter, tap it against the inside of a trash can to knock off dirt and dust. Slide the filter back into the housing, then reinstall the housing into the hand vac.

DUOCLEAN DETECT + REVEAL

Direction Detect optimizes suction direction for cleaning in forward and reverse.

Floor Detect™ optimizes brushroll speed and suction level for hard floors and carpet.

Dirt Detect boosts cleaning* when moving over heavily soiled areas.

Edge Detect boosts cleaning* near edges and corners.

**In stick mode, Edge and Dirt Detect are indicators only.*



Reveal Technology

A precisely angled, contrast-enhancing blue beam reveals all the dust and debris that the human eye misses.