

Shark



AquaReach™ Quick Start Guide




Scan for more
how-to content

WHAT'S IN THE BOX


- Ⓐ Handle
- Ⓑ Trigger
- Ⓒ AquaReach Wand
- Ⓓ Hose
- Ⓔ Carry Handle
- Ⓕ Wand Release Button
- Ⓖ Dirty Water Tank
- Ⓗ CleanPath Selector
- Ⓘ Clean Water Tank
- Ⓛ Floor Nozzle
- Ⓚ LED Light Beam
- Ⓛ Self-Cleaning Dock
- Ⓜ Side Dock and SpeedWash Cup
- Ⓝ Stain Scrubber Tool*
- Ⓞ Hydro Multi-Surface Concentrate

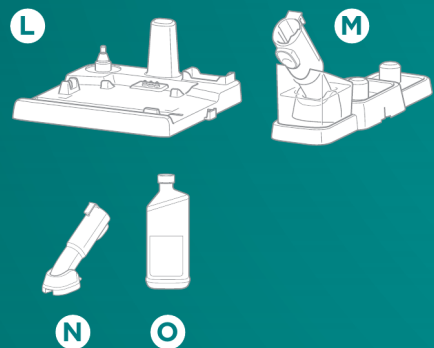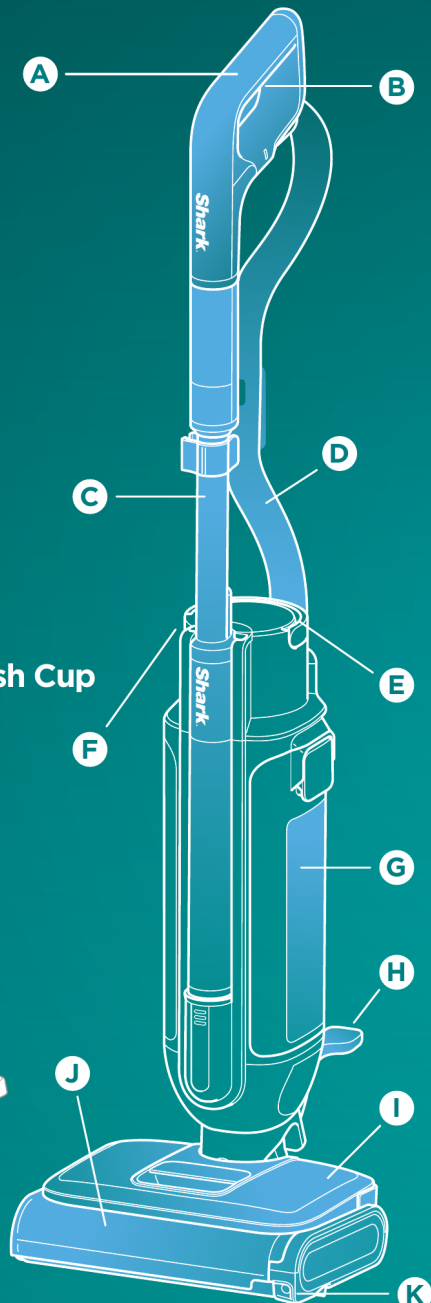


GETTING STARTED - ASSEMBLY

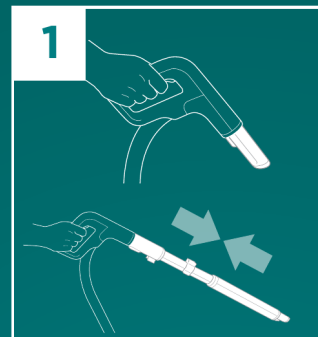


1. Connect the handle to the wand.

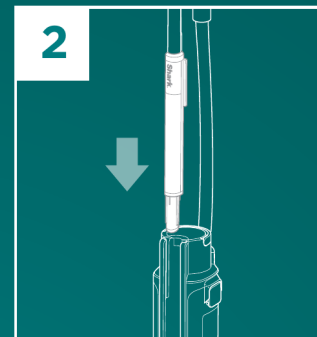

2. Align the wand with the guide slots on the main unit. Slide wand in until it clicks into place.

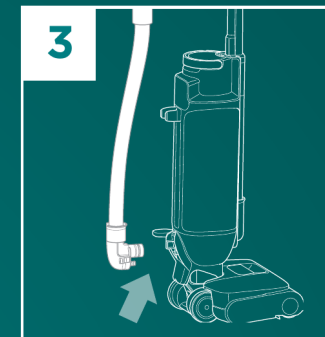


3. Insert the hose into the opening at the bottom of the main unit until it clicks securely into place.

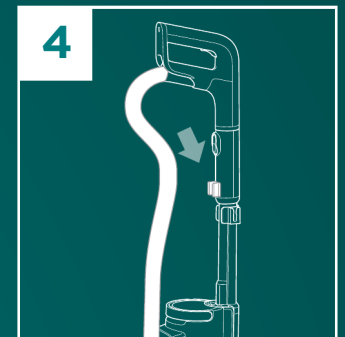


4. The hose can be neatly stored by using the clips on the back of the wand and body.

Top Tip


Before first use, place the unit on the Self-Cleaning Dock and allow it to charge completely (approximately 3 hours). Runtime is up to 45 minutes on a full charge.

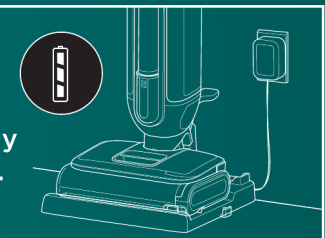


GETTING STARTED - FILLING THE TANK

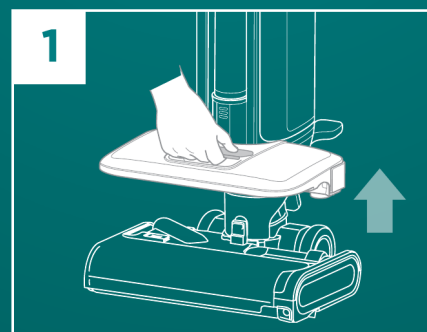

1. Lift the latch to detach the Clean Water Tank from the Floor Nozzle.

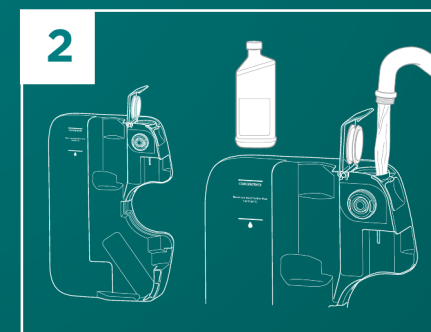

2. Open the cap and fill tank with water up to the **WATER** line, then add Hydro Multi-Surface Concentrate up to the **SOLUTION** line.

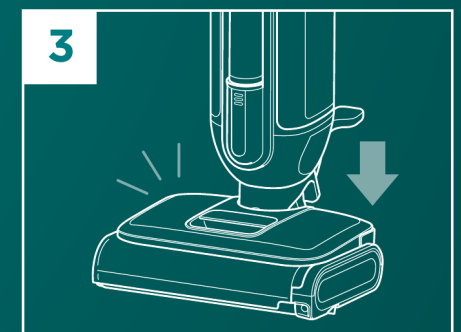

3. Close the cap and reinstall the tank, pressing firmly until it clicks into place.

*NOTE: Not all accessories are included in all models.
To purchase additional accessories, visit sharkninja.com

Shark

AquaReach™ Quick Start Guide




Scan for more
how-to content

FUNCTIONS, MODES, AND INDICATORS

Press the power button to turn the unit on.

Note: The unit will automatically start in Dry Mode. Press Wet/Dry Mode Toggle to go into Wet Mode.

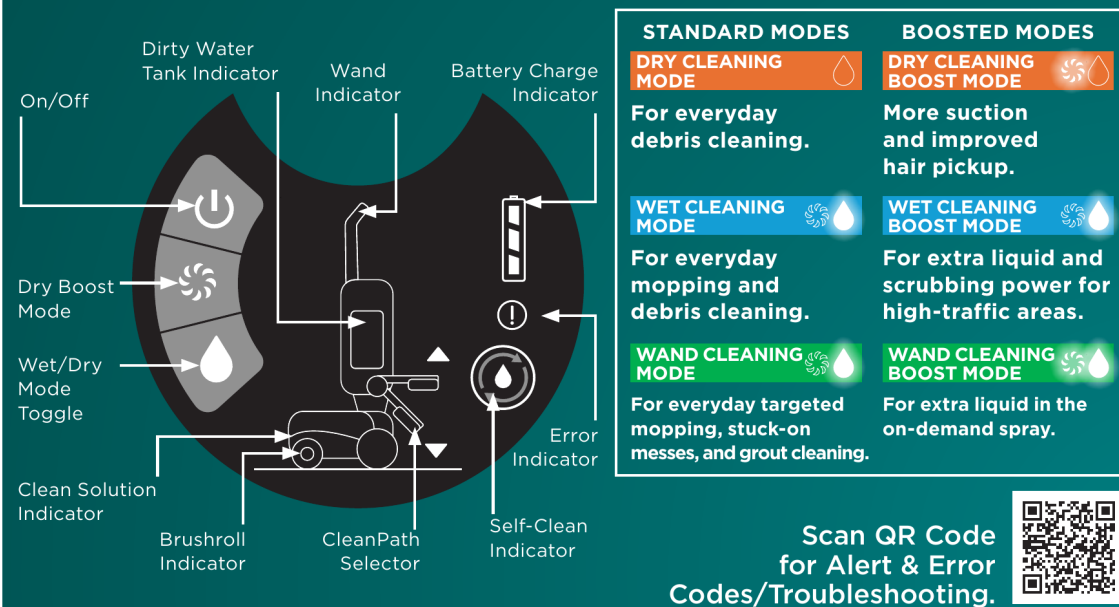


CLEANING WITH THE FLOOR NOZZLE

Combined vacuuming + mopping or dry-only vacuuming for large hard floor areas.




Ensure the CleanPath Selector is in the UP position.


DO NOT use Wet Cleaning on soft surfaces or furnishings.

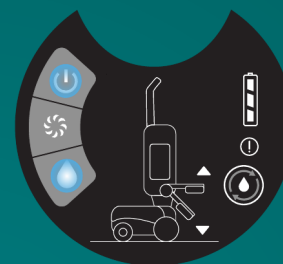

1. Press the power button to turn the unit on. Unit will automatically start in Dry Mode. Press Wet/Dry Mode Toggle to switch to Wet Mode.

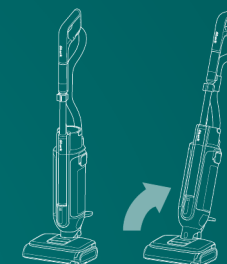

2. Tilt handle back to activate the unit and start cleaning.

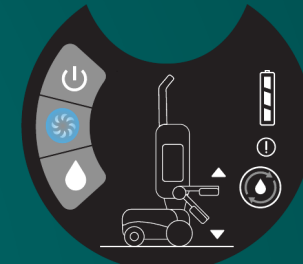

3. Press the Boost button for added cleaning power.


NOTE: Press power button to turn the unit off. Note that it will continue to run for 3 seconds with high power before shutting off.

After use, empty the Dirty Water Tank.


Important: Once the brushroll is wet, switching back to Dry Mode will not dry the brushroll. The brushroll may still leave moisture on your floor until it is dry.

CLEANING WITH THE AQUAREACH WAND


Suction and spray for hard-to-reach surfaces and to quickly erase tough messes.

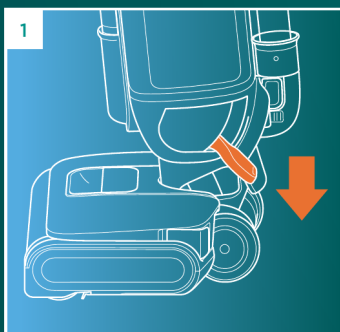


To use the AquaReach Wand, make sure the CleanPath Selector is in the **DOWN** position.

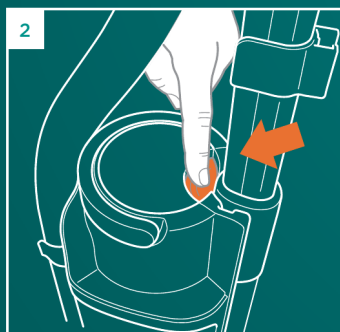


Detach the wand by pressing the release button, then lift out the wand.

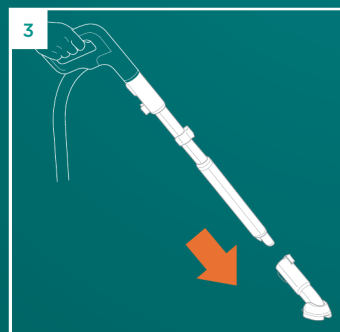

Select the tool that's best for your cleaning job. Insert the wand into the tool until it clicks securely into place.

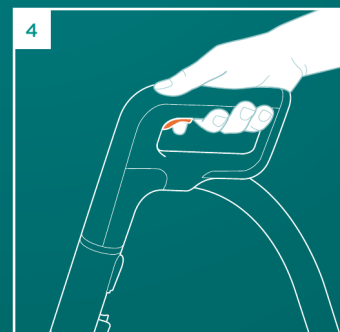

Suction starts automatically. To apply cleaning solution, use the wand trigger.

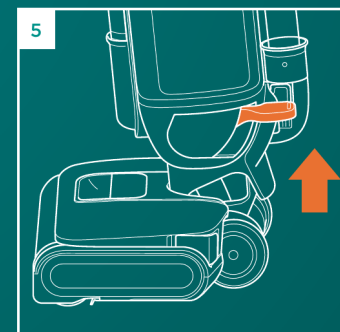


When finished, reinsert the wand, then move the CleanPath Selector to the **UP** position.

NOTE: Press power button to turn the unit off. Note that it will continue to run for 3 seconds with high power before shutting off.

After use, empty the Dirty Water Tank. Remove the Pleated Filter and allow to fully dry before next use.

Top Tip

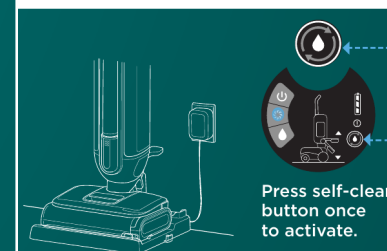

To start self-clean and dry cycle after use, place the unit on the dock and press the self-clean button. For more information on how to clean your accessories and device, see Owner's Guide.