




OPERATOR'S MANUAL

CORDLESS 3-IN-1 STRING TRIMMER + EDGER + GRASS CUTTER

24-VOLT* IONMAX™ | 2.0 Ah | 12 INCH

Model 24V-MTE-LTE

Form No. ASP-24V-MTE-LTE-800E-M (S)

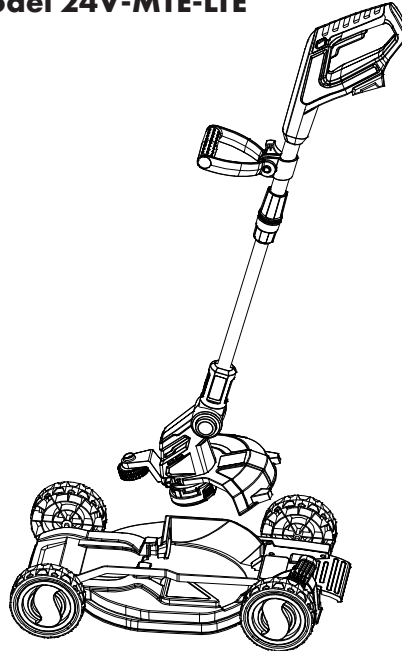

THANK YOU FOR YOUR PURCHASE!

**SCAN
REGISTER
ONLINE TODAY**



- ✓ ACTIVATE YOUR **2 YEAR WARRANTY**
- ✓ RECEIVE **90 DAYS BONUS COVERAGE**
- ✓ VISIT **SHOPJOE.COM/REGISTER**

Place UPC sticker here

Failure to register your product purchase will not diminish your warranty rights. For more information visit shopjoe.com



**UPGRADE YOUR COVERAGE
AT SHOPJOE.COM/REGISTER**
FOR UP TO 3, 4, OR 5 YEARS OF TOTAL TOOL COVERAGE

When we say we stand behind our product, we mean it! Now you can blow, mow, cut, saw or tend to any other yard task with confidence, knowing that if there is a problem with your tool within the warranty period, we will gladly solve it.

HAS YOUR SNOW JOE
EXPERIENCE LEFT
YOU SMILING? 😊

**TELL YOUR FRIENDS
AND TAG US!**

We love to hear your feedback! Share your experience by writing comments and reviews on shopjoe.com, or connect with us on social media!



@SNOWJOECO

#GOWITHJOE

OR HAS SOMETHING
LEFT YOU LESS
THAN SATISFIED? 😞

**WE'RE SORRY
ABOUT THAT!**

Our friendly customer service team is ready to help you with any issues you may have, Monday – Sunday from 9AM to 5PM EST

CALL US, EMAIL US, CHAT WITH US

✉ HELP@SHOPJOE.COM
For fastest response

📍 SHOPJOE.COM

📞 1-866-225-9723

Original instructions.

Snow Joe®, Sun Joe®, Aqua Joe®, Auto Joe®, and Power Joe® are registered trademarks used under license from Weather Brands LLC.

***DISCLAIMER:** Initial no-load voltage, when fully charged, peaks at 24V; nominal voltage under typical load is 21.6V.

SAVE THESE INSTRUCTIONS



OPERATOR'S MANUAL

CORDLESS 3-IN-1 STRING TRIMMER + EDGER + GRASS CUTTER

24-VOLT* IONMAX™ | 2.0 Ah | 12 INCH

EN

Model 24V-MTE-LTE

Form No. ASP-24V-MTE-LTE-800E-M

IMPORTANT! Safety Instructions

All Operators Must Read These Instructions Before Use

General Power Tool Safety Warnings

CAUTION!

Before using this cordless tool, carefully read and observe the safety rules and instructions listed below. Before starting work, make sure that you know how to stop the machine in case of an emergency. The incorrect use of this machine could cause serious injury. Keep these instructions in a safe place and on hand so that they can be consulted when required.

CAUTION!

The cordless string trimmer + edger + grass cutter should only be used for cutting lawns and for trimming along the borders of flower beds. Other uses of the string trimmer + edger + grass cutter that are not indicated in these instructions could damage the string trimmer + edger + grass cutter or seriously injure the operator.

General String Trimmer + Edger + Grass Cutter Safety Warnings

 **WARNING!** Read all safety warnings, instructions, illustrations and specifications provided with this string trimmer + edger + grass cutter. Failure to follow all instructions listed below may result in electric shock, fire and/or serious injury.

Save all warnings and instructions for future reference.

Work Area Safety

1. **Keep work area clean and well lit.** Cluttered or dark areas invite accidents.
2. **Do not operate string trimmer + edger + grass cutter in explosive atmospheres, such as in the presence of flammable liquids, gases or dust.** String trimmer + edger + grass cutter create sparks which may ignite the dust or fumes.

3. **Keep children and bystanders away while operating a string trimmer + edger + grass cutter.** Distractions can cause you to lose control.

Electrical safety

1. **String trimmer + edger + grass cutter plugs must match the outlet. Never modify the plug in any way.** Do not use any adapter plugs with earthed (grounded) string trimmer + edger + grass cutter. Unmodified plugs and matching outlets will reduce risk of electric shock.
2. **Avoid body contact with earthed or grounded surfaces, such as pipes, radiators, ranges and refrigerators.** There is an increased risk of electric shock if your body is earthed or grounded.
3. **Do not expose string trimmer + edger + grass cutter to rain or wet conditions.** Water entering a string trimmer + edger + grass cutter will increase the risk of electric shock.
4. **Do not abuse the cord. Never use the cord for carrying, pulling or unplugging the string trimmer + edger + grass cutter.** Keep cord away from heat, oil, sharp edges or moving parts. Damaged or entangled cords increase the risk of electric shock.
5. **When operating a string trimmer + edger + grass cutter outdoors, use an extension cord suitable for outdoor use.** Use of a cord suitable for outdoor use reduces the risk of electric shock.
6. **If operating a string trimmer + edger + grass cutter in a damp location is unavoidable, use a RESIDUAL CURRENT DEVICE (RCD) protected supply.** Use of an RCD reduces the risk of electric shock.

Personal safety

1. **Stay alert, watch what you are doing and use common sense when operating a string trimmer + edger + grass cutter. Do not use a string trimmer + edger + grass cutter while you are tired or under the influence of drugs, alcohol or medication.** A moment of inattention while operating string trimmer + edger + grass cutter may result in serious personal injury.
2. **Use personal protective equipment. Always wear eye protection.** Protective equipment such as a dust mask, non-skid safety shoes, hard hat or hearing protection used for appropriate conditions will reduce personal injuries.

***DISCLAIMER:** Initial no-load voltage, when fully charged, peaks at 24V; nominal voltage under typical load is 21.6V.

Original instructions.

Snow Joe®, Sun Joe®, Aqua Joe®, Auto Joe®, and Power Joe® are registered trademarks used under license from Weather Brands LLC.

SAVE THESE INSTRUCTIONS

3. **Prevent unintentional starting. Ensure the switch is in the off-position before connecting to power source and/or BATTERY pack, picking up or carrying the tool.** Carrying string trimmer + edger + grass cutter with your finger on the switch or energising string trimmer + edger + grass cutter that have the switch on invites accidents.
4. **Remove any adjusting key or wrench before turning the string trimmer + edger + grass cutter on.** A wrench or a key left attached to a rotating part of the string trimmer + edger + grass cutter may result in personal injury.
5. **Do not overreach. Keep proper footing and balance at all times.** This enables better control of the string trimmer + edger + grass cutter in unexpected situations.
6. **Dress properly. Do not wear loose clothing or jewelry. Keep your hair and clothing away from moving parts.** Loose clothes, jewelry or long hair can be caught in moving parts.
7. **If devices are provided for the connection of dust extraction and collection facilities, ensure these are connected and properly used.** Use of dust collection can reduce dust-related hazards.
8. **Do not let familiarity gained from frequent use of tools allow you to become complacent and ignore tool.**

Power Tool Use + Care

1. **Do not force the string trimmer + edger + grass cutter. Use the correct string trimmer + edger + grass cutter for your application.** The correct string trimmer + edger + grass cutter will do the job better and safer at the rate for which it was designed.
2. **Do not use the string trimmer + edger + grass cutter if the switch does not turn it on and off.** Any string trimmer + edger + grass cutter that cannot be controlled with the switch is dangerous and must be repaired.
3. **Disconnect the plug from the power source and/or remove the BATTERY pack, if detachable, from the string trimmer + edger + grass cutter before making any adjustments, changing accessories, or storing string trimmer + edger + grass cutter.** Such preventive safety measures reduce the risk of starting the string trimmer + edger + grass cutter accidentally.
4. **Store idle string trimmer + edger + grass cutter out of the reach of children and do not allow persons unfamiliar with the string trimmer + edger + grass cutter or these instructions to operate the string trimmer + edger + grass cutter.** String trimmer + edger + grass cutter are dangerous in the hands of untrained users.
5. **Maintain string trimmer + edger + grass cutter and accessories. Check for misalignment or binding of moving parts, breakage of parts and any other condition that may affect the string trimmer + edger + grass cutter's operation.** If damaged, have the string trimmer +

edger + grass cutter repaired before use. Many accidents are caused by poorly maintained string trimmer + edger + grass cutters.

6. **Keep cutting tools sharp and clean.** Properly maintained cutting tools with sharp cutting edges are less likely to bind and are easier to control.
7. **Use the string trimmer + edger + grass cutter, accessories and tool bits etc. in accordance with these instructions, taking into account the working conditions and the work to be performed.** Use of the string trimmer + edger + grass cutter for operations different from those intended could result in a hazardous situation.
8. **Keep handles and grasping surfaces dry, clean and free from oil and grease.**

Slippery handles and grasping surfaces do not allow for safe handling and control of the tool in unexpected situations.

BATTERY tool use and care

1. **Recharge only with the charger specified by the manufacturer.** A charger that is suitable for one type of BATTERY pack may create a risk of fire when used with another BATTERY pack.
2. **Use string trimmer + edger + grass cutters only with specifically designated BATTERY packs.** Use of any other BATTERY packs may create a risk of injury and fire.
3. **When BATTERY pack is not in use, keep it away from other metal objects, like paper clips, coins, keys, nails, screws or other small metal objects, that can make a connection from one terminal to another.** Shorting the BATTERY terminals together may cause burns or a fire.
4. **Under abusive conditions, liquid may be ejected from the BATTERY; avoid contact. If contact accidentally occurs, flush with water.** If liquid contacts eyes, additionally seek medical help. Liquid ejected from the BATTERY may cause irritation or burns.
5. **Do not use a BATTERY pack or tool that is damaged or modified.** Damaged or modified batteries may exhibit unpredictable behaviour resulting in fire, EXPLOSION or risk of injury.
6. **Do not expose a BATTERY pack or tool to fire or excessive temperature.** Exposure to fire or temperature above 130 °C may cause explosion.

NOTE The temperature "130 °C" can be replaced by the temperature "265 °F".

7. **Follow all charging instructions and do not charge the BATTERY pack or tool outside the temperature range specified in the instructions.** Charging improperly or at temperatures outside the specified range may damage the BATTERY and increase the risk of fire.

Service

1. **Have your string trimmer + edger + grass cutter serviced by a qualified repair person using only identical replacement parts.** This will ensure that the safety of the string trimmer + edger + grass cutter is maintained.
2. **Never service damaged BATTERY packs.** Service of BATTERY packs should only be performed by the manufacturer or authorized service providers.

Lawn trimmer and lawn edge trimmer safety warnings

1. **Do not use the machine in bad weather conditions, especially when there is a risk of lightning.** This decreases the risk of being struck by lightning.
2. **Thoroughly inspect the area for wildlife where the machine is to be used.** Wildlife may be injured by the machine during operation.
3. **Thoroughly inspect the area where the machine is to be used and remove all stones, sticks, wires, bones, and other foreign objects.** Thrown objects can cause personal injury.
4. **Before using the machine, always visually inspect to see that the cutter and the cutter assembly are not damaged.** Damaged parts increase the risk of injury.
5. **Keep guards in place. Guards must be in working order and be properly mounted.** A guard that is loose, damaged, or is not functioning correctly may result in personal injury.
6. **Keep all cooling air inlets clear of debris.** Blocked air inlets and debris may result in overheating or risk of fire.
7. **Wear eye protection and ear protection.** Adequate protective equipment will reduce personal injury.
8. **While operating the machine, always wear non-slip and protective footwear. Do not operate the machine when barefoot or wearing open sandals.** This reduces the chance of injury to the feet from contact with the moving cutter.
9. **Always wear clothing such as trousers that covers the operator's legs while operating the machine.** Contact with the moving cutter or line may cause injury.
10. **Keep bystanders away while operating the machine.** Thrown debris can result in serious personal injury.
11. **Do not operate the machine above waist height.** This helps prevent unintended cutter contact and enables better control of the machine in unexpected situations.
12. **Exercise caution when operating the machine in wet grass. Walk, never run.** This reduces the risk of slipping and falling which may result in personal injury.
13. **Do not operate the machine on excessively steep slopes.** This reduces the risk of loss of control, slipping and falling which may result in personal injury.
14. **When working on slopes, always be sure of your footing, always work across the face of slopes, never up or down and exercise extreme caution when changing direction.** This reduces the risk of loss of control, slipping and falling which may result in personal injury.
15. **Keep all power cords and cables away from cutting area.** Power cords or cables may be hidden in hedges or bushes and can be accidentally cut or damaged by the line or cutter.
16. **Keep all parts of the body away from the moving trimmer cutter or line. Do not clear material from the machine until it has been disconnected from the power source.** The moving trimmer cutter or line may result in serious personal injury.
17. **Carry the machine with the machine switched off and away from your body.** Proper handling of the machine will reduce the likelihood of accidental contact with a moving trimmer cutter or line.
18. **Only use replacement cutting heads and trimmer cutters or lines specified by the manufacturer.**

Do not replace the trimmer cutters or lines with metal wires or blades. Incorrect replacement parts may cause loss of control, breakage and injury.


ADDITIONAL SAFETY INSTRUCTIONS FOR STRING TRIMMER + EDGER + GRASS CUTTER

1. Keep guards in place and in working order.
2. Keep hands and feet away from the cutting area.

⚠ WARNING! Never use steel blades or other devices. Use of any other accessories or attachments will increase the risk of injury.

⚠ CAUTION! The safety guard is critical to the safety of the operator and the safety of people standing within a safe distance of the string trimmer + edger + grass cutter. The safety guard keeps the string trimmer + edger + grass cutter in good working order and must always be in place during operation.

- Do not try to stop the cutting device (line spool) with your hands. Always let it come to a stop by itself.

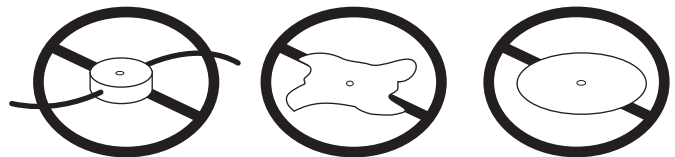

⚠ WARNING! After switching off the tool, the cutting device (line spool) continues to rotate for a few seconds.

- Only use the original type of line spool. Do not under any circumstances use metal line or nylon line instead of line spool.
- Do not use the tool to cut grass which is not on the ground. For example, do not cut grass growing on walls or rocks.
- Do not switch on the tool in an enclosed or poorly ventilated space or in the presence of flammable and/or explosive substances such as liquids, gases and powders.
- Only cut during broad daylight or with adequate artificial light.
- Check that all grass cuttings and dirt have been removed from the ventilation vents.
- Do not cross roads or gravel paths while the tool is still running.
- When the tool is not in use, store it in a dry place and out of reach of children.
- After use, remove the battery and check for damage. If you have any doubt about the condition of the tool, contact an authorized service center or call the All Season Power customer service center at 1-866-225-9723.
- Only use the tool according to the instructions given in this manual.
- Check regularly that the screws are tight.
- Do not try to repair the tool or access internal parts. Contact an authorized service center or call the All Season Power customer service center at 1-866-225-9723.

Battery + Charger Safety Instructions

We pay a great deal of attention to the design of every battery pack to ensure that we supply you with batteries that are safe, durable and have a high energy density. The battery cells have a wide range of safety devices. Each individual cell is initially formatted and its electrical characteristic curves are recorded. This data is then used exclusively to be able to assemble the best possible battery packs.

Despite all the safety precautions, caution must always be exercised when handling batteries. The following points must be obeyed at all times to ensure safe use. Safe use can only be guaranteed if undamaged cells are used. Incorrect handling of the battery pack can cause cell damage.

IMPORTANT! Analyses confirm that incorrect use and poor care of high-performance batteries are the main factors responsible for personal and/or product damage.

⚠ WARNING! Use only approved replacement batteries; other batteries may damage the cordless string trimmer + edger + grass cutter and cause it to malfunction, which can lead to serious personal injury.

⚠ WARNING! Do not use a battery pack or appliance that is damaged or modified. Damaged or modified batteries may exhibit unpredictable behavior resulting in fire, explosion or risk of injury.

Do not modify or attempt to repair the battery pack except as indicated in the instructions for use and care.

Have your battery pack serviced by a qualified repair person using only identical replacement parts. This will ensure that the safety of the battery pack is maintained.

⚠ CAUTION! To reduce the risk of injury, charge the Snow Joe® IONMAX™ 24V* lithium-ion battery pack only in its designated Snow Joe® IONMAX™ 24V* lithium-ion charger. Other types of chargers present risk of fire, personal injury and damage. Do not wire a battery pack to a power supply plug or car cigarette lighter. Such misuse will permanently disable or damage the battery pack.

- **Avoid dangerous environments** – Do not charge the battery pack in rain, snow or in damp or wet locations. Do not use the battery pack or charger in the presence of explosive atmospheres (gaseous fumes, dust or flammable materials) because sparks may be generated when inserting or removing the battery pack, which could lead to a fire.

- **Charge in a well-ventilated area** – Do not block the charger vents. Keep them clear to allow for proper ventilation. Do not allow smoking or open flames near a charging battery pack. Vented gases may explode.

NOTE: The safe temperature range for the battery is 41°F – 105°F (5°C – 40.5°C). Do not charge the battery outside in freezing weather; charge it at room temperature.

- **Maintain charger cord** – When unplugging the charger, pull the plug, not the cord, from the receptacle to reduce the risk of damage to the electrical plug and cord. Never carry the charger by its cord or yank it by the cord to disconnect it from the receptacle. Keep the cord away from heat, oil and sharp edges. Make sure the cord will not be stepped on, tripped over or subjected to damage or stress when the charger is in use. Do not use the charger with a damaged cord or plug. Replace a damaged charger immediately.

- **Do not use an extension cord unless it is absolutely necessary** – Using the wrong, damaged or improperly wired extension cord poses a risk of fire and electric shock. If an extension cord must be used, plug the charger into a properly wired 16 gauge or larger extension cord with the female plug matching the male plug on the charger. Make sure that the extension cord is in good electrical condition.

- **Charger 24VCHRG-AC is rated for 100 – 240 volt AC only** – The charger must be plugged into an appropriate receptacle.

- **Use only recommended attachments** – Use of an attachment not recommended or sold by the battery charger or battery pack manufacturer may result in risk of fire, electric shock or personal injury.

- **Unplug charger when not in use** – Make sure to remove battery packs from unplugged chargers.

⚠ WARNING! To reduce the risk of electric shock, always unplug the charger before performing any cleaning or maintenance. Do not allow water to flow into the charger. Use a Ground Fault Circuit Interrupter (GFCI) to reduce shock hazards.

- **Do not burn or incinerate battery packs –**
Battery packs may explode, causing personal injury or damage. Toxic fumes and materials are created when battery packs are burned.
- **Do not crush, drop or damage battery packs –** Do not use the battery pack or charger if they have sustained a sharp blow, been dropped, run over or have been damaged in any way (i.e. pierced with a nail, hit with a hammer, stepped on, etc.).
- **Do not disassemble –** Incorrect reassembly may pose a serious risk of electric shock, fire or exposure to toxic battery chemicals. If the battery or charger are damaged, contact an authorized Snow Joe® + Sun Joe® dealer or call the All Season Power customer service center at 1-866-225-9723 for assistance.
- **Battery chemicals cause serious burns –** Never let a damaged battery pack contact the skin, eyes or mouth. If a damaged battery pack leaks battery chemicals, use rubber or neoprene gloves to safely dispose of it. If skin is exposed to battery fluids, wash the affected area with soap and water and rinse with vinegar. If eyes are exposed to battery chemicals, immediately flush with water for 20 minutes and seek medical attention. Remove and dispose of contaminated clothing.
- **Do not short circuit –** A battery pack will short circuit if a metal object makes a connection between the positive and negative contacts on the battery pack. Do not place a battery pack near anything that may cause a short circuit, such as paper clips, coins, keys, screws, nails and other metallic objects. A short-circuited battery pack poses a risk of fire and severe personal injury.
- **Store your battery pack and charger in a cool, dry place –**
Do not store the battery pack or charger where temperatures may exceed 105°F (40.5°C), such as in direct sunlight or inside a vehicle or metal building during the summer.

Information about the battery

1. The battery pack supplied with your cordless string trimmer + edger + grass cutter is only partially charged. The battery pack has to be charged completely before you use the tool for the first time.
 2. For optimum battery performance, avoid low discharge cycles by charging the battery pack frequently.
 3. Store the battery pack in a cool place, ideally at 77°F (25°C) and charged to at least 40%.
 4. Lithium-ion batteries are subject to a natural aging process. The battery pack must be replaced at the latest when its capacity falls to just 80% of its capacity when new. Weakened cells in an aged battery pack are no longer capable of meeting the high power requirements needed for the proper operation of your string trimmer + edger + grass cutter, and therefore pose a safety risk.
5. Do not throw battery packs into an open fire as this poses a risk of explosion.
 6. Do not ignite the battery pack or expose it to fire.
 7. Do not exhaustively discharge batteries. Exhaustive discharge will damage the battery cells. The most common cause of exhaustive discharge is lengthy storage or non-use of partially discharged batteries. Stop working as soon as the performance of the battery falls noticeably or the electronic protection system triggers. Place the battery pack in storage only after it has been fully charged.
 8. Protect batteries and the tool from overloads. Overloads will quickly result in overheating and cell damage inside the battery housing even if this overheating is not apparent externally.
 9. Avoid damage and shocks. Immediately replace batteries that have been dropped from a height of more than one meter or those that have been exposed to violent shocks, even if the housing of the battery pack appears to be undamaged. The battery cells inside the battery may have suffered serious damage. In such instances, please read the waste disposal information for proper battery disposal.
 10. If the battery pack suffers overloading and overheating, the integrated protective cutoff will switch off the equipment for safety reasons.
IMPORTANT! Do not press the ON/OFF switch any more if the protective cut-off has been activated. This may damage the battery pack.
 11. Use only original battery packs. The use of other batteries poses a fire risk and may result in injuries or an explosion.

Information about the charger and the charging process

1. Please check the data marked on the rating plate of the battery charger. Be sure to connect the battery charger to a power supply with the voltage marked on the rating plate. Never connect it to a different mains voltage.
2. Protect the battery charger and its cord from damage. Keep the charger and its cord away from heat, oil and sharp edges. Have damaged cords repaired without delay by a qualified technician at an authorized Snow Joe® + Sun Joe® dealer or call the All Season Power customer service center at 1-866-225-9723.
3. Electrical plugs must match the outlet. Never modify the plug in any way. Do not use any adapter plugs with grounded appliances. Unmodified plugs and matching outlets will reduce the risk of electric shock.
4. Keep the battery charger, battery pack and the cordless tool out of the reach of children.
5. Do not use the supplied battery charger to charge other cordless tools.
6. During periods of heavy use, the battery pack will become warm. Allow the battery pack to cool to room temperature before inserting it into the charger to recharge.

 
7. Do not overcharge batteries. Do not exceed the maximum charging times. These charging times only apply to discharged batteries. Frequent insertion of a charged or partially charged battery pack will result in overcharging and cell damage. Do not leave batteries in the charger for days on end.
8. Never use or charge batteries if you suspect that it has been more than 12 months since the last time they were charged. There is a high probability that the battery pack has already suffered dangerous damage (exhaustive discharge).
9. Charging batteries at a temperature below 41°F (5°C) will cause chemical damage to the cells and may cause a fire.
10. Do not use batteries that have been exposed to heat during the charging process, as the battery cells may have suffered dangerous damage.
11. Do not use batteries that have suffered curvature or deformation during the charging process or those that exhibit other atypical symptoms (gassing, hissing, cracking, etc.).
12. Never fully discharge the battery pack (maximum recommended depth of discharge is 80%). A complete discharge of the battery pack will lead to premature aging of the battery cells.
9. When handling batteries, be wary of electrostatic charge. Electrostatic discharges can damage the electronic protection system and the battery cells. Avoid electrostatic charging and never touch the battery poles.

Protection from environmental influences

1. Wear suitable work clothes. Wear safety goggles.
2. Protect your cordless tool and the battery charger from moisture and rain. Moisture and rain can cause dangerous cell damage.
3. Do not use the cordless tool or the battery charger near vapors and flammable liquids.
4. Use the battery charger and cordless tools only in dry conditions and at an ambient temperature of 41°F – 105°F (5°C – 40.5°C).
5. Do not keep the battery charger in places where the temperature is liable to reach over 105°F (40.5°C). In particular, do not leave the battery charger in a car that is parked in the sunshine.
6. Protect batteries from overheating. Overloads, overcharging and exposure to direct sunlight will result in overheating and cell damage. Never charge or work with batteries that have been overheated – replace them immediately, if possible.
7. Store the charger and your cordless tool only in dry locations with an ambient temperature of 41°F – 105°F (5°C – 40.5°C). Store your lithium-ion battery pack in a cool, dry place at a temperature of 77°F (25°C). Protect the battery pack, charger and cordless tool from humidity and direct sunlight. Only place fully charged batteries in storage (charged to at least 40%).
8. Prevent the lithium-ion battery pack from freezing. Battery packs that were stored below 32°F (0°C) for more than 60 minutes must be discarded.


Safety Symbols

The following table depicts and describes safety symbols that may appear on this product. Read, understand, and follow all instructions on the machine before attempting to assemble and operate.

Symbols	Descriptions	Symbols	Descriptions
	READ THE OPERATOR'S MANUAL(S) – Read, understand, and follow all instructions in the user manual(s) before attempting to assemble and operate.		Keep bystanders and children a safe distance away.
	SAFETY ALERT – Indicates a precaution, a warning, or a danger.		WARNING! Do not expose the unit to rain or wet conditions.
	WEAR EYE AND HEARING PROTECTION – For protection against injury, wear ear defenders and safety goggles.		Beware of flying objects and debris.
	Wear safety gloves during use to protect hands.		Wear non-slip footwear that will protect your feet and improve your footing on slippery surfaces.
	Indoor use only. Only use battery charger indoors.		Disconnect battery before maintenance
	DANGER! Beware of thrown objects to bystanders. Keep bystanders at least 15 m (50 ft) away from the machine.		

Know Your Cordless String Trimmer + Edger + Grass Cutter

Read the owner's manual and safety instructions carefully before operating the cordless string trimmer + edger + grass cutter. Compare the illustration below to the cordless string trimmer + edger + grass cutter in order to familiarize yourself with the location of the various controls and adjustments. Save this manual for future reference.

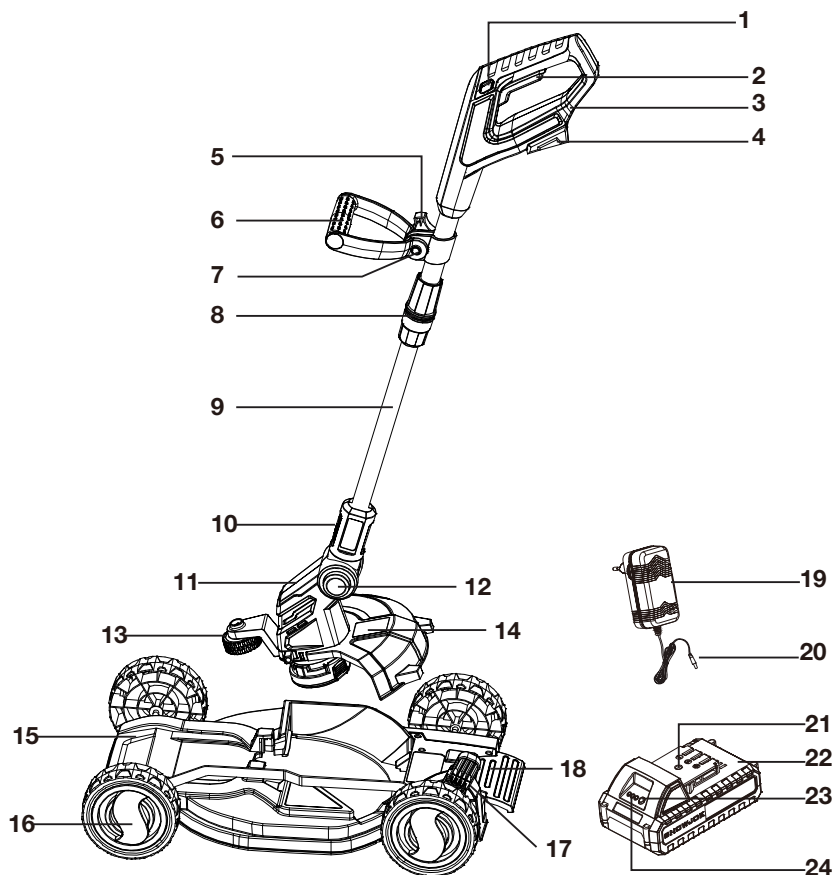

1. Safety lock
2. Switch handle
3. Main handle
4. Battery compartment
5. Auxiliary handle
6. Handle lock nut
7. Handle support
8. Locking sleeve(length adjustment)
9. Telescopic pole
10. Edging function button
11. Trimmer head
12. Angle adjustment button
13. Edging function wheel
14. Safety guard
15. Deck
16. Wheels
17. Height adjustment lever
18. Release lever
19. 24V* IONMAX™ lithium-ion battery charger (24VCHRG-AC)
20. Charger plug
21. Charge socket
22. 24V* IONMAX™ lithium-ion battery (24VBAT-LTE) featuring exclusive EcoSharp® technology
23. Push button for battery indicator
24. Battery indicator

Technical Data

Motor	400 W	Cutting Swath	12 in. (30.5 cm)
Battery Voltage Max*	24V D.C.	Cutting Height	5
Battery Capacity	2.0 Ah	Cutting Angle	0° – 60°
Charger Input	100 – 240V AC, 50 – 60 Hz, 0.4 A	Spool Length	16.5 ft (5.5 m)
Charger Output	25.2V DC 1400 mA	Telescoping Pole	2.30 ft to 3.28 ft (0.7 m to 1 m)
Charging Time	1 hr 20 min (for full charge)	Product Dimensions	43.3 in. x 13.8 in. x 43.3 in. (110 cm x 35 cm x 110 cm)
No Load Speed	8500 rpm	Net Weight	9.1 lbs (4.15 kg)

***DISCLAIMER:** Initial no-load voltage, when fully charged, peaks at 24V; nominal voltage under typical load is 21.6V.

Unpacking

Carton Contents

- String trimmer + edger + grass cutter
- Deck
- Safety guard
- Auxiliary handle with knob and bolt
- Line spool x 2
- 24V* IONMAX™ lithium-ion battery
- 24V* IONMAX™ lithium-ion charger
- Manual

1. Carefully remove the string trimmer + edger + grass cutter and check to see that all of the above items are supplied.
2. Inspect the product carefully to make sure no breakage or damage occurred during shipping. If you find damaged or missing parts, DO NOT return the unit to the store. Please call the All Season Power customer service center at 1-866-225-9723.

NOTE: Do not discard the shipping carton and packaging material until you are ready to use the cordless string trimmer + edger + grass cutter. The packaging is made of recyclable materials. Properly dispose of these materials in accordance with local regulations or save the packaging for long-term product storage.

IMPORTANT! The equipment and packaging material are not toys. Do not let children play with plastic bags, foils, or small parts. These items can be swallowed and pose a suffocation risk!

Battery Pack Operation

The equipment is powered by a lithium-ion battery. The battery pack is completely sealed and maintenance free.

⚠ WARNING! Before first use, the battery requires at least 1 hr 20 min charge time to be fully charged. When the battery is at low capacity, recharge for 1 hr 20 min again before resuming operation.

Battery Charge Level Indicator

The battery pack is equipped with a push button for checking the charge level. Simply press the push button to read off the battery charge level from the LEDs of the battery indicator:

- All 3 level monitoring LEDs are lit: Battery charge level is high.
- 2 level monitoring LEDs are lit: Battery charge level is decreasing. Stop work as soon as possible.
- 1 level monitoring LED is lit: Battery is flat. Stop work IMMEDIATELY and charge the battery. Otherwise the battery's service life will be greatly shortened.

	
Lights	Light Indicators
	Charge level button
	The battery is at 30% capacity and requires charging
	The battery is at 60% capacity and requires charging soon
	The battery is at full capacity

NOTE: If the charge level button does not appear to be working, insert the battery into the charger and charge as needed.

NOTE: Immediately after using the battery pack, the charge level button may display a lower charge than it will if checked a few minutes later. The battery cells "recover" some of their charge after resting.

Charger Operation

⚠ WARNING! Charge only IONMAX™ 24V* lithium-ion battery packs with its compatible IONMAX™ 24V* lithium-ion charger. Other types of batteries may cause personal injury and damage.

To reduce the risk of electric shock, do not allow water to flow into the charger's AC/DC plug.

When to Charge the IONMAX™ 24VBAT-LTE Lithium-Ion Battery


NOTE: The IONMAX™ 24VBAT-LTE lithium-ion battery packs do not develop a "memory" when charged after only a partial discharge. Therefore, it is not necessary to run down the battery pack before placing it into the charger.

- Use the battery charge indicator lights to determine when to charge your IONMAX™ 24VBAT-LTE lithium-ion battery pack.
- You can "top-off" your battery pack's charge before starting a big job or after a long day of use.

Charging the Battery


1. Press the push lock buttons on the battery to pull the battery pack out of the equipment (Fig. 1).

Fig. 1

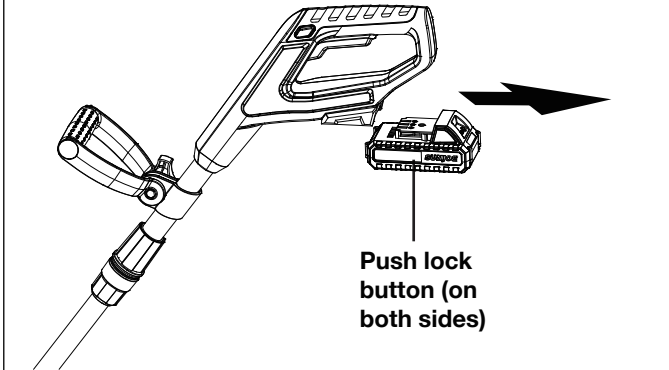

2. Check that the mains voltage is the same as that marked on the rating plate of the battery charger. Then, plug the charger adapter into an appropriate AC power outlet. Connect the charger plug into the charge socket of the battery to start charging (Fig. 2).

Fig. 2

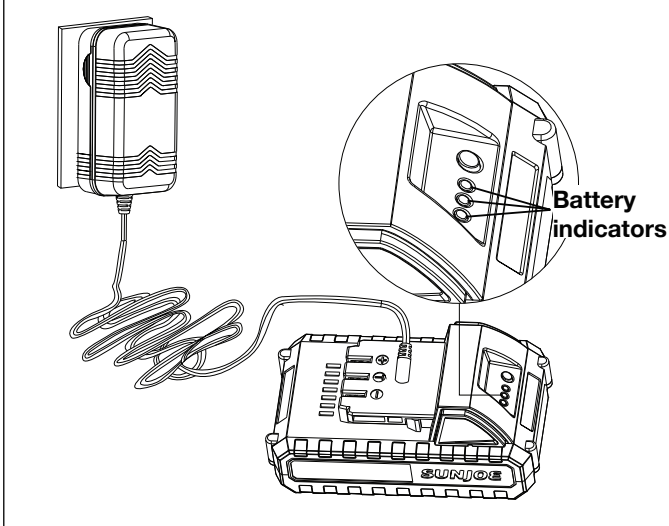

3. The battery will take approximately 1 hr 20 min to charge. The battery indicator LEDs will twinkle and illuminate one by one during the charging process. Unplug the charger immediately when the 3 LEDs are all illuminated.

⚠ CAUTION! FIRE HAZARD. When disconnecting the charger from the battery, be sure to unplug the charger from the outlet first, then disconnect the charger from the battery.

⚠ WARNING! This charger does not automatically turn off when the battery is fully charged. Please take care not to leave the battery plugged into the charger. Switch off or unplug the charger at the mains when charging is complete.

4. Timely recharging of the battery will help prolong the battery's life. You must recharge the battery pack when you notice a drop in the equipment's power.

IMPORTANT! Never allow the battery pack to become fully discharged as this will cause irreversible damage to the battery.

Assembly


Before using the cordless String trimmer + edger + grass cutter, follow these instructions to assemble.

⚠ WARNING! Do not insert the battery until assembly is complete. Failure to comply could result in accidental starting and possible serious personal injury.

Fitting the Auxiliary Handle


1. Remove the handle knob and bolt that come pre-assembled on the auxiliary handle (Fig. 3).

Fig. 3

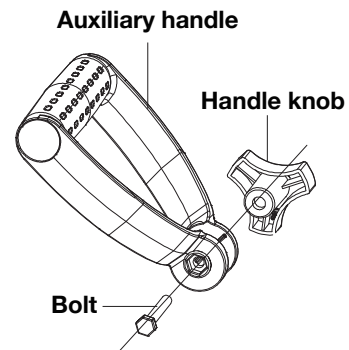

2. Fit the auxiliary handle into position and align the holes. Fix by the bolt and the handle knob. Tighten the handle knob to secure (Fig. 4).

Fig. 4

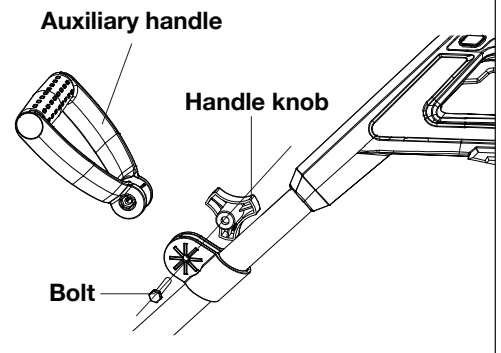


Fitting the Safety Guard

⚠ WARNING! The safety guard must be properly installed. The safety guard provides partial protection from the risk of thrown objects to the operator and other bystanders.

1. Align the guard with the trimmer head as shown (Fig.5).
2. Firmly press the safety guard into place until it clicks into the position.

Fig. 5

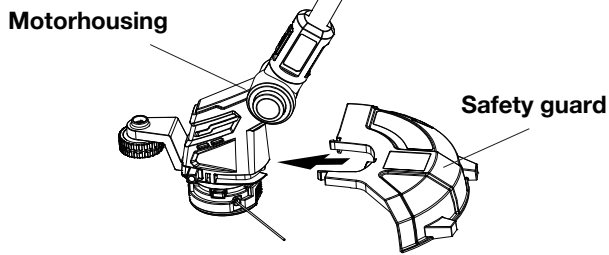


Replacing the spool

A dual-line factory wound spool (model MTE-RS-6PK) is available for easy spool replacement on the V-MTE-LTE cordless grass trimmer. Visit snowjoe.com to purchase this accessory online.

1. Switch off the machine and remove the battery. Wait until the machine comes to a complete stop.
2. Press together both release tabs on the line spool cover and remove the cover by pulling it straight off (Fig. 6).

Fig. 6

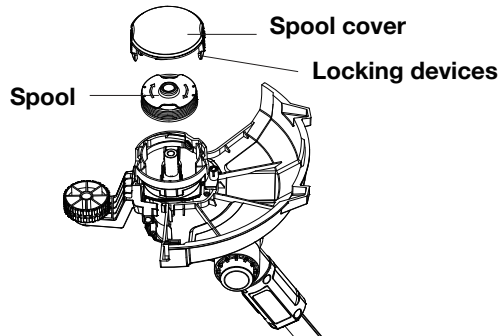


3. Lift and remove the spool out of the hub and clean out any dirt or grass residue.
4. Insert the new spool with the smooth side facing upwards in the cutting head and thread the two lines through the line eyelets. Ensure that the line ends do not slip out of the spool slots.
5. Return the hood. Ensure that the locks of the hood are accurately inserted in the corresponding recesses of the cutting head. They lock in audibly.
6. Press the retaining head, release it again and pull the ends of the cord out a little.
7. NOTE: The length of the line will adjust automatically.

To Attach a String Trimmer to The Deck

1. Insert the front of the trimmer into the deck as shown(Fig.7).


Fig. 7

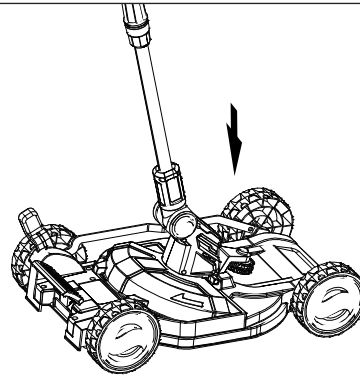

2. Lift the release lever of the deck with your feet (Fig.8).


Fig. 8

Release lever

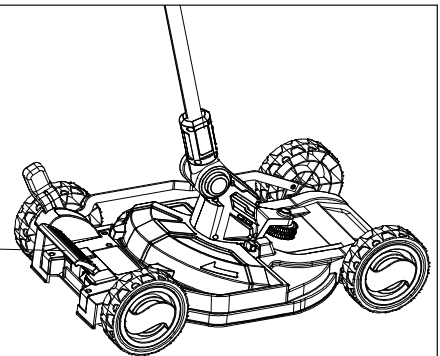

3. Lower the rear of the trimmer into the deck and press downward to make sure the grass deflector into place under the locking tabs (Fig.9).

Fig. 9

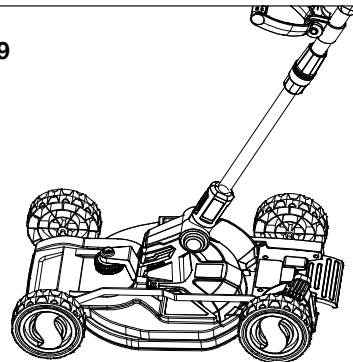

Operation

The cordless String trimmer + edger + grass cutter is designed to cut grass and weeds under bushes, and on slopes and edges that cannot be reached with the lawn mower. The String trimmer + edger + grass cutter must be used outdoors only, at an ambient temperature between 32°F (0°C) and 113°F (45°C).

⚠ WARNING! Remove stones, small sticks and other objects from the cutting area. The line spool continues to rotate for a few seconds after the String trimmer + edger + grass cutter is switched off. Let the motor come to a complete stop before switching the String trimmer + edger + grass cutter back on. Do not rapidly switch the String trimmer + edger + grass cutter off and on.

⚠ WARNING! Rocks or debris may ricochet or be thrown into eyes and face, cause blindness, or other serious injury. Never lean over the trimmer head and always wear eye protection.

When operating the machine, check for the following:

- Wear eye protection and heavy clothing.
- Hold the rear handle with one hand and auxiliary handle with the other hand.
- Keep the String trimmer + edger + grass cutter below your waist level.
- Cut only from your right to your left to ensure debris is thrown away from you. Without bending over, keep the String trimmer + edger + grass cutter near and parallel to the ground.


⚠ WARNING! Use only Sun Joe® spool replacement MTE-RS-6PK this unit. Other products will not work properly and will result in improper cutting head function or can cause serious injury.

Do not use other materials such as steel blades, wire, string, rope, etc. Other materials can break off during cutting and become a dangerous missile that can cause serious injury.

ON/OFF Switch

1. Insert the battery into the battery compartment on the back of the machine. To start the tool, slide the safety lock switch upward, then squeeze the On/Off trigger (Fig.9).

Fig. 10

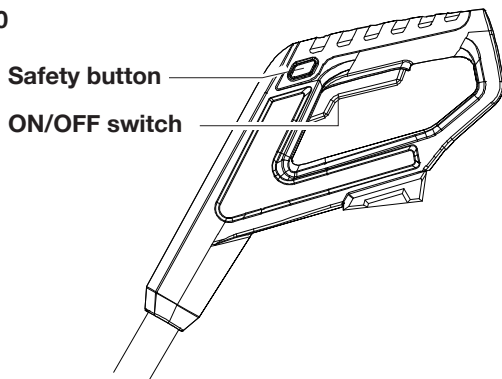


2. To turn the tool OFF, release the On/Off trigger. Remove the battery.

Adjusting Auxiliary handle

1. The auxiliary handle is height and angle adjustable.
2. To adjust the handle, first release the handle lock nut on the side of the handle.

Rotate the auxiliary handle to desired position and slide the handle support to the desired height, clamp in position and then tighten the lock nut (Fig 11).


Fig. 11

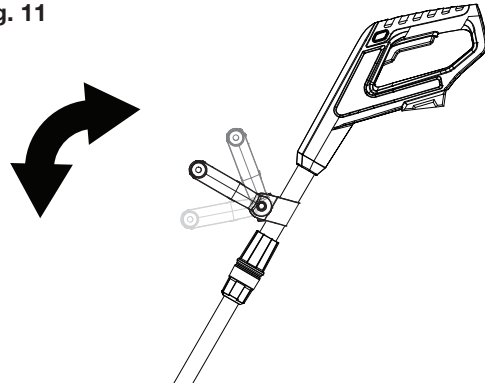

Adjusting the Telescoping Shaft


1. Switch off the machine and remove the battery. Wait until the blade comes to a complete stop.
2. To extend the pole, loose the locking collar clockwise to a desired length, then tighten the locking collar counterclockwise to screw in place (Fig. 12).

Fig. 12

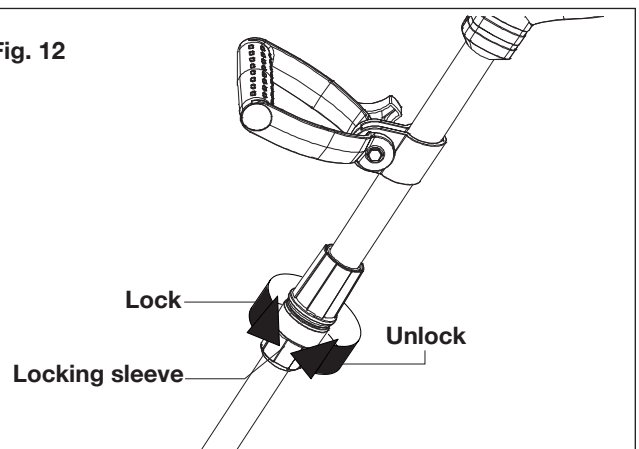

Setting the trimmer head angle


1. The angle of trimmer head can be set to different working positions.
2. Press the angle adjustment button with one hand and rotate the trimmer head to the required position. (Fig. 13)

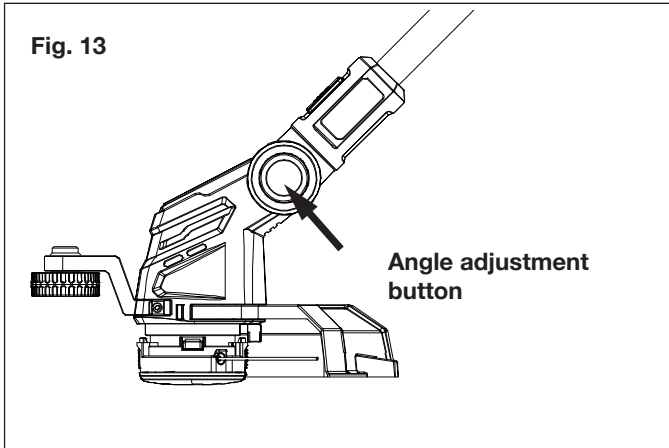

3. Release the button and the head will lock into place. There are 3 preset lock positions.


Trimming

Hold the trimmer at an angle of approximately 15-degrees to the work area (Fig. 14).

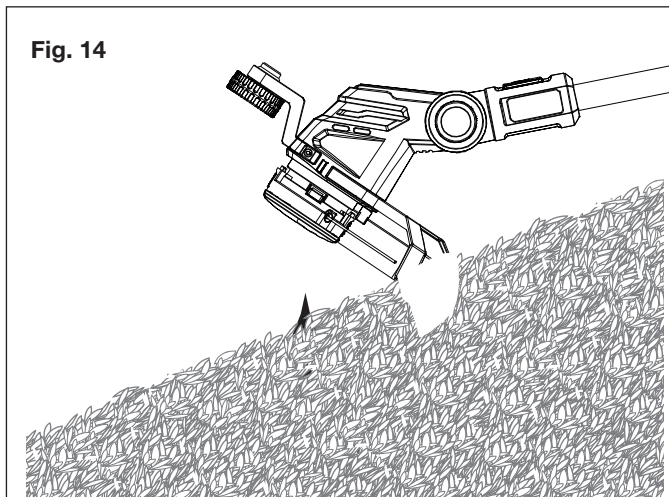


Mowing

Your trimmer is ideal for mowing in places conventional lawn mowers cannot reach. In the mowing position, keep the trimmer head parallel to the ground. Avoid pressing the head into the ground as this can scalp the ground and damage the tool (Fig. 15).

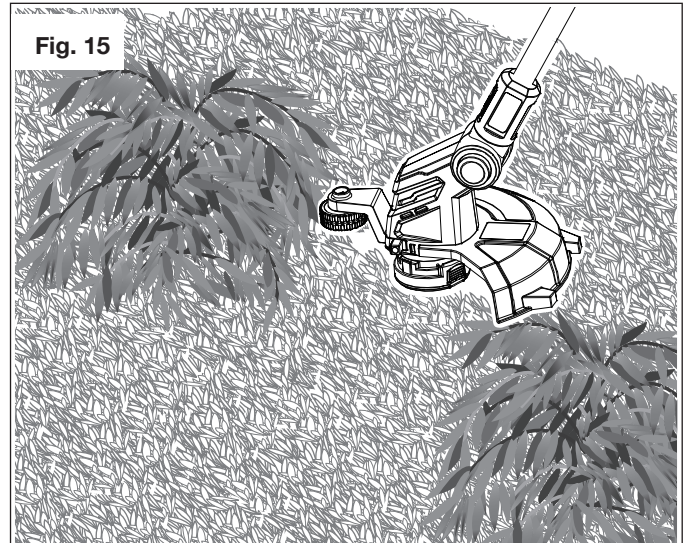

Sweeping


Fanning action can be used for quick and easy clean up. Keep the trimmer head parallel to and above the surfaces being swept and move the tool from side to side (Fig. 16).

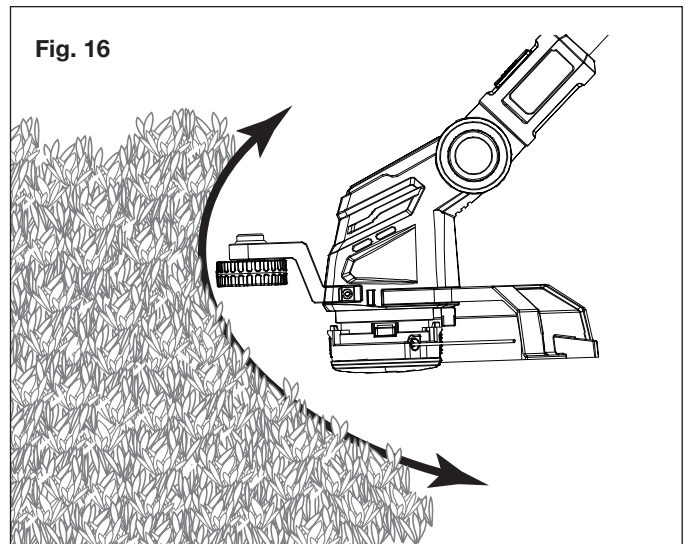


Edging

⚠ WARNING! Because this procedure is close to the On/Off switch, make sure to remove the battery before converting the machine.

1. To convert your trimmer into an edger, press edging function button and rotate the upper part of the trimmer 90° clockwise, then release the edging function button. The trimmer will lock into edging mode. (Fig. 16)

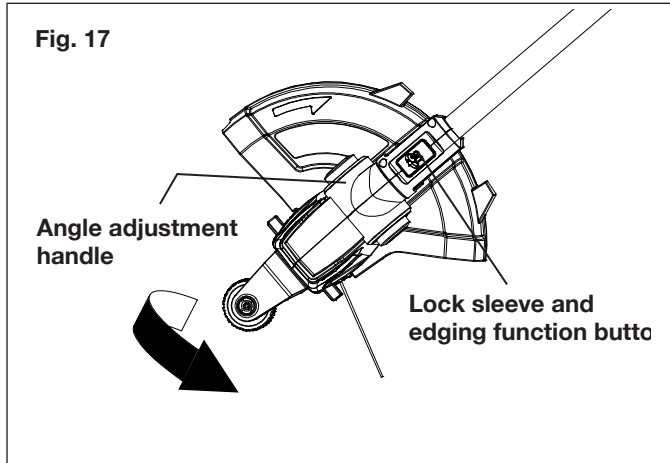


2. Use the edge of the guard as a guide when cutting near fences and walls (Fig. 17).

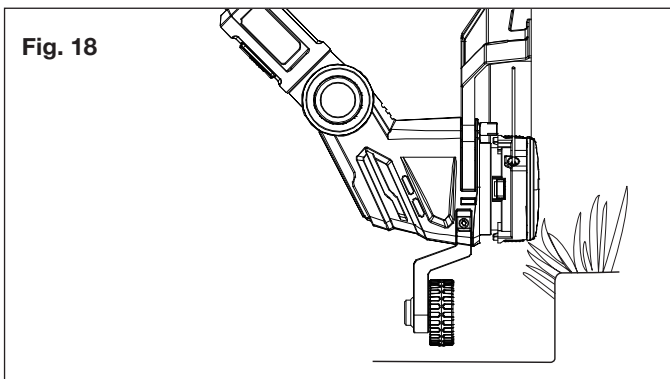

⚠ WARNING! Do not trim near electrical wires.


4. To convert your edger back to a trimmer, press edging function button and rotate the upper part of the trimmer 90° anticlockwise, then release the edging function button. The trimmer will lock into trimmer mode. (Fig. 18)

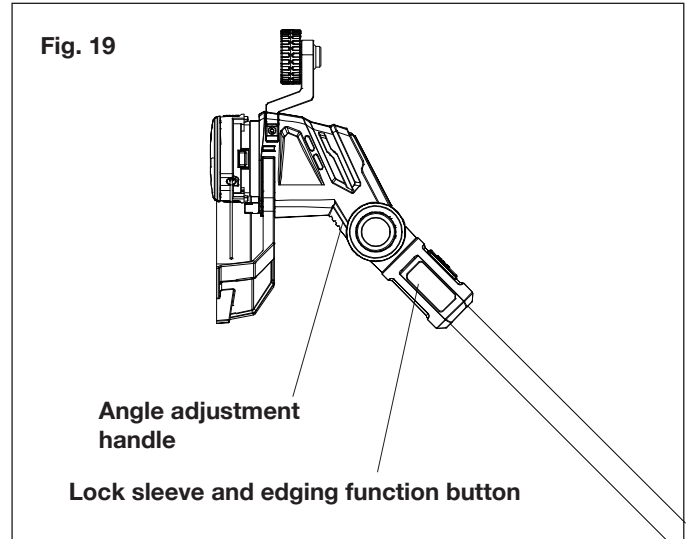

Lawn Cutter

Once a string trimmer is attached to the deck, switch trimmer on as directed by your trimmer's instruction manual.

1. Grip the handle of the string trimmer and move the deck forward slowly in a straight line to ensure even cutting and coverage of the lawn as shown (Fig. 20).

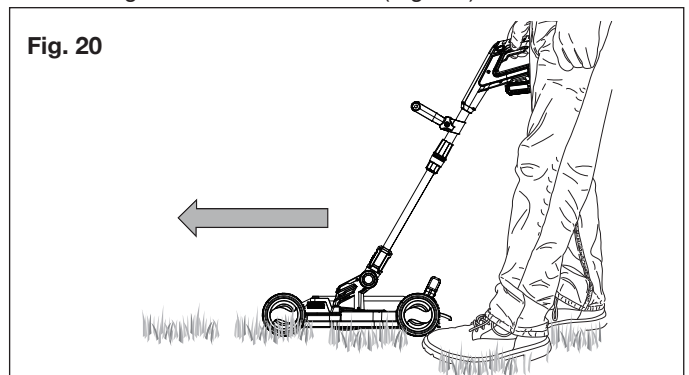

Do not lift up or pivot deck. Keep all four wheels in contact with the ground.

NOTE: The deck can either be moved in long lines in a traditional mowing fashion or moved back and forth in a vacuuming-like motion.


NOTE: Several passes may be required with long grass.

Wheel Adjustment

⚠ WARNING! Before adjusting the height of the deck, ensure your string trimmer is switched off and disconnected from the power supply. The deck offers five cutting lengths: 40mm, 51mm, 62mm, 73mm, 85mm.

To Adjust The Height of The Deck

Adjust the height of the deck by pulling height adjustment lever into desired height adjustment slots. Fig. 21).

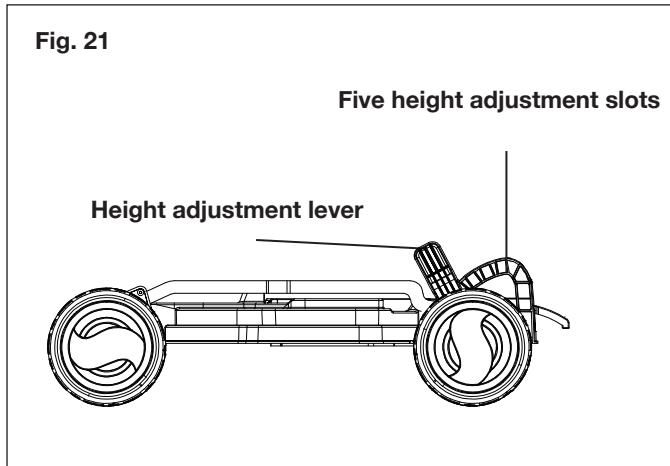

Note: It may be simpler to adjust the height of your deck if the string trimmer is not attached.

Maintenance

⚠ WARNING! Before performing any maintenance task, turn off the machine and remove the battery.

⚠ WARNING! Always wear protective gloves during maintenance tasks. Do not carry out maintenance when the engine is running or hot.

- Regular cleaning and maintenance of you String trimmer + edger + grass cutter will ensure efficiency and prolong the life of your machine.
- After each cutting operation, take apart and clean out the grass and soil from the whole String trimmer + edger + grass cutter and guard.
- During operation, keep the air vents clean and free from grass.
- Only use a cloth soaked with hot water and a soft brush to clean the String trimmer + edger + grass cutter.
- Do not spray or wet the appliance with water.
- Do not use detergents or solvents as these could ruin the trimmer. The plastic parts can easily be damaged by chemical agents.
- For repairs which have not been explained in these instructions, contact an authorized service center at 1-866-225-9723.

IMPORTANT! Repairs, maintenance, and adjustments to this power tool should be performed only by a qualified repair person using only identical replacement parts. This will ensure that the safety of the product is maintained. Contact your authorized Snow Joe® + Sun Joe® dealer or call the All Season Power customer service center at 1-866-225-9723 for assistance.

Proper Care for Battery + Charger

⚠ WARNING! To reduce the risk of injury, always unplug the charger and remove the battery pack from the charger before performing any maintenance task. Never disassemble the battery pack or charger. Contact your Snow Joe® + Sun Joe® dealer or the All Season Power customer service center for ALL repairs.

1. To reduce the risk of injury and damage, never immerse your battery pack or charger in liquid or allow any liquid to flow inside these components.
2. Clean out dust and debris from charger vents and electrical contacts by blowing with compressed air.
3. Use only a soft, clean and dry brush to clean the battery pack and charger, keeping away from all electrical contacts. Certain cleaning agents and solvents are harmful to plastics and other insulated parts. Some of these include gasoline, turpentine, lacquer thinner, paint thinner, chlorinated cleaning solvents, ammonia and household detergents containing ammonia. Never use flammable or combustible solvents around battery packs, battery chargers or tools.
4. The 24V* IONMAX™ 24VCHRG-AC lithium-ion battery charger has no serviceable parts.

Storage

Follow these recommendations for storing the String trimmer + edger + grass cutter.

- Clean the String trimmer + edger + grass cutter thoroughly before storing.
- Store the String trimmer + edger + grass cutter in a stable and safe location out of the reach of children. Keep the String trimmer + edger + grass cutter in a dry place where the temperature is not too hot or too cold.
- Do not store the String trimmer + edger + grass cutter resting against the floor. Hang it by the upper handgrip so that the guard does not touch anything. If the guard rests against a surface, its shape and dimensions could be permanently altered, and could render the machine unsafe to use.

Battery + Charger Off-Season Storage

1. Do not expose your battery pack or charger to water, rain or allow them to get wet. This could permanently damage the charger and the battery pack. Do not use oil or solvents to clean or lubricate your battery pack as the plastic casing can become brittle and crack, causing a serious risk of injury.
2. Store the battery pack and charger at room temperature away from moisture. Do not store in damp locations where corrosion of terminals may occur. As with other battery pack types, permanent capacity loss can result if the pack is stored for long periods of time at high temperatures (over 120°F/49°C).
3. IONMAX™ 24VBAT-LTE lithium-ion battery packs maintain their charge during storage longer than other battery pack

types. As a general practice, it is best to unplug the battery charger and remove the battery pack when they are not in use. Recharge the battery pack every 6 months to 50% capacity (2 lights on) during off-season storage to maintain optimal battery performance.

Battery Caution + Disposal

Always dispose of your battery pack according to federal, state, and local regulations. Contact a recycling agency in your area for recycling locations.

⚠ CAUTION! Even discharged battery packs contain some energy. Before disposing, use electrical tape to cover the terminals to prevent the battery pack from shorting, which could cause a fire or explosion.

⚠ WARNING! To reduce the risk of injury or explosion, never burn or incinerate a battery pack even if it is damaged, dead or completely discharged. When burned, toxic fumes and materials are emitted into the surrounding atmosphere.

1. Batteries vary according to device. Consult your manual for specific information.
2. Install only new batteries of the same type in your product (where applicable).
3. Failure to insert batteries in the correct polarity, as indicated in the battery compartment or manual, may shorten the life of the batteries or cause batteries to leak.
4. Do not mix old and new batteries.
5. Do not mix Alkaline, Standard (Carbon-Zinc) or Rechargeable (Nickel Cadmium, Nickel Metal Hydride, or Lithium-Ion) batteries.
6. Do not dispose of batteries in fire.
7. Batteries should be recycled or disposed of as per state and local guidelines.

Service + Support

If your Sun Joe® 24V-MTE-LTE String trimmer + edger + grass cutter requires service or maintenance, please call the All Season Power customer service center at 1-866-225-9723.

Model + Serial Numbers

When contacting the company, reordering parts, or arranging service from an authorized dealer, you will need to provide the model and serial numbers, which can be found on the decal located on the housing of the unit. Copy these numbers into the space provided below.

Record the following numbers from the housing or handle of your new product:																			
															Model #:				
2	4	V	-	M	T	E	-	L	T	E									
															Serial #:				

24VCHRG-AC

Federal Communications Commission (FCC)

⚠ WARNING! Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Class B Device:

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different than the one the receiver is connected to.
- Consult the dealer or an experienced radio/TV technician for help.

Troubleshooting






Most difficulties are easy to fix. Consult the troubleshooting table for common problems and their solutions. If you continue to experience problems or need repairs beyond these minor adjustments, please call 1-866-225-9723 for assistance.


⚠ WARNING! Always remove the battery before performing any adjustments, maintenance or repairs to your cordless String trimmer + edger + grass cutter.

Problems	Possible Solution
String trimmer + edger + grass cutter does not start	• Make sure the battery has enough power and is inserted properly. • Make sure the battery is not overheated. • If the String trimmer + edger + grass cutter does not start after completing the checks, contact your authorized Snow Joe® + Sun Joe® dealer or call All Season Power customer service center at 1-866-225-9723.
String trimmer + edger + grass cutter vibrates	• Remove the line spool and clean the slots, carefully remove any grass and weeds and so forth. • If vibration persists after reassembly, replace the line spool with a new one. • In the event of the problem not disappearing, Contact your authorized Snow Joe® + Sun Joe® dealer or call All Season Power customer service center at 1-866-225-9723.

Optional Accessories

    ⚠ WARNING! ALWAYS use only authorized Snow Joe® + Sun Joe® replacement parts and accessories. NEVER use replacement parts or accessories that are not intended for use with this cordless String trimmer + edger + grass cutter. Contact All Season Power if you are unsure whether it is safe to use a particular replacement part or accessory with your cordless String trimmer + edger + grass cutter. The use of any other attachment or accessory can be dangerous and could cause injury or mechanical damage.

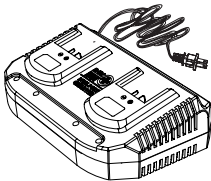Accessories	Item	Model
1 	IONMAX™ 24V* 2.0 Ah Lithium-Ion Battery	24VBAT-LTE
2 	IONMAX™ 24V* 2.5 Ah Lithium-Ion Battery	24VBAT-LT
3 	IONMAX™ 24V* 4.0 Ah Lithium-Ion Battery	24VBAT
4 	IONMAX™ 24V* 5.0 Ah Lithium-Ion Battery	24VBAT-XR
5 	IONMAX™ 24V* Lithium-Ion Battery Quick Charger	24VCHRG-QC
6 	IONMAX™ 24V* Lithium-Ion Battery Dual Port Charger	24VCHRG-DPC

 Accessories	Item	Model
7 	3-PK 15FT Spools	MTE-RS-3PK

NOTE: Accessories are subject to change without any obligation on the part of All Season Power to provide notice of such changes. Accessories can be ordered online at shopjoe.com or via phone by contacting the All Season Power customer service center at 1-866-225-9723.



ALL SEASON POWER CUSTOMER PROMISE

ABOVE ALL ELSE, All Season Power LLC (“All Season Power”) is dedicated to you, our customer. We strive to make your experience as pleasant as possible. Unfortunately, there are times when a Snow Joe®, Sun Joe®, Aqua Joe®, or Auto Joe® product (“Product”) does not work or breaks under normal operating conditions. We think it’s important that you know what you can expect from us. That’s why we have a Limited Warranty (“Warranty”) for our Products.

OUR WARRANTY:

All Season Power warrants new, genuine, powered and non-powered Products to be free from defects in material or workmanship when used for ordinary household use for a period of two years from the date of delivery of the Product to the original, end-user purchaser when purchased from All Season Power or from one of All Season Power’s authorized sellers with proof of purchase. Because All Season Power is unable to control the quality of its Products sold by unauthorized sellers, unless otherwise prohibited by law, this Warranty does not cover Products purchased from unauthorized sellers. If your Product does not work or there’s an issue with a specific part that is covered by the terms of this Warranty, All Season Power will elect to either (1) send you a free replacement part, (2) replace the Product with a new or comparable product at no charge, or (3) repair the Product. How cool is that!

This Warranty gives you specific legal rights, and you may also have other rights which vary from State to State.

PRODUCT REGISTRATION:

All Season Power strongly encourages you to register your Product. You can register online at shopjoe.com/register, or by printing and mailing in a registration card available online from our website, or by calling our Customer Service Department at **1-866-225-9723**, or by e-mailing us at help@allseasonpower.com. Failure to register your Product will not diminish your warranty rights. However, registering your Product will allow All Season Power to better serve you with any of your customer service needs.

WHO CAN SEEK LIMITED WARRANTY COVERAGE:

This Warranty is extended by All Season Power to the original purchaser and original owner of the Product.

WHAT IS NOT COVERED?

This Warranty does not apply if the Product has been used commercially or for non-household or rental applications. This Warranty also does not apply if the Product was purchased from an unauthorized seller. This Warranty also does not cover cosmetic changes that do not affect performance. Wearing parts like belts, augers, chains and tines are not covered under this Warranty, and can be purchased at shopjoe.com/support or by calling **1-866-225-9723**.



Keep your warranty intact. Only use **CERTIFIED AUTHENTIC** Snow Joe®, Sun Joe®, Aqua Joe® + Auto Joe® replacement parts + accessories. Use of any other parts + accessories will void the warranty. Genuine parts + accessories can be found and purchased online at shopjoe.com/support by entering the model number of your product.

[illegible]

[illegible]

