



EXPANDABLE GARDEN HOSE + 5-PATTERN HOSE NOZZLE

75-FT | 5/8" | BURST-PROOF
ALUMINUM FITTINGS | BRASS CONTROL VALVE
LIGHTWEIGHT • FLEXIBLE • DURABLE

Model AJEGH75-58-WSG



 
If you have any questions or comments,
please call the Snow Joe® + Sun Joe® customer service department at:

1-866-SNOWJOE (1-866-766-9563)

Technical Data

Hose Length (expanded)	75 ft (22.8 m)
Hose Length (retracted)	25 ft (7.6 m)
Hose Diameter	5/8 in. (1.6 cm)
Outer Hose Material	Polyester
Inner Hose Material	Latex
Fittings Material	Aluminum
Control Valve Material	Brass
Bursting Pressure Max	700 PSI
Working Pressure	150 PSI
Temperature Rating	Maintains flexibility down to 34°F (1°C)
5-Pattern Hose Nozzle	Full, Flat, Mist, Shower, Stream
Net Weight	3.5 lbs (1.6 kg)

EXPANDS UP TO 3X IN LENGTH

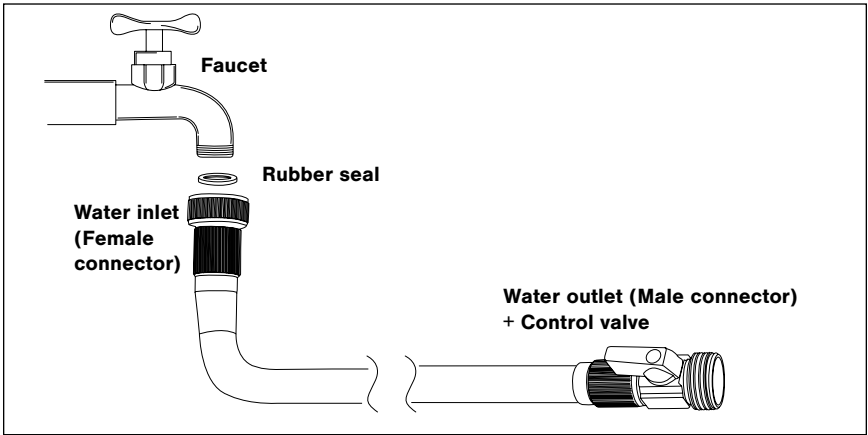

Assembling Hose to Faucet

1. Remove the garden hose from the package and completely unwind it.
2. Attach any spray nozzle or irrigation accessory to the outlet of the garden hose.
3. Attach the garden hose inlet to the water supply of your home.
4. Turn on the tap from your home's water supply to the garden hose.

⚠ WARNING!

- Although this hose is drinking water safe, the water in ANY garden hose may become contaminated and cause serious health effects. Use caution if drinking water from garden hose.
- Strangulation hazard. Hose wrapped around neck may cause serious injury or death.
- Keep out of reach of children and pets.
- For general OUTDOOR USE ONLY in applications under 150 PSI.
- NOT for commercial applications, in hot water applications, or high-pressure applications (such as pressure washer). Improper use may result in serious personal injury and/or damage or destroy the hose.
- DO NOT leave this garden hose unattended when it is in use or under pressure.
- NOT a toy.

Hose Nozzle Operation

1. To start, connect threaded bottom of hose nozzle to garden hose. Turn on the faucet. With the water flowing, rotate nozzle to desired setting (Fig. 1). Select from shower, mist, flat, full, and stream (Fig. 2).

Fig. 1



 
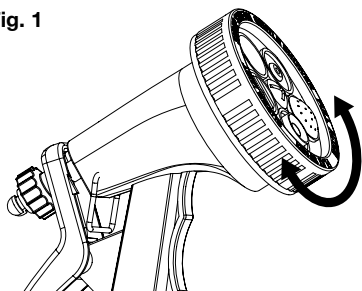 


Fig. 2

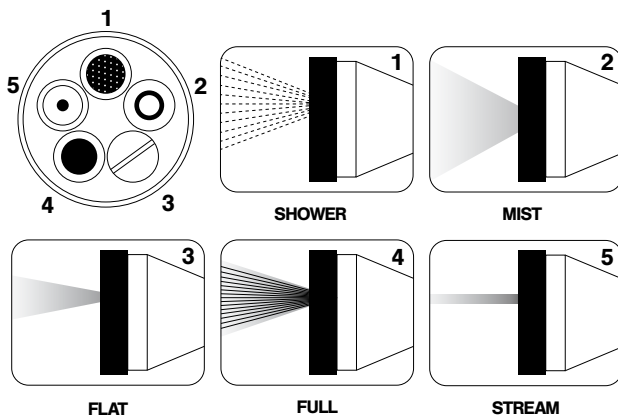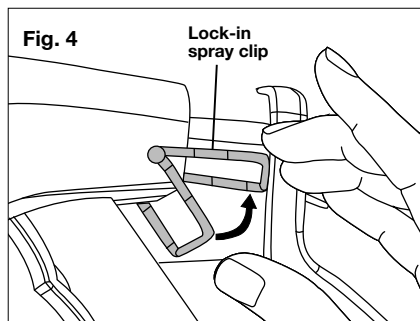 

 2. Use the flow control dial to lock desired spray adjustment in place (Fig. 3).
3. Use lock-in spray clip to hold valve open for continuous water flow (Fig. 4).

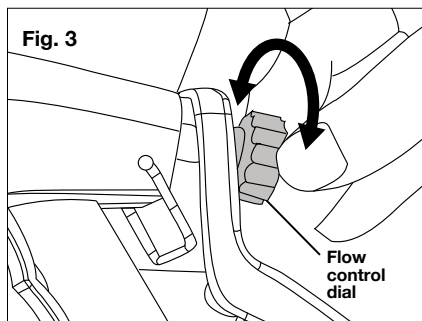

Storing Your Garden Hose + Spray Gun

You can store your garden hose on just about any common hose reel or simply coil it next to your faucet. To extend the life of your hose, store out of direct sunlight.

NOTE: When you are finished watering with your garden hose, release the water pressure before storing. To extend the life of your hose, shut off your water and remove or open the nozzle.

Drain the nozzle after use. DO NOT allow water to freeze in the nozzle.

Service + Support

If your AQUA JOE® AJEGH75-58-WSG garden hose and hose nozzle requires service or maintenance, please call the Snow Joe® + Sun Joe® customer service center at 1-866-SNOWJOE (1-866-766-9563).



SNOW JOE® + SUN JOE® CUSTOMER PROMISE

ABOVE ALL ELSE, Snow Joe, LLC ("Snow Joe") is dedicated to you, our customer. We strive to make your experience as pleasant as possible. Unfortunately, there are times when a Snow Joe®, Sun Joe®, Aqua Joe®, or Auto Joe® product ("Product") does not work or breaks under normal operating conditions. We think it's important that you know what you can expect from us. That's why we have a Limited Warranty ("Warranty") for our Products.

OUR WARRANTY:

Snow Joe warrants new, genuine, powered and non-powered Products to be free from defects in material or workmanship when used for ordinary household use for a period of two years from the date of delivery of the Product to the original, end-user purchaser when purchased from Snow Joe or from one of Snow Joe's authorized sellers with proof of purchase. Because Snow Joe is unable to control the quality of its Products sold by unauthorized sellers, unless otherwise prohibited by law, this Warranty does not cover Products purchased from unauthorized sellers. If your Product does not work or there's an issue with a specific part that is covered by the terms of this Warranty, Snow Joe will elect to either (1) send you a free replacement part, (2) replace the Product with a new or comparable product at no charge, or (3) repair the Product. How cool is that!

This Warranty gives you specific legal rights, and you may also have other rights which vary from State to State.

PRODUCT REGISTRATION:

Snow Joe strongly encourages you to register your Product. You can register online at snowjoe.com/register, or by printing and mailing in a registration card available online from our website, or by calling our Customer Service Department at **1-866-SNOWJOE (1-866-766-9563)**, or by e-mailing us at help@snowjoe.com. Failure to register your Product will not diminish your warranty rights. However, registering your Product will allow Snow Joe to better serve you with any of your customer service needs.

WHO CAN SEEK LIMITED WARRANTY COVERAGE:

This Warranty is extended by Snow Joe to the original purchaser and original owner of the Product.

WHAT IS NOT COVERED?

This Warranty does not apply if the Product has been used commercially or for non-household or rental applications. This Warranty also does not apply if the Product was purchased from an unauthorized seller. This Warranty also does not cover cosmetic changes that do not affect performance. Wearing parts like belts, augers, chains and tines are not covered under this Warranty, and can be purchased at snowjoe.com/support or by calling **1-866-SNOWJOE (1-866-766-9563)**.



Keep your warranty intact. Only use **CERTIFIED AUTHENTIC** Snow Joe®, Sun Joe®, Aqua Joe® + Auto Joe® replacement parts + accessories. Use of any other parts + accessories will void the warranty. Genuine parts + accessories can be found and purchased online at snowjoe.com/support by entering the model number of your product.







sunjoe.com