



24V* IONMAX HEATED CHAIR

21" | 3 TEMPERATURE SETTINGS | 400 LBS WEIGHT CAPACITY

Model BHC-24VH Series



If you have any questions or comments, please call
the Bliss Hammocks® customer service department at:

1-866-255-3708

Original instructions.
© 2024 Bliss Hammocks® is a registered trademark of All Season Power LLC. All rights reserved.
Made in China

SAVE THESE INSTRUCTIONS

IMPORTANT!

Safety Instructions

All Operators Must Read These Instructions Before Use

General Safety

⚠️ WARNING! This appliance is not intended for use by children or by unassisted, unsupervised persons whose physical, sensory or mental capabilities prevent them from using it safely. Children should be supervised to ensure that they do not play with the appliance.

⚠️ WARNING! To reduce the risk of injury, DO NOT play on, stand, or jump on the chair. The chair is intended for sitting and reclining only.

⚠️ WARNING! Make sure you place chair on an even surface before using. Also make sure your recliner is completely unfolded before sitting and be careful reclining while sitting. Body shape and weight will affect the way this recliner operates. Be careful and proceed with caution.

Battery & Charger Safety Instructions

We pay a great deal of attention to the design of every battery pack to ensure that we supply you with batteries that are safe, durable and have a high energy density. The battery cells have a wide range of safety devices. Each individual cell is initially formatted and its electrical characteristic curves are recorded. This data is then used exclusively to assemble the best possible battery packs.

Despite all the safety precautions, caution must always be exercised when handling batteries. The following points must be obeyed at all times to ensure safe use. Safe use can only be guaranteed if undamaged cells are used. Incorrect handling of the battery packs can cause cell damage.

IMPORTANT! Analyses confirm that incorrect use and poor care of high-performance batteries are the main factors responsible for product damage and/or personal injury.

⚠️ WARNING! To reduce the risk of injury, use only official 24V* IONMAX™ designated chargers and battery packs. The use of other batteries or chargers poses a risk of fire, personal injury and damage.

⚠️ WARNING! Do not use a battery pack or product that has been damaged or modified. Damaged or modified batteries may exhibit unpredictable behavior resulting in fire, explosion or risk of injury.

Do not modify or attempt to repair the product or the battery pack except as indicated in the instructions for use and care. Do not wire a battery pack to a power supply or car cigarette lighter, as such misuse will permanently disable or damage the battery pack.

Have your battery pack serviced by a qualified repair person using only identical replacement parts. This will ensure that the safety of the battery pack is maintained.

⚠️ WARNING! To reduce the risk of electric shock, always unplug the charger before performing any cleaning or maintenance. Do not allow water to flow into the charger. Use a Ground Fault Circuit Interrupter (GFCI) to reduce shock hazards.

Remove battery – Remove the battery pack from the tool when not in use, before servicing, or before performing any other maintenance task. Never leave the tool unattended while switched on. In the event of an accident or breakdown, switch off the tool immediately.

Avoid dangerous environments – Do not charge the battery packs in rain, snow or in damp or wet locations. Do not use the battery pack or charger in the presence of explosive atmospheres (gaseous fumes, dust or flammable materials) because sparks may be generated when inserting or removing the battery packs, which could lead to a fire.

NOTE: The safe temperature range for the batteries are 41°F (5°C) to 105°F (40.5°C). Do not charge the batteries outside in freezing weather; charge them at room temperature.

Charge in a well-ventilated area – Do not block the charger vents. Keep them clear to allow for proper ventilation. Do not allow smoking or open flames near a charging battery pack. Vented gases may explode.

Maintain charger cord – When unplugging the charger, pull the plug, not the cord from the receptacle to reduce the risk of damage to the power cord. Never carry the charger by its cord. Keep the cord away from heat, oil and sharp edges. Make sure the cord will not be stepped on, tripped over or subjected to damage or stress when the charger is in use. Do not use a charger with a damaged cord or plug. Replace a damaged charger immediately.

Do not use an extension cord unless it is absolutely necessary – Using the wrong, damaged or improperly wired extension cord poses a risk of fire and electric shock. If an extension cord must be used, plug the charger into a properly wired 16 gauge or larger extension cord with the female plug matching the male plug on the charger. Make sure that the extension cord is in good electrical condition.

Do not expose the machine or battery packs to fire – Exposure to fire or temperatures above 265°F (130°C) may cause the battery packs to explode, causing personal injury or damage. Toxic fumes and materials are created when battery packs are ignited.

Do not crush, drop or damage battery packs – Do not use the battery packs or charger if they have sustained a sharp blow, been dropped from a height of more than 3 feet (1 meter), run over or have been damaged in any way. Even

if the housing of a battery pack appears to be undamaged, the battery cells inside the battery may have suffered serious damage. In such instances, please read the waste disposal information for proper battery disposal.

Do not disassemble – Incorrect reassembly may pose a serious risk of electric shock, fire or exposure to toxic battery chemicals. If the battery or charger is damaged, contact an authorized All Season Power dealer or call the All Season Power customer service center at 1-866-225-9723 for assistance.

Battery chemicals cause serious burns – Never let a damaged battery pack contact the skin, eyes or mouth. If damaged, battery chemicals will react violently with air. Use rubber or neoprene gloves to safely dispose of the battery. If skin is exposed to battery chemicals, wash the affected area with soap and water. If eyes are exposed to battery chemicals, immediately flush with water for 20 minutes and seek medical attention. Remove and dispose of contaminated clothing.

Risk of short circuit – A battery pack will short circuit if a metal object makes a connection between the positive and negative contacts on the battery pack. Do not place a battery pack near anything that may cause a short circuit, such as paperclips, coins, keys, screws, nails and other metallic objects. A short-circuited battery pack poses a risk of fire and severe personal injury.

Store your battery packs and charger in a cool, dry place – Ideally, store the battery packs at 59°F (15°C) and charged to at least 40%. Do not store the battery packs or charger where temperatures may exceed 105°F (40.5°C), such as in direct sunlight or inside a vehicle, or where temperatures may drop below 41°F (5°C).

NOTE: Prevent the battery packs from freezing.

Battery packs that were stored below 32°F (0°C) for more than 60 minutes must be discarded.

Charge before use – The battery pack supplied with your machine is only partially charged. The battery pack must be fully charged before using the bug zapper for the first time.

Battery Aging – Lithium-ion batteries are subject to a natural aging process. A battery pack must be replaced at the latest when its capacity falls to just 80% of its capacity when new. Weakened cells in an aged battery pack are no longer capable of meeting the high power requirements needed for the proper operation of your machine, and therefore pose a safety risk.

Do not exhaustively discharge battery packs – A complete discharge will damage the battery cells. The most common cause of exhaustive discharge is lengthy storage. Stop working as soon as the performance of a battery falls noticeably or the electronic protection system triggers. For optimum battery performance, charge the battery packs frequently. Place the battery packs in storage only after they have been fully charged.

Do not overload battery packs – Protect the bug zapper and battery from overloading. Overloads will quickly result in overheating and cell damage inside the battery housing even if it is not apparent externally. For safety reasons, the integrated protective cutoff will activate to switch off the equipment. After regular use, allow the battery packs to cool to room temperature before recharging them.

IMPORTANT! Do not attempt to turn on the machine if the protective cutoff has been activated. This may damage the battery packs.

Outlet voltage – Please check the data marked on the rating label of the battery charger. Be sure that the voltage of the power supply matches that marked on the rating label. Never connect it to a different mains voltage.

Charger use – Do not use the battery charger to charge other types of battery packs or tools.

 
Do not overcharge battery packs – Do not exceed the maximum charging times. Frequently overcharging the battery packs will result in cell damage. Do not leave battery connected to the charger for days on end.

Battery pack abnormalities – Do not use batteries that have suffered swelling or deformation or those that exhibit other atypical symptoms (gassing, hissing, cracking, etc.).

Electrostatic discharge – When handling batteries, be wary of electrostatic charge. Electrostatic discharges can damage the electronic protection system and the battery cells. To avoid electrostatic discharges, never touch the battery terminals.


Safety Symbols

The following table depicts and describes safety symbols that may appear on this product. Read, understand, and follow all instructions on the product before attempting to assemble and operate.

Symbols	Descriptions	Symbols	Descriptions
	READ THE OPERATOR'S MANUAL(S) – Read, understand, and follow all instructions in the user manual(s) before attempting to assemble and operate.		SAFETY ALERT – Indicates a precaution, a warning, or a danger.
	WARNING! Do not expose the unit to rain or wet conditions.		To reduce the risk of electrocution or electric shock, keep away from water.
	Only use battery charger indoors.		WARNING! Turn the machine OFF and disconnect it from the power supply before inspecting, cleaning, changing accessories or conducting any other maintenance task.

Know Your 24V* IONMAX™ Heated Chair

 - 1. Padded back
- 2. Heated seat area
- 3. Padded armrests (2)
- 4. Battery mesh pocket
- 5. Collapsible side table
- 6. 24V* IONMAX™ lithium-ion charger (XZ2600-0450)
- 7. Charger plug
- 8. 24V* IONMAX™ lithium-ion battery (24VBAT-LTE) featuring exclusive EcoSharp® technology
- 9. Charge socket
- 10.Push lock button (2)
- 11.Push button for battery indicator
- 12.Battery indicator
- 13.Battery connector

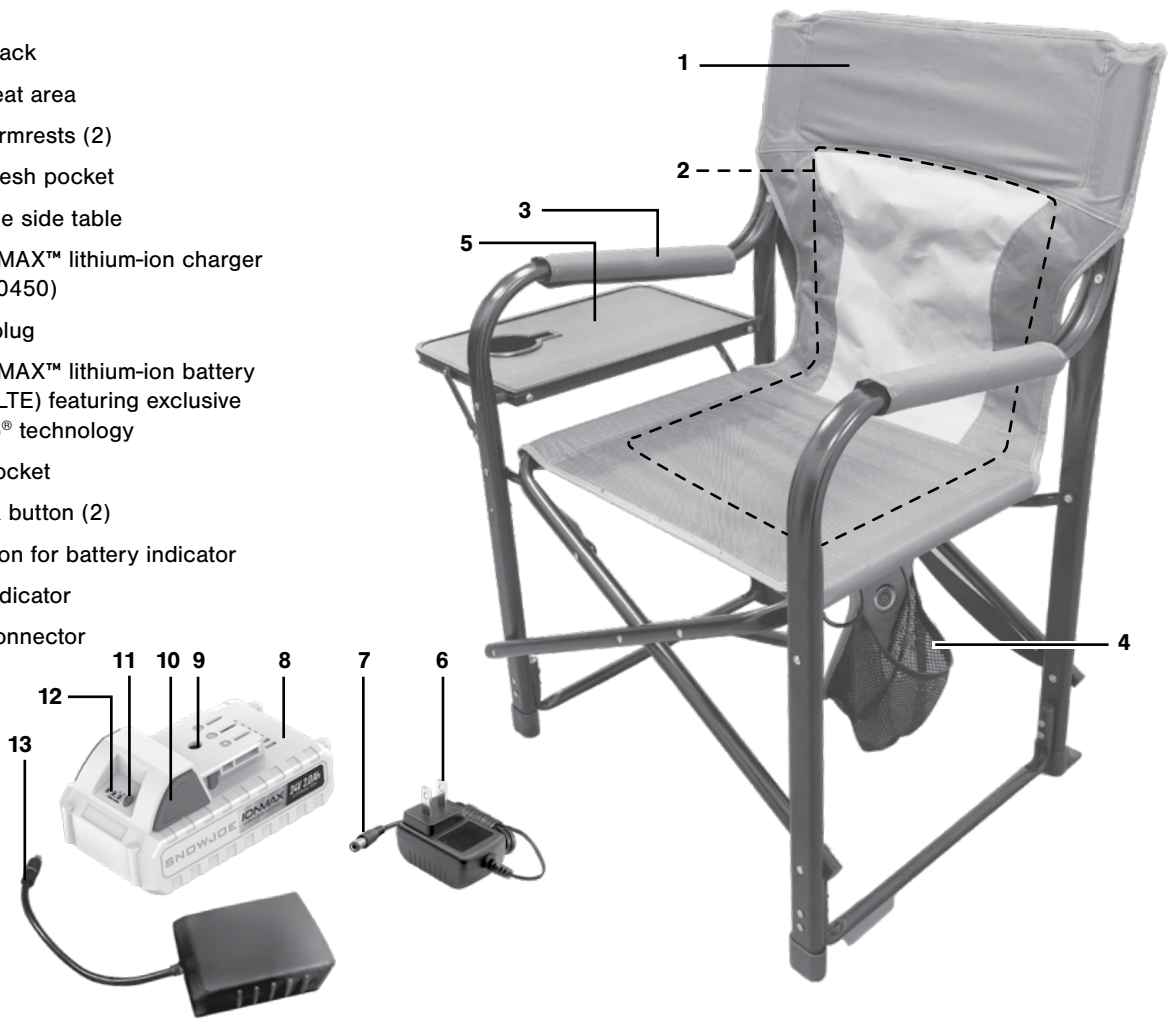

Technical Data

Weight Capacity.....	400 lbs	Charge Time Max.....	5 hours
Fully Opened Dimensions.....	34" L x 21.2" W x 36.5" H	3 Temperature Settings.....	Low Medium High
Folded Dimensions.....	36.2" L x 5.5" W x 21.7" H	Fabric Material	Polyester
Battery Voltage Max*	24 V D.C.	Frame Material	Powder-coated steel
Battery Capacity.....	2.0 Ah	Auto Safety Sensor + Shut-Off	5 minutes
Charger Input	100 – 240V AC 50/60 Hz 0.4 A	Net Weight.....	14.8 lbs (6.7 kg)
Charger Output	26V DC 450 mA		

Unpacking

Carton Contents

Make sure all parts are present & place them side by side for easy identification.

- Heated Chair with Side Table
 - 24V* IONMAX™ lithium-ion battery
 - 24V* IONMAX™ lithium-ion battery charger
 - Battery Connector
 - Manual with registration card
1. Carefully remove the heated chair and check to see that all of the above items are supplied.
 2. Inspect the product carefully to make sure no breakage or damage occurred during shipping. If you find damaged or missing parts, DO NOT return the unit to the store. Instead, please call the All Season Power customer service center at 1-866-225-9723.

NOTE: Do not discard the shipping carton and packaging materials until you are ready to use your new heated chair. The packaging is made of recyclable materials. Properly dispose of these materials in accordance with local regulations.

IMPORTANT! The equipment and packaging materials are not toys. Do not let children play with plastic bags, foils or small parts. These items can be swallowed and pose a suffocation risk!

Battery Pack Operation

The equipment is powered by a lithium-ion battery. The battery pack is completely sealed and maintenance free.

Battery Charge Level Indicator

The battery pack is equipped with a push button for checking the charge level. Simply press the push button to read off the battery charge level from the LEDs of the battery indicator:

	
Lights	Light Indicators
	Charge level button
	The battery is at 30% capacity
	The battery is at 60% capacity
	The battery is fully charged

NOTE: If the battery indicator button does not appear to be working, charge the battery.

NOTE: Immediately after using the battery pack, the battery indicator button may display a lower charge than it will if checked a few minutes later. The battery cells “recover” some of their charge after resting.

Charger Operation

⚠ WARNING! Only charge 24V* IONMAX™ lithium-ion battery pack with compatible 24V* IONMAX™ lithium-ion chargers. Other types of chargers may cause personal injury and damage.

To reduce the risk of electric shock, do not allow water to enter into the charger.

Charging the Battery

Push the push lock buttons on either side of the battery pack to pull it out from the battery connector.

Check that the mains voltage is the same as that marked on the rating plate of the battery charger. Then plug the charger into an appropriate AC power outlet. Connect the charger plug into the charging socket of the battery to start charging (Fig. 1).

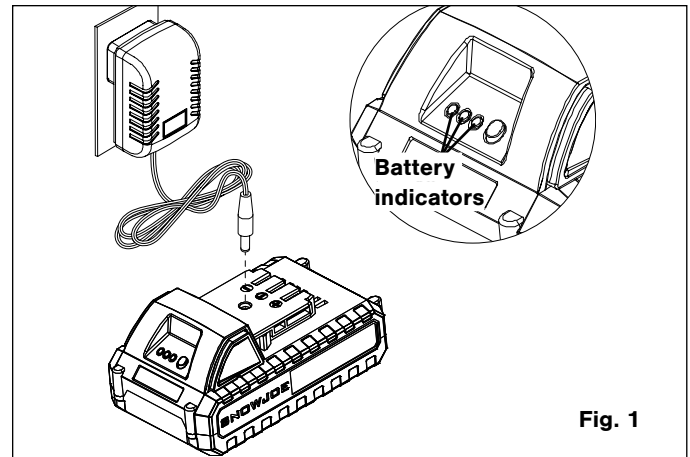 


Fig. 1

The battery will take approximately 5 hours to charge. The battery indicator LEDs will cycle on one by one during the charging process. Unplug the charger immediately when all 3 LEDs are illuminated.

⚠ CAUTION! FIRE HAZARD. When disconnecting the charger from the battery, be sure to unplug the charger from the outlet first, then disconnect the battery from the charger.

⚠ WARNING! This charger does not automatically turn off when the battery is fully charged. Please take care not to leave the battery plugged into the charger. Switch off or unplug the charger at the mains when charging is complete.

 
Timely recharging of the battery will help prolong the battery's life. Recharge the battery pack when you notice a drop in the equipment's power.

IMPORTANT! Never allow the battery pack to become fully discharged as this will cause irreversible damage to the battery.

Assembly

⚠ WARNING! To avoid being pinched, keep fingers out of the areas where the frames are in motion, such as during opening, reclining and closing the chair.


1. Set the chair upright. Grab both sides of the seat and pull outward (Fig.2).

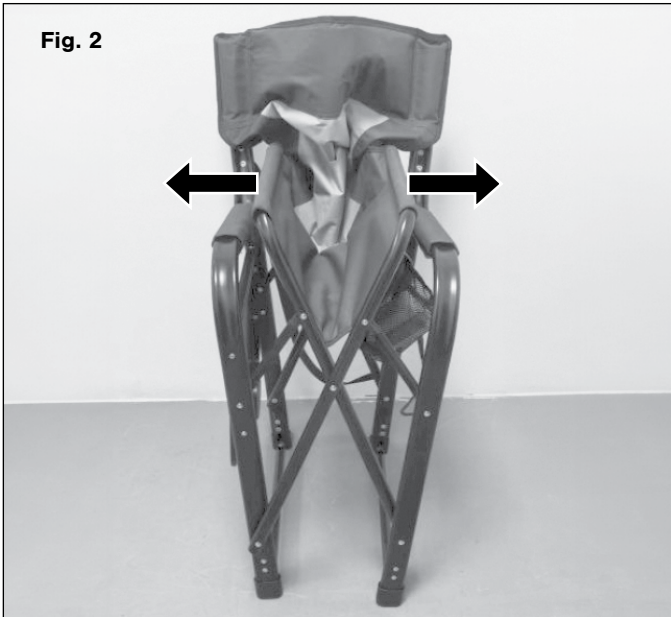

2. Press down on both sides of the seat until fully expanded (Fig. 3).




 3. Unfold and lift the side table. Straighthen the joints until they lock in place (Fig. 4).

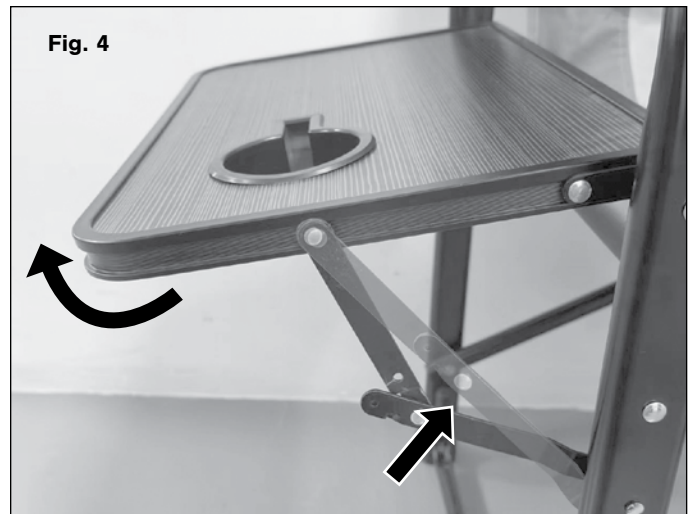


Operation

 1. Once your chair is ready for use, make sure it's on an even surface. Then slide the 24V* IONMAX™ battery into the battery connector until it clicks into place. To remove, push both battery lock buttons and slide back out (Fig. 5).

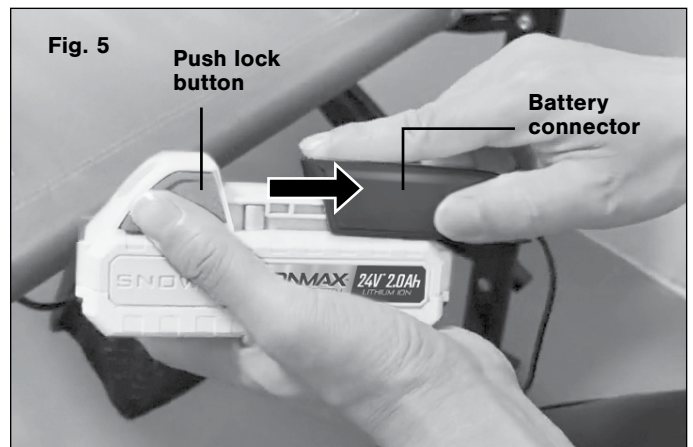

 2. Plug in the battery (Fig. 6) and place in mesh pocket under the seat (Fig. 7).



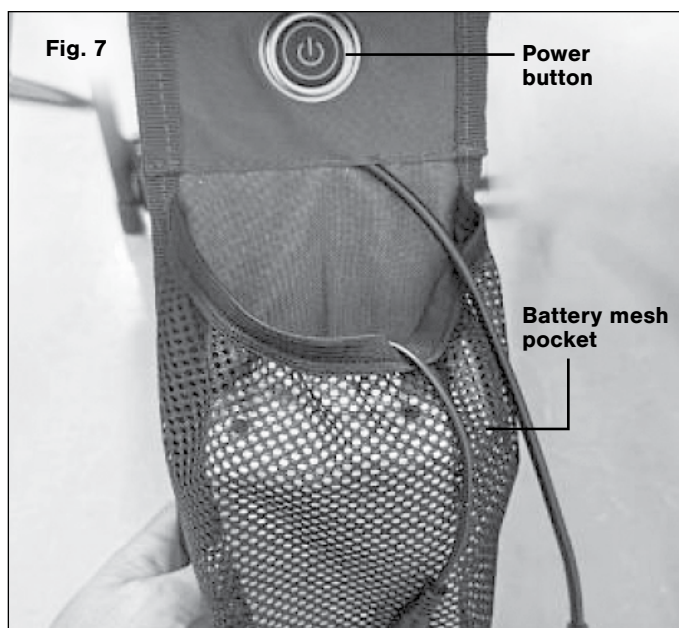

3. The heated chair will turn on automatically when it senses more than 11 lbs (5kg) of weight. It will also turn off automatically when the chair is empty for more than 5 minutes.
4. If the chair turns off completely after being unoccupied, press and hold the power button for 3 seconds to power the chair back on.
5. Change the temperature setting by pressing the power button. See table below for temperature setting details:

Setting	LED Color	Temperature
Low	Green	122°F–131°F
Medium	Blue	131°F–140°F
High	Red	140°F–149°F

Storage

Store in cool, dry environment.

1. To store or transport the chair, step on one side of the chair leg and pull seat inwards towards each other (Fig. 8).



2. Fold chair until fully collapsed.

Service + Support

If your Bliss Hammock® BHC-24VH- reclining chair requires service or maintenance, please call the Bliss Hammocks® customer service at 1-866-255-3708 for assistance.

Model + Serial Numbers

When contacting the company or arranging service from an authorized dealer, you will need to provide the model and serial numbers, which can be found on the decal located on the registration card. Copy these numbers into the space provided below.

Record the following numbers from the housing or handle of your new product:

Model #:

B H C - 2 4 V H -

Serial #:

XZ2600-0450

Federal Communications Commission (FCC)

⚠ WARNING! Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Class B Device:

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different than the one the receiver is connected to.
- Consult the dealer or an experienced radio/TV technician for help.



BLISS HAMMOCKS® PRODUCT WARRANTY POLICY

WHEN WE SAY WE STAND BEHIND OUR PRODUCT, WE MEAN IT!

OUR WARRANTY:

All Bliss Hammocks by All Season Power LLC products are guaranteed against manufacturing defects for 1 full year from the date of delivery of the Product to the original, end-user purchaser. Damage caused by the environment (prolonged exposure to wind, rain, snow, heavy humidity, mold, mildew, rot, rusting, fire etc.), improper use, or improper care and maintenance is not covered.

Normal wear and tear of the product should be expected and does also not fall under the warranty. Misused and mistreated items are also not a manufacturer's defect. Any submitted claims must be accompanied by the proof of purchase and photos of the damaged product in question. Your request will not be reviewed without these items. Claims will be responded to within 5 business days.

 
Please note, if an item has been discontinued, we reserve the right to offer a similar model in its place. Some products are only available while supplies last. If a product is no longer available, it cannot be replaced. Replacement product cannot be offered if you have already obtained a monetary refund from the vendor you purchased from for a defective item. Approved claims may not result in a new product, replacement parts may be sent at our discretion. Submission of a claim does not guarantee an approval.

Warranty excludes clearance/closeout items, non-retail, private sales, and auction website sales.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

PRODUCT REGISTRATION:

Bliss Hammocks strongly encourages you to register your Product. You can register online at blisshammocks.com/pages/product-registration, or by calling our Customer Service Department at **1-866-255-3708**, or by e-mailing us at help@blisshammocks.com. Failure to register your Product will not diminish your warranty rights. However, registering your Product will allow Bliss Hammocks to better serve you with any of your customer service needs.



bliss[®]
hammocks

blisshammocks.com