

SINCE 1908

Solis

HAIR PERFECTION

Type 3805

User manual



CONTENTS

INTENDED USE	3
IMPORTANT SAFETY PRECAUTIONS	3
CONTENTS	7
APPLIANCE DESCRIPTION	8
CONTROL BUTTONS	9
BEFORE FIRST USE	9
INSTALLATION	9
USING THE HAIR DRYER	10
USING THE COLD SHOT BUTTON	10
USING THE HAIR-STYLING NOZZLE	11
CLEANING AND CARE	12
STORAGE	13
TECHNICAL SPECIFICATIONS	13
AVAILABLE ACCESSORIES	13
TROUBLESHOOTING	14
DISPOSAL	15
GUARANTEE	15
SOLIS CUSTOMER SERVICE	15

INTENDED USE

- This appliance is intended to blow dry and style hair.
- Only use the appliance as described in this manual.
- This appliance is intended to be used in household and similar applications such as:
 - staff kitchen areas in shops, offices and other working environments;
 - farm houses;
 - by clients in hotels, motels and other residential type environments;
 - bed and breakfast type environments and not for commercial use.
- This appliance is intended for indoor use only.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazard involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Any use of the appliance other than described in this manual is regarded as misuse and may cause injury, damage to the appliance and void the warranty.

IMPORTANT SAFETY PRECAUTIONS

General safety instructions

WARNING

- Ensure you have fully read and understood the instructions in this user manual before you install or use the appliance. Keep this document for future reference.
- Do not use the appliance if a part is damaged or defective. Replace a damaged or defective appliance immediately.
- If the power cable or the appliance is damaged, return the whole appliance to Solis or to a service agent authorized by Solis for repair.

Safety instructions regarding installation

⚠ WARNING

- Do not drop the appliance and avoid bumping.
- Keep a minimum safety distance of 20 cm between the appliance and walls, curtains or other materials and objects and make sure that the air around the appliance can circulate freely.
- Before using the appliance, check that the voltage stated on the type plate of your appliance matches your mains voltage.
- Do not operate the appliance with a multiway plug adapter.
- Never use the appliance with an external timer switch or remote control.
- Do not leave the power cable hanging over table edges to prevent the appliance from being pulled down. Make sure that neither the appliance nor the power cord or plug comes into contact with hot surfaces, such as hotplates or a radiator, or that they come into contact with the appliance itself.
- Never place the appliance in such a way that it is at risk of falling into water or coming into contact with water resp. other liquids (e.g. in or near a sink).
- Never reach for an appliance that has fallen into water or other liquids:
 - Always wear dry rubber gloves to unplug the appliance before taking it out of the water.
 - Do not start using the appliance again before having it checked for functionality and safety by Solis or a service center authorized by Solis.
- Fully unwind the power cable before use.

Safety instructions regarding use

⚠ WARNING

- Children must be supervised to ensure that they not play with the appliance.
- Do not cover the air vents when the appliance is in use.
- Unplug the appliance when it is not in use or unattended, and before cleaning. We recommend the use of a residual current device (RCD safety switch) to ensure additional protection during the use of electrical appliances. It is advisable to use a safety switch with a rated residual operating current of 30 mA maximum. For professional advice consult an electrician.
- Risk of appliance damage! Never let dust, dirt or lint get into the appliance. The appliance may get damaged.
- Make sure the appliance does not get wet (splashes, etc.). Do not use the appliance with wet hands.
- Do not put down the appliance when it is running.
- When using sprays or atomizers, make sure the appliance is out of range.
- Risk of overheating and product damage! Never cover the air in- and outlets of the appliance. The appliance may overheat and get damaged.
- Risk of burns or damage to the appliance! The air outlet gets hot during normal operation:
 - Do not touch the air outlet.
 - Make sure the power cable never comes in contact with the air outlet.
 - Keep the appliance away from children.

- Always unplug the appliance when not in use.
- Only use the appliance with the provided accessories or accessories recommended by Solis. Incorrect accessories or misuse can lead to damage to the appliance.
- Caution! Never use the appliance near a bathtub, shower, or other reservoirs filled with water or other liquids (see image A).



Safety instructions regarding maintenance

⚠ WARNING

- Unplug the appliance before service and when replacing parts.
- Let the appliance cool down before cleaning.
- Never immerse the appliance in water or other liquids or place it in a dishwasher. In general, the appliance must not come into contact with any liquids.
- Do not use abrasive chemical cleaning agents such as ammonia, acid or acetone when cleaning the appliance. This can damage the appliance.
- Risk of cable breakage! Do not wind the cable tightly around the appliance.
- Risk of electric shock! Switch off and unplug the appliance before cleaning the appliance.

- Do not use any other materials or methods than described in the manual to clean the appliance.
- Repairs to this appliance / including mains cable replacement may only be carried out by authorised service agents. Improper repair work can be a source of danger to appliance users.

CONTENTS

 
Please check the contents of the package:

1x	HAIR PERFECTION
-----------	-----------------

1x	Hair-styling nozzle
-----------	---------------------


▲ APPLIANCE DESCRIPTION

The HAIR PERFECTION is a hairdryer that is used to blow dry and style hair. The accessories can easily be attached to the appliance with a magnetic connector. The cold air function is ideal for setting and to give your hair body and resilience. The hairdryer also features a negative ion generator, which helps to keep your hair moisturised and shiny.

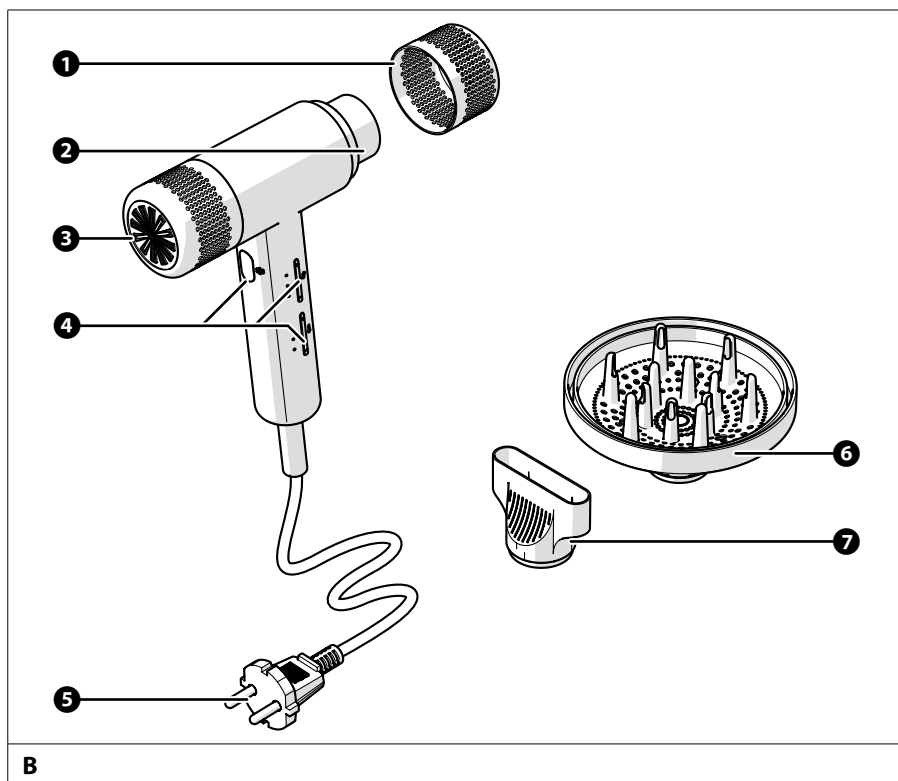

- | | |
|-------------------------------------|--|
| 1 Air filter cover | 5 Power cable |
| 2 Air filter | 6 Softstyler (available as an accessory) |
| 3 Magnetic styling nozzle connector | 7 Hair-styling nozzle |
| 4 Control buttons | |

 ▲ CONTROL BUTTONS

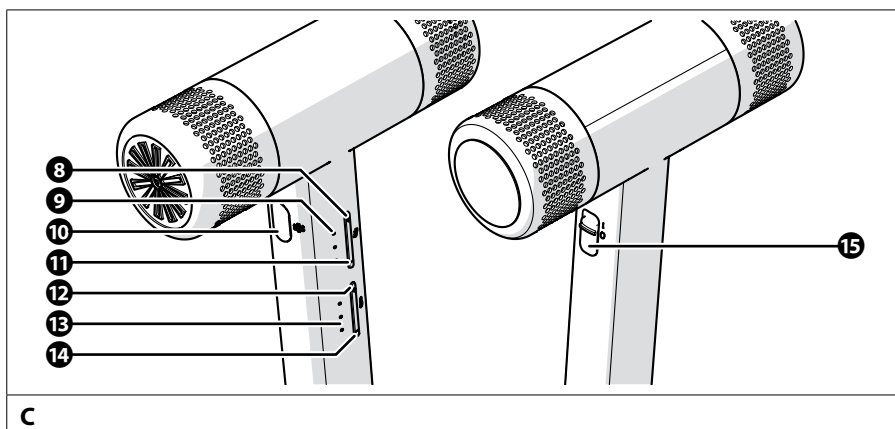

- | | |
|------------------------------|--------------------------------|
| 8 Increase air speed button | 12 Increase temperature button |
| 9 Air speed indicators | 13 Temperature indicators |
| 10 Cold shot button | 14 Decrease temperature button |
| 11 Decrease air speed button | 15 Power switch |

▲ BEFORE FIRST USE

To prepare the appliance before first use:

1. Remove all packaging, stickers and labels.

▲ INSTALLATION

- i** We recommend the installation of a residual current circuit-breaker to provide additional protection when using electrical appliances. It is advisable to use a circuit-breaker with a nominal fault current of maximum 30 mA. Your local electrician can advise you.

To install the appliance:

1. Plug the **power cable 5** into a power outlet.

The appliance is now ready for use.

USING THE HAIR DRYER

To use the hair dryer:

1. Set the **power switch** 15 to / to switch on the appliance.
 The appliance will start at the settings that were used before the appliance was switched off.
2. Press the **increase and decrease air speed buttons** 8 11 to set the desired air speed. The **air speed indicators** 9 show the selected air speed level.
3. Press the **increase and decrease temperature buttons** 12 14 to set the desired temperature. The **temperature indicators** 13 show the selected temperature level.

USING THE COLD SHOT BUTTON

 
Use the cold shot button after drying and/or brushing your hair. To use the cold shot button:

1. Press and hold the cold air button 10, to generate a flow of cold air. When you release the cold air button 10, the heating switches on again.

▲ USING THE HAIR-STYLING NOZZLE


To use the hair-styling nozzle:

1. Set the **power switch 15** to 0.
2. Let the appliance cool down.

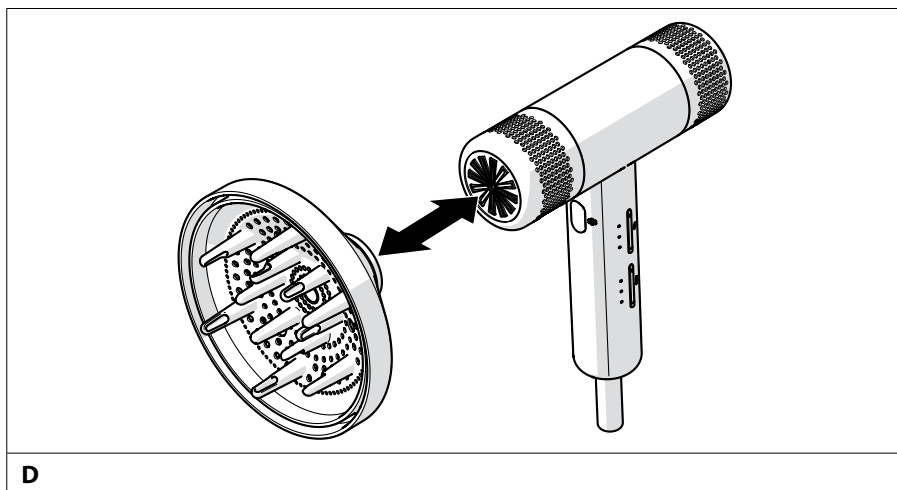

3. Place the **hair-styling nozzle 7** or the **softstyler 6** onto the front of the appliance (see image D). The soft styler **6** is available as an accessory.

 ▲ CLEANING AND CARE

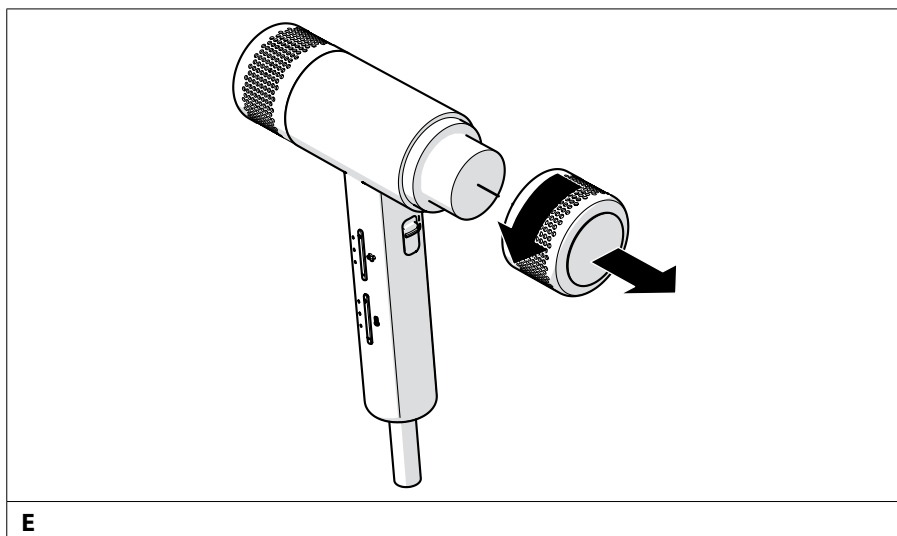

We recommend cleaning the appliance regularly. To clean the appliance:

1. Switch off the appliance.
2. Let the appliance cool down.
3. Press and hold the **cold shot button** 10 for 5 seconds to start the self-cleaning process of the appliance.

The self-cleaning process takes 10 seconds. During this process the **air speed indicators** 9 and the **temperature indicators** 13 blink.

The self-clean process is ready when the **air speed indicators** 9 and the **temperature indicators** 13 stop blinking and the appliance stops blowing air.

4. Unplug the **power cable** 5 from the power outlet.
 5. Clean the appliance with a slightly damp cloth.
 6. Dry the appliance with a soft, dry cloth.
 7. Rotate the **air filter cover** 1 counterclockwise and remove it from the appliance (see image E).
 8. Clean the **air filter cover** 1 and the **air filter** 2 with a brush, or dry cloth.
- ▲ Never replace the air filter cover when it is wet under any circumstances.

 Never use the appliance without the air filter cover attached.

9. Place the **air filter cover**  back and rotate it clockwise to install it on the appliance.

STORAGE

1. Store the appliance in a dry and enclosed space.

TECHNICAL SPECIFICATIONS

Model-No.	Type 3805
Voltage / frequency	220 – 240 V~ / 50 – 60 Hz
Output	1600 W
Dimensions (W × D × H)	15 × 5 × 18 cm
Weight	approx. 290 g (without power cable)
Negative ion concentration	10 million / cm ³

Technical changes reserved.

AVAILABLE ACCESSORIES

Article no.	Article
967.67	Softstyler

TROUBLESHOOTING

Problem	Possible cause	Solution
The appliance does not function.	The power connection is not working.	Make sure the power cable is connected to a working power source.
	The appliance is not switched on.	Make sure that the on/off switch is set to /.
	The appliance is damaged.	If the appliance does not switch on when the on/off switch is pressed, the appliance is damaged. Contact Solis or a Solis authorized service center.
The appliance has an unusual smell during use.	There is dust, dirt and/or lint inside the appliance.	Clean the appliance (see chapter <i>Cleaning and care</i>). If the unusual smell does not disappear the appliance is damaged. Contact Solis or a Solis authorized service center.
The airflow is weaker than normal.	The air inlet is blocked.	Clean the air filter cover and the air filter.
The heating element of the appliance becomes red and/or the temperature of the air flow is unusual high.	The appliance is damaged.	Contact Solis or a Solis authorized service center.

▲ DISPOSAL



This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

▲ GUARANTEE

2 year guarantee respectively 5 years warranty with product registration.

i Only valid with a till receipt.

We provide a guarantee for this appliance, if the defect has demonstrably arisen as a result of faults in the material or construction, and has arisen despite proper handling and care. Glass breakage is not covered by the guarantee. The guarantee starts from the date of sale, as noted on the sales receipt, which must be enclosed with the appliance. For commercial use, the guarantee lasts for 12 months. The detailed guarantee conditions are available at www.solis.com.

▲ SOLIS CUSTOMER SERVICE



It is always worth calling us before sending in the article, as malfunctions can often be easily solved by the appropriate tip or trick from our experts. For country specific contact information, scan the QR code, follow the weblink or call us.

S I N C E 1 9 0 8

Solis

Solis of Switzerland Ltd

Solis-House • CH-8152 Glattbrugg-Zürich • Switzerland
www.solis.ch • www.solis.com

Please visit us at

www.solis.com

Version 06/2024