

SINCE 1908

Solis

AIRVOLUTION 280SE

Type 3809

User manual



CONTENTS

INTENDED USE	3
IMPORTANT SAFETY PRECAUTIONS	3
CONTENTS	7
APPLIANCE DESCRIPTION	7
BEFORE FIRST USE	8
INSTALLATION	8
USING THE HAIR DRYER	8
USING THE AUTO CYCLE FUNCTION	9
LOCKING THE SETTINGS	9
USING THE HAIR-STYLING NOZZLE	9
CLEANING AND CARE	10
STORAGE	10
TECHNICAL SPECIFICATIONS	11
TROUBLESHOOTING	12
DISPOSAL	13
2 YEAR GUARANTEE	13
SOLIS CUSTOMER SERVICE	13

INTENDED USE

- This appliance is intended to blow dry and style hair.
- Only use the appliance as described in this manual.
- This appliance is intended to be used in household and similar applications such as:
 - staff kitchen areas in shops, offices and other working environments;
 - farm houses;
 - by clients in hotels, motels and other residential type environments;
 - bed and breakfast type environments and not for commercial use.
- This appliance is intended for indoor use only.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- This appliance is not intended to dry clothes or other items.
- Any use of the appliance other than described in this manual is regarded as misuse and may cause injury, damage to the appliance and void the warranty.

IMPORTANT SAFETY PRECAUTIONS

General safety instructions

WARNING

- Ensure you have fully read and understood the instructions in this user manual before you install or use the appliance. Keep this document for future reference.
- Do not use the appliance if a part is damaged or defective. Replace a damaged or defective appliance immediately.
- If the power cable is damaged, it must be replaced by the manufacturer, the service agent or similar qualified personnel in order to avoid a hazard.

Safety instructions regarding installation

WARNING

- Do not drop the appliance and avoid bumping.
- Keep a minimum safety distance of 20 cm between the appliance and walls, curtains or other materials and objects and make sure that the air around the appliance can circulate freely.
- Do not place the appliance in direct sunlight.
- Before using the appliance, check that the voltage stated on the type plate of your appliance matches your mains voltage. Do not operate the appliance with a multiway plug adapter.
- Never use the appliance with an external timer switch or remote control.
- Do not leave the power cable hanging over table edges to prevent the appliance from being pulled down. Make sure that neither the appliance nor the power cord or plug comes into contact with hot surfaces, such as hotplates or a radiator, or that they come into contact with the appliance itself.
- Never place the appliance in such a way that it is at risk of falling into water or coming into contact with water resp. other liquids (e.g. in or near a sink).
- Never reach for an appliance that has fallen into water or other liquids:
 - Always wear dry rubber gloves to unplug the appliance before taking it out of the water.
 - Do not start using the appliance again before having it checked for functionality and safety by Solis or a service center authorized by Solis.

- Fully unwind the power cable before use.
- We recommend the installation of a residual current circuit-breaker to provide additional protection when using electrical appliances. It is advisable to use a circuit-breaker with a nominal fault current of maximum 30 mA. Your local electrician can advise you.

Safety instructions regarding use

⚠ WARNING

- Children must be supervised to ensure that they not play with the appliance.
- Do not operate the appliance with wet hands.
- Only use the appliance with the provided accessories or accessories recommended by Solis. Incorrect accessories or misuse can lead to damage to the appliance.
- Do not cover the air inlets and outlets when the appliance is in use.
- Unplug the appliance when it is not in use or unattended.
- Risk of burns or damage to the appliance! The air outlet gets hot during normal operation:
 - Do not touch the air outlet.
 - Make sure the power cable never comes in contact with the air outlet.
 - Never place the appliance on any surface while the appliance is switched on. The hot air that is blown out may cause heat damage or ignite flammable materials.

- Caution! Never use the appliance near a bathtub, shower, or other reservoirs filled with water or other liquids (see image A).



A

- When using sprays or atomizers, make sure the appliance is out of range.
- Risk of appliance damage! Never let dust, dirt or lint get into the appliance. The appliance may get damaged.
- Never use the appliance without the air filter cover attached.
- Never wrap the power cord tightly around the appliance to avoid damage to the power cord.

Safety instructions regarding maintenance

⚠ WARNING

- Unplug the appliance before service and when replacing parts.
- Let the appliance cool down before cleaning.
- Never immerse the appliance in water.
- Do not use abrasive chemical cleaning agents such as ammonia, acid or acetone when cleaning the appliance. This can damage the appliance.

▲ CONTENTS


Please check the contents of the package:

1× AIRVOLUTION 280SE

1× Flat styling nozzle

▲ APPLIANCE DESCRIPTION

This appliance is a hairdryer that is used to dry and style hair.

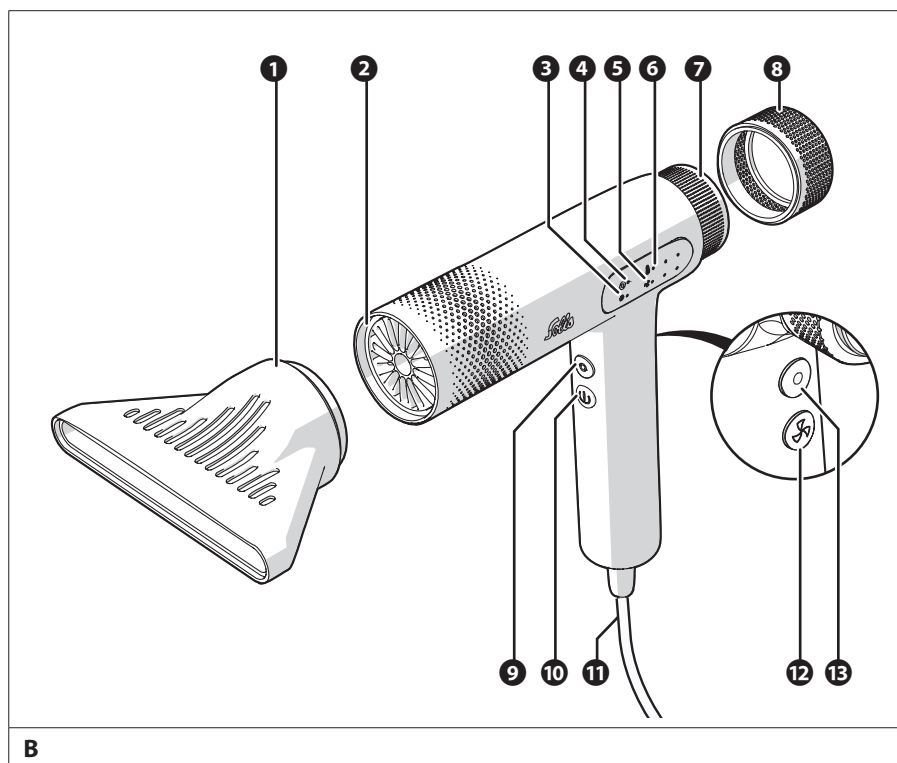

B

- | | |
|-------------------------------------|----------------------------|
| 1 Flat styling nozzle | 8 Air filter cover |
| 2 Magnetic styling nozzle connector | 9 Auto cycle / lock button |
| 3 Lock LED | 10 Power button |
| 4 Auto cycle LED | 11 Power cable |
| 5 Air speed LEDs | 12 Air speed button |
| 6 Temperature LEDs | 13 Temperature button |
| 7 Air filter | |

▲ BEFORE FIRST USE

To prepare the appliance before first use:

1. Remove all packaging, stickers and labels.

▲ INSTALLATION

- i** We recommend the installation of a residual current circuit-breaker to provide additional protection when using electrical appliances. It is advisable to use a circuit-breaker with a nominal fault current of maximum 30 mA. Your local electrician can advise you.

To install the appliance:

1. Plug the **power cable** **11** into a power outlet.

The appliance is now ready for use.

▲ USING THE HAIR DRYER

To use the hair dryer:

1. Press and hold the **power button** **10** for one second to switch on the appliance.

- i** When the appliance is switched on for the very first time, the appliance starts up in the default mode (55°C and extra fast speed).

- i** After the first time, the appliance starts at the settings that were used before the appliance was switched off.

2. Press the **air speed button** **12** repeatedly to cycle through the air speed settings.

- i** The **air speed LEDs** **5** show the current air speed level.

3. Press the **temperature button** **13** repeatedly to cycle through the temperature settings.

- i** The **temperature LEDs** **6** show the current temperature level.

4. Press and hold the **power button** **10** for one second to switch off the appliance.

▲ USING THE AUTO CYCLE FUNCTION

Use the auto cycle function to automatically alternate between hot and cold air. To use the auto cycle function:

1. Press the **auto cycle / lock button** 9 to switch on the auto cycle function.
 - i The **auto cycle LED** 4 lights up.
 - i The **temperature LEDs** 6 alternately light up and dim.
2. Adjust the temperature and air speed during the auto cycle with the **temperature button** 13 and **air speed button** 12.
3. Press the **auto cycle / lock button** 9 to switch off the auto cycle function.
 - i The **auto cycle LED** 4 dims.

▲ LOCKING THE SETTINGS

1. Double press the **auto cycle / lock button** 9 to lock all buttons (except the unlock function) of the appliance.
 - i The **lock LED** 3 lights up.
 - i When the appliance is locked, the **power button** 10 is disabled.
2. Double press the **auto cycle / lock button** 9 to unlock the appliance.
 - i The **lock LED** 3 dims.

▲ USING THE HAIR-STYLING NOZZLE

To use the hair-styling nozzle:

1. Press and hold the **power button** 10 for one second to switch off the appliance.
2. Let the appliance cool down.
3. Place the **flat styling nozzle** 1 onto the **magnetic styling nozzle connector** 2.

▲ **CLEANING AND CARE**

We recommend cleaning the appliance regularly. To clean the appliance:

1. Switch off the appliance.
2. Let the appliance cool down.
3. Press and hold the **auto cycle / lock button** ⑨ and **power button** ⑩ simultaneously for 5 seconds to start the self-cleaning process of the appliance.

The self-cleaning process takes 10 seconds. During this process, the appliance blows cold air out of the air inlet and the **air speed LEDs** ⑤ blink.

During the cleaning, all buttons are disabled.

After the cleaning is complete, the appliance switches off.

4. Unplug the **power cable** ⑪ from the power outlet.
5. Clean the appliance with a slightly damp cloth.
6. Dry the appliance with a soft, dry cloth.
7. Rotate the **air filter cover** ⑧ counterclockwise and remove the cover from the appliance.
8. Clean the **air filter** ⑦ carefully with a soft brush.

❗ Never use the appliance without the air filter cover attached.

9. Place the **air filter cover** ⑧ back and rotate it clockwise to install it on the appliance.

▲ **STORAGE**

1. Store the appliance in a dry and enclosed space.

TECHNICAL SPECIFICATIONS

Model-No.	Type 3809
Voltage / frequency	220 – 240 V~ / 50 – 60 Hz
Output	1600 W
Dimensions (W × D × H)	4.49 × 16.85 × 21.55 cm
Weight	300 g (without power cable)
Negative ion concentration	20 million/cm ³
Power consumption in off mode	0.24 W
Temperature settings	Cold 55 °C 65 °C 75 °C
Air speed settings	Medium Fast Extra fast

Technical changes reserved.

▲ TROUBLESHOOTING

Problem	Possible cause	Solution
The appliance does not function.	The power connection is not working.	Make sure the power cable is connected to a working power source.
	The appliance is not switched on.	Press and hold the power button 10 for one second to switch on the appliance.
	The appliance is damaged.	Press and hold the power button 10 for one second to switch on the appliance. If the appliance does not switch on, the appliance is damaged. Contact Solis or a Solis authorized service center.
The appliance is switched on and the buttons do not function.	The appliance is in lock mode.	Double press the auto cycle / lock button 9 to unlock the appliance.
The appliance has an unusual smell during use.	There is dust, dirt and/or lint inside the appliance.	Clean the appliance (see chapter <i>Cleaning and care</i>). If the unusual smell does not disappear the appliance is damaged. Contact Solis or a Solis authorized service center.
The airflow is weaker than normal.	The air inlet is blocked.	Clean the air filter cover and the air filter.
The heating element of the appliance becomes red and/or the temperature of the air flow is unusual high.	The appliance is damaged.	Contact Solis or a Solis authorized service center.

▲ DISPOSAL



This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

▲ 2 YEAR GUARANTEE

 Only valid with a till receipt.

We provide a guarantee for this appliance, if the defect has demonstrably arisen as a result of faults in the material or construction, and has arisen despite proper handling and care. Glass breakage is not covered by the guarantee. The guarantee starts from the date of sale, as noted on the sales receipt, which must be enclosed with the appliance. For commercial use, the guarantee lasts for 12 months. The detailed guarantee conditions are available at www.solis.com.

▲ SOLIS CUSTOMER SERVICE



It is always worth calling us before sending in the article, as malfunctions can often be easily solved by the appropriate tip or trick from our experts. For country specific contact information, scan the QR code, follow the weblink or call us.

Solis of Switzerland Ltd

Solis-House • CH-8152 Glattbrugg • Switzerland
www.solis.ch • www.solis.com

S I N C E 1 9 0 8

Solis

Please visit us at

www.solis.com