

SINCE 1908

Solis

ECO BOIL KETTLE

Type 5520

User manual



CONTENTS

INTENDED USE	3
IMPORTANT SAFETY PRECAUTIONS	3
CONTENTS	6
APPLIANCE DESCRIPTION	7
INSTALLATION	8
BEFORE FIRST USE	8
BOILING WATER	8
CLEANING AND CARE	9
STORAGE	9
TECHNICAL SPECIFICATIONS	9
TROUBLESHOOTING	10
DISPOSAL	11
2 YEAR GUARANTEE	11
SOLIS CUSTOMER SERVICE	11

INTENDED USE

- This appliance is intended to heat and boil water.
- Only use the appliance as described in this manual.
- This appliance is intended to be used in household and similar applications such as:
 - staff kitchen areas in shops, offices and other working environments;
 - farm houses;
 - by clients in hotels, motels and other residential type environments;
 - bed and breakfast type environments and not for commercial use.
- This appliance is intended for indoor use only.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazard involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- This appliance is not intended to be used above 2000 meters sea level.
- Any use of the appliance other than described in this manual is regarded as misuse and may cause injury, damage to the appliance and void the warranty.

IMPORTANT SAFETY PRECAUTIONS

General safety instructions

WARNING

- Ensure you have fully read and understood the instructions in this user manual before you install or use the appliance. Keep this document for future reference.
- Do not use the appliance if a part is damaged or defective. Replace a damaged or defective appliance immediately.
- If the power cord is damaged, it must be replaced by Solis, a service center authorized by Solis or similarly qualified persons in order to avoid a hazard.
- Do not disconnect the appliance from the mains by pulling on the cable. Always grasp the power plug and pull.
- Children must be supervised to ensure that they not play with the appliance.

Safety instructions regarding installation

⚠ WARNING

- Do not drop the appliance and avoid bumping.
- Place the appliance on a stable, flat, heat and moisture resistant surface.
- Do not place the appliance in direct sunlight.
- Do not place the appliance directly under a power outlet.
- Keep the appliance away from heat-emitting appliances or heat sources.
- Keep a minimum safety distance of 10 cm between the appliance and walls, curtains or other materials and objects and make sure that the air around the appliance can circulate freely.
- Make sure that the space above the kettle is clear, as escaping steam could damage materials above it.
- Before using the appliance, check that the voltage stated on the type plate of your appliance matches your mains voltage. Do not operate the appliance with a multiway plug adapter.
- Never use the appliance with an external timer switch or remote control.
- Do not leave the power cable hanging over table edges to prevent the appliance from being pulled down. Make sure that neither the appliance nor the power cord or plug comes into contact with hot surfaces, such as hotplates or a radiator, or that they come into contact with the appliance itself.

- Never reach for an appliance that has fallen into water or other liquids. Always use dry rubber gloves to pull the plug before taking it out. Do not start using it again before having it checked for functionality and safety by Solis or a service centre authorized by Solis.
- Switch off and unplug the appliance before moving the appliance.
- Fully unwind the power cable before use.

Safety instructions regarding use

WARNING

- Children must be supervised to ensure that they not play with the appliance.
- Never switch on the appliance when it is empty. This can damage the appliance.
- Do not fill the appliance with more than 1.7 litres of water. Boiling water can overflow out of the appliance when the appliance is too full.
- Only use the appliance with the provided accessories or accessories recommended by Solis. Incorrect accessories or misuse can lead to damage to the appliance.
- Never plug or unplug the power plug with wet hands to avoid electric shock.
- Risk of skin burns. Parts of the appliance may get hot during or shortly after use. If the appliance is not cooled down, only touch the handle.
- Do not remove the lid while the water in the appliance is boiling.
- Be careful when opening the lid. Hot water may splash out or hot steam may escape.

- Do not move the appliance when in use.
- Risk of burns or scalding. Move the kettle and pour hot water carefully. Never tilt the kettle too quickly to prevent spills.
- Avoid spillage on the power connector.
- Unplug the appliance when it is not in use.
- Only use the appliance to heat water and not any other liquids.

Safety instructions regarding maintenance

⚠ WARNING

- Disconnect the appliance from the power supply before cleaning.
- Always cool down the appliance before cleaning.
- Never immerse the appliance in water or place it in a dishwasher.
- Do not use abrasive chemical cleaning agents such as ammonia, acid or acetone when cleaning the appliance. This can damage the appliance.
- Do not try to open or repair the appliance. It must be serviced by Solis or by a service agent authorized by Solis.

▲ CONTENTS


Please check the contents of the package:

1x ECO BOIL KETTLE

1x Power base

▲ APPLIANCE DESCRIPTION

The ECO BOIL KETTLE is a water kettle intended to heat and boil water.

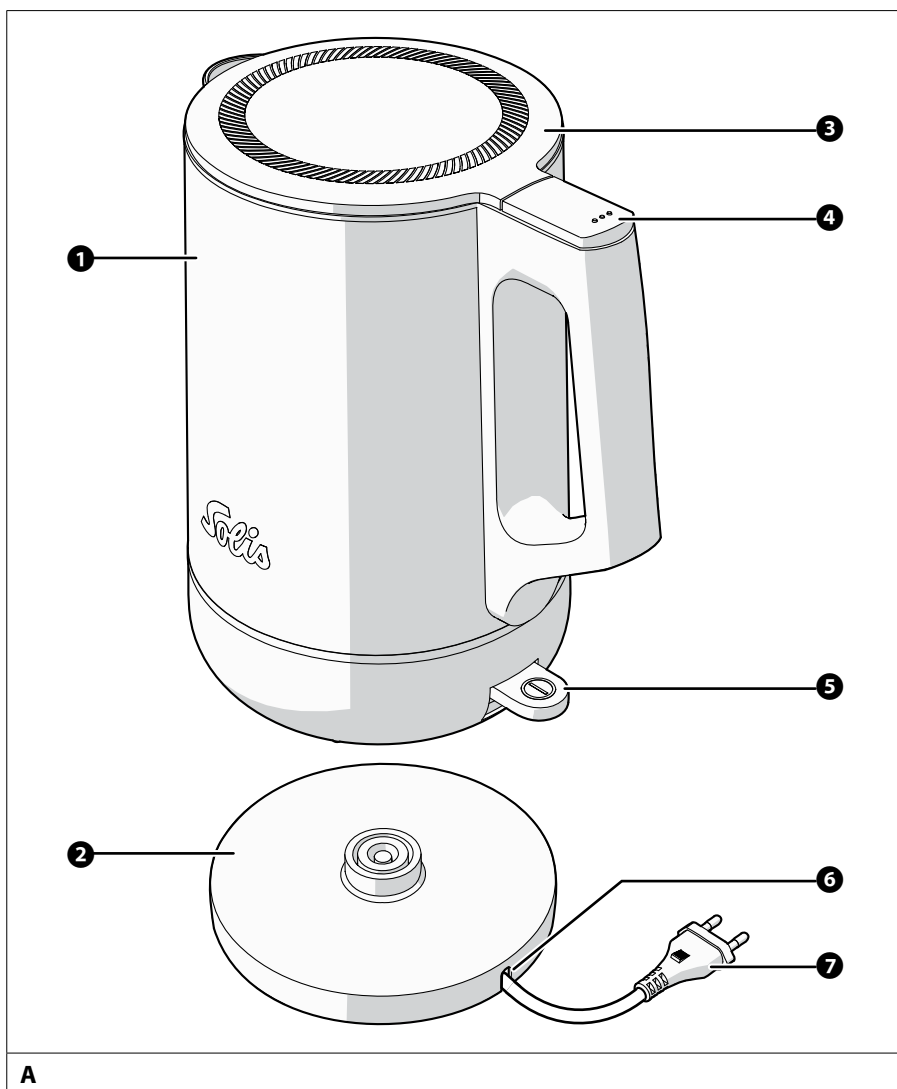

A

- 1 Kettle
- 2 Power base
- 3 Lid
- 4 Lid button

- 5 Power button
- 6 Power cable recess
- 7 Power cable

▲ INSTALLATION

To install the appliance:

1. Remove the appliance from the packaging and remove all labels and stickers (except the type plate).
2. Unwind the **power cable** 7.
3. Place the **power base** 2 on a stable and flat as well as a heat and moisture resistant surface. Make sure the **power cable** 7 runs through the **power cable recess** 6.
4. Plug the **power cable** 7 into a power outlet.
5. Place the **kettle** 1 onto the **power base** 2.

The appliance is now ready for use.

▲ BEFORE FIRST USE

To clean the appliance before first use:

1. Boil two full **kettles** 1 (max 1.7 liters) of water (see chapter *Boiling water*).
2. Discard boiled water.

▲ BOILING WATER

1. Press the **lid button** 4 to open the lid.
2. Fill the **kettle** 1 with 0.2 -1.7 liter of water
3. Close the **lid** 3.
4. Place the **kettle** 1 onto the **power base** 2.
5. Press the **power button** 5 down to start heating the water.

The indicator light in the **power button** 5 lights up.

When the water is boiled, the kettle automatically switches off and the **power button** 5 returns to the off position. The indicator light inside the **power button** 5 switches off.

- i** When you press the **lid button** 4, the **lid** 3 opens. It can be opened further to almost a 90° angle by gently pushing it back manually, e.g. for cleaning.

▲ CLEANING AND CARE

To clean the appliance:

1. Switch off and unplug the appliance.
2. Let the appliance cool down.
3. Clean the outside of the appliance with a slightly damp cloth.
4. Rinse the inside of the **kettle 1**.

To maintain the good working condition of the kettle, it is necessary to regularly remove scale buildup.

We recommend removing limescale regularly. The frequency of decalcification depends on the limescale content of your water. To remove limescale:

1. Fill the **kettle 1** with 1 litre of cold water and bring it to the boil (see chapter *Boiling water*).
2. When the water is hot, add 0.5 litres of white wine vinegar and allow the descaling solution to work until the limescale has dissolved.
3. Empty the **kettle 1**.
4. Boil two full **kettles 1** (max. 1.7 liters) of water to remove the remaining vinegar from the **kettle 1**.
5. Discard boiled water.

▲ STORAGE

Store the appliance in a dry and enclosed space.

▲ TECHNICAL SPECIFICATIONS

Model-No.	Type 5520
Voltage / frequency	220 – 240 V~ / 50 – 60 Hz
Output	1800 W
Power consumption in off mode	0 W
Capacity	1.7 L
Dimensions (W × D × H)	23 × 16 × 26 cm (W incl. handle × D × H)
Weight	1.12 kg

Technical changes reserved.

▲ TROUBLESHOOTING

Problem	Possible cause	Solution
The appliance does not function.	The power connection is not working.	Make sure the power cable is connected to a working power source.
	The appliance is not switched on.	Press the power button 5 down to start heating the water.
	The appliance is damaged.	If the appliance cannot be switched on by pressing the power button , it is defective. Contact Solis or a Solis authorized service center.
The appliance switched off while the boiling process is not finished.	The boil-dry protection switched off the appliance because it ran without or with too little water.	Add cold water (max. 1.7 liters) to the kettle 1 and wait for approximately 2 minutes for the dry boil protection to reset. Resume using the appliance.
	There is scale buildup in the kettle.	Remove the scale buildup (see chapter <i>Cleaning and care</i>).

▲ DISPOSAL



This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

▲ 2 YEAR GUARANTEE

 Only valid with a till receipt.

We provide a guarantee for this appliance, if the defect has demonstrably arisen as a result of faults in the material or construction, and has arisen despite proper handling and care. Glass breakage is not covered by the guarantee. The guarantee starts from the date of sale, as noted on the sales receipt, which must be enclosed with the appliance. For commercial use, the guarantee lasts for 12 months. The detailed guarantee conditions are available at www.solis.com.

▲ SOLIS CUSTOMER SERVICE



It is always worth calling us before sending in the article, as malfunctions can often be easily solved by the appropriate tip or trick from our experts. For country specific contact information, scan the QR code, follow the weblink or call us.

Solis of Switzerland Ltd

Solis-House • CH-8152 Glattbrugg • Switzerland
www.solis.ch • www.solis.com

S I N C E 1 9 0 8

Solis

Please visit us at

www.solis.com