

SINCE 1908

Solis

VAC STICK

Type 5707

User manual



CONTENTS

INTENDED USE	3
IMPORTANT SAFETY PRECAUTIONS	3
CONTENTS	6
APPLIANCE DESCRIPTION	6
CHARGING THE APPLIANCE	8
VACUUMING OF BAGS	8
VACUUMING OF WINE BOTTLES	11
CLEANING AND CARE	12
STORAGE	12
TECHNICAL SPECIFICATIONS	12
TROUBLESHOOTING	13
DISPOSAL	15
2 YEAR GUARANTEE	15
SOLIS CUSTOMER SERVICE	15

▲ INTENDED USE

- This appliance is intended to vacuum pack various types of foods in bags and different types of containers, to preserve the food longer.
- Only use the appliance as described in this manual.
- This appliance is intended to be used in household and similar applications such as:
 - staff kitchen areas in shops, offices and other working environments;
 - farm houses;
 - by clients in hotels, motels and other residential type environments;
 - bed and breakfast type environments and not for commercial use.
- This appliance is intended for indoor use only.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Any use of the appliance other than described in this manual is regarded as misuse and may cause injury, damage to the appliance and void the warranty.

▲ IMPORTANT SAFETY PRECAUTIONS

General safety instructions

▲ WARNING

- Ensure you have fully read and understood the instructions in this user manual before you install or use the appliance. Keep this document for future reference.
- Do not use the appliance if a part is damaged or defective. Replace a damaged or defective appliance immediately.
- Only charge the device with a flawless and undamaged USB-C charging cable.

Safety instructions regarding installation

▲ WARNING

- Keep the original packaging in a safe place so that you may use it in the event that transportation or shipping of the product becomes necessary.

- Do not drop the appliance and avoid bumping.
- Keep the appliance away from hot gas, hot ovens and other heat-emitting appliances or heat sources. Never use the appliance on a hot or wet surface. Never place the appliance near moisture, heat and naked flames. Keep the appliance away from moving parts or appliances.
- Keep a minimum safety distance of 10 cm between the appliance and walls, curtains or other materials and objects and make sure that the air around the appliance can circulate freely.
- Before charging the appliance, check that the voltage indicated on the appliance matches the voltage of the power source.
- Do not place the appliance in direct sunlight.
- Only charge the appliance with a power source with the following specifications: 5 VDC, 2 A.
- Never charge the appliance for more than 24 hours.
- Never use the appliance with an external timer switch or remote control.
- Do not leave the charging cable hanging over table edges to prevent the appliance from being pulled down. Make sure that neither the appliance nor the power cord or plug comes into contact with hot surfaces, such as hotplates or a radiator, or that they come into contact with the appliance itself.
- Never place the appliance in such a way that it is at risk of falling into water or coming into contact with water resp. other liquids (e.g. in or near a sink).

- Never reach for an appliance that has fallen into water or other liquids:
 - Always wear dry rubber gloves to unplug the appliance from the power source before taking it out of the water.
 - Do not start using the appliance again before having it checked for functionality and safety by Solis or a service center authorized by Solis.

Safety instructions regarding use

⚠ WARNING

- Children must be supervised to ensure that they not play with the appliance.
- Do not operate the appliance with wet hands.
- Do not use the appliance in an area where gasoline, paint or similar flammable liquids are used or stocked.
- Only use the appliance with the provided accessories or accessories recommended by Solis. Incorrect accessories or misuse can lead to damage to the appliance.

Safety instructions regarding maintenance

⚠ WARNING

- Disconnect the appliance from the power source before service and when replacing parts.
- Let the appliance cool down before cleaning.
- Never immerse the appliance in water or place it in a dishwasher.
- Do not try to open or repair the appliance. It must be serviced by a qualified person.

- Do not use abrasive chemical cleaning agents such as ammonia, acid or acetone when cleaning the appliance. This can damage the appliance.

CONTENTS


Please check the contents of the package:

1x	VAC STICK
1x	USB-C charging cable
3x	Large vacuum bag
3x	Small vacuum bag
1x	Sealing tool for vacuum bags
1x	Vacuum hose*
1x	Wine bottle stopper*
1x	Small glass container*
1x	Medium glass container*
1x	Large glass container*

*Only included in the Starter Set.

APPLIANCE DESCRIPTION

This is an appliance that is used to vacuum seal various foods in bags and other containers. The delivery includes the appliance, a USB-C charging cable, resealable bags and a sealing tool for the bags. The starter set also contains a wine bottle stopper and a number of glass containers.

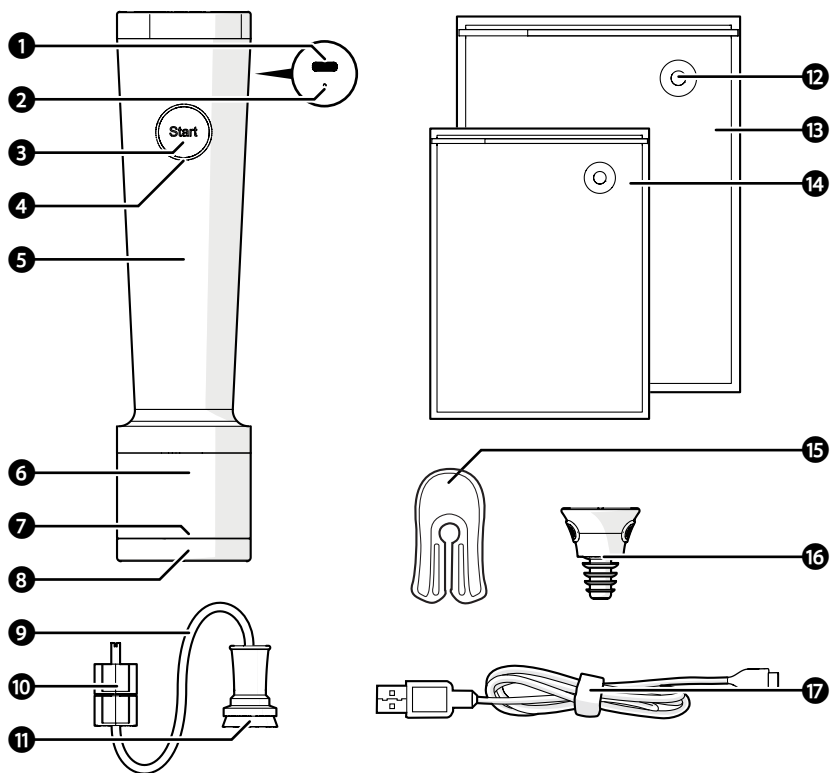

A

- | | | | |
|---|--------------------|---|----------------------|
| ① | Charging socket | ⑩ | Connection adapter* |
| ② | Charging indicator | ⑪ | Rubber knob* |
| ③ | START button | ⑫ | Valve |
| ④ | LED ring | ⑬ | Large vacuum bag |
| ⑤ | VAC STICK | ⑭ | Small vacuum bag |
| ⑥ | Liquid separator | ⑮ | Closure tool |
| ⑦ | Seal | ⑯ | Wine bottle stopper* |
| ⑧ | Lid | ⑰ | USB-C charging cable |
| ⑨ | Vacuum hose* | | |

*Only included in the Starter Set.

▲ CHARGING THE APPLIANCE

When switched on, the **charging indicator ②** blinks fast to indicate that the battery is (almost) empty.

To charge the appliance:

1. Plug the charger (not included) into a power outlet.
2. Place the **VAC STICK ⑤** on a stable surface and make sure it cannot roll off.
3. Plug the **USB-C charging cable ⑰** into the USB socket of the charger (not included) or into a USB socket of another power source.
4. Connect the **USB-C charging cable ⑰** to the **charging socket ①**.

i It is recommended that users do not operate the suction function while the device is charging.

The appliance is charging and the **charging indicator ②** blinks slowly.

The **charging indicator ②** lights up permanently when the battery is fully charged.

The appliance is now ready for use.


▲ VACUUMING OF BAGS

To vacuum seal bags:

1. Remove the **lid ⑧** from the **vacuum adapter ⑦**.
2. Open the **bag ⑬ ⑭**.
3. Fill the **bag ⑬ ⑭** with food of your choice.

i Leave at least 2 centimeters of free space below the **valve area ⑫**.

4. Close the **bag ⑬ ⑭**. Make sure the **bag ⑬ ⑭** is closed air tight. The bag can be closed quickly and easily using the **closure tool ⑮** included in the delivery. To do this, place the **closure tool ⑮** on one end of the closure and then move it along the closure to the other end.

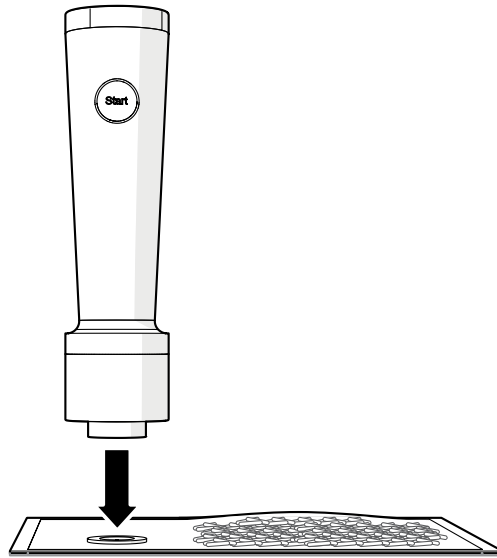

B

5. Place the **seal 7** of the **VAC STICK 5** on the **valve 12** of the **bag 13 14** (see image B).
6. Press the **START button 3**.

The **VAC STICK 5** switches on and the **LED ring 4** lights up.

7. Press the **START button 3**.

The **VAC STICK 5** starts vacuuming the **bag 13 14** and the **LED ring 4** blinks.

The **VAC STICK 5** automatically stops when the **bag 13 14** is vacuumed. The **LED ring 4** lights up permanently.

8. Remove the **VAC STICK 5** from the **valve 12**.
9. Press and hold the **START button 3** for 2 seconds to switch off the **VAC STICK 5**.

The appliance switches off automatically 3 minutes after the last use.


10. If some moisture is collected by the appliance, rotate the **liquid seperator 6** counterclockwise to discard any liquid inside and to clean the **liquid seperator 6**. Place back the **liquid seperator 6** on the **VAC STICK 5** and rotate the **liquid seperator 6** clockwise to fasten.

To open the **vacuum bags 13 14**, simply pull the sides of the bags apart at the closure.

- i** Additional reusable vacuum bags in various sizes are available directly from SOLIS or from specialist retailers.
- i** The VAC STICK can also be used to vacuum seal all SOLIS vacuum containers by simply placing the VAC STICK on the container or by connecting the VAC STICK to the container using a vacuum hose. The vacuum hose that may be required is included in the delivery scope of the SOLIS containers. The VAC STICK is also compatible with vacuum containers from some other brands.

▲ VACUUMING OF WINE BOTTLES

To vacuum seal wine bottles:

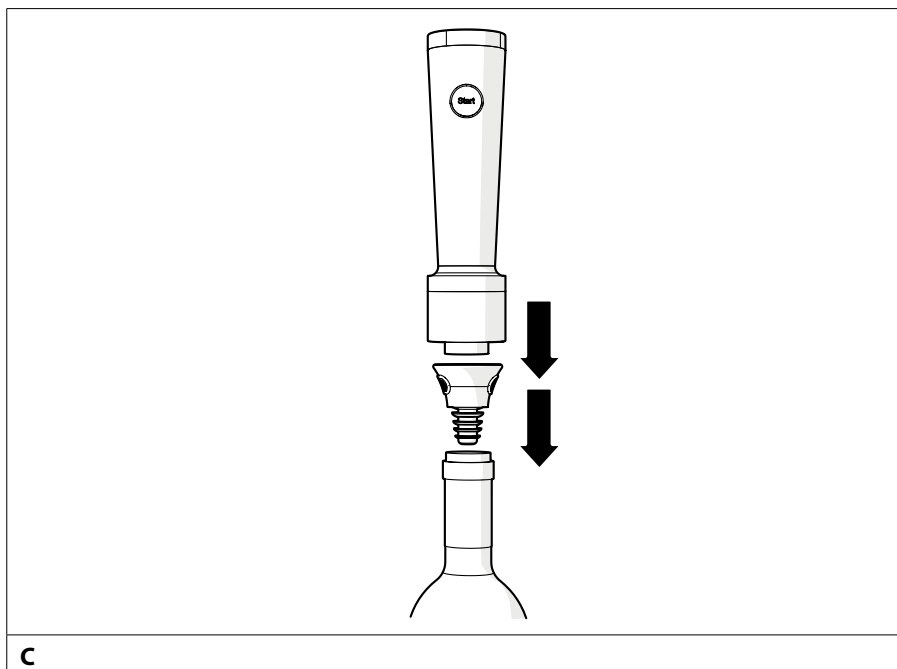

1. Press the **wine bottle stopper 16** as far as possible into the wine bottle (see image C).
2. Place the **VAC STICK 5** on top of the **wine bottle stopper 16**.
3. Press the **START button 3**.

The **VAC STICK 5** switches on and the **LED ring 4** lights up.

4. Press the **START button 3**.

The **VAC STICK 5** starts vacuuming the wine bottle and the **LED ring 4** blinks.

The **VAC STICK 5** automatically stops when the wine bottle is vacuumed. The **LED ring 4** lights up permanently.

5. Remove the **VAC STICK 5** from the **wine bottle stopper 16**.
6. Press and hold the **START button 3** for 2 seconds to switch off the **VAC STICK 5**.

The appliance switches off automatically 3 minutes after the last use.

To reopen the wine bottle, press the grey button on top of the **wine bottle stopper 16** from two sides and the vacuum will escape.

▲ **CLEANING AND CARE**

We recommend cleaning the appliance after every use. To clean the appliance:

1. Switch off the appliance.
2. Rinse the following parts with warm water and dish soap:
 - Liquid separator **6**
 - Seal **7**. Remove from appliance before rinsing.
 - Lid **8**
 - Vacuum hose **9**
 - Connection adapter **10**
 - Rubber knob **11**
 - Valve **12** of the vacuum bags
 - Large bag **13**
 - Small bag **14**
 - Wine bottle stopper **16**
3. Dry all parts thoroughly.

▲ **STORAGE**

Store the appliance in a dry and enclosed space.

▲ **TECHNICAL SPECIFICATIONS**

Model-No.	Type 5707
Voltage	5.0 VDC
Output	13 W
Battery	Li-Ion (1500 mAh)
Charging time	Around 2 hours
Dimensions (Ø x H)	5 x 20 cm
Weight	0.52 kg

Technical changes reserved.

▲ TROUBLESHOOTING

Problem	Possible cause	Solution
The appliance does not function.	The battery is too low.	Charge the battery.
	The seal 7 is loose.	Press the seal 7 firmly into the appliance.
	The appliance is damaged.	Press the START button 3 . If the appliance doesn't switch on, the appliance is damaged. Contact Solis or a Solis authorized service center.
The appliance does not charge.	The USB-C charging cable 17 is not connected with a power source.	Properly connect the USB-C charging cable 17 to a power source.
	The power connection is not working.	Make sure the USB-C charging cable 17 is connected to a working power source.
The bag 13 14 is not vacuumed completely.	The valve 12 is not clean.	Clean the valve 12 .
	The seal 7 is placed incorrectly on the valve 12 .	Correctly place the seal 7 on the valve 12 .
	The bag 13 14 is not completely closed.	Close the bag 13 14 .
	The bag 13 14 is overfilled.	Remove excess food from the bag 13 14 .
	The bag 13 14 is damaged.	Change the bag 13 14 .
	The VAC STICK 5 was removed too early.	Extend the vacuuming time.

Problem	Possible cause	Solution
The wine bottle is not vacuumed completely.	The opening of the wine bottle is not clean.	Clean the opening of the wine bottle.
	The VAC STICK 5 is placed incorrectly on the wine bottle stopper 16 .	Correctly place the VAC STICK 5 on the wine bottle stopper 16 .
	The wine bottle stopper 16 is placed incorrectly in the wine bottle.	Firmly press the wine bottle stopper 16 in the wine bottle.
	The VAC STICK 5 was removed too early.	Extend the vacuuming time.

▲ DISPOSAL



This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

▲ 2 YEAR GUARANTEE

 Only valid with a till receipt.

We provide a guarantee for this appliance, if the defect has demonstrably arisen as a result of faults in the material or construction, and has arisen despite proper handling and care. Glass breakage is not covered by the guarantee. The guarantee starts from the date of sale, as noted on the sales receipt, which must be enclosed with the appliance. For commercial use, the guarantee lasts for 12 months. The detailed guarantee conditions are available at www.solis.com.

▲ SOLIS CUSTOMER SERVICE



It is always worth calling us before sending in the article, as malfunctions can often be easily solved by the appropriate tip or trick from our experts. For country specific contact information, scan the QR code, follow the weblink or call us.

Solis of Switzerland Ltd

Solis-House • CH-8152 Glattbrugg • Switzerland
www.solis.ch • www.solis.com

S I N C E 1 9 0 8

Solis

Please visit us at

www.solis.com