

SINCE 1908

Solis

FLEXI VAC CLEANER 350

Type 6000

User manual



CONTENTS

INTENDED USE	3
IMPORTANT SAFETY PRECAUTIONS	3
CONTENTS	7
APPLIANCE DESCRIPTION	8
CONTROL BUTTONS	9
BEFORE FIRST USE	10
ASSEMBLY	11
INSTALLATION OF THE WALL MOUNT	13
USING THE APPLIANCE	14
CLEANING AND CARE	15
CLEARING BLOCKAGES	20
STORAGE	20
ACCESSORIES AND SPARE PARTS	20
TECHNICAL SPECIFICATIONS	21
TROUBLESHOOTING	21
DISPOSAL	22
2 YEAR GUARANTEE	22
SOLIS CUSTOMER SERVICE	22

INTENDED USE

- This appliance is intended for dry vacuuming.
- Only use the appliance as described in this manual.
- This appliance is intended to be used in household and similar applications such as:
 - staff kitchen areas in shops, offices and other working environments;
 - farm houses;
 - by clients in hotels, motels and other residential type environments;
 - bed and breakfast type environments and not for commercial use.
- This appliance is intended for indoor use only.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Any use of the appliance other than described in this manual is regarded as misuse and may cause injury, damage to the appliance and void the warranty.

IMPORTANT SAFETY PRECAUTIONS

General safety instructions

WARNING

- Ensure you have fully read and understood the instructions in this user manual before you install or use the appliance. Keep this document for future reference.
- Do not use the appliance if a part is damaged or defective. Replace a damaged or defective appliance immediately.
- If the power cable is damaged, it must be replaced by the manufacturer, the service agent or similar qualified personnel in order to avoid a hazard.
- Do not disconnect the appliance from the mains by pulling on the cable. Always grasp the power plug and pull.
- Do not expose the power port, power cable, or the power plug to water or moisture.
- Avoid spillage on the power connector.
- Do not expose the battery to high temperatures.

- Children must be supervised to ensure that they not play with the appliance.
- Keep the appliance and the power cord away from children and pets.

Safety instructions regarding installation

⚠ WARNING

- Keep the original packaging in a safe place so that you may use it in the event that transportation or shipping of the product becomes necessary.
- Do not drop the appliance and avoid bumping.
- Do not place the appliance in direct sunlight.
- In the event of a battery leaking, do not allow the liquid to come in contact with the skin or eyes. If contact has been made, wash the affected area with copious amounts of water and seek medical advice.
- Charge the battery for at least 4 hours when you use the appliance for the first time.
- Never charge the battery in wet or damp locations.
- Never short-circuit the battery.
- Only use the appliance with the provided power base or provided adapter.
- Do not use an extension cable with this appliance.
- Never place the appliance in such a way that it is at risk of falling into water or coming into contact with water resp. other liquids (e.g. in or near a sink).

- Never reach for an appliance that has fallen into water or other liquids. Always use dry rubber gloves to pull the plug before taking it out. Do not start using it again before having it checked for functionality and safety by Solis or a service centre authorized by Solis.
- Before using the appliance, check that the voltage stated on the type plate of your appliance matches your mains voltage. Do not operate the appliance with a multiway plug adapter.
- Do not leave the power cable hanging over table edges to prevent the appliance from being pulled down. Make sure that neither the appliance nor the power cord or plug comes into contact with hot surfaces, such as hotplates or a radiator, or that they come into contact with the appliance itself.
- Only use the product with a properly grounded power outlet.
- Fully unwind the power cable before use.

Safety instructions regarding use

⚠ WARNING

- Children must be supervised to ensure that they not play with the appliance.
- Only use the appliance with the provided accessories or accessories recommended by Solis. Incorrect accessories or misuse can lead to damage to the appliance.
- Do not operate the appliance with wet hands.
- Disconnect the appliance from the power source before service and when replacing parts.
- Never use the appliance without the dustbin and filters in place.

- Never apply any fragrance or scented product to the filters, as this poses a fire hazard.
- Never use the appliance on a wet surface.
- Never store the appliance vertically unsupervised and not secured.
- Never use the appliance to collect objects that are flammable, burning or smoking.
- Never use the appliance to collect a large quantity of dust like drywall dust, fireplace ash or embers.
- Never use the appliance to collect water or other liquids.
- Never use the appliance to collect sharp objects like glass, nails, screws or coins.
- Do not insert sharp or pointed objects and tools into the appliance openings.
- Unplug the appliance when it is not in use.
- Never carry the appliance by the power cord and do not place anything on the power cord. Never pull on the power cord to disconnect the appliance from the power mains. Only pull on the plug.

Safety instructions regarding maintenance

WARNING

- Switch off and unplug the appliance before service or cleaning, and when replacing parts.
- Keep the battery away from small metal objects when the appliance is not in use.
- Let the appliance cool down before cleaning.
- Empty and clean the dustbin after each use.

- Never immerse the appliance in water or other liquids and do not put it in the dishwasher.
- Do not use abrasive chemical cleaning agents such as ammonia, acid or acetone when cleaning the appliance. This can damage the appliance.
- Remove the battery before disposing of the appliance. Check the local rules and regulations for the correct disposal instructions.
- Do not dismantle, open or shred batteries.
- Do not try to open or repair the appliance. It must be serviced by a qualified person.

CONTENTS

Please check the contents of the package:

1x Main body

1x Tube

1x Floor brush

1x Crevice tool

1x 2-in-1 brush tool

1x Cleaning tool

1x Battery

1x Adapter

1x Wall mount


2x Plugs

2x Screws

2x Small HEPA filter

2x Large HEPA filter


▲ APPLIANCE DESCRIPTION

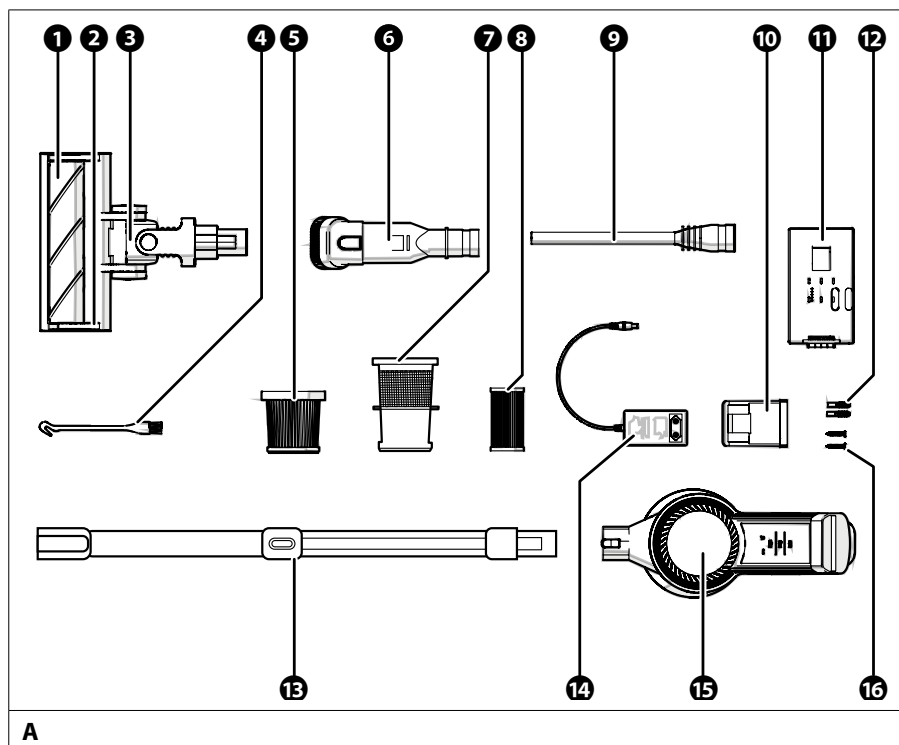

A

- | | |
|----------------------------|----------------|
| 1 Roller brush | 9 Crevice tool |
| 2 Floor brush lid | 10 Wall mount |
| 3 Floor brush | 11 Battery |
| 4 Cleaning tool | 12 Plugs |
| 5 Large HEPA filter | 13 Tube |
| 6 2-in-1 brush tool | 14 Adapter |
| 7 Large HEPA filter holder | 15 Main body |
| 8 Small HEPA filter | 16 Screws |

▲ CONTROL BUTTONS

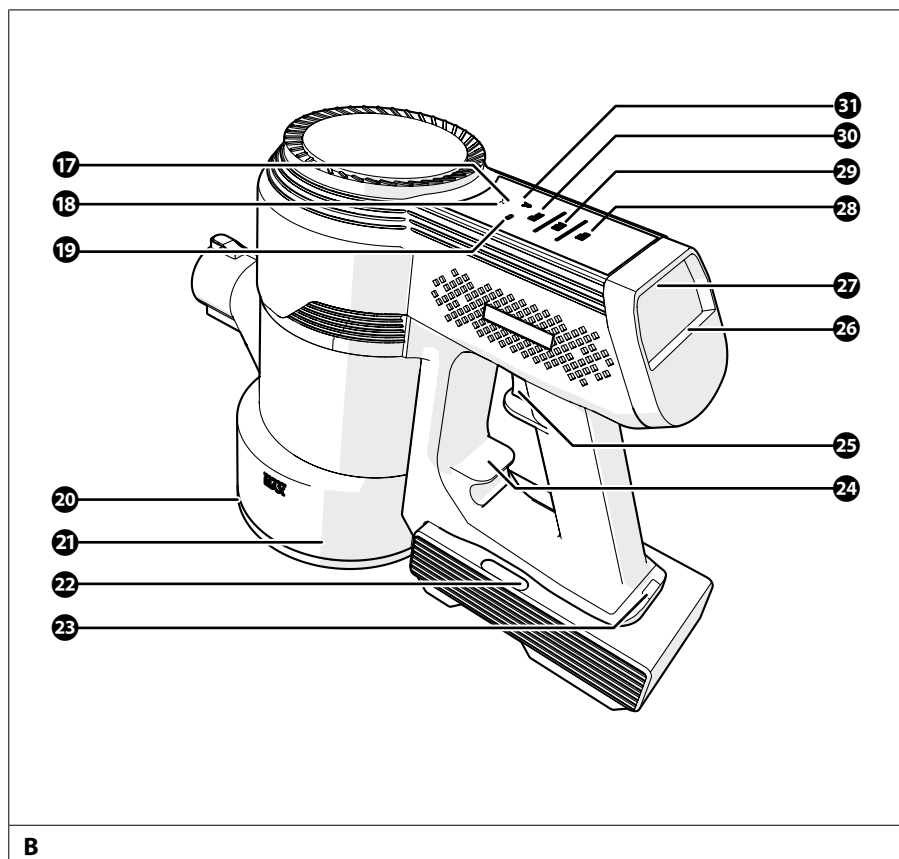

- | | | | |
|----|-------------------------------|----|----------------------------|
| 17 | Battery level indicator | 25 | Power button |
| 18 | Cleaning mode indicator | 26 | Filter release button |
| 19 | Floor brush blocked indicator | 27 | Filter lid |
| 20 | Dustbin lid latch | 28 | Minimum power |
| 21 | Dustbin | 29 | Medium power |
| 22 | Charging indicator | 30 | Maximum power |
| 23 | Battery release button | 31 | Air duct blocked indicator |
| 24 | Dustbin release button | | |


BEFORE FIRST USE

To prepare the appliance before first use and when the battery is empty:

1. Plug the power cable of the adapter  into the power port of the battery .
 2. Plug the other end of the adapter  into a power outlet.
-  Charge the battery  for at least 4 hours when using the appliance for the first time.
 -  The battery  also can be charged when inserted into the main body .
 -  The device cannot be switched on during the charging process.
 -  When the battery level indicator  blinks blue, switch off the appliance and charge the battery .
 -  The charging indicator  indicates the charging state of the appliance. When all three lights of the charging indicator  light up, the appliance is fully charged.

▲ ASSEMBLY

To assemble the appliance:

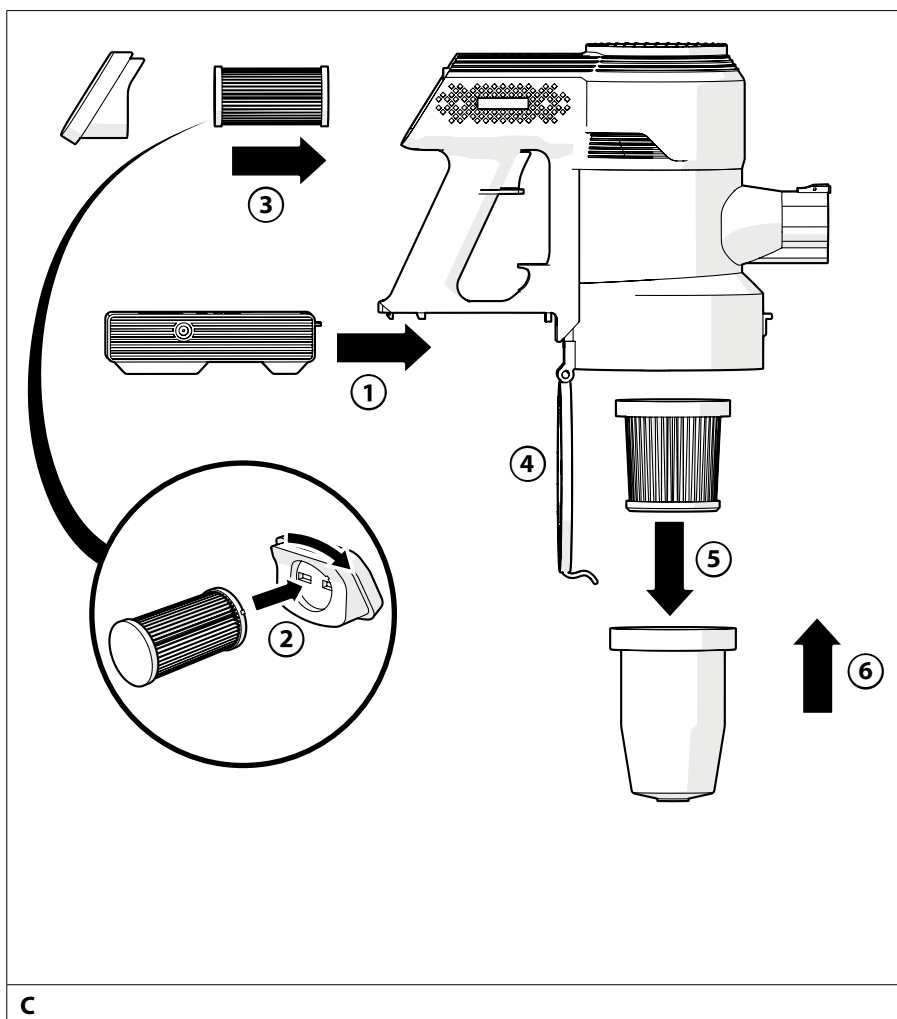


1. Slide the battery **11** into the main body **15**.
2. Open the filter lid **27** and place the small HEPA filter **8**.

i Never use the appliance without the dustbin **21** and filters **5+8** in place.

3. Close the filter lid **27**.
4. Press the dustbin lid latch **20** to open the dustbin **21**.


5. Place the large HEPA filter **5** into the large HEPA filter holder **7**.
6. Place the large HEPA filter holder with the large HEPA filter **7** into the dustbin **21**.

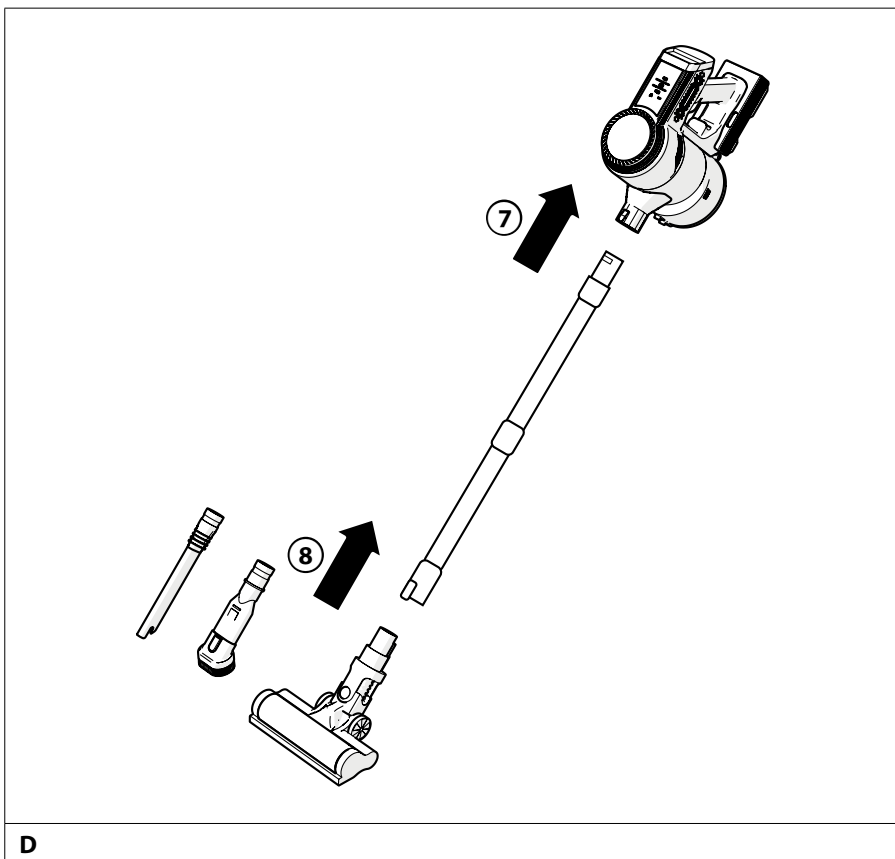

7. Optionally, insert the tube **13** to the main body **15**.
8. Insert the floor brush **3**, brush tool **6**, or crevice tool **9** into the tube **13** or the main body **15**.

The appliance is now ready for use.

▲ INSTALLATION OF THE WALL MOUNT

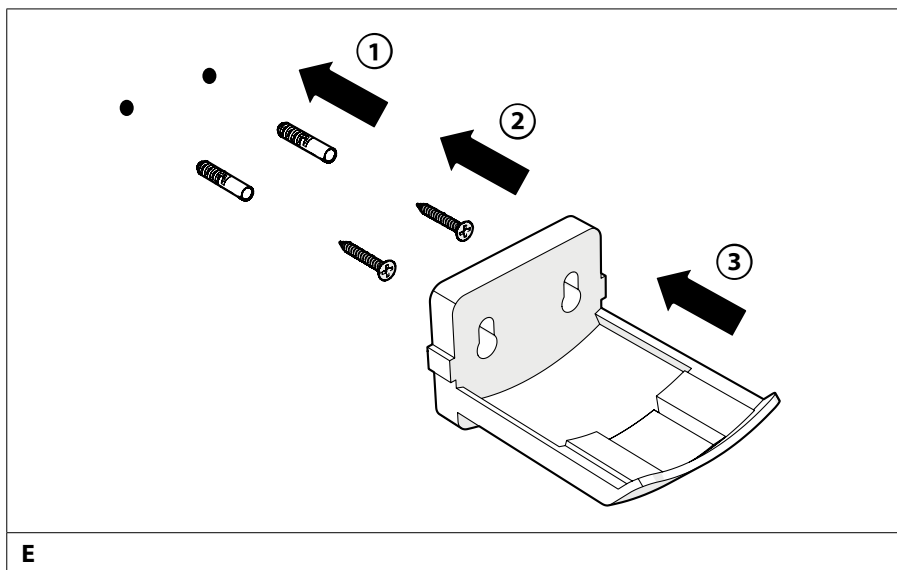

To install the wall mount:

1. Place the holes for the wall mount **10** 85 cm above the floor, so that the floor brush **3** reaches the floor when the tube **13** is fully extended.

i Check the wall for electrical wiring, water or gas pipes before drilling.

▲ USING THE APPLIANCE

1. Press the power button **25** to switch on the appliance.

The control panel lights up and indicates the following:

Indicator	Symbol on the main body	Description of the indicator
Battery level indicator 17		The battery level indicator 17 displays the battery charge level. When the battery 11 is running low, the battery level indicator 17 flashes. Charge the battery 11 immediately.
Floor brush blocked indicator 19		The floor brush blocked indicator 19 lights up when something is stuck in the floor brush 3 . Remove the blockages in the floor brush 3 immediately.
Minimum power 28		The minimum power function 28 provides the minimum suction power. The symbol lights up blue.
Medium power 29		The medium power function 29 provides the medium suction power. The symbol lights up pink.
Maximum power 30		The maximum power function 30 provides the maximum suction power. The symbol lights up red.
Air duct blocked indicator 31		The air duct blocked indicator 31 lights up when something is stuck in the tube 13 . Remove the blockages in the tube 13 immediately.


2. Press the minimum, medium or maximum power **28 29 30** to switch between modes.
3. Vacuum the desired surface.
4. Press the power button **25** to switch off the appliance.

i Empty the dustbin after every use.


▲ CLEANING AND CARE

To clean the dustbin and filters:

1. Switch off the appliance.

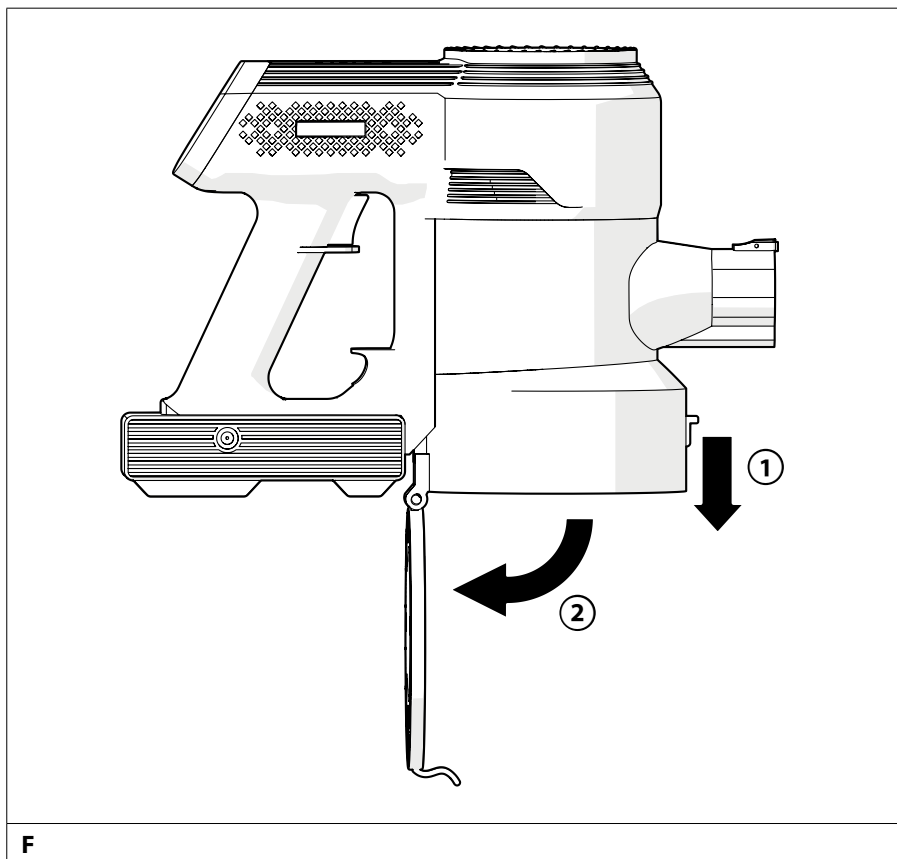


2. Press the dustbin lid latch 20 to open the dustbin 21 and empty out the dust (see image F).
3. Press the dustbin release button 24 to remove the dustbin 21.

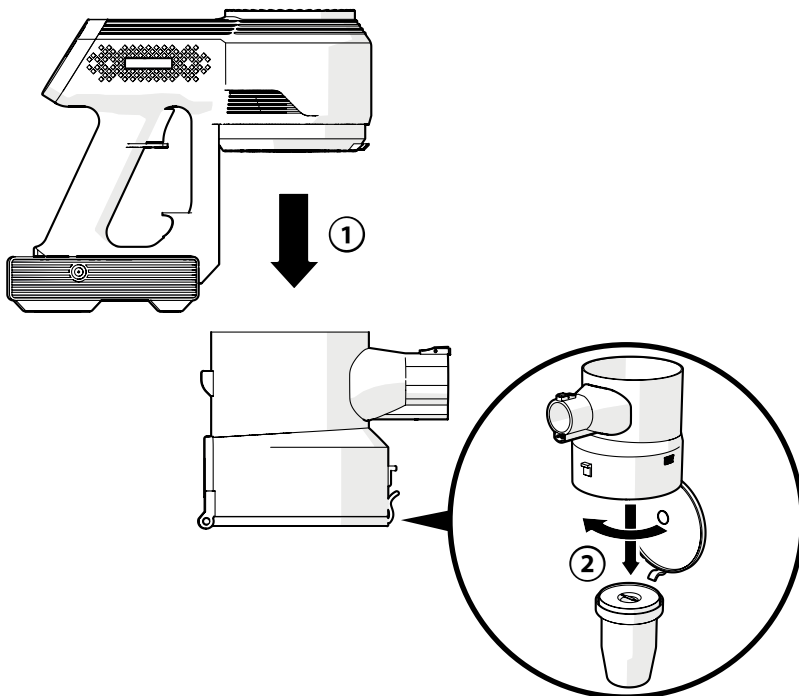


G

4. Remove the large HEPA filter holder **7** by turning the large HEPA filter holder counterclockwise and pull out the large HEPA filter **5** (see image G).
- i** Empty the dustbin **21** after each use. Do not exceed the maximum mark.
 - i** To ensure optimum suction power, clean the HEPA filter **5** at least weekly and replace it every 3 months.
 - i** Never use the appliance without the dustbin **21** and filters **5+8** in place.

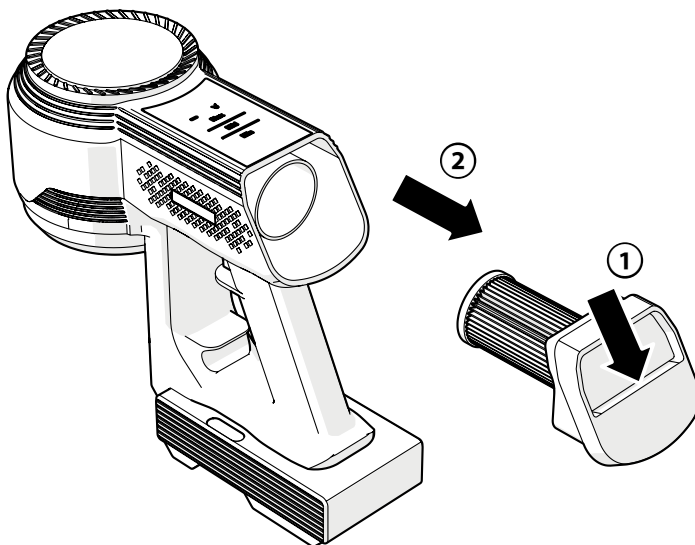

H


5. Press the filter release button **26** to remove the filter lid **27**.
6. Remove the small HEPA filter **8** (see image H).
7. Remove any loose dust from the large HEPA filter **5** and the small HEPA filter **8** with the cleaning tool **4**.
8. Rinse the following parts with water:
 - Dustbin **21**
 - Large HEPA filter **5** and the filter holder **7**
 - Small HEPA filter **8**
9. Leave the parts to dry completely.
10. Open the filter lid **27** and place the small HEPA filter **8**.
11. Place the small HEPA filter **8**.
12. Close the filter lid **27**.
13. Press the dustbin lid latch **20** to open the dustbin **21**.
14. Place the large HEPA filter **5**.

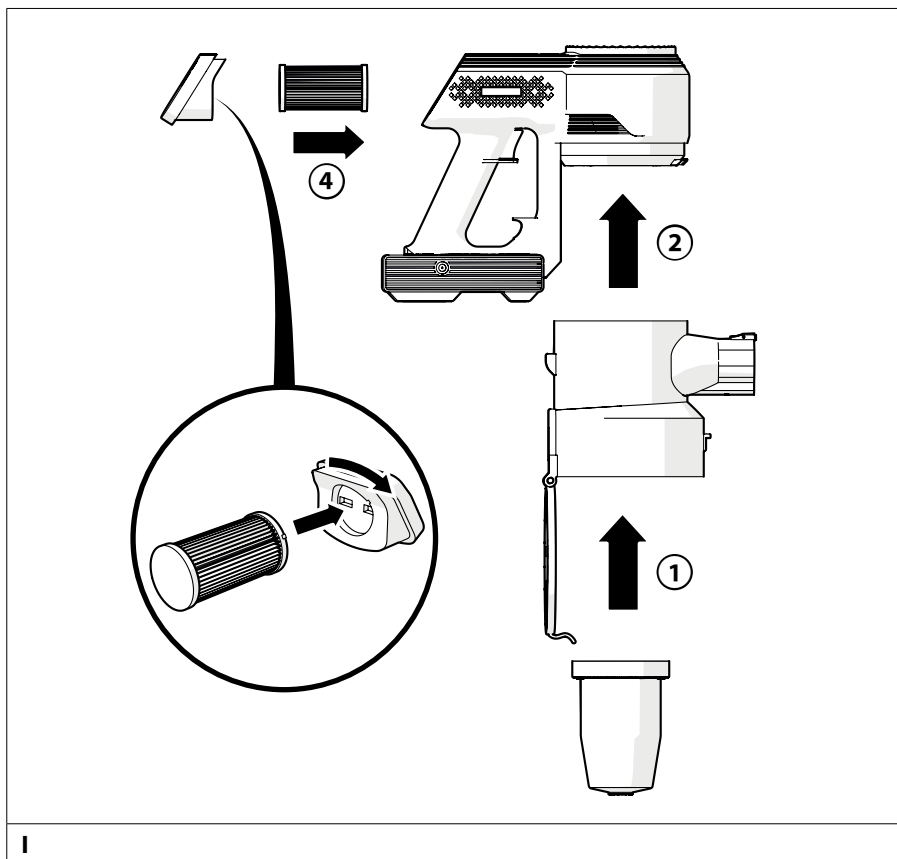

15. Close the dustbin 21 (see image I).

i Do not put any parts in the dishwasher.

To clean the floor brush:

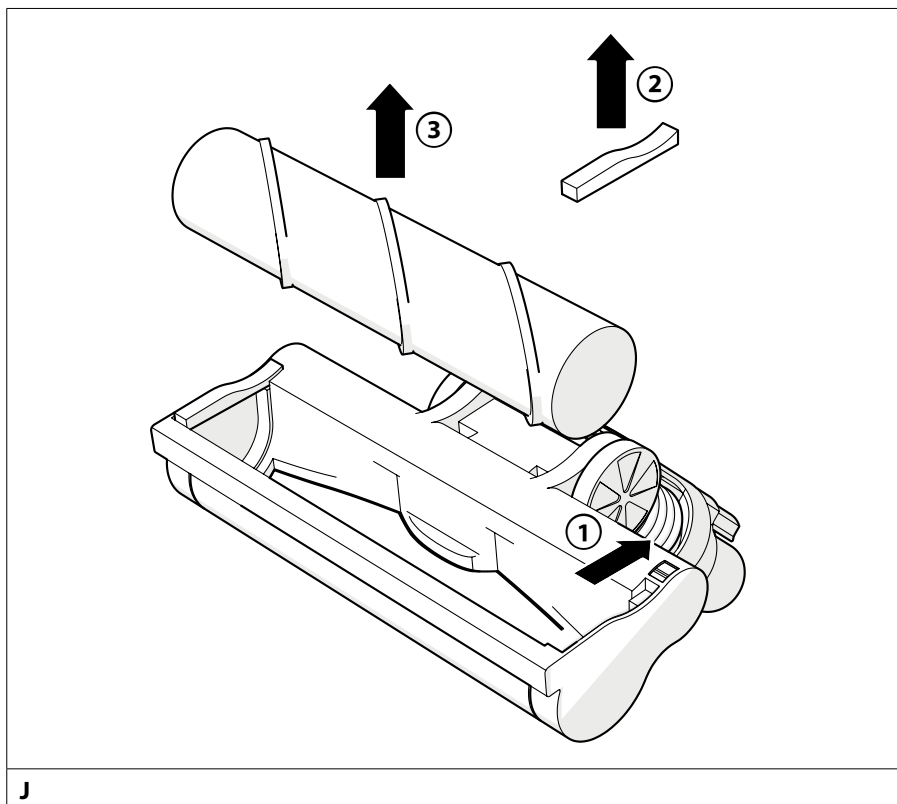

J

1. Switch off the appliance.
2. Press the lock on/off switch to remove the floor brush lid ②.
3. Take the roller brush ① out of the floor brush ③ (see image J).
4. Remove hair, dust and dirt from the floor brush ③ using the cleaning tool ④ and a dry cloth.
5. Insert the roller brush ① back into the floor brush ③.
6. Make sure the latch clicks into the closed position.

▲ CLEARING BLOCKAGES

The appliance is equipped with an automatic switch-off function. It stops if the floor brush ③ or the air duct is blocked. Follow the instructions to find the blockage:

- ❗ Ensure that the appliance is disconnected from the charger. Allow the appliance to cool down.
- 1. Remove the floor brush ③ and check for blockages in the air duct, the suction opening or on the roller brush ①.
- 2. Remove the dustbin ⑳ and the filters ⑤+⑧ in the dustbin ㉑. Clean the filters if necessary.
- 3. Check for blockages in the tube ⑬, crevice tool ⑨ or 2-in-1 brush tool ⑥. Clean these if necessary.
- 4. Dry all parts completely and reassemble them safely before use.

▲ STORAGE

Store the appliance indoors, in a dry place.

- ❗ Use the wall mount ⑩ to hang the appliance and prevent the appliance from falling over.
- ❗ If the wall mount ⑩ is not used, ensure that the appliance is placed securely against a wall or on a stable surface to prevent it from falling over.

▲ ACCESSORIES AND SPARE PARTS

The following accessories and spare parts are available for the FLEXI VAC CLEANER 350:

Article number	Accessory type
770-05	Extract air HEPA filter (small filter)
770-06	Dustbin HEPA filter (large filter)
770-07	Li-Ion battery 25.9 V 2200 mAh
770-08	Electric mop
770-09	Mop cleaning pads, 1 pair

▲ TECHNICAL SPECIFICATIONS

Model-No.	Type 6000
Voltage / frequency	100 – 240 V~ / 50 – 60 Hz
Output	350 W
Battery	25.9 mAh / 2200 V
Dimensions (W × D × H)	24 × 24 × 75 - 112 cm
Weight	2.7 kg
Charging time	4 - 5 hours
Battery charger output	30 V / 500 mA
Operation time	45 minutes (minimum power) 20 minutes (medium power) 15 minutes (maximum power)
Vacuum	8 kPa (minimum power) 14 kPa (medium power) 26 kPa (maximum power)

Technical changes reserved.

▲ TROUBLESHOOTING

Problem	Possible cause	Solution
The appliance does not function or has suddenly stopped functioning.	The battery 11 is not properly inserted in the main body 15.	Properly insert the battery 11.
	The battery 11 is empty.	Charge the battery 11.
	The roller brush 1, floor brush 3 or tube 13 is blocked.	Check and remove blockages in the roller brush 1, the floor brush lid 2, the suction opening or the tube 13.
The appliance has a weak suction power.	The dustbin 21 is full.	Empty the dustbin 21.
	The HEPA filters are dirty.	Clean the HEPA filters.

▲ DISPOSAL



This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

▲ 2 YEAR GUARANTEE

 Only valid with a till receipt.

We provide a guarantee for this appliance, if the defect has demonstrably arisen as a result of faults in the material or construction, and has arisen despite proper handling and care. Glass breakage is not covered by the guarantee. The guarantee starts from the date of sale, as noted on the sales receipt, which must be enclosed with the appliance. For commercial use, the guarantee lasts for 12 months. The detailed guarantee conditions are available at www.solis.com.

▲ SOLIS CUSTOMER SERVICE



It is always worth calling us before sending in the article, as malfunctions can often be easily solved by the appropriate tip or trick from our experts. For country specific contact information, scan the QR code, follow the weblink or call us.

Solis of Switzerland Ltd

Solis-House • CH-8152 Glattbrugg • Switzerland
www.solis.ch • www.solis.com

S I N C E 1 9 0 8

Solis

Please visit us at

www.solis.com

Version 12/2025