

SINCE 1908

Solis

CHARGE & GO FAN

Type 7586

User manual



CONTENTS

INTENDED USE	3
IMPORTANT SAFETY PRECAUTIONS	3
CONTENTS	5
APPLIANCE DESCRIPTION	5
INSTALLATION	7
OPERATION	7
CLEANING AND CARE	8
STORAGE	9
TECHNICAL SPECIFICATIONS	9
TROUBLESHOOTING	10
DISPOSAL	11
2 YEAR GUARANTEE	12
SOLIS CUSTOMER SERVICE	12

INTENDED USE

- Only use the appliance as described in this manual.
- This appliance is intended to be used in household and similar applications such as:
 - staff kitchen areas in shops, offices and other working environments;
 - farm houses;
 - by clients in hotels, motels and other residential type environments;
 - bed and breakfast type environments.
- This appliance is intended for indoor use only.

IMPORTANT SAFETY PRECAUTIONS

WARNING

- Ensure you have fully read and understood the instructions in this document before you install or use the appliance. Keep this document for future reference.
- Do not use the appliance if a part is damaged or defective. Replace a damaged or defective appliance immediately or contact Solis or a Solis authorized service center.
- Do not drop the appliance and avoid bumping.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children must be supervised to ensure that they not play with the appliance.
- Do not expose the appliance unit to water or moisture.
- Disconnect the appliance from the power source:
 - when not in use.
 - before service and when replacing parts.
 - removing the fan guard.

- Do not use any charger other than that specifically provided with the appliance.
- If the power cable is damaged, replace it with an original special cable or assembly available from the manufacturer or its service agent.
- Do not dismantle, open or shred batteries.
- In the event of a battery leaking, do not allow the liquid to come in contact with the skin or eyes. If contact has been made, wash the affected area with copious amounts of water and seek medical advice.
- Do not leave batteries on prolonged charge when not in use.
- Do not disconnect the product by pulling on the cable. Always grasp the connector and pull.
- Do not put your fingers or any other object into the grill when the appliance is operating.
- Do not let hair, curtains or similar objects hang close to the appliance.
- Disconnect the appliance from the power source when the appliance malfunctions.
- Do not place the appliance:
 - in a humid area such as a bathroom.
 - in direct sunlight.
- Do not use the appliance in an area where gasoline, paint or similar flammable liquids are used or stocked.
- Do not try to open or repair the appliance. It must be serviced by a qualified person.
- Only use the original cable.

CONTENTS


Please check the contents of the package:

1x CHARGE & GO FAN

1x USB charging cable

APPLIANCE DESCRIPTION

The Charge & Go Fan is a rechargeable and easily transportable fan. The fan has four different wind speeds and with the rotating louvers the breeze can be smoothed. It can be charged with a USB cable and can also be used while charging.

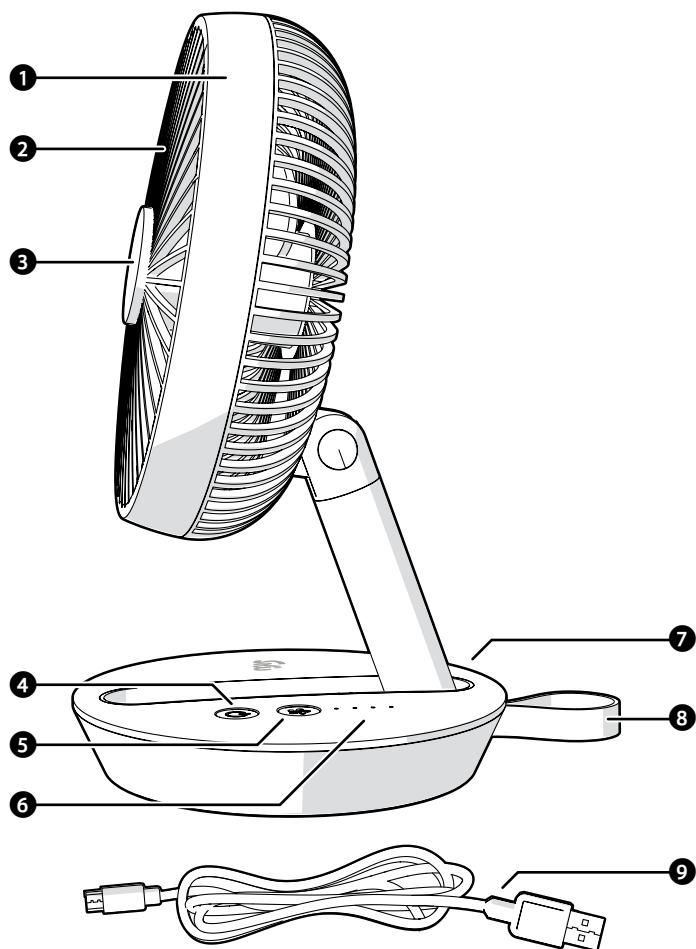

A

- | | |
|--------------------|-------------------|
| ① Front cover | ⑥ LEDs |
| ② Rotating louvers | ⑦ USB power port |
| ③ Louvers knob | ⑧ Hanging loop |
| ④ Power button | ⑨ USB power cable |
| ⑤ Fan speed button | |

▲ INSTALLATION


i The appliance can operate up to 4 hours at the highest speed and up to 15 hours at the slowest speed when fully charged.

1. Plug the **USB power cable 9** into the **USB power port 7**.
2. Plug the other end of the **USB power cable 9** into a USB power source (max. 5V/2A).

The **LEDs 6** shows the battery status. While charging, the last LED is blinking.

i The appliance is fully charged in 4 hours.

▲ OPERATION

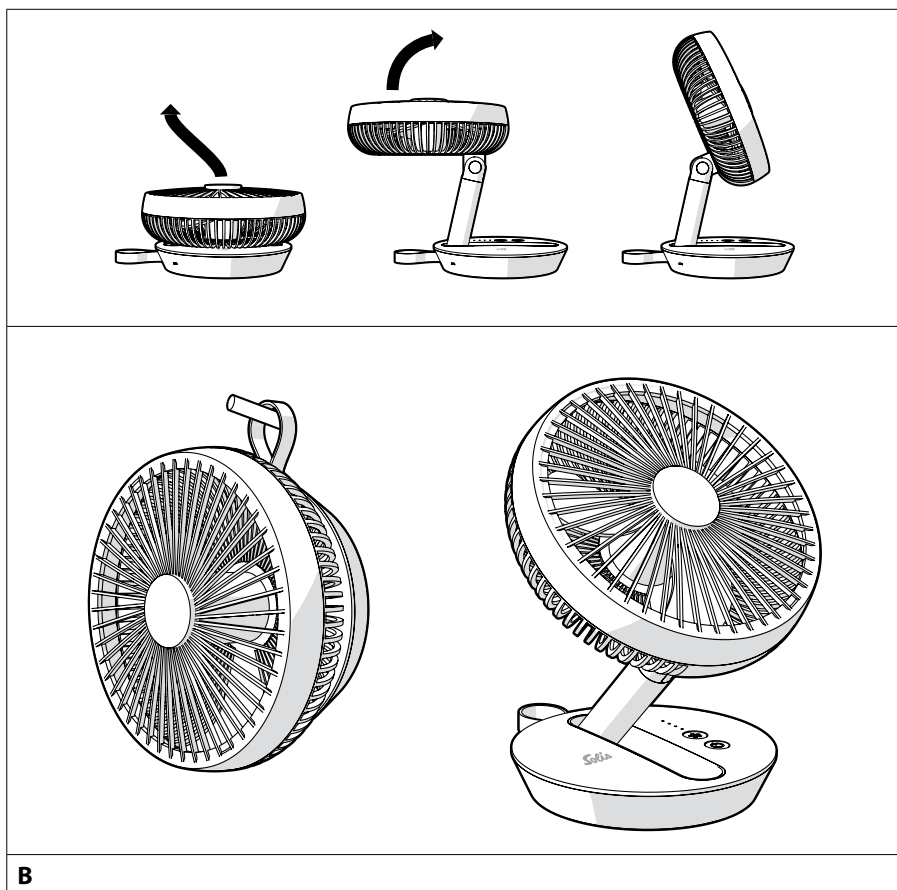

i You can operate the appliance while charging.

1. Install the fan according to one of the installation methods (image B).
2. Press the **power button** ④ to switch on the appliance.
3. Press the **fan speed button** ⑤ multiple times to select the desired fan speed.

i The number of burning **LEDs** ⑥ indicates the fan speed.

i The **LEDs** ⑥ switches off when the buttons are not touched for 60 seconds.

4. For a smoother breeze, rotate the **louvers knob** ③ 0.5 - 1.5 turns counterclockwise once to loosen the **rotating louvers** ②.
5. Press the **power button** ④ to switch off the appliance.

To check the battery status when the appliance is operating:

1. Press and hold the **power button** ④ for 2 seconds.

The **LEDs** ⑥ show the battery status. The last LED blinks when the appliance is charging.

i When the battery is too low, the **indicator LEDs** ⑥ blink 5 times. The appliance switches off.

i The battery cannot be replaced.

CLEANING AND CARE

When used frequently, clean the appliance once a month.

1. Switch off and disconnect the appliance from the power source before cleaning the appliance.
2. Clean the appliance with a damp cloth.

To clean the fan blades:

1. Detach the **front cover** ① with a screwdriver.
2. Clean the fan blades with a damp cloth.
3. Optionally clean the **front cover** ① with soapy water.
4. Place back the **front cover** ①.

▲ STORAGE

1. Switch off and disconnect the appliance from the power source before storage.
2. Store the appliance in a dry and enclosed space.
3. Charge the battery every two months in order to prevent deep discharge of the battery.

▲ TECHNICAL SPECIFICATIONS

Model-No.	DF-EF0516D, Type 7586
Voltage	5V DC
Output	5 W
Dimensions (Ø Rotor housing x T x max. H)	19 x 17 x 29 cm
Weight	0.63 kg
Sound level	38.0 - 48.5 dB

Technical changes reserved.

▲ TROUBLESHOOTING

Problem	Cause	Solution
The LEDs 6 doesn't show the status.	The LEDs 6 is switched off due to inactivity.	Press one of the buttons. The LEDs 6 switches on.
The LEDs 6 flashes 5 times and switches off.	The battery is too low.	Charge the fan.
The rotating louvers 2 make noise when rotating.	The louvers knob 3 is loosened too much.	Tighten the louvers knob 3 and rotate 1 rotation back to loosen the rotating louvers 2 again.

DISPOSAL



EU 2012/19/EU

Information for correct disposal of the product in accordance with the European Directive EU 2012/19/EU.

At the end of its working life this equipment must not be disposed of as an household waste. It must be taken to special local community waste collection centres or to a dealer providing this service. Disposing of electrical and electronic equipment separately avoids possible negative effects on the environment and human health deriving from an inappropriate disposal and enables its components to be recovered and recycled to obtain significant savings in energy and resources. In order to underline the duty to dispose of this equipment separately, the product is marked with a crossed-out dustbin.

Solis of Switzerland Ltd reserves the right to carry out technical and visual changes and modifications to improve the product at any time.

SOLIS HELPLINE

This item stands out due to its long-life cycle and reliability. Despite this though, if a malfunction ever occurs, simply give us a call. Often a breakdown can be easily and quickly remedied with the right tip or technique without having to straight away send off the device for repair. We will give you all the advice and practical support you require. The contact addresses can be found at the end of this manual.

Keep the original packaging in a safe place so that you may use it in the event that transportation or shipping of the product becomes necessary.

▲ 2 YEAR GUARANTEE

 Only valid with a till receipt.

We provide a guarantee for this product, if the defect has demonstrably arisen as a result of faults in the material or construction, and has arisen despite proper handling and care. The guarantee starts from the date of sale, as noted on the sales receipt, which must be enclosed with the item. For commercial use, the guarantee lasts for 12 months. The detailed guarantee conditions are available at www.solis.com.

▲ SOLIS CUSTOMER SERVICE

It is always worth calling us before sending in the product, as malfunctions can often be easily solved by the appropriate tip or trick from our experts. Please visit us at www.solis.com for countryspecific contact details. Naturally, we would also be pleased to provide you with information over the phone. Please contact us via the following telephone numbers:

For Switzerland:	+41 91 802 90 10
For Germany:	0800 724 0702
For Austria:	0800 22 03 92
For the Netherlands:	+31 85 4010 722
For Belgium:	+32 2 808 35 82
For the other countries:	+41 44 874 64 84

CH**Schweiz / Suisse / Svizzera**

✉ Solis Produzione SA
Centro Solis
Via Penate 4
CH – 6850 Mendrisio

Adresse für Warenretouren abweichend – siehe:

Adresse différente pour les retours de produit – voir:

Indirizzo differente per resi di merce - vedi:

www.solis.com

☎ 091 – 802 90 10
@ support.ch@solis.com
🌐 www.solis.ch

D**Deutschland**

✉ Solis Deutschland GmbH
Marienstrasse 10
D – 78054 Villingen-
Schwenningen

Adresse für Warenretouren abweichend – siehe:

www.solis.com

☎ 0800 – 724 07 02
@ info.de@solis.com
🌐 www.solis.de

AT**Österreich**

✉ Solis Austria
Austrasse 30
A – 6832 Sulz

Adresse für Warenretouren abweichend – siehe:

www.solis.com

☎ 0800 – 22 03 92
@ info.at@solis.com
🌐 www.solis.at

NL**Nederland**

✉ Solis Benelux BV
Stadskade 318
NL – 7311 XX Apeldoorn

Afwijkend adres voor productretouren – zie:

www.solis.com

☎ 085 – 4010 722
@ info.nl@solis.com
🌐 www.solisonline.nl

B**LU****België / Belgique****Belgien / Luxembourg**

✉ Solis Benelux BV
Stadskade 318
NL – 7311 XX Apeldoorn

Address for return shipment of goods differs – please refer to:

Afwijkend adres voor productretouren – zie:

Adresse différente pour les retours de produit – voir:

www.solis.com

☎ +32 – (0)2 – 808 35 82
@ info.be@solis.com
🌐 www.solis.be

INT**International**

✉ Solis Produzione SA
Centro Solis
Via Penate 4
CH – 6850 Mendrisio
Switzerland

Address for return shipment of goods differs – please

refer to **www.solis.com**

☎ +41 – 91 – 802 90 10
@ support.ch@solis.com
🌐 www.solis.com

Solis of Switzerland Ltd

Solis-House • CH-8152 Glattbrugg-Zürich • Switzerland
www.solis.ch • www.solis.com



Please visit us at

www.solis.com