

SINCE 1908

Solis

RACLETTE & PIZZA GRILL FOR 8

Type 791

User manual



CONTENTS

INTENDED USE	3
IMPORTANT SAFETY PRECAUTIONS	3
CONTENTS	7
APPLIANCE DESCRIPTION	8
CONTROL BUTTONS	9
BEFORE FIRST USE	9
INSTALLATION	10
USING THE GRILL	10
USING THE PANS	10
TIPS FOR PERFECT GRILLING	11
CLEANING AND CARE	11
STORAGE	12
TECHNICAL SPECIFICATIONS	12
TROUBLESHOOTING	12
DISPOSAL	13
2 YEAR GUARANTEE	13
SOLIS CUSTOMER SERVICE	13

INTENDED USE

- This appliance is intended for preparing food in different ways.
- This appliance is intended to be used as a griddle and a raclette grill.
- Only use the appliance as described in this manual.
- This appliance is intended to be used in household and similar applications such as:
 - staff kitchen areas in shops, offices and other working environments;
 - farm houses;
 - by clients in hotels, motels and other residential type environments;
 - bed and breakfast type environments.
- This appliance is intended for indoor use only.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Any use of the appliance other than described in this manual is regarded as misuse and may cause injury, damage to the appliance and void the warranty.

IMPORTANT SAFETY PRECAUTIONS

General safety instructions

WARNING

- Ensure you have fully read and understood the instructions in this user manual before you install or use the appliance. Keep this document for future reference.
- Do not use the appliance if a part is damaged or defective. Replace a damaged or defective appliance immediately.
- If the power cable is damaged, replace it with an original special cable or assembly available from the manufacturer or its service agent.

Safety instructions regarding installation

WARNING

- Remove and discard all packaging materials and potential stickers or labels (except for the type plate) before using the appliance for the first time.

- Do not drop the appliance and avoid bumping.
- Place the appliance on a stable, flat, heat and moisture resistant surface.
- Keep a minimum safety distance of 50 cm between the appliance and walls, curtains or other materials and objects and make sure that the air around the appliance can circulate freely.
- Do not place the appliance in direct sunlight.
- Before using the appliance, check that the voltage stated on the type plate of your appliance matches your mains voltage. Do not operate the appliance with a multiway plug adapter.
- Do not use a timer or a separate remote-control system that switches on the device automatically.
- Do not leave the power cable hanging over table edges to prevent the appliance from being pulled down. Make sure that neither the appliance nor the power cord or plug comes into contact with hot surfaces, such as hotplates or a radiator, or that they come into contact with the appliance itself.
- Install the power cord so that nobody can trip over it. Keep clear of pointed objects.
- Never place the appliance in such a way that it is at risk of falling into water or coming into contact with water resp. other liquids (e.g. in or near a sink).
- Never reach for an appliance that has fallen into water or other liquids:
 - Always wear dry rubber gloves to unplug the appliance before taking it out of the water.

- Do not start using the appliance again before having it checked for functionality and safety by Solis or a service center authorized by Solis.
- Do not place the appliance directly under a power outlet.
- Switch off and unplug the appliance before moving the appliance.
- Fully unwind the power cable before use.

Safety instructions regarding use

⚠ WARNING

- Children under the age of 8 years should not use the appliance.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children must be supervised to ensure that they not play with the appliance.
- Keep the appliance and the power cord away from children and pets.
- Do not operate the appliance with wet hands.
- Only use the appliance with the provided accessories or accessories recommended by Solis. Incorrect accessories or misuse can lead to damage to the appliance.
- Never use any metal kitchen utensils or knives on the grill plate or in the pans, they might damage the non-stick coating.

- Parts of the appliance may get hot during use. Only touch the control panel when using the appliance.
- Do not move the appliance when in use.
- Do not leave empty pans in the heating area. This could damage the pans. Place empty pans in the cooling area.
- Do not cover the air vents when the appliance is in use.
- Do not switch on the appliance when it is empty.
- Unplug the appliance when it is not in use.
- We recommend that you do not use an extension cable with this appliance.
- Never carry the appliance by the power cord and do not place anything on the power cord. Never pull on the power cord to disconnect the appliance from the power mains. Only pull on the plug.
- Any use of the appliance other than described in this manual is regarded as misuse and may cause injury, damage to the appliance and void the warranty.
- Should you notice any unusual odours or sounds, switch the appliance off and disconnect the power plug. Do not start using it again before having its functionality and safety checked by Solis or a service centre authorised by Solis.

Safety instructions regarding maintenance

⚠ WARNING

- Switch off and unplug the appliance before service and when replacing parts.
- Let the appliance cool down before touching it.


- Never immerse the appliance in water or place it in a dishwasher.
- Do not use abrasive chemical cleaning agents such as ammonia, acid or acetone when cleaning the appliance. This can damage the appliance.
- Do not make any adjustments to the appliance, cable, plug or accessories.
- Do not insert sharp or pointed objects into the openings of the appliance. This may damage the appliance or result in electric shock.
- Do not use a sharp object to remove residue on the pans or griddle. This could damage the non-stick coating.

CONTENTS

Please check the contents of the package:

1x	RACLETTE & PIZZA GRILL FOR 8
1x	Power cable (depending on the country version, several power cables are also included)
8x	Pans
8x	Spatulas
1x	Dough cutter


▲ APPLIANCE DESCRIPTION

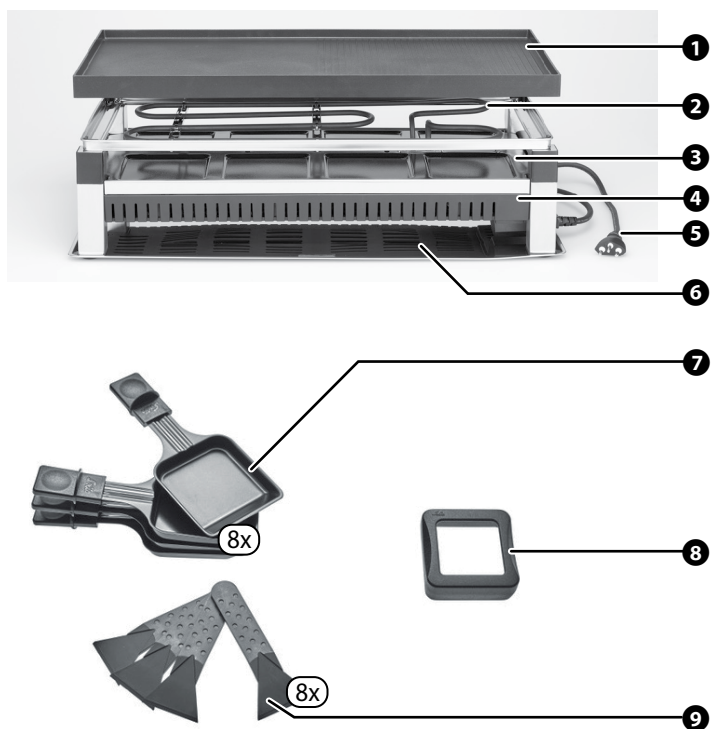

A

- | | |
|-------------------------|----------------|
| ① Two-sided grill plate | ⑥ Base plate |
| ② Upper heating element | ⑦ Pan |
| ③ Support surface | ⑧ Dough cutter |
| ④ Lower heating element | ⑨ Spatula |
| ⑤ Power cable | |

▲ CONTROL BUTTONS

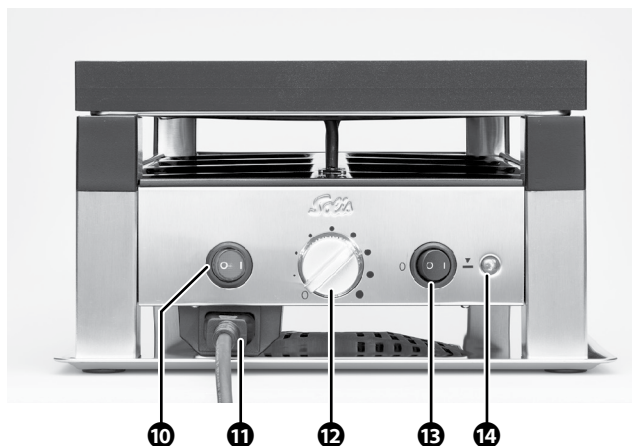

B

- | | | | |
|----|---------------------------------|----|------------------------------------|
| 10 | ON/OFF switch | 13 | Lower heating element power switch |
| 11 | Power port | 14 | Lower heating LED |
| 12 | Grill plate temperature control | | |

▲ BEFORE FIRST USE

1. Rinse the following parts with hot water:
 - Two-sided grill plate 1
 - Pans 7
 - Dough cutter 8
 - Spatulas 9
2. Leave the parts to dry.
3. Install the appliance according to chapter *Installation*.
4. Turn the **grill plate temperature control** 12 to the maximum position.
5. Let the appliance heat up for 10 minutes.

i When using the appliance for the first time, smoke can occur. This is normal, due to burnt manufacturing residue.

6. Turn the **grill plate temperature control** 12 to 0.
7. Switch off the **ON/OFF switch** 10 to 0 to switch off the appliance.
8. Disconnect the appliance from the power source.
9. Let the appliance cool down.
10. Wipe both sides of the **two-sided grill plate** 1 with a slightly damp cloth.

▲ INSTALLATION

1. Place the **base plate 6** on a flat, stable, and heat and moisture resistant surface.
2. Place the appliance on the **base plate 6**.
3. Choose which side of the **two-sided grill plate 1** you want to use.

i The two-sided grill plate has two usable sides:

- Classic grooved grill with a grooved area for grilling meat and a smooth area for grilling fish, seafood, vegetables etc.;
 - Grill plate with round shapes for preparing crêpes.
4. Place the **two-sided grill plate 1** on the appliance.

▲ USING THE GRILL

1. Rub the **two-sided grill plate 1** with a paper towel soaked in cooking oil.
2. Turn the **grill plate temperature control 12** to 0.
3. Plug the **power cable 5** into the **power port 11**.
4. Plug the other end of the **power cable 5** into a power outlet.
5. Switch the **ON/OFF switch 10** to | to switch on the appliance.
6. Set the **grill plate temperature control 12** to the desired temperature.
7. Let the appliance heat up for 15 minutes.
 - The **grill plate temperature control 12** lights up red when the appliance is heating up.
 - The **grill plate temperature control 12** lights up green when the appliance has reached the set temperature.
 - The **grill plate temperature control 12** lights up red continuously when the griddle temperature control is turned to the maximum position.

The appliance is now ready for use.

▲ USING THE PANS

1. Place the **pans 7** on the **support surface 3**.
2. Switch the **lower heating element power switch 13** to | to switch on the **lower heating element 4**.
 - The **lower heating LED 14** lights up and the **lower heating element 4** heats up

i The temperature of the **lower heating element 4** cannot be adjusted.

▲ TIPS FOR PERFECT GRILLING

- The square raclette pans can be placed on the support surface.
- Always place the pans and plastic spatulas on the lower stainless steel plate, the so-called cold zone, when taking a break from eating. If you leave the pans with food residue on or in the hot appliance, the foods will burn in and the coating might be damaged.
- Never turn the grill plate around while the appliance is hot. The grill plate is very hot, you might burn yourself.
- Marinate or spice the meat before grilling, but salt it only after you have taken it from the grilling surface, otherwise the meat will lose too much of its juice.
- Bratwursts should be broached before grilling to prevent them from cracking.
- Ideally, take the grillables out of the fridge 30 minutes before grilling them. They will grill faster and you prevent thicker pieces of meat from staying cold inside.
- You can use the side of the grilling surface with the round shapes to make crêpes directly on the grilling surface.
- The raclette cheese and the mini pizza can be put in the square pans and placed on the support surface. This way, everything will be deliciously baked.
- Use a heat resistant plastic kitchen spatula to remove the grillables from the grill plate. Never use metal kitchen tools, these might damage the non-stick coating. For the same reason, do not cut directly on the grill plate or in the pans and never use barbecue tools. Avoid prolonged contact of the plastic tools with the hot grill plate / the hot pans.

▲ CLEANING AND CARE

We recommend cleaning the appliance after use. To clean the appliance:

1. Switch off the **lower heating element power switch 13** to O to switch off the **lower heating element 4**.
2. Switch off the **ON/OFF switch 10** to O to switch off the appliance.
3. Turn the **grill plate temperature control 12** to 0.
4. Disconnect the appliance from the power source.
5. Let the appliance cool down.
6. Fully disassemble the appliance.
7. Rinse the following parts with hot water:
 - Two-sided grill plate **1**
 - Pans **7**
 - Dough cutter **8**
 - Spatulas **9**

i These parts can also be soaked in hot water to loosen persistent residue.

8. Clean the appliance with a light damp cloth.
9. Leave the parts to dry.
10. Reassemble the appliance.

▲ STORAGE

Store the appliance in the original packaging in a dry and enclosed space.

▲ TECHNICAL SPECIFICATIONS

Model-No.	Type 791
Voltage / frequency	220–240 V~ / 50/60 Hz
Output upper heating element	1300 W
Output lower heating element	200 W
Power consumption in off mode	≤0.3 W
Dimensions (W × D × H)	27 × 57 × 16 cm
Weight	5.3 kg

Technical changes reserved.

▲ TROUBLESHOOTING

Problem	Possible cause	Solution
The appliance does not function.	The power connection is not working.	Make sure the power cable is connected to a working power source.
	The appliance is damaged.	Contact Solis or a Solis authorized service center.

▲ DISPOSAL



This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

▲ 2 YEAR GUARANTEE

 Only valid with a till receipt.

We provide a guarantee for this appliance, if the defect has demonstrably arisen as a result of faults in the material or construction, and has arisen despite proper handling and care. Glass breakage is not covered by the guarantee. The guarantee starts from the date of sale, as noted on the sales receipt, which must be enclosed with the appliance. For commercial use, the guarantee lasts for 12 months. The detailed guarantee conditions are available at www.solis.com.

▲ SOLIS CUSTOMER SERVICE



It is always worth calling us before sending in the article, as malfunctions can often be easily solved by the appropriate tip or trick from our experts. For country specific contact information, scan the QR code, follow the weblink or call us.

Solis of Switzerland Ltd

Solis-House • CH-8152 Glattbrugg • Switzerland
www.solis.ch • www.solis.com

S I N C E 1 9 0 8

Solis

Please visit us at

www.solis.com