

SINCE 1908

Solis

COMBI GRILL 3 IN 1

Type 796

User manual



CONTENTS

INTENDED USE	3
IMPORTANT SAFETY PRECAUTIONS	3
CONTENTS	6
APPLIANCE DESCRIPTION	6
CONTROL BUTTONS	8
BEFORE FIRST USE	8
INSTALLATION	9
CLEANING AND CARE	11
STORAGE	11
TECHNICAL SPECIFICATIONS	12
TROUBLESHOOTING	12
DISPOSAL	13
2 YEAR GUARANTEE	14
SOLIS CUSTOMER SERVICE	14

INTENDED USE

- This appliance is intended for preparing food in different ways. It can be used as a griddle, fondue pot and raclette grill.
- This appliance is intended to be used in household and similar applications such as:
 - staff kitchen areas in shops, offices and other working environments;
 - farm houses;
 - by clients in hotels, motels and other residential type environments;
 - bed and breakfast type environments.
- This appliance is intended for indoor use only.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Only use the appliance as described in this manual.
- Any use of the appliance other than described in this manual is regarded as misuse and may cause injury, damage to the appliance and void warranty.

IMPORTANT SAFETY PRECAUTIONS

GENERAL SAFETY INSTRUCTIONS

WARNING

- Ensure you have fully read and understood the instructions in this user manual before you install or use the appliance. Keep this document for future reference.

SAFETY INSTRUCTIONS REGARDING INSTALLATION

WARNING

- Do not drop the appliance and avoid bumping.
- Place the appliance on a stable, flat, heat and moisture resistant surface.
- Do not use a timer or a separate remote-control system that switches on the device automatically.
- Prevent the appliance from being pulled down. Do not leave the power cable hanging over table edges.

- Make sure that neither the appliance nor the power cord or plug comes into contact with hot surfaces, such as hotplates or a radiator, or that they come into contact with the appliance itself.
- Before using the appliance, check that the voltage stated on the type plate of your appliance matches your mains voltage. Do not operate the appliance with a multiway plug adapter.

SAFETY INSTRUCTIONS REGARDING USE

⚠ WARNING

- Children must be supervised to ensure that they not play with the appliance.
- Do not touch the grill plate when in use. The surface gets hot.
- Do not use the appliance when it is damaged. Switch off and disconnect the appliance from the power source to avoid the possibility of an electric shock.
- Do not touch the fondue pot when in use. The pot and the handles get hot during use. Touching it can cause burns.
- If the appliance would cause fire, only use fire blankets to extinguish the fire. Never use water to extinguish the fire. Using water could result in flares and short circuit.
- Do not use a sharp object to remove residue on the pans or griddle. This could damage the non-stick coating.
- Only use the appliance with the provided accessories or accessories recommended by Solis. Incorrect accessories or misuse can lead to damage to the appliance.

- Do not place spatulas or pans on the griddle. This could damage the spatulas or pans.
- Do not leave empty pans in the heating area. This could damage the pans. Place empty pans in the cooling area.
- Do not heat the fondue pot when it is empty. When not used, remove the pot from the appliance or fill it with water (max. 1 liter).

SAFETY INSTRUCTIONS REGARDING MAINTENANCE

WARNING

- Do not use the appliance if it is damaged or defective. Replace a damaged or defective appliance immediately
- If the power cable is damaged, replace it with an original special cable or assembly available from the manufacturer or its service agent.
- Switch off and disconnect the appliance from the power source before cleaning.
- Let the appliance cool down before cleaning.
- Never immerse the appliance in water or place it in a dishwasher. Only the griddle and the Fondue pot can be cleaned in a dishwasher.
- Do not use abrasive chemical cleaning agents such as ammonia, acid or acetone when cleaning the appliance. This can damage the appliance.

CONTENTS

Please check the contents of the package:

1x	COMBI GRILL 3 IN 1
-----------	--------------------

1x	Power cable
-----------	-------------

 
8x	Pan
-----------	-----

8x	Fondue fork
-----------	-------------

8x	Spatula
-----------	---------

APPLIANCE DESCRIPTION

The COMBI GRILL 3 IN 1 is a multifunctional cooking device to use while dining. Food can be heated in the pans underneath the griddle. On top of the griddle, food can be grilled. The fondue pot can be used for chocolate, broth or your own recipe of fondue. So gather around the table, and enjoy preparing and eating a diversity of food from your COMBI GRILL 3 IN 1!

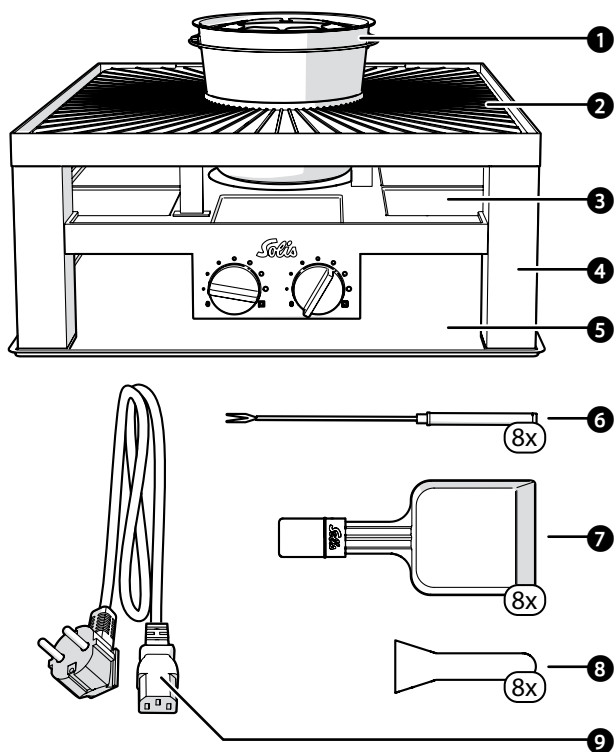


A

- ① Fondue pot
- ② Griddle
- ③ Heating area
- ④ Grill
- ⑤ Base plate / cooling area

- ⑥ Fondue fork
- ⑦ Pan
- ⑧ Spatula
- ⑨ Power cable

 ▲ CONTROL BUTTONS

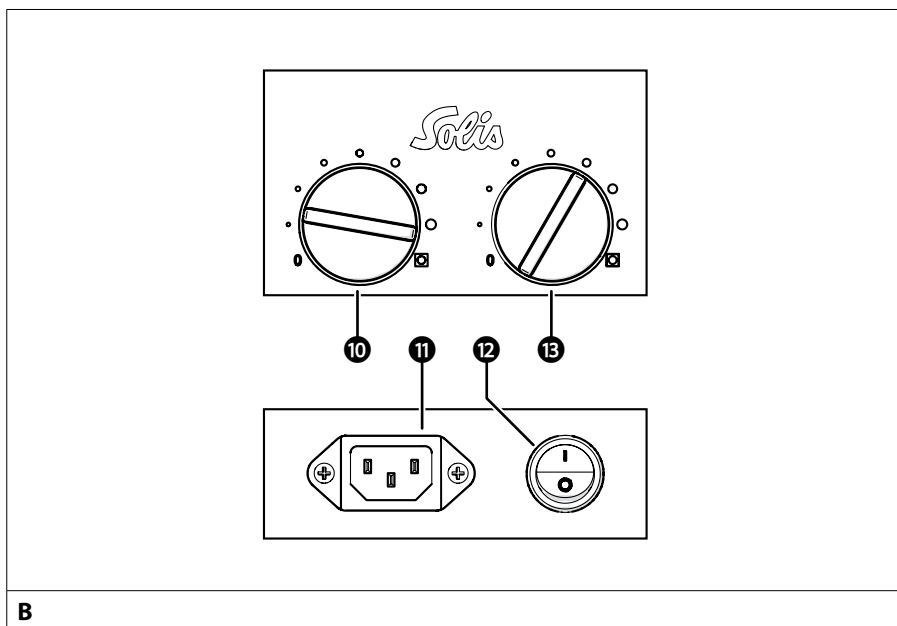

- | | | | |
|----|-----------------------------|----|--------------------------------|
| 10 | Griddle temperature control | 12 | Power switch |
| 11 | Power port | 13 | Fondue pot temperature control |

▲ BEFORE FIRST USE

 
Clean the appliance before first use:

1. Rinse the following parts with hot water:
 - Fondue pot 1
 - Griddle 2
 - Upper side of the base plate 5
 - Spatulas 8
 - Pans 7
 - Fondue forks 6
2. Install the appliance according to chapter Installation.
3. Fill the fondue pot with water (max. 1 liter).

i When using the appliance for the first time, smoke can occur. This is normal, due to burnt manufacturing residue.

4. Let the appliance heat up for 10 minutes.
5. Switch off and disconnect the appliance from the power source.
6. Let the appliance cool down.

▲ INSTALLATION

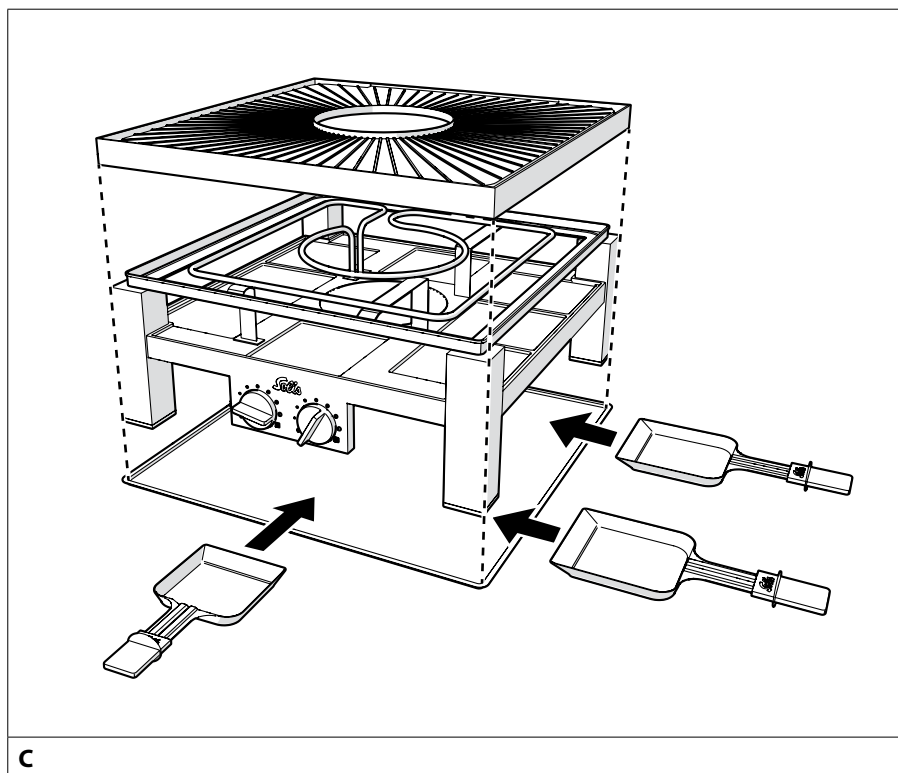

To install the appliance:

 
1. Place the **base plate** ⑤ on a stable, flat, heat and moisture resistant surface.
2. Place the **grill** ④ on the **base plate** ⑤.
3. Place the **griddle** ② on the **grill** ④.

When preparing for use with the **griddle** ②:

4. Lightly grease the **griddle** ②.

When preparing for use with **pans 7**:

5. Place the **pans 7** on the **baseplate / cooling area 5**.

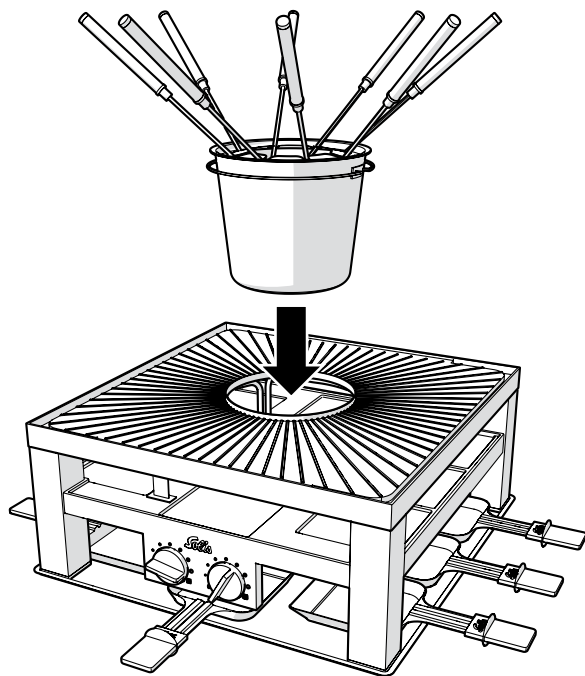

D

When preparing for use with the **fondue pot 1**:

6. Fill the **fondue pot 1** with a maximum of 1 liter.
7. Place the **fondue pot 1** into the **grill 4** (image D).
8. Place the **fondue forks 6** into the **fondue pot 1**.

To switch on the appliance:

9. Make sure both **temperature controls 10 13** are turned to 0.
10. Plug the **power cable 9** into the **power port 11**.
11. Plug the other end of the **power cable 9** into a power outlet.
12. Switch the **power switch 12** to I to switch on the appliance.

13. When preparing for use with the **griddle** ② or the **pans** ⑦, set the **griddle temperature control** ⑩ to the maximum position.
14. When preparing for use with the **fondue pot** ①, set the **fondue pot temperature control** ⑬ to the maximum position.
15. Let the appliance heat up for 10 minutes.
16. Set the **temperature controls** ⑩ ⑬ to the desired temperature.
 - The **temperature controls** ⑩ ⑬ light up red when the appliance is heating up.
 - The **temperature controls** ⑩ ⑬ light up green when the appliance has reached the set temperature.
 - The **temperature controls** ⑩ ⑬ stay red when the **temperature controls** ⑩ ⑬ are in maximum position.

The appliance is now ready for use.

▲ CLEANING AND CARE

We recommend cleaning the appliance after use. To clean the appliance:

1. Switch off and disconnect the appliance from the power source.
2. Let the appliance cool down.
3. Fully disassemble the appliance.
4. Empty the **fondue pot** ①.
5. Clean the **grill** ④ with a slightly damp cloth.
6. Rinse the following parts with hot water:
 - Fondue pot ①
 - Griddle ②
 - Top side of the base plate ⑤
 - Spatulas ⑧
 - Pans ⑦
 - Fondue forks ⑥

i The griddle and the fondue pot can also be cleaned in a dishwasher.

i Very dirty parts of the appliance can be cleaned by soaking them in hot water to loosen persistent dirt.

▲ STORAGE

Clean and assemble the appliance before storage. Store the appliance in the original packaging in a dry and enclosed space. Do not place anything on the appliance while in storage.

▲ TECHNICAL SPECIFICATIONS

Model-No.	Type 796
Voltage	220 - 240 V
Output griddle	1200 W
Output (heating plate fondue pot)	800 W
Dimensions (W x D x H)	36 x 36 x 14 cm
Weight	6.1 kg

Technical changes reserved.

▲ TROUBLESHOOTING

Problem	Cause	Solution
The appliance does not function.	The appliance is damaged.	Make sure the power cable is connected to a working power source. Switch on the appliance. If the appliance doesn't switch on, the appliance is damaged. Contact Solis or a Solis authorized service center.

DISPOSAL



EU 2012/19/EU

Information for correct disposal of the product in accordance with the European Directive EU 2012/19/EU.

At the end of its working life this equipment must not be disposed of as an household waste. It must be taken to special local community waste collection centres or to a dealer providing this service. Disposing of electrical and electronic equipment separately avoids possible negative effects on the environment and human health deriving from an inappropriate disposal and enables its components to be recovered and recycled to obtain significant savings in energy and resources. In order to underline the duty to dispose of this equipment separately, the product is marked with a crossed-out dustbin.

Solis of Switzerland Ltd reserves the right to carry out technical and visual changes and modifications to improve the product at any time.

SOLIS HELPLINE

This item stands out due to its long-life cycle and reliability. Despite this though, if a malfunction ever occurs, simply give us a call. Often a breakdown can be easily and quickly remedied with the right tip or technique without having to straight away send off the device for repair. We will give you all the advice and practical support you require. The contact addresses can be found at the end of this manual.

Keep the original packaging in a safe place so that you may use it in the event that transportation or shipping of the product becomes necessary.

▲ 2 YEAR GUARANTEE

 Only valid with a till receipt.

We provide a guarantee for this appliance, if the defect has demonstrably arisen as a result of faults in the material or construction, and has arisen despite proper handling and care. Glass breakage is not covered by the guarantee. The guarantee starts from the date of sale, as noted on the sales receipt, which must be enclosed with the appliance. For commercial use, the guarantee lasts for 12 months. The detailed guarantee conditions are available at www.solis.com.

▲ SOLIS CUSTOMER SERVICE

It is always worth calling us before sending in the appliance, as malfunctions can often be easily solved by the appropriate tip or trick from our experts. Please visit us at www.solis.com for countryspecific contact details. Naturally, we would also be pleased to provide you with information over the phone. Please contact us via the following telephone numbers:

For Switzerland:	+41 91 802 90 10
For Germany:	0800 724 0702
For Austria:	0800 22 03 92
For the Netherlands:	+31 85 4010 722
For Belgium:	+32 2 808 35 82
For the other countries:	+41 44 874 64 84

CH**Schweiz / Suisse / Svizzera**

✉ Solis Produzione SA
Centro Solis
Via Penate 4
CH – 6850 Mendrisio

Adresse für Warenretouren abweichend – siehe:

Adresse différente pour les retours de produit – voir:

Indirizzo differente per resi di merce - vedi:

www.solis.com

☎ 091 – 802 90 10
@ support.ch@solis.com
🌐 www.solis.ch

D**Deutschland**

✉ Solis Deutschland GmbH
Marienstrasse 10
D – 78054 Villingen-
Schwenningen

Adresse für Warenretouren abweichend – siehe:

www.solis.com

☎ 0800 – 724 07 02
@ info.de@solis.com
🌐 www.solis.de

AT**Österreich**

✉ Solis Austria
Austrasse 30
A – 6832 Sulz

Adresse für Warenretouren abweichend – siehe:

www.solis.com

☎ 0800 – 22 03 92
@ info.at@solis.com
🌐 www.solis.at

NL**Nederland**

✉ Solis Benelux BV
Stadskade 318
NL – 7311 XX Apeldoorn

Afwijkend adres voor productretouren – zie:

www.solis.com

☎ 085 – 4010 722
@ info.nl@solis.com
🌐 www.solisonline.nl

B**LU****België / Belgique****Belgien / Luxembourg**

✉ Solis Benelux BV
Stadskade 318
NL – 7311 XX Apeldoorn

Address for return shipment of goods differs – please refer to:

Afwijkend adres voor productretouren – zie:

Adresse différente pour les retours de produit – voir:

www.solis.com

☎ +32 – (0)2 – 808 35 82
@ info.be@solis.com
🌐 www.solis.be

INT**International**

✉ Solis Produzione SA
Centro Solis
Via Penate 4
CH – 6850 Mendrisio
Switzerland

Address for return shipment of goods differs – please

refer to **www.solis.com**

☎ +41 – 91 – 802 90 10
@ support.ch@solis.com
🌐 www.solis.com

Solis of Switzerland Ltd

Solis-House • CH-8152 Glattbrugg-Zürich • Switzerland
www.solis.ch • www.solis.com



Please visit us at

www.solis.com