

SINCE 1908

*Solis*

# EGG BOILER & MORE

Type 8272

**User manual**



## CONTENTS

|                              |    |
|------------------------------|----|
| INTENDED USE                 | 3  |
| IMPORTANT SAFETY PRECAUTIONS | 3  |
| CONTENTS                     | 6  |
| APPLIANCE DESCRIPTION        | 6  |
| BEFORE FIRST USE             | 8  |
| INSTALLATION                 | 8  |
| BOILING EGGS                 | 8  |
| USING THE COOKING TRAY       | 11 |
| CLEANING AND CARE            | 12 |
| STORAGE                      | 12 |
| REMOVING LIMESCALE           | 12 |
| TECHNICAL SPECIFICATIONS     | 13 |
| TROUBLESHOOTING              | 13 |
| DISPOSAL                     | 14 |
| 2 YEAR GUARANTEE             | 14 |
| SOLIS CUSTOMER SERVICE       | 14 |
| RECIPES                      | 15 |

## **INTENDED USE**

- This appliance is intended to boil eggs or poach eggs, preparing egg dishes and steam vegetables.
- Only use the appliance as described in this manual.
- This appliance is intended to be used in household and similar applications such as:
  - staff kitchen areas in shops, offices and other working environments;
  - farm houses;
  - by clients in hotels, motels and other residential type environments;
  - bed and breakfast type environments and not for commercial use.
- This appliance is intended for indoor use only.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazard involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Any use of the appliance other than described in this manual is regarded as misuse and may cause injury, damage to the appliance and void the warranty.

## **IMPORTANT SAFETY PRECAUTIONS**

### **GENERAL SAFETY INSTRUCTIONS**

#### **WARNING**

- Ensure you have fully read and understood the instructions in this user manual before you install or use the appliance. Keep this document for future reference.
- Do not use the appliance if a part is damaged or defective. Replace a damaged or defective appliance immediately.
- If the power cable or the appliance is damaged, return the whole appliance to Solis or to a service agent authorized by Solis for repair.
- Avoid injuries from the egg piercing pin.

## **SAFETY INSTRUCTIONS REGARDING INSTALLATION**

### **⚠ WARNING**

- Do not drop the appliance and avoid bumping.
- Place the appliance on a stable, flat, heat and moisture resistant surface.
- Never use the appliance with an external timer switch or remote control.
- Do not leave the power cable hanging over table edges to prevent the appliance from being pulled down. Make sure that neither the appliance nor the power cord or plug comes into contact with hot surfaces, such as hotplates or a radiator, or that they come into contact with the appliance itself.
- Never place the appliance where it could fall into water or other liquids (e.g. in or near a sink).
- Never reach for an appliance that has fallen into water or other liquids:
  - Always wear dry rubber gloves to unplug the appliance before taking it out of the water.
  - Do not start using the appliance again before having it checked for functionality and safety by Solis or a service center authorized by Solis.
- Do not place the appliance directly under a power outlet.
- Switch off and unplug the appliance before moving the appliance.
- Fully unwind the power cable before use.

## **SAFETY INSTRUCTIONS REGARDING USE**

### **⚠ WARNING**

- Children must be supervised to ensure that they not play with the appliance.
- Always keep the appliance and power cable away from children.
- Do not operate the appliance with wet hands.
- Only use the appliance with the provided accessories or accessories recommended by Solis. Incorrect accessories or misuse can lead to damage to the appliance.
- Do not move the appliance when in use.
- Do not switch on the appliance when no water has been poured in.
- Do not move the appliance when in use or when it contains water.
- Unplug the appliance when it is not in use.
- Only touch the handles and control buttons, when the appliance is operating. Parts of the appliance may get hot during use.
- Be careful when taking off the lid. Hot steam may escape.
- Always put on the lid during the cooking process.
- Do not touch the water reservoir. The heating element of the appliance stays hot for a while after use.

## SAFETY INSTRUCTIONS REGARDING MAINTENANCE

### WARNING

- Unplug the appliance before service and when replacing parts.
- Never immerse the appliance in water or other liquids or place it in a dishwasher.
- Do not use abrasive chemical cleaning agents such as ammonia, acid or acetone when cleaning the appliance. This can damage the appliance.
- Let the appliance cool down completely before cleaning and storage.

### CONTENTS

Please check the contents of the package:

---

1x EGG BOILER & MORE

---

1x Lid

---

1x Egg tray

---

1x Cooking tray

 
---

1x Measuring cup with piercing pin

---

### APPLIANCE DESCRIPTION

This appliance is an egg cooker. With the knob you can stepless adjust how long the eggs are cooked. The additional cooking tray gives you even more options. Poach and cook eggs or steam vegetables and more with your EGG BOILER & MORE!

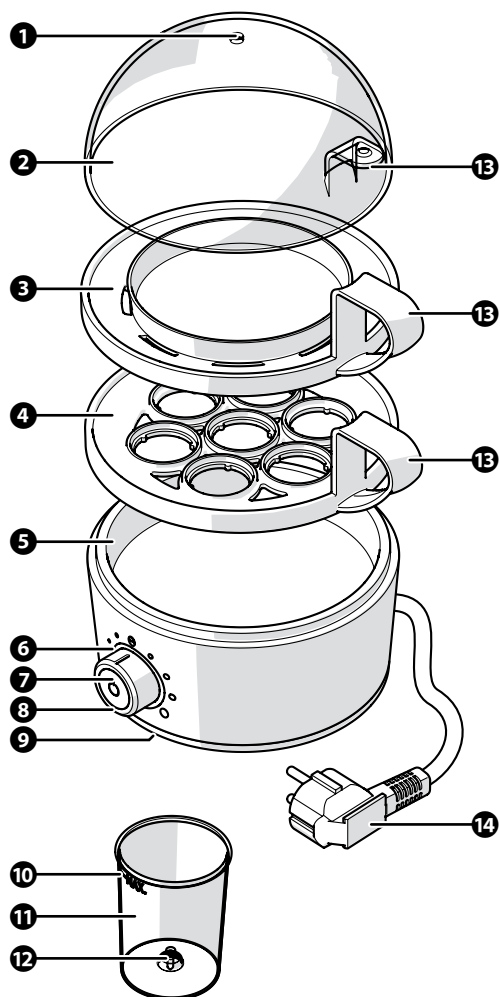

**A**

- |   |              |   |                     |
|---|--------------|---|---------------------|
| ① | Steam vent   | ⑧ | Cooking time wheel  |
| ② | Lid          | ⑨ | Power cable storage |
| ③ | Cooking tray | ⑩ | MAX indicator       |
| ④ | Egg tray     | ⑪ | Measuring cup       |
| ⑤ | Water bowl   | ⑫ | Egg piercing pin    |
| ⑥ | Power LED    | ⑬ | Handle              |
| ⑦ | Power button | ⑭ | Power cable         |

## ▲ BEFORE FIRST USE

To prepare the appliance before first use:

1. Remove the packaging from the appliance.
2. Clean the appliance with a damp cloth.
3. Rinse the following parts with hot water:
  - Egg tray ④
  - Cooking tray ③
  - Lid ②
  - Measuring cup ⑪

## ▲ INSTALLATION

- ⓘ We recommend the installation of a residual current circuit-breaker to provide additional protection when using electrical appliances. It is advisable to use a circuit-breaker with a nominal fault current of maximum 30 mA. Your local electrician can advise you.

To install the appliance:

1. Place the appliance on a flat, stable, and heat and moisture resistant surface.
2. Plug the **power cable** ⑭ into a power outlet.

 
The appliance is now ready for use.

## ▲ BOILING EGGS

- ⚠ Avoid injuries from the egg piercing pin at the bottom of the measuring cup.
- ⚠ Avoid spillage on the power connector.


To boil eggs:

1. Fill the **measuring cup** ⑪ with water up to the *MAX* indicator.
  2. Pour the water from the **measuring cup** ⑪ into the **water reservoir** ③.
- ⚠ Do not use more water than one measuring cup filled up to the *MAX* indicator.
3. Place the **egg tray** ④ on top of the **water reservoir** ⑤.

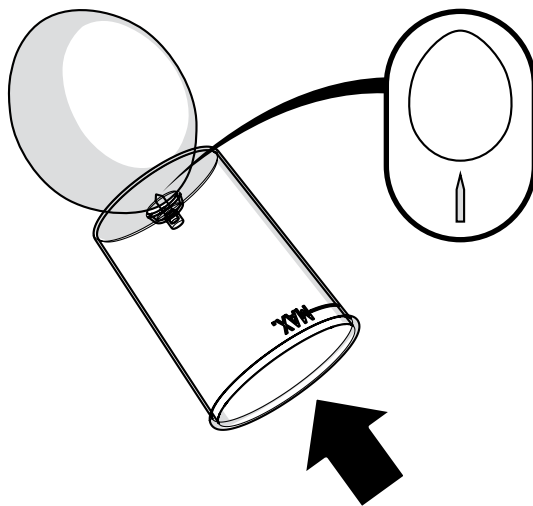

**B**

 4. Carefully pierce the bottom of the egg with the **egg piercing pin 12** (see image B). Do not crack the eggs.

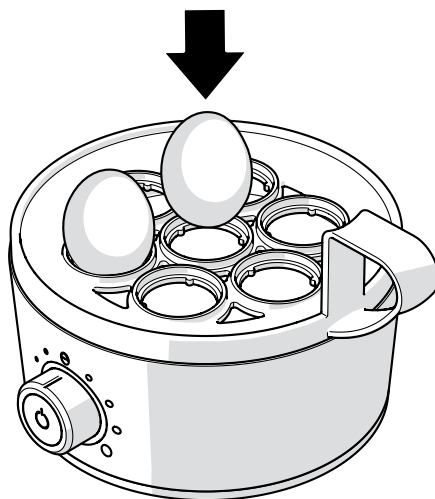

**C**

5. Place the pierced eggs in the **egg tray 4** (see image C).

6. Put the **lid** ② on the **egg tray** ④.
7. Rotate the **cooking time wheel** ⑧ to choose the desired hardness of the boiled eggs.

| Icon                                                                              | Meaning                                  |
|-----------------------------------------------------------------------------------|------------------------------------------|
|  | Soft-boiled (approximately 5 minutes)    |
|  | Medium-boiled (approximately 10 minutes) |
|  | Hard-boiled (approximately 15 minutes)   |

- ❗ The cooking time is steplessly adjustable. The wheel can therefore also be set to any position between these marks.
8. Press the **power button** ⑦ to start the boiling process. The **power LED** ⑥ lights up.

When the boiling process is finished a signal sounds and the appliance switches off.

⚠ Be careful when taking off the lid, hot steam may escape.

9. Grab the **handle** ⑬ to remove the **lid** ②.
10. Remove the **egg tray** ④ with the eggs with the **handle** ⑬.
11. Cool the eggs in cold water.
12. Unplug the **power cable** ⑭ from the power outlet.

## USING THE COOKING TRAY

-  Avoid injuries from the egg piercing pin at the bottom of the measuring cup.
-  Avoid spillage on the power connector.

To use the cooking tray:

1. Fill the **measuring cup** 11 with water up to the *MAX* indicator.
  2. Pour the water from the **measuring cup** 11 into the **water reservoir** 5.
-  Do not use more water than one measuring cup filled up to the *MAX* indicator.
3. Place the **cooking tray** 3 on top of the **water reservoir** 5.
  4. Place food in the **cooking tray** 3.
  5. Put the **lid** 2 on the **cooking tray** 3.
  6. Rotate the **cooking time wheel** 8 to choose the desired cooking time.
  7. Press the **power button** 7 to start the boiling process. The **power LED** 6 lights up.

When the boiling process is finished a signal sounds and the appliance switches off.

-  Be careful when taking of the lid, hot steam may escape.
8. Grab the **handle** 13 to remove the **lid** 2.
  9. Remove the **cooking tray** 3 with the **handle** 13.
  10. Unplug the **power cable** 14 from the power outlet.

## ▲ CLEANING AND CARE

⚠ Do not put the appliance or its parts in the dishwasher.

We recommend cleaning the appliance after every use. To clean the appliance:

1. Switch off and unplug the appliance.
2. Let the appliance cool down.
3. Rinse the following parts with hot water:
  - Egg tray ④
  - Cooking tray ③
  - Lid ②
  - Measuring cup ⑪
4. Dry all parts thoroughly.
5. Clean the appliance with a damp cloth.

## ▲ STORAGE

Store the appliance in a dry and enclosed space.

## ▲ REMOVING LIMESCALE

ⓘ Always follow the dosing instructions on the bottle of the descaling agent for the mixing ratios.

1. Fill the **water reservoir** ⑤ with the descaling solution.
2. Leave the solution in the **water bowl** ⑤ for 10 minutes.
3. Empty the **water reservoir** ⑤.

⚠ Avoid injuries from the egg piercing pin at the bottom of the measuring cup.

ⓘ The **water bowl** ⑤ must always be kept free from limescale, because it has a negative effect on the cooking result.

4. Fill the **measuring cup** ⑪ with water up to the *MAX* indicator.
5. Pour the water from the **measuring cup** ⑪ into the **water reservoir** ⑤.
6. Rotate the **cooking time wheel** ⑧ to the maximum setting.
7. Press the **power button** ⑦ to start the boiling process. The **power LED** ⑥ lights up.

When the boiling process is finished a signal sounds and the appliance switches off.

8. Discard the boiled water.

## ▲ TECHNICAL SPECIFICATIONS

|                               |                                        |
|-------------------------------|----------------------------------------|
| <b>Model-No.</b>              | Type 8272                              |
| <b>Voltage / frequency</b>    | 220–240 V~ / 50/60 Hz                  |
| <b>Output</b>                 | 400 W                                  |
| <b>Dimensions (Ø × H)</b>     | 17 × 16 cm                             |
| <b>Weight</b>                 | 900 g                                  |
| <b>Maximum number of eggs</b> | 7                                      |
| <b>Cooking time</b>           | 5 - 15 minutes (steplessly adjustable) |

Technical changes reserved.

## ▲ TROUBLESHOOTING

| <b>Problem</b>                   | <b>Possible cause</b>                      | <b>Solution</b>                                                                                                                           |
|----------------------------------|--------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------|
| The appliance does not function. | The power connection is not working.       | Make sure the power cable is connected to a working power source.                                                                         |
|                                  | The appliance is not switched on.          | Press the power button.                                                                                                                   |
|                                  | The appliance is damaged.                  | Press the power button. If the appliance doesn't switch on, the appliance is damaged. Contact Solis or a Solis authorized service center. |
| Eggs too soft/food undercooked.  | There is Limescale deposits in water bowl. | Descale the water bowl.                                                                                                                   |
|                                  | The selected cooking time is too short.    | Select a longer cooking time.                                                                                                             |

## ▲ DISPOSAL



This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

## ▲ 2 YEAR GUARANTEE

 Only valid with a till receipt.

We provide a guarantee for this appliance, if the defect has demonstrably arisen as a result of faults in the material or construction, and has arisen despite proper handling and care. Glass breakage is not covered by the guarantee. The guarantee starts from the date of sale, as noted on the sales receipt, which must be enclosed with the appliance. For commercial use, the guarantee lasts for 12 months. The detailed guarantee conditions are available at [www.solis.com](http://www.solis.com).

## ▲ SOLIS CUSTOMER SERVICE



It is always worth calling us before sending in the article, as malfunctions can often be easily solved by the appropriate tip or trick from our experts. For country specific contact information, scan the QR code, follow the weblink or call us.

## RECIPES

### POACHED EGGS

1. Put max. 1 **measuring cup 11** of cold water into the **water bowl 5** (not into the cooking tray).
2. Carefully crack max. 2 eggs into the **cooking tray 3**. Use a spoon to evenly distribute egg white around egg yolk so that it is completely enclosed.
3. Put the **lid 2** on the **cooking tray 3**.
4. Select lowest cooking setting and start the cooking process.

### ROYAL CUSTARD

1. Put max. 1 **measuring cup 11** of cold water into the **water bowl 5** (not into the cooking tray).
2. Crack 1 egg into a bowl and mix with 1 **measuring cup 11** of water. Add salt, instant broth, green onions, mushrooms, fried meat / shrimps, soy sauce, sesame seed oil etc. as desired.
3. Pour into the **cooking tray 3** and put on **lid 2**.
4. Select the medium cooking setting and start the cooking process.

### STEAMING VEGETABLES

1. Put max. 1 **measuring cup 11** of cold water into the **water bowl 5** (not into the cooking tray).
2. Wash the vegetables (broccoli, carrots, potatoes etc.) well and cut them into pieces. Place them into the **cooking tray 3** and distribute them evenly.
3. Put the **lid 2** on the **cooking tray 3**.
4. Select the desired cooking setting (al dente to well done) and start cooking process.

## **Solis of Switzerland Ltd**

Solis-House • CH-8152 Glattbrugg-Zürich • Switzerland  
[www.solis.ch](http://www.solis.ch) • [www.solis.com](http://www.solis.com)



Please visit us at

**[www.solis.com](http://www.solis.com)**