

SINCE 1908

Solis

POP & FUN

Type 8504

User manual



CONTENTS

INTENDED USE	3
IMPORTANT SAFETY PRECAUTIONS	3
CONTENTS	7
APPLIANCE DESCRIPTION	8
BEFORE FIRST USE	8
INSTALLATION	9
MAKING POPCORN	9
CLEANING AND CARE	11
STORAGE	11
TECHNICAL SPECIFICATIONS	11
TROUBLESHOOTING	12
DISPOSAL	13
2 YEAR GUARANTEE	13
SOLIS CUSTOMER SERVICE	13

INTENDED USE

- This appliance is intended as a popcorn maker.
- Only use the appliance as described in this manual.
- This appliance is intended to be used in household and similar applications such as:
 - staff kitchen areas in shops, offices and other working environments;
 - farm houses;
 - by clients in hotels, motels and other residential type environments;
 - bed and breakfast type environments and not for commercial use.
- This appliance is intended for indoor use only.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Any use of the appliance other than described in this manual is regarded as misuse and may cause injury, damage to the appliance and void the warranty.

IMPORTANT SAFETY PRECAUTIONS

General safety instructions

WARNING

- Ensure you have fully read and understood the instructions in this document before you install or use the appliance. Keep this document for future reference.
- Do not use the appliance if a part is damaged or defective. Replace a damaged or defective appliance immediately.
- If the power cable is damaged, it must be replaced with a power cable with the same specifications and technical values.
- Do not try to open or repair the appliance. It must be serviced by Solis or by a service agent authorized by Solis.
- Only use the product with a properly grounded power outlet.

Safety instructions regarding installation

⚠ WARNING

- Suffocation hazard! Keep packaging material, including plastic bags, out of the reach of children.
- Do not drop the appliance and avoid bumping.
- Place the appliance on a stable, flat, heat and moisture resistant surface.
- Keep a minimum safety distance of 20 cm between the appliance and walls, curtains or other materials and objects and make sure that the air around the appliance can circulate freely.
- Do not place the appliance in direct sunlight.
- Never expose the appliance to water, rain, moisture or high humidity.
- Before using the appliance, check that the voltage stated on the type plate of your appliance matches your mains voltage. Do not operate the appliance with a multiway plug adapter.
- Never use the appliance with an external timer switch or remote control.
- Do not place the appliance directly under a power outlet.
- Never place the appliance in such a way that it is at risk of falling into water or coming into contact with water resp. other liquids (e.g. in or near a sink).
- Never reach for an appliance that has fallen into water or other liquids:
 - Always wear dry rubber gloves to unplug the appliance before taking it out of the water.

- Do not start using the appliance again before having it checked for functionality and safety by Solis or a service center authorized by Solis.
- Fully unwind the power cable before use.
- Do not leave the power cable hanging over table edges to prevent the appliance from being pulled down. Make sure that neither the appliance nor the power cord or plug comes into contact with hot surfaces, such as hotplates or a radiator, or that they come into contact with the appliance itself.
- Always keep the power cable and the appliance away from usual walkways.
- Switch off and unplug the appliance before moving the appliance.

Safety instructions regarding use

WARNING

- Children must be supervised to ensure that they not play with the appliance.
- Do not operate the appliance with wet hands.
- Only use the appliance with the provided accessories or accessories recommended by Solis. Incorrect accessories or misuse can lead to damage to the appliance.
- Only dispense corn kernels suitable for making popcorn into the appliance. Never dispense other products, such as salt, sugar, spices, butter, cooking oil, etc. This may cause the appliance to catch fire.
- Never use the appliance when the lid and measuring cup are incorrectly placed on the appliance.

- Never overfill the measuring cup with corn kernels. Overfilling may cause improper operation. Fill the measuring cup to the brim with corn kernels.
- Do not switch on the appliance when it is empty.
- Never touch the surface of the appliance during and shortly after use. Parts of the appliance may get hot. Only touch the power switch during operation.
- Always hold the measuring cup by the handle, as the measuring cup becomes very hot during operation.
- Never touch the air vents on the lid during use. Hot air may cause skin burns.
- Never cover the air vents on the lid when the appliance is in use. Built-up hot air may cause a fire hazard.
- If the popcorn jams, switch off the appliance immediately and remove the jammed popcorn.
- Never use the appliance for more than 3 minutes continuously. After each use, allow the appliance to cool down for at least 5 minutes to prevent the appliance from overheating.
- If the appliance overheats, the thermostat automatically switches off the appliance. Allow the appliance to cool down completely before using it again.
- Do not move the appliance when in use.
- There may be hard, un-popped corn kernels inside the popcorn. Eat with caution to avoid teeth damage.
- Unplug the appliance when it is not in use.

Safety instructions regarding maintenance

WARNING

- Switch off and unplug the appliance before service or cleaning, and when replacing parts.
- Let the appliance cool down completely before cleaning.
- Never immerse the appliance in water or other liquids or place it in a dishwasher.
- Do not use abrasive chemical cleaning agents such as ammonia, acid or acetone when cleaning the appliance. This can damage the appliance.

CONTENTS

Please check the contents of the package:

1x	POP & FUN
-----------	-----------


1x	Lid
-----------	-----

1x	Measuring cup
-----------	---------------

1x	Power cable (depending on the country version, several power cables are also included)
-----------	--

▲ APPLIANCE DESCRIPTION

This appliance is a popcorn maker that prepares fresh popcorn quickly and efficiently without the use of oil. The appliance includes a measuring cup, a lid with vents for hot air, and an opening through which the popcorn is ejected.

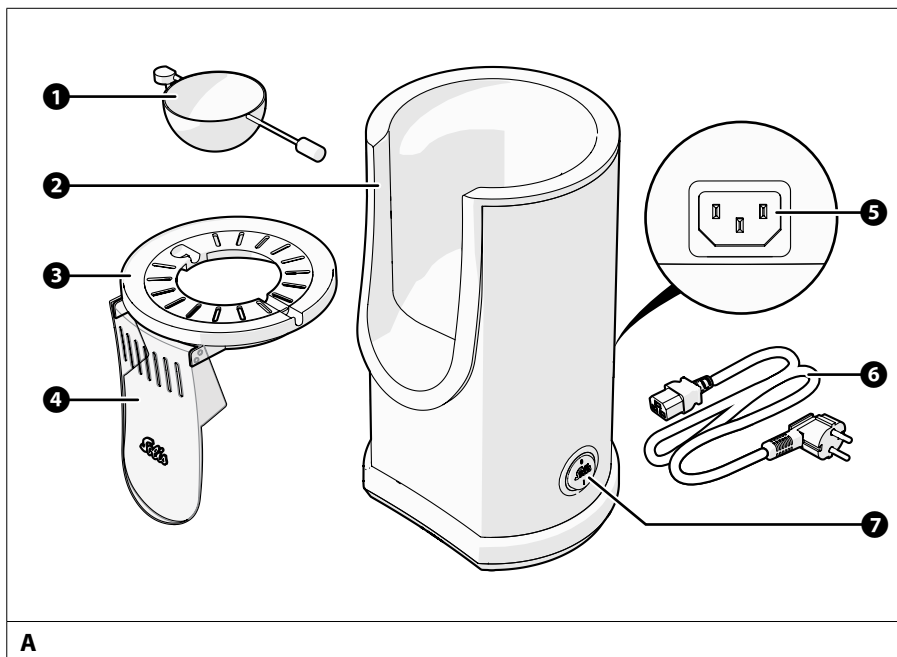

A

- 1 Measuring cup
- 2 Base
- 3 Lid
- 4 Chute cover

- 5 Power port
- 6 Power cable
- 7 Power switch

▲ BEFORE FIRST USE

To prepare the appliance before first use:

1. Remove all packaging materials and potential stickers or labels (except for the type plate) from the appliance.
2. Rinse the following parts with warm water:
 - Lid 3
 - Measuring cup 1

▲ INSTALLATION

To install the appliance:

1. Place the appliance on a flat, stable, and heat and moisture resistant surface.
2. Plug the **power cable 6** into the **power port 5**.
3. Plug the other end of the **power cable 6** into a power outlet.

The appliance is now ready for use.

▲ MAKING POPCORN

-  Only use corn kernels that are suitable for making popcorn.

To make one batch of popcorn:


1. Fill the **measuring cup 1** to the brim with plain corn kernels.

The measuring cup contains around 80 grams of plain corn kernels when filled, which is about 320–340 kernels.

2. Place the **measuring cup 1** in the **lid 3**.
3. Flip the **measuring cup 1** backward.

The corn kernels fall into the **base 2**.

4. Open the **chute cover 4** all the way until it reaches the end stop (see image B).

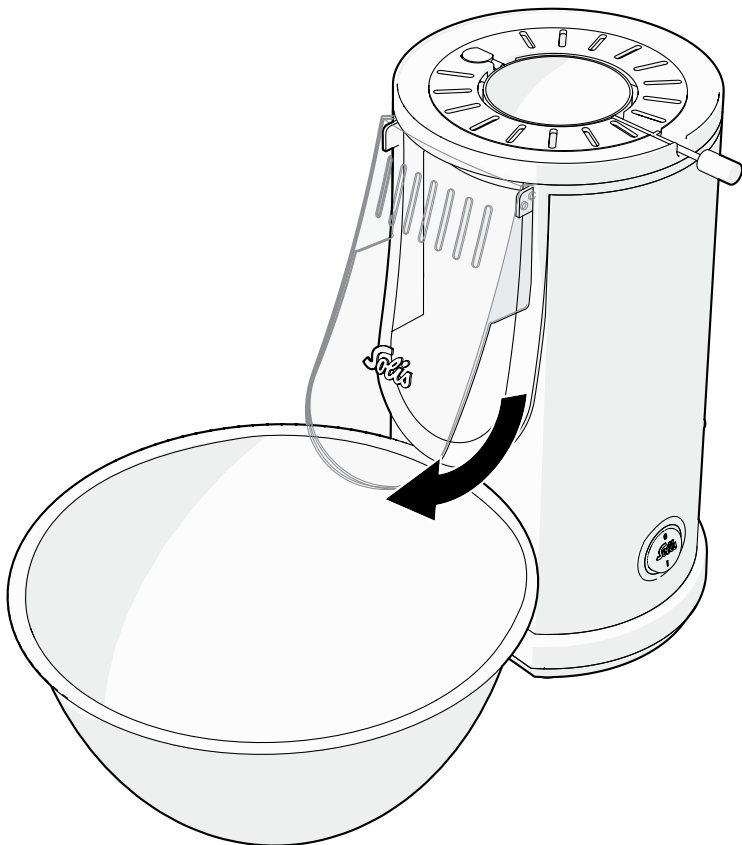

B

5. Place a shallow bowl of at least 2,5 L under the chute to collect the popcorn.

Always leave a distance of at least 2 cm between the edge of the bowl and the chute so that the popcorn does not accumulate.

6. Switch the **power switch** ⑦ to switch on the appliance.

The corn kernels are heated and the corn kernels become popcorn.

The popcorn will automatically dispense into the bowl.

It may happen that unpopped corn kernels are dispensed. The amount of unpopped corn kernels depends on the ambient conditions (room temperature, etc.).

7. Once popping slows down significantly, switch off the **power switch 7**.
8. If desired, season the popcorn with sugar, salt, spices, cocoa powder, or other ingredients. The seasoning will stick better if you first drizzle some cooking oil or melted butter over the popcorn. Butter can be melted in the measuring cup while the device is turned on. Only use popcorn kernels suitable for popcorn and never pour any other ingredients into the appliance!

▲ **CLEANING AND CARE**

We recommend cleaning the appliance after every use. To clean the appliance:

1. Switch off and unplug the appliance.
2. Let the appliance cool down completely.
3. Remove leftover corn kernels from the **base 2**.
4. Rinse the following parts with warm water:
 - Lid **3**
 - Measuring cup **1**
5. Wipe the inner container of the **base 2** with a dry cloth.
6. Clean the outside of the appliance with a slightly damp cloth.

▲ **STORAGE**

Store the appliance in the original packaging in a dry and enclosed space.

▲ **TECHNICAL SPECIFICATIONS**

Model-No.	Type 8504
Voltage / frequency	220–240 V~ / 50/60 Hz
Output	1200 W
Power consumption in off mode	0 W
Dimensions (W × D × H)	19 x 19 x 31 cm
Weight	1.6 kg

Technical changes reserved.

TROUBLESHOOTING

Problem	Possible cause	Solution
The appliance does not function.	The power connection is not working.	Make sure the power cable is connected to a working power source.
	The appliance is not switched on.	Make sure the power switch is set to I.
	The appliance is damaged.	Press the power switch. If the appliance doesn't switch on, the appliance is damaged. Contact Solis or a Solis authorized service center.
The appliance dispenses an excessive amount of unpopped corn kernels.	Not enough corn kernels are added to the measuring cup.	Increase the amount of corn kernels.
	The corn kernels are of low quality or old.	Use fresh, high-quality corn kernels.
The appliance dispenses burnt corn kernels.	The appliance is switched on for more than 3 minutes.	Switch off and allow the appliance to cool down for at least 5 minutes.
	There are leftover corn kernels in the base from a previous batch.	Remove leftover corn kernels from the base before adding new corn kernels.

▲ DISPOSAL



This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

▲ 2 YEAR GUARANTEE

 Only valid with a till receipt.

We provide a guarantee for this appliance, if the defect has demonstrably arisen as a result of faults in the material or construction, and has arisen despite proper handling and care. Glass breakage is not covered by the guarantee. The guarantee starts from the date of sale, as noted on the sales receipt, which must be enclosed with the appliance. For commercial use, the guarantee lasts for 12 months. The detailed guarantee conditions are available at www.solis.com.

▲ SOLIS CUSTOMER SERVICE



It is always worth calling us before sending in the article, as malfunctions can often be easily solved by the appropriate tip or trick from our experts. For country specific contact information, scan the QR code, follow the weblink or call us.

Solis of Switzerland Ltd

Solis-House • CH-8152 Glattbrugg • Switzerland
www.solis.ch • www.solis.com

S I N C E 1 9 0 8

Solis

Please visit us at

www.solis.com