

SINCE 1908

Solis

TURBO HEAT PLATEWARMER

Type 8651

User manual



CONTENTS

INTENDED USE	3
IMPORTANT SAFETY PRECAUTIONS	3
CONTENTS	9
APPLIANCE DESCRIPTION	9
CONTROL UNIT	10
INSTALLATION	10
PREHEATING PLATES	11
CLEANING AND CARE	13
TECHNICAL SPECIFICATIONS	14
TROUBLESHOOTING	14
DISPOSAL	15
2 YEAR GUARANTEE	15
SOLIS CUSTOMER SERVICE	15



Read the instructions.

▲ INTENDED USE

- This appliance is intended to preheat up to 10 plates.
- This appliance is intended to only warm plates made of glass or ceramic material (porcelain, earthenware, stoneware or similar).
- Only use the appliance as described in this manual.
- This appliance is intended to be used in household and similar applications such as:
 - staff kitchen areas in shops, offices and other working environments;
 - farm houses;
 - by clients in hotels, motels and other residential type environments;
 - bed and breakfast type environments.
- This appliance is intended for indoor use only.
- This appliance is not intended for medical use in hospitals.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazard involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Any use of the appliance other than described in this manual is regarded as misuse and may cause injury, damage to the appliance and void the warranty.

▲ IMPORTANT SAFETY PRECAUTIONS

GENERAL SAFETY INSTRUCTIONS

▲ WARNING

- Ensure you have fully read and understood the instructions in this user manual before you install or use the appliance. Keep this document for future reference.

- Do not use the appliance if a part is damaged or defective. Replace a damaged or defective appliance immediately.
- If the power cable is damaged, replace it with an original special cable or assembly available from the manufacturer or its service agent.
- Do not make any adjustments to the appliance, cable, plug or accessories.
- Check the appliance before each use and ensure that the appliance, power cord and plug are not damaged and no parts have come loose.
- If the appliance would cause fire, only use fire blankets to extinguish the fire. Never use water to extinguish the fire. Using water could result in flares and short circuit.
- Do not use the appliance for warming animals.
- Do not use the appliance as an electric blanket or pad, for heating up or keeping food, drinks or the like warm.
- This appliance must not be used by persons insensitive to heat and other very vulnerable persons who are unable to react to overheating.
- Children under the age of three are not to use this appliance due to their inability to react to overheating.

Icon

Meaning



Not to be used by very young children (0-3 years).



Do not insert pins.

SAFETY INSTRUCTIONS REGARDING INSTALLATION

⚠ WARNING

- Suffocation hazard! Keep packaging material, including plastic bags, out of the reach of children.
- Do not drop the appliance and avoid bumping.
- Place the appliance on a stable, flat, heat and moisture resistant surface.
- We recommend the installation of a residual current circuit-breaker to provide additional protection when using electrical appliances. It is advisable to use a circuit-breaker with a nominal fault current of maximum 30 mA. Your local electrician can advise you.
- Keep a minimum safety distance of 20 cm between the appliance and walls, curtains or other materials and objects and make sure that the air around the appliance can circulate freely.
- Before using the appliance, check that the voltage stated on the label of your appliance matches your mains voltage. Do not operate the appliance with a multiway plug adapter.
- Never use the appliance with an external timer switch or remote control.
- Do not use an extension cable with this appliance.
- Do not leave the power cable hanging over table edges to prevent the appliance from being pulled down. Make sure that neither the appliance nor the power cord or plug comes into contact with hot surfaces, such as hotplates or a radiator, or that they come into contact with the appliance itself.

- The power cable and control unit of the appliance can give rise to risks of entanglement, strangulation, tripping or treading if not correctly arranged. Make sure that excess ties and electric cords are arranged in a safe way.
- Never place the appliance in such a way that it is at risk of falling into water or coming into contact with water resp. other liquids (e.g. in or near a sink).
- Never reach for an appliance that has fallen into water or other liquids:
 - Always wear dry rubber gloves to unplug the appliance before taking it out of the water.
 - Do not start using the appliance again before having it checked for functionality and safety by Solis or a service center authorized by Solis.
- Switch off and unplug the appliance before moving the appliance.

SAFETY INSTRUCTIONS REGARDING USE

⚠ WARNING

- Children must be supervised to ensure that they not play with the appliance.
- Do not operate the appliance with wet hands.
- Only use the appliance with the provided accessories or accessories recommended by Solis. Incorrect accessories or misuse can lead to damage to the appliance.
- Only use the delivered original connection cable.
- Do not move the appliance when in use.
- Do not switch on the appliance when it is empty.

- Unplug the appliance when it is not in use.
- Keep hair, clothing, jewellery or kitchen tools away from the inside of the appliance and only reach into the appliance to insert or remove plates. Be careful, the plate warmer and the plates inside are hot.
- Do not leave the appliance unattended when in use.
- Do not use sharp or pointed objects on the appliance.
- Do not pierce or repair the appliance with needles or similar objects.
- Do not wrap the power cable around the appliance.
- Do not disconnect the product by pulling on the cable. Always grasp the connector and pull.
- Do not drip water into the power port .
- Always let the appliance cool down completely before storage.
- The appliance can damage heat or moisture sensitive surfaces. Always use an extra protective layer underneath the appliance when used on a heat or moisture sensitive surface.
- Do not insert more than 2 plates in each compartment.

SAFETY INSTRUCTIONS REGARDING MAINTENANCE

⚠ WARNING

- Unplug the appliance before service and when replacing parts.
- Let the appliance cool down before cleaning.
- Do not use abrasive chemical cleaning agents such as ammonia, acid or acetone when cleaning the appliance. This can damage the appliance.

- Do not try to open or repair the appliance. It must be serviced by Solis or by a service agent authorized by Solis.
- Cleaning and maintenance tasks may not be carried out by children without supervision.
- Only fold the appliance at the creases.
- Do not bend or roll up the appliance.
- Do not crease the appliance by placing items on top of it during storage.
- Unplug the power plug and remove the power cable with the control unit before cleaning the appliance. The inlet must be completely dry before reconnecting the power cable again.

▲ CONTENTS

 
Please check the contents of the package:

1x TURBO HEAT PLATEWARMER

1x Power cable with control unit


▲ APPLIANCE DESCRIPTION

The TURBO HEAT PLATEWARMER is a plate warmer that can preheat up to 10 plates. The appliance is equipped with a timer and turbo heat function. With this appliance you can serve yourself and your guests a meal on perfect and evenly warmed plates!

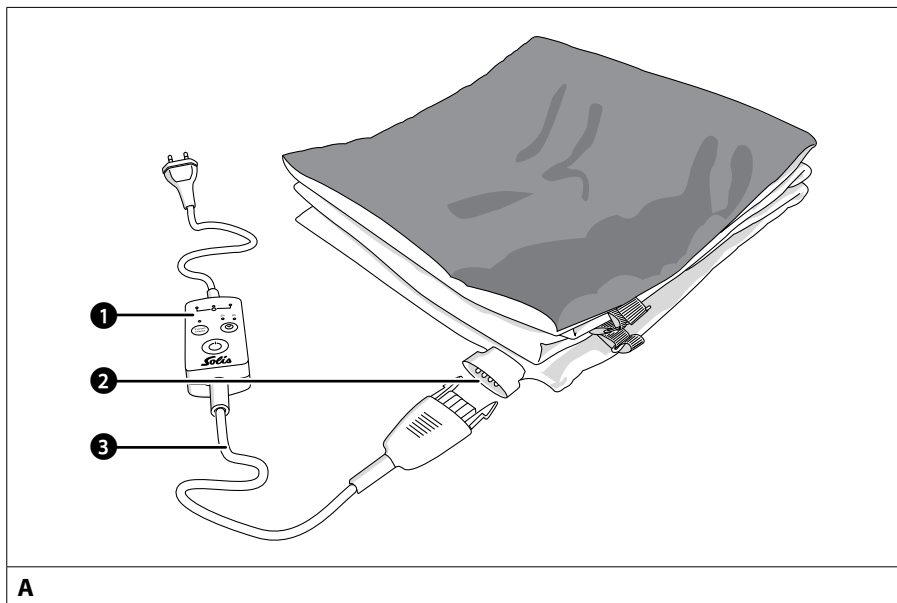

- ① Control unit
- ② Power port
- ③ Power cable

 ▲ CONTROL UNIT

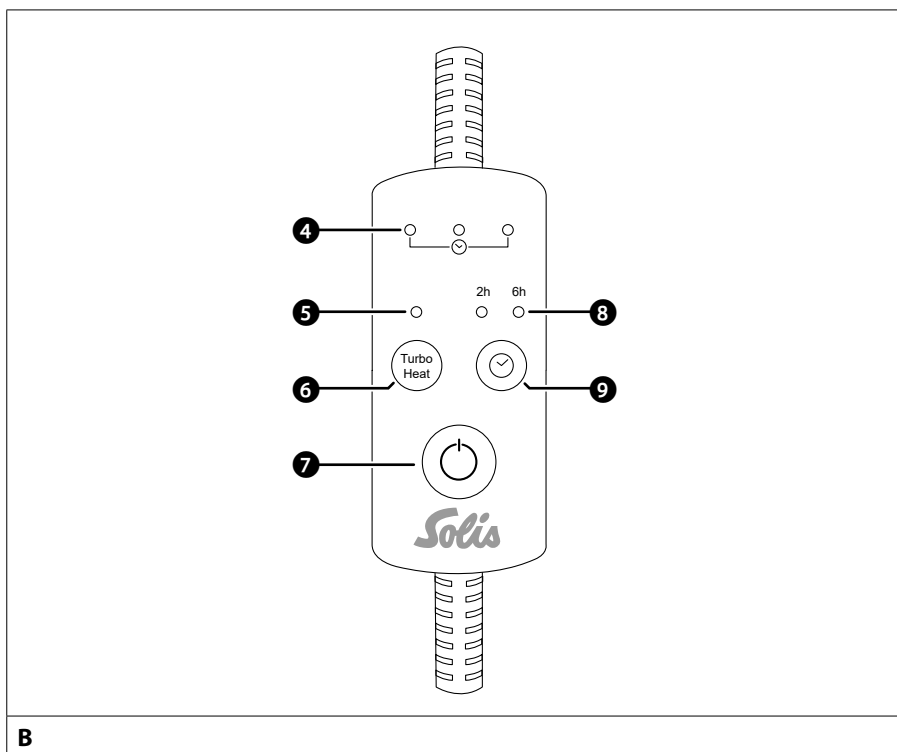

B

- | | | | |
|---|--------------------------|---|---------------------|
| 4 | Timer indicator LEDs | 7 | Power button |
| 5 | <i>TURBO HEAT</i> LED | 8 | Timer duration LEDs |
| 6 | <i>TURBO HEAT</i> button | 9 | Timer button |

 
▲ INSTALLATION

To install the appliance:

1. Place the appliance on a flat, stable, and heat and moisture resistant surface. Make sure the side with the power plug faces downwards.
2. Plug the **power cable 3** into the **power port 2**.
3. Plug the other end of the **power cable 3** into a power outlet.

The appliance is now ready for use.

▲ PREHEATING PLATES

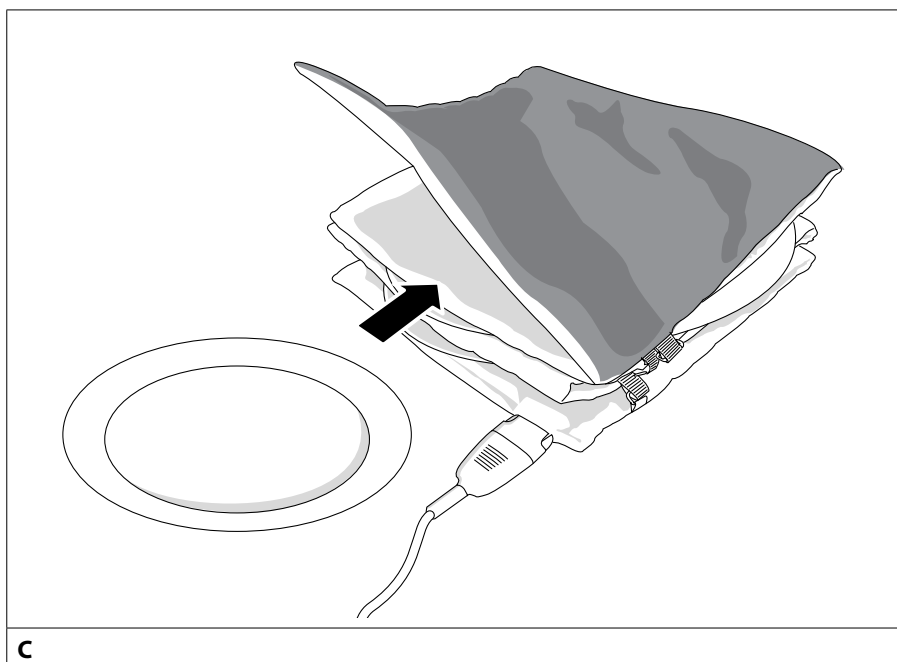

To preheat plates:

- ⚠ Do not drip water into the power port.
- ⚠ Make sure to wipe the water off the plates before placing them in the appliance.
- 1. Insert plates in the appliance (see image C).
- ⚠ Do not insert more than 2 plates in each compartment.
- 2. Press the **power button 7** to switch on the appliance. The **timer indicator LEDs 4** and the 2h **timer duration LED 8** light up. The appliance starts heating up.
- 3. Press the **timer button 9** to select the desired automatic switch off time. You can choose between 2 or 6 hours. The **timer duration LED 8** shows the selected time.

The timer indicator LEDs functions as follows:

After 50% of the first third of the switch-off time has passed (2 or 6 hours) the left LED starts blinking. After 100% of the first third of the switch-off time has passed, the left LED switches off.

After 50% of the second third of the switch-off time has passed (2 or 6 hours) the middle LED starts blinking. After 100% of the second third of the switch-off time has passed, the middle LED switches off.

After 50% of the third third of the switch-off time has passed (2 or 6 hours) the right LED starts blinking. After 100% of the third third of the switch-off time has passed, the right LED and the appliance switches off.

4. Optionally press the **TURBO HEAT button** ⑥ to reach the maximum working temperature faster. The **TURBO HEAT LED** ⑤ switches off after approximately 20 minutes and the appliance continues to heat in normal mode
5. Press the **power button** ⑦ to switch off the appliance before the chosen time has ended (2 or 6 hours).
6. Unplug the **power cable** ③ from the power outlet.
7. Take the plates out of the appliance.

▲ CLEANING AND CARE

We recommend cleaning the appliance regularly. To clean the appliance:

1. Switch off and unplug the appliance.
2. Let the appliance cool down.
3. Unplug the **power cable** ③ from the appliance.

⚠ Do not expose the power cable, the control unit or the power plug to water or moisture.

4. Wash the appliance. See the washing symbols for more information on washing the appliance.

Icon	Meaning
	Wash at 30°C (Hand wash or machine wash)
	Do not iron
	Tumble dry (low temperature)
	Do not dry clean
	Do not bleach
	Do not wring

5. Let the appliance dry completely before using it again.

⚠ Do not crease the appliance by placing items on top of it during storage.

▲ TECHNICAL SPECIFICATIONS

Model-No.	8651
Voltage / frequency	220 - 240 V / 50 Hz
Output	130 Watts
Fabric	50% polyester / 50% cotton
Dimensions (W × D)	32 × 33 cm
Maximum number of plates	10
Maximum plate diameter	32 cm
Weight	955 g
Power cable length	2.9 m

Technical changes reserved.

▲ TROUBLESHOOTING

Problem	Possible cause	Solution
The appliance does not function.	The power connection is not working.	Make sure the power cable is connected to a working power source. Make sure the power cable ③ is connected to the power port ② .
	The appliance is not switched on.	Press the power button ⑦ to switch on the appliance.
	The appliance is damaged.	Press any button. If the appliance doesn't switch on, the appliance is damaged. Contact Solis or a Solis authorized service center.

▲ DISPOSAL



This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

▲ 2 YEAR GUARANTEE

 Only valid with a till receipt.

We provide a guarantee for this appliance, if the defect has demonstrably arisen as a result of faults in the material or construction, and has arisen despite proper handling and care. Glass breakage is not covered by the guarantee. The guarantee starts from the date of sale, as noted on the sales receipt, which must be enclosed with the appliance. For commercial use, the guarantee lasts for 12 months. The detailed guarantee conditions are available at www.solis.com.

▲ SOLIS CUSTOMER SERVICE



It is always worth calling us before sending in the article, as malfunctions can often be easily solved by the appropriate tip or trick from our experts. For country specific contact information, scan the QR code, follow the weblink or call us.

Solis of Switzerland Ltd

Solis-House • CH-8152 Glattbrugg-Zürich • Switzerland
www.solis.ch • www.solis.com



Please visit us at

www.solis.com