

# Personal Audio System

## Operating Instructions



©2016 Sony Corporation Printed in China <http://www.sony.net/>

CFD-S70

## WARNING

To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.

To reduce the risk of fire, do not cover the ventilation opening of the appliance with newspapers, tablecloths, curtains, etc. Do not expose the appliance to naked flame sources (for example, lighted candles).

To reduce the risk of fire or electric shock, do not expose this apparatus to dripping or splashing, and do not place objects filled with liquids, such as vases, on the apparatus.

As the main plug is used to disconnect the unit from the mains, connect the unit to an easily accessible AC outlet. Should you notice an abnormality in the unit, disconnect the main plug from the AC outlet immediately.

The unit is not disconnected from the AC power source (mains) as long as it is connected to the wall outlet, even if the unit itself has been turned off.

Do not install the appliance in a confined space, such as a bookcase or built-in cabinet.

Excessive sound pressure from earphones and headphones can cause hearing loss.

Do not expose the batteries (battery pack or batteries installed) to excessive heat such as sunshine, fire or the like for a long time.

The nameplate is located on the bottom exterior.

### Owner's Record

The model and serial numbers are located on the bottom of the unit. Record these numbers in the space provided below. Refer to them whenever you call upon your Sony dealer regarding this product.

Model No. CFD-S70  
Serial No. \_\_\_\_\_

### Important Safety Instructions

- 1) Read these instructions.
- 2) Keep these instructions.
- 3) Heed all warnings.
- 4) Follow all instructions.
- 5) Do not use this apparatus near water.
- 6) Clean only with dry cloth.
- 7) Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- 8) Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9) Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10) Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 11) Only use attachments/accessories specified by the manufacturer.
- 12) Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
- 13) Unplug this apparatus during lightning storms or when unused for long periods of time.



This symbol is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.


This symbol is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

This graphical symbol is located on the bottom of the unit.



## Power Sources


Connect the AC power cord **A**, or insert six R14 (size C) batteries (not supplied) into the battery compartment **B**.

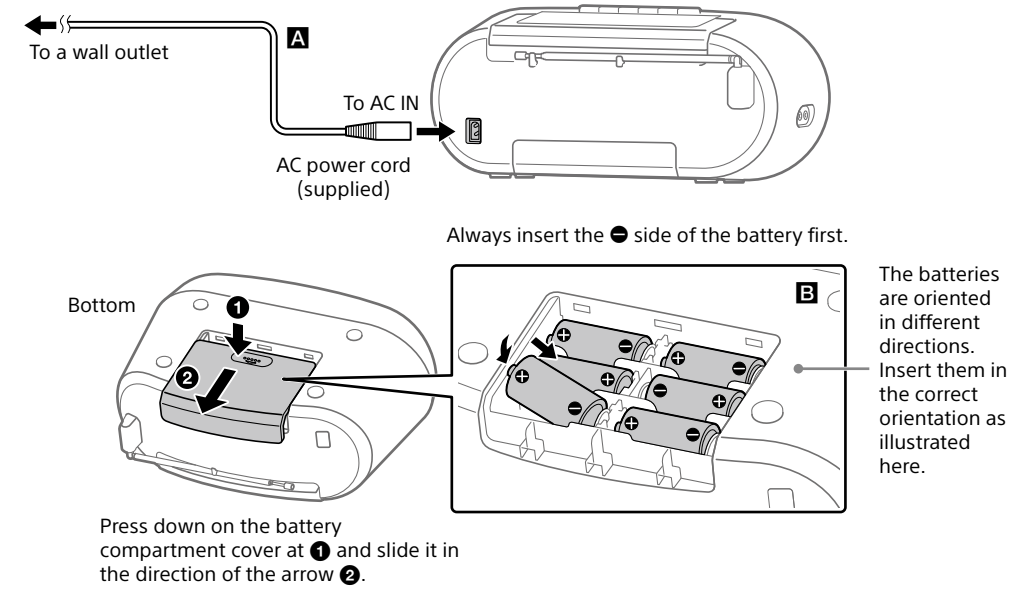

### Notes

- When the batteries are almost depleted, the alert message "LO-BATT" will flash. When this message appears, replace all the batteries with new ones. Also see "Checking the remaining battery power."
- When the AC power cord is disconnected or the batteries are removed, settings stored in the unit's memory will either be cleared or kept stored.
  - Cleared settings: Volume level, radio band (FM/AM) and frequency, FM mode setting (stereo/monaural), CD play mode, MEGA BASS setting (on/off), and last used function
  - Stored settings: Power management on/off setting (European models only) and preset radio stations registered using the auto/manual presetting function or **FAVORITE RADIO STATIONS (-SET)** **[12]** buttons
- Before you replace the batteries, be sure to remove any CDs or tapes, disconnect any optional components from the unit, and store the FM telescopic antenna **[17]** in its original position if extended.
- To use the unit on batteries, disconnect the AC power cord from the unit and the wall outlet.
- In standby mode with the AC power cord connected, "STANDBY" appears on the display.
- Do not mix an old battery with a new one or mix different type of batteries.

## Basic Operations

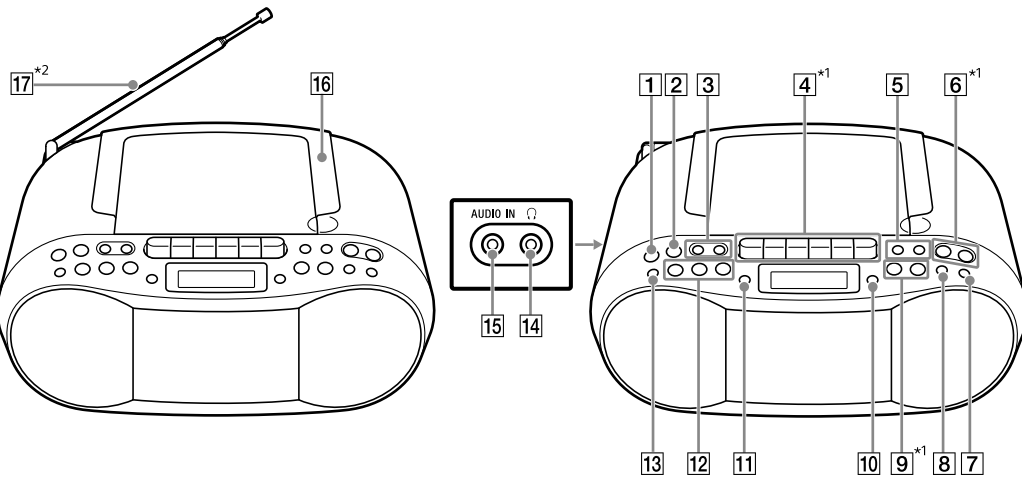

\*1 **CD PLAY/PAUSE** **[>II]** **[9]**, **VOLUME +** **[6]** and **<[4]** have a tactile dot.

\*2 Extend the FM antenna **[17]** only when listening to FM radio (for AM radio, a ferrite bar antenna is built into the unit).

## Before using the unit

### To turn the power on or off

Press **⏻** (power) **[1]**.

### To adjust the volume

Press **VOLUME +** or **-** **[6]**.  
The volume level of this unit is adjustable in steps from 0 to 31.  
If you want to adjust the volume level continuously, hold the button down, and release it at the desired level.

### To listen through headphones



Connect headphones to the **🔊** (headphones) jack **[14]**.  
To protect your hearing, avoid listening at excessive volume level when listening through headphones.

### To turn the bass enhancement function on or off


Press **MEGA BASS** **[7]**.  
When you press the button, the function will either switch on ("MEGA BASS" lights up) or off ("MEGA BASS" disappears). By default, this function is turned on.

## Playing a music disc

- 1 Press **⏻** **[1]** to turn on the power of the unit.
- 2 Insert the tip of your finger into the opening tab to open the CD compartment cover.

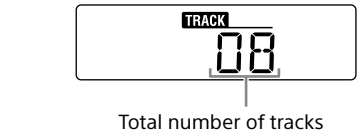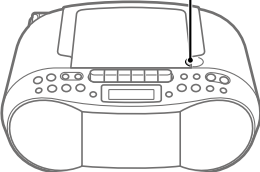

Total number of tracks

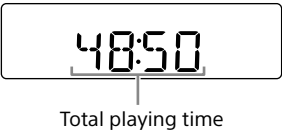

Total playing time



Total number of folders\*1

Total number of files

- 4 Press **CD PLAY/PAUSE** **[>II]** **[9]** to start playback.



Playing time\*2,3

\*1 If MP3 files are present only in the root directory, "001" appears on the display.

\*2 If the playing time is longer than 100 minutes, "1:--:--" appears on the display.

\*3 By pressing **DISPLAY/ENTER** **[11]**, the playback screen changes between showing playing time and the current track number (or showing the current folder and file numbers (MP3)).

### To switch to the CD function from other functions

Press **CD PLAY/PAUSE** **[>II]** **[9]**.

If a previously played disc has been set, playback will start automatically. Press **STOP** **[■]** **[9]** to stop playback if necessary.

| Other operations               |                                                                                                                                                                                                                                                                                                                                                                                                                            |
|--------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| To                             | Do this                                                                                                                                                                                                                                                                                                                                                                                                                    |
| Pause playback                 | Press <b>CD PLAY/PAUSE</b> <b>[&gt;II]</b> <b>[9]</b> . To return to playback, press the button again.                                                                                                                                                                                                                                                                                                                     |
| Stop playback                  | Press <b>STOP</b> <b>[■]</b> <b>[9]</b> . If you press <b>CD PLAY/PAUSE</b> <b>[&gt;II]</b> <b>[9]</b> after playback has been stopped, playback will start from the beginning of the track/file you were last playing (Resume Play). If you want to start playback from the first track/file on the disc, press <b>STOP</b> <b>[■]</b> <b>[9]</b> twice, and then press <b>CD PLAY/PAUSE</b> <b>[&gt;II]</b> <b>[9]</b> . |
| Select a folder on an MP3 disc | Press <b>TUNE/□</b> + or <b>-</b> <b>[3]</b> .                                                                                                                                                                                                                                                                                                                                                                             |
| Select a track/file            | Press <b>&lt;[4]</b> or <b>&gt;[5]</b> <b>[5]</b> . You can skip tracks/files one by one.                                                                                                                                                                                                                                                                                                                                  |
| Find a point in a track/file   | Hold down <b>&lt;[4]</b> or <b>&gt;[5]</b> <b>[5]</b> during playback, and release the button at the desired point. When locating a point while paused, press <b>CD PLAY/PAUSE</b> <b>[&gt;II]</b> <b>[9]</b> to start playback after the desired point is found.                                                                                                                                                          |


### Note

Resume Play is cancelled in the following cases:

- When you open the CD compartment cover.
- When you turn off the power.

### Example of folder structure and playing order

The playing order of the folders and files is as follows. However, the playing order may differ from the original order on the disc, depending on the recording method used.

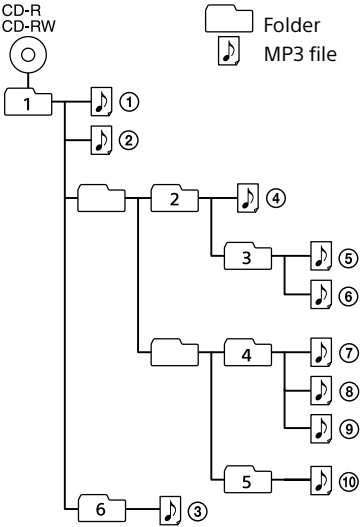


### Notes on MP3 discs

- When a disc is loaded, the unit reads all the files on that disc. During this time, "READ" is flashing. If there are many folders or non-MP3 files on the disc, it may take a long time for play to begin or for the next MP3 file to start to play.
- We recommend that non-MP3 files or unnecessary folders are excluded when creating MP3 discs.
- During playback, audio files other than MP3 files are skipped even if those files are included in a folder.
- This system can only play MP3 files that have a file extension of ".mp3".  
Note that even if the file name has the correct file extension but the actual file was created in a different audio format, this unit may produce noise or may malfunction.
- MP3 PRO format is not supported.
- This unit cannot play audio files on a disc in the following cases:
  - When the total number of audio files exceeds 413.
  - When the total number of folders on a single disc exceeds 99 (including the "ROOT" folder).
  - When the directory level (folder depths) exceeds 9 (including the "ROOT" folder).


## Listening to the radio

- 1 Press **⏻** **[1]** to turn on the power of the unit.
- 2 Adjust the antenna for optimum reception.

### FM

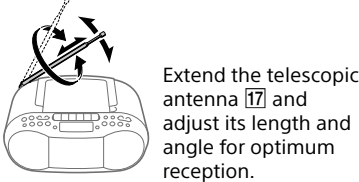

### AM

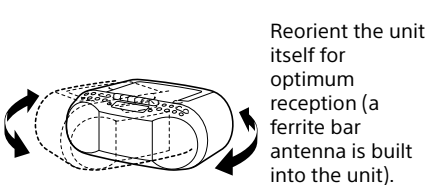


- 3 Press **FM/AM** **[2]** repeatedly to select the "FM" or "AM" band.
- 4 Hold down **TUNE/□** + or **-** **[3]** until the frequency digits begin to change on the display.  
The unit automatically scans the radio frequencies and stops when it finds a clear station.  
If you cannot tune to a station using automatic tuning mode, press **TUNE/□** + or **-** **[3]** repeatedly to change the frequency step by step.  
When an FM stereo broadcast is received, "ST" lights up on the display.

### Tips


- The unit of frequency of tuned stations is MHz for the FM band and kHz for the AM band.
- If the stereo FM reception is noisy, press **PLAY MODE** **[10]** repeatedly until "Mono" appears on the display. You will lose the stereo effect, but the reception will be improved.

### To improve radio reception

Use the radio in a place where radio signals can be easily received such as near a window. Also, adjust the antenna (FM) or reorient the unit itself (AM) for good reception.

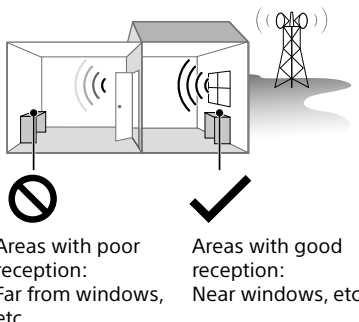

If the reception problem still persists, try changing the installation location.  
Avoid places such as the following:

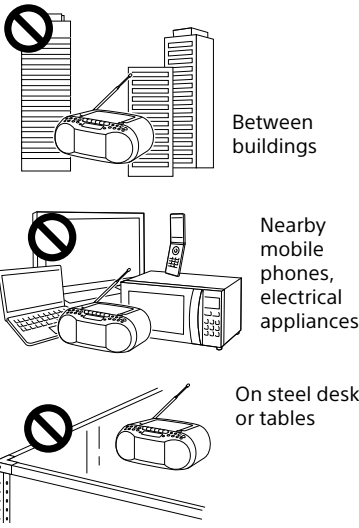

## Presetting radio stations

You can store radio stations in the unit's memory. You can preset up to 30 radio stations, 20 for FM and 10 for AM.

- 1 Press **⏻** **[1]** to turn on the power of the unit.
- 2 Press **FM/AM** **[2]** repeatedly to select the "FM" or "AM" band.
- 3 Hold down **FM/AM** **[2]** until "AUTO" flashes on the display.



- 4 Press **DISPLAY/ENTER** **[11]** to store the station.  
The stations are stored in memory from lower frequencies to higher ones.

### If a station cannot be preset automatically

You need to preset a station with a weak signal manually.

- 1 Press **FM/AM** **[2]** repeatedly to select a band.
- 2 Tune to the desired station.

- 3 Hold down **DISPLAY/ENTER** **[11]** until "FM-xx" or "AM-xx" flashes on the display.  
(Example: FM)



- 4 Press **PRESET +** or **-** **[5]** until the preset number for the station you want flashes on the display.
- 5 Press **DISPLAY/ENTER** **[11]** to store the station.  
If another station is already assigned to the selected preset number, that station is replaced by the new one.  
If you want to cancel presetting the station, press **STOP** **[■]** **[9]**.

### Tip

The preset radio stations remain in the unit's memory even in the following situations.

- The AC power cord is unplugged.
- The batteries are removed.

## Listening to preset radio stations

- 1 Press **⏻** **[1]** to turn on the power of the unit.
- 2 Press **FM/AM** **[2]** repeatedly to select the "FM" or "AM" band.
- 3 Press **PRESET +** or **-** **[5]** to select a stored preset number for the desired radio station.

### Tip

By repeatedly pressing **DISPLAY/ENTER** **[11]** while listening to the radio, the radio information changes between showing the preset number and the frequency.  
The preset number display automatically returns to the frequency display after 2 seconds have elapsed.

## Presetting stations to FAVORITE RADIO STATIONS buttons

You can preset up to three favorite stations to the three **FAVORITE RADIO STATIONS (-SET)** **[12]** buttons. Assign one FM or AM program for each button.

- 1 Press **FM/AM** **[2]** repeatedly to select the band "FM" or "AM."
- 2 Tune to the station you want to preset.
- 3 Press and hold the desired **FAVORITE RADIO STATIONS (-SET)** **[12]** until you hear a beep.  
The tuned station is preset to the selected button of **FAVORITE RADIO STATIONS (-SET)** **[12]** and the same number as that of the button will light up on the display.

(Example: Presetting FM 87.5 MHz to number **1**)



### To change the preset station

Repeat steps 1 to 3.  
The preset station on the button will be replaced by the new one.

## Listening to preset stations with FAVORITE RADIO STATIONS buttons

Press the desired **FAVORITE RADIO STATIONS (-SET)** **[12]** button.

 
### Note

To prevent the preset from being changed by mistake, do not hold down the button. If doing so, the preset on the button will be replaced by the currently tuned station.


## Playing a tape

Check the following items before starting operation.

- Use Type I (normal) tapes only. Type II (high position), Type III (ferro-chrome) and Type IV (metal) tapes are not supported.
- If there is tape slack, rewind the slack using a pencil to avoid damaging the tape or the unit.



- 1 Press **▶[4]** **[1]**, insert a cassette tape into the cassette tape compartment **2** and then close the compartment cover.

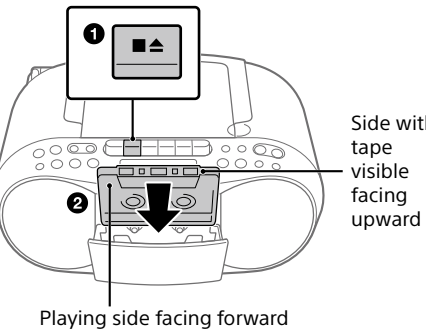

- 2 Press **<[4]** to start playback.

### Other operations

| To                     | Do this                                                                    |
|------------------------|----------------------------------------------------------------------------|
| Stop playback          | Press <b>■[4]</b> <b>[4]</b> .                                             |
| Pause playback         | Press <b>⏸[4]</b> <b>[4]</b> . To resume playback, press the button again. |
| Fast-forward or rewind | Press <b>&lt;&lt;[4]</b> or <b>&gt;&gt;[4]</b> <b>[4]</b> .                |
| Eject the cassette     | Press <b>■[4]</b> <b>[4]</b> .                                             |

### Notes

- Do not turn off the power during the tape playback. Doing so may cause malfunction. Make sure to stop playback before turning off the power.
- If the tape is wound to the beginning or end and **<<[4]** or **>>[4]** is not released, "STOP TAPE" will flash on the display. Make sure to press **■[4]** **[4]** to release the button. "STOP TAPE" starts flashing 8 minutes after a fast-forward (**<<[4]** **[4]**) or rewind (**>>[4]** **[4]**) operation. After about 10 minutes have elapsed, the unit turns off automatically.
- When "STOP TAPE" flashes, always check the **<<[4]** or **>>[4]** button and make sure to release the button.
- When the time set on the Sleep Timer has elapsed during playback, the "SLEEP" indicator will start flashing but the unit will not turn off. The unit will turn off after the end of playback.

## Recording on a tape

Check the following items before starting operation.

- Use Type I (normal) tapes only. Type II (high position), Type III (ferro-chrome) and Type IV (metal) tapes are not supported.
- Make sure that the overwrite protection tab has not been removed. If the tab has been removed, cover the broken tab using adhesive tape.
- Be sure to connect the AC power cord to avoid an unexpected recording failure.

- 1 Press **⏻** **[1]** to turn on the power of the unit, and then prepare the source you want to record.

### ■ To record CD-DA tracks or MP3 files on a disc

Place a disc in the CD compartment. Make sure not to start playback. See "Playing a music disc."


### ■ To record a radio program

Press **FM/AM** **[2]** repeatedly to select a band and tune to the desired station. See "Listening to the radio."

### ■ To record sound from a connected optional component

Press **AUDIO IN** **[8]** and connect an optional component such as a TV, portable digital music player, etc. to the **AUDIO IN** jack **[15]**, and then start playback.

- 2 Press **■[4]** **[1]**, insert a cassette tape into the cassette tape compartment **2** and then close the compartment cover.

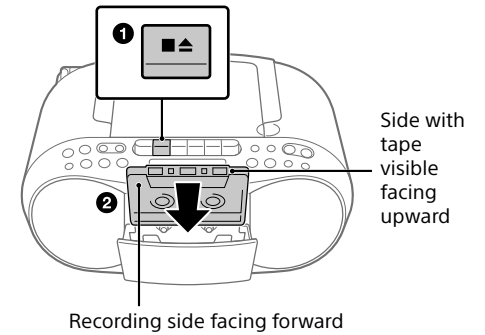

- 3 Press **▶[4]** **[1]** to start recording (the play button **<[4]** will depress automatically at the same time).

### ■ When recording from a disc

Playback starts automatically and recording of all the tracks/files on the disc proceeds from the first track/file. When the tape reaches the end, recording stops automatically.

### ■ When recording a radio program or sound from a connected optional component

Recording continues until the tape reaches the end.

### Note

When the time set on the Sleep Timer has elapsed during recording, the "SLEEP" indicator will start flashing but the unit will not turn off. The unit will turn off after the end of recording.

### Tips

- Adjusting the volume or the audio emphasis will not affect the recording level.
- If the AM program makes whistling sound after you have press **▶[4]** in step 3, press **PLAY MODE** **[10]** repeatedly to select the position of IS (Interference Suppress Switch) that may decrease the noise.

### Other operations

| To              | Do this                                                                     |
|-----------------|-----------------------------------------------------------------------------|
| Stop recording  | Press <b>■[4]</b> <b>[4]</b> .                                              |
| Pause recording | Press <b>⏸[4]</b> <b>[4]</b> . To resume recording, press the button again. |



**To record starting from a specific track/file**  
Press ◀◀ or ▶▶ [5] to select the track/file on the disc, then press [4].  
Playback starts automatically, and recording of the selected track/file and the following tracks/files proceeds until the tape reaches the end.

**To record from partway through the current CD-DA track or MP3 file**  
Press **CD PLAY/PAUSE (▶II)** [9] to pause playback where you want to start recording, then press ● [4].

**To record favorite CD-DA tracks or MP3 files on a disc**  
Create a program (see "Creating your own program (Program Play)"), then press ● [4] to start recording.

**To erase recorded cassette tapes**  
To erase a cassette tape, you need to record silence over the previous recording.

- 1 Press ⏻ [1] to turn on the power of the unit.
- 2 Insert a recorded tape into the cassette tape compartment.
- 3 Press ● [4].  
Erasing process starts, and previous recording is overwritten with silent data.

## Other Operations

### Selecting the CD play mode


You can select the CD play mode while a disc is stopped.  
Check the following items before selecting the CD play mode. If you try to set or change the play mode during playback, "PUSH STOP" will appear.

- When a disc is playing, be sure to stop playback by pressing **STOP (■)** [9].
- If you have switched to the CD function from another function by pressing **CD PLAY/PAUSE (▶II)** [9], press **STOP (■)** [9] once to stop playback.

Press **PLAY MODE** [10] repeatedly.



Each time you press the button, the indication changes as follows:

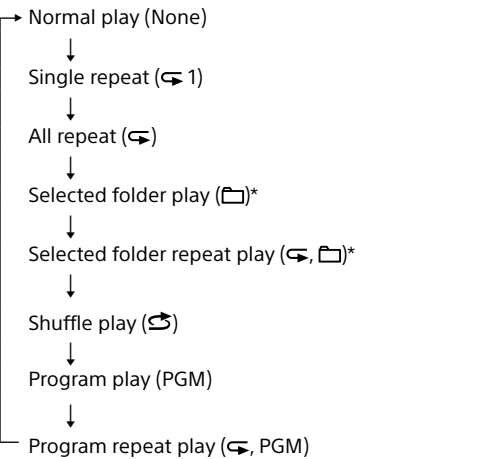

\* These functions are available only when playing MP3 files on an MP3 disc.

**Note**  
The selected CD play mode is cleared in the following situations.

- The AC power cord is unplugged.
- The batteries are removed.
- When you open the CD compartment cover.
- When you turn off the power of the unit.

### Playing tracks/files repeatedly (Repeat Play)

You can set the unit to repeatedly play CD-DA tracks on an audio CD, MP3 files on a CD-R/CD-RW disc, in normal and program play modes.

- 1 Press ⏻ [1] to turn on the power of the unit, and place a disc in the CD compartment.
- 2 Proceed as follows.

| To repeat                        | Do this                                                                                                                                                                                                                                                                                                                                            |
|----------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| A single track/file              | 1 Press <b>PLAY MODE</b> [10] repeatedly until "↺ 1" appears.<br>2 Press ◀◀ or ▶▶ [5] to select a track/file that you want to repeat. When you want to specify a folder that contains MP3 files, press <b>TUNE/□</b> + or - [3] first to select a folder, and then press ◀◀ or ▶▶ [5] to select a file.<br>3 Press <b>CD PLAY/PAUSE (▶II)</b> [9]. |
| All tracks/files                 | 1 Press <b>PLAY MODE</b> [10] repeatedly until "↺" appears.<br>2 Press <b>CD PLAY/PAUSE (▶II)</b> [9].                                                                                                                                                                                                                                             |
| A selected folder on an MP3 disc | 1 Press <b>PLAY MODE</b> [10] repeatedly until "📁" and "↺" appear.<br>2 Select a folder by pressing <b>TUNE/□</b> + or - [3].<br>3 Press <b>CD PLAY/PAUSE (▶II)</b> [9].                                                                                                                                                                           |

| To repeat               | Do this                                                                                                                                                                                         |
|-------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Programmed tracks/files | 1 Program tracks/files (see "Creating your own program (Program Play)").<br>2 Press <b>PLAY MODE</b> [10] until "PGM" and "↺" appear on the display.<br>3 Press <b>CD PLAY/PAUSE (▶II)</b> [9]. |

**To cancel Repeat Play**  
Press **STOP (■)** [9] to stop playback, and then press **PLAY MODE** [10] repeatedly until "↺" (or "↺ 1") disappears from the display.

**Playing tracks/files in random order (Shuffle Play)**  
You can set the unit to play CD-DA tracks on an audio CD, MP3 files on a CD-R/CD-RW disc in random order.


- 1 Press ⏻ [1] to turn on the power of the unit, and place a disc in the CD compartment.
- 2 Press **PLAY MODE** [10] repeatedly until "🔀" appears on the display.
- 3 Press **CD PLAY/PAUSE (▶II)** [9] to start Shuffle Play.

**To cancel Shuffle Play**  
Press **STOP (■)** [9] to stop playback, and then press **PLAY MODE** [10] repeatedly until "🔀" disappears from the display.

**Tip**  
During Shuffle Play, you cannot select the previous track/file by pressing ◀◀ [5].

**Creating your own program (Program Play)**  
You can arrange the playing order of up to 25 tracks/files on a disc.

- 1 Press ⏻ [1] to turn on the power of the unit, and place a disc in the CD compartment.
- 2 Press **PLAY MODE** [10] repeatedly until "PGM" appears on the display.
- 3 Press ◀◀ or ▶▶ [5] to select a track/file.  
When you want to specify a folder that contains MP3 files, press **TUNE/□** + or - [3] first to select a folder, and then press ◀◀ or ▶▶ [5] to select a file.
- 4 Press **DISPLAY/ENTER** [11].  
The track/file is programmed and the program step number appears.  
(Example: audio CD)

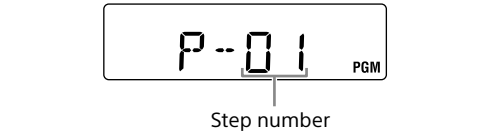

- 5 Repeat steps 3 and 4 to program additional tracks/files.
- 6 Press **CD PLAY/PAUSE (▶II)** [9] to start Program Play.  
To play the same program again, press **CD PLAY/PAUSE (▶II)** [9].  
Note that the created program is cleared in the following cases:
  - When you open the CD compartment cover.
  - When you turn off the power of the unit in the CD function.

**Note**  
If you try to program 26 tracks/files or more, "FULL" flashes on the display.

**To display programmed track/file information**  
After creating your own program, you can check information about programmed tracks/files.

Press **STOP (■)** [9] to stop playback, and then press **DISPLAY/ENTER** [11] repeatedly. The display changes as follows:

Total number of steps ↔ Last programmed track/file number

**To cancel Program Play**  
Press **STOP (■)** [9] to stop playback, and then press **PLAY MODE** [10] repeatedly until "PGM" disappears from the display.

**To delete all tracks/files in the current program**  
Stop playback, and then press **STOP (■)** [9]. "noSTEP" appears and you can create a new program, following the procedure "Creating your own program (Program Play)."

### Using the Sleep Timer

You can set the unit to turn off automatically after a set time has elapsed.

- 1 Press **SLEEP** [13].  
The default setting ("90") appears and the "SLEEP" indicator lights up on the display.
- 2 Press **SLEEP** [13] repeatedly to select the desired setting.  
90min → 60min → 30min → 15min  
OFF

Each time you press the button, the duration (in minutes) changes on the display, and the selected setting is confirmed automatically after about 4 seconds.

**To cancel the Sleep Timer**  
Press **SLEEP** [13] repeatedly to select "OFF" or turn off the unit.

- Tips**
- The "SLEEP" indicator will flash once every 8 seconds while the Sleep Timer is activated.
  - The "SLEEP" indicator will start flashing on the display about 1 minute before the unit turns off.
  - You can check the time left until the unit turns off by pressing **SLEEP** [13] again after setting the Sleep Timer. However, be sure not to perform this operation while the "SLEEP" indicator is flashing (flashing starts 1 minute before the unit turns off). If you perform this operation during this time, the Sleep Timer will be canceled instead of displaying the time remaining.
  - When the set time has elapsed during a tape function operation (playing/recording/erasing), the "SLEEP" indicator will start flashing but the unit will not turn off. The unit will turn off after the operation ends.
  - Be sure to release the ◀◀ or ▶▶ [4] button by pressing ▲ [4] after the unit is turned off when a fast-forward or rewind operation is performed in the tape function.
  - Be sure to turn off the power of the optional component connected to the AUDIO IN jack [15] when using the Sleep Timer in the audio in function. The Sleep Timer does not turn off the component power.

### Connecting optional components

You can enjoy the sound from an optional component, such as a TV, portable digital music player, through the speakers of this unit.  
Be sure to turn off the power of each component before making any connections.  
For details, refer to the instruction manual of the component to be connected.

- 1 Connect the AUDIO IN jack [15] to the line output jack of the portable digital music player, TV or other component using an audio connection cable (not supplied).
- 2 Turn the connected component on.
- 3 Press **AUDIO IN** [8] and start playing sound on the connected component.  
The sound from the connected component is output from the speakers.


To connect the unit to a TV or video recorder/player, use an extension cable (not supplied) with a stereo-mini jack on one end and two phono plugs on the other end.

### Checking the remaining battery power

When using the unit on battery power, you can check how much battery power remains.

**Battery levels and remaining battery power**

The remaining battery power is displayed in 5 levels as shown below (battery icons are for illustrative purposes only). The higher the number, the more battery power remains.

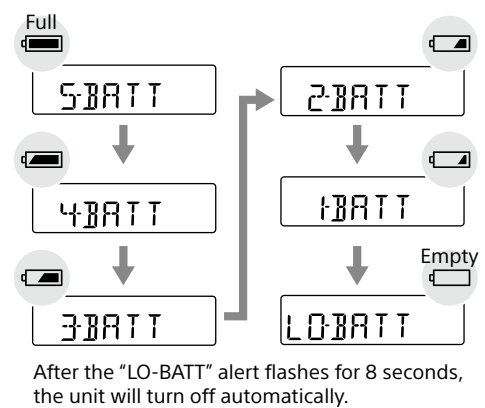


After the "LO-BATT" alert flashes for 8 seconds, the unit will turn off automatically.

To check the battery level, perform the following.

- **When using the CD or FM/AM function**  
Press **DISPLAY/ENTER** [11] repeatedly.
- **When using the tape or audio in function**  
Press **DISPLAY/ENTER** [11] once.

 **About the battery alert message**  
When the battery power drops to a certain level, the message "LO-BATT" will flash for 8 seconds and then the unit power will go off automatically. Replace all the batteries with new ones when this message appears.



**Note**  
If you turn the unit on again without replacing the batteries after "LO-BATT" appears, you may be able to use some function such as the tuner for a short period of time, but the following issues may occur. Replace the batteries with new ones when "LO-BATT" appears.


- The unit turns on but then turns off after "LO-BATT" flashes for 8 seconds.
- The unit will not turn on.

### Cleaning the tape heads and tape path

Failure to clean the tape heads can cause degraded sound quality or inability of the unit to play or record tapes. Clean the capstan, pinch roller, play/recording head, and erase-head after every 10 hours of use using a commercially available cleaning kit. Clean their surfaces as shown below using a cotton swab moistened with cleaning fluid included in the kit.

- **To clean the pinch roller, capstan and play/recording head**  
Press ◀ [4] (1) and then perform cleaning (2).

- **To clean the erase-head**  
Press ● [4] (3) while holding down the lever (2) with your finger, and then perform cleaning (2).

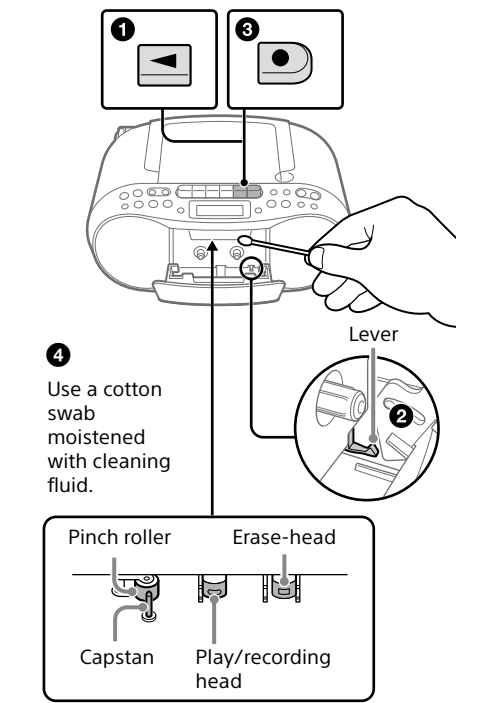

## Precautions

**Discs that this unit CAN play**

- Audio CD (CD-DA\*) tracks
- CD-R/CD-RW discs on which CD-DA tracks are recorded in CD-DA format.
- CD-R/CD-RW that contains MP3 files and is finalized\*\*2 correctly.

\* CD-DA is the abbreviation for Compact Disc Digital Audio. It is a recording standard used for audio CDs.

\*\*2 Finalizing is the process to make the CD-R/CD-RW discs playable on the consumer disc player products, and the finalizing can be enabled or disabled as optional settings during disc creation in most recording software.

**Discs that this unit CANNOT play**

- CD-R/CD-RW other than those recorded in audio CD format or formats conforming to ISO 9660 Level 1/Level 2 or Joliet
- CD-R/CD-RW of poor recording quality, CD-R/CD-RW with scratches or that is dirty, or CD-R/CD-RW recorded using an incompatible recording device
- CD-R/CD-RW that is unfinalized or finalized incorrectly
- BD-ROM, BD-R/BD-RE
- DVD-ROM, DVD-R/DVD-RW, DVD+R/DVD+RW, DVD-RAM

**Notes on discs**

- Clean the CD with a cleaning cloth if the disc is dirty. Wipe the disc from the center out. If there are scratches, dirt or fingerprints on the disc, a tracking error may occur.
- Do not use solvents such as benzene, thinner, commercially available cleaners or anti-static spray intended for vinyl LPs.
- Do not expose the CD to direct sunlight or heat sources such as hot air ducts, or leave it in a car parked in direct sunlight as there can be a considerable rise in temperature inside the car.
- Do not stick paper or a sticker on the CD, or scratch the surface of the CD.
- After playing, store the CD in its case.

**Note on DualDiscs**


- A DualDisc is a two sided disc product which mates DVD recorded material on one side with digital audio material on the other side. However, since the audio material side does not conform to the Compact Disc (CD) standard, playback on this product is not guaranteed.

**Music discs encoded with copyright protection technologies**

- This product is designed to playback discs that conform to the Compact Disc (CD) standard. Recently, various music discs encoded with copyright protection technologies are marketed by some record companies. Please be aware that among those discs, there are some that do not conform to the CD standard and may not be playable by this product.

**Notes on cassettes**

- Remove the overwrite protection tab from side A or B to prevent accidental recording. If you want to reuse the tape for recording, cover the broken tab using adhesive tape.

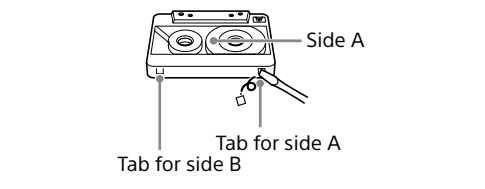

- The use of a cassette tape with more than 90 minutes of play time is not recommended except for long, continuous recording or playback.

**On safety**

- As the laser beam used in the CD player section is harmful to eyes, do not attempt to disassemble the casing. Refer servicing to qualified personnel only.
- Should any solid object or liquid fall into the unit, unplug the unit, and have it checked by qualified personnel before operating it any further.
- Discs with non-standard shapes (e.g., heart, square, star) cannot be played on this unit. Attempting to do so may damage the unit. Do not use such discs.

**On power sources**

- For AC operation, use the supplied AC power cord; do not use any other cord.
- Unplug the unit from the wall outlet if it is not to be used for an extended period of time.
- When not using the batteries, remove them to avoid damage that can be caused by battery leakage or corrosion.

**On placement**


- Do not leave the unit in a location near heat sources, in a place subject to direct sunlight, excessive dust or mechanical shock, or in a car subject to the direct rays of the sun.
- Do not place the unit near the appliances that generate heat, such as lighting fixtures or heaters. The heat from those appliances may deform the enclosure and cause the system to malfunction.
- Do not place the unit on an inclined or unstable surface.
- Do not place anything within 10 mm of the rear of the cabinet. The ventilation openings must be unobstructed for the unit to operate properly and prolong the life of its components.
- Since a strong magnet is used for the speakers, keep personal credit cards using magnetic coding or spring-wound watches away from the unit to prevent possible damage from the magnet.

**On operation**

- If the unit is brought directly from a cold to a warm location, or is placed in a very damp room, moisture may condense on the lens inside the CD player section. Should this occur, the unit will not operate properly. In this case, remove the CD and wait about an hour for the moisture to evaporate.

**On handling the unit**

- Do not leave the CD compartment open to avoid dust and debris contamination.
- When carrying the unit, hold it by the handle [16] to prevent it from dropping.

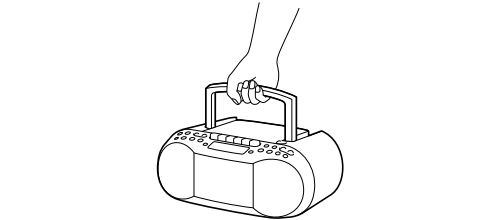

**On cleaning the cabinet**

- Clean the cabinet, panel and controls using a soft cloth slightly moistened with a mild detergent solution. Do not use any type of abrasive pad, scouring powder, or solvent, such as alcohol or benzene.

If you have any questions or problems concerning your unit, consult your nearest Sony dealer.

## Troubleshooting

**General**

**"LO-BATT" flashing message appears on the display.**

- Replace all the batteries with new ones. This message appears when using the unit on batteries and the battery power drops to a certain level.

**The power does not turn on.**

- Make sure the AC power cord is connected to the wall outlet securely.
- Make sure the connector of AC power cord is inserted into the AC IN jack securely.
- Check if the batteries are inserted correctly, matching the polarities.

**There is no sound.**

- Make sure the appropriate function is selected for the music or sound source you want to listen to.
- Unplug the headphones when listening through speakers.

**The sound is noisy.**

- Is someone using a mobile phone or other equipment emitting radio waves near the unit? If so, move the unit away from such devices.

**A small humming noise is heard from the radio.**

- This is not a malfunction. You may hear a small humming noise from the radio depending on the status of the power supply.

**CD player**

**The CD player does not play even when a CD is in place.**

- Place the CD with the label side up.
- Clean the CD.
- Take out the CD and leave the CD compartment open for about an hour to dry moisture condensation.
- The CD-R/CD-RW is blank or unfinalized.
- There are no playable MP3 files on the disc.
- There is a problem with the quality of the CD-R/CD-RW, recording device or application software.

**"noCD" appears when the disc is loaded.**

- No disc is set in the CD compartment. Set a disc.
- The CD may have a reading problem. Replace the disc.
- The CD may be placed upside down. Place the disc with the label side up.
- An unplayable disc (DVD, BD, etc.) is loaded. Replace the disc.

**"00" appears on the display when the disc is loaded.**

- No audio files recorded in supported formats, or a file to be played back has an unsupported file extension.

**"Err" appears when the disc is loaded.**

- The CD may be dirty. Clean the disc.
- The CD may have scratches. Replace the disc.
- The CD may have a reading problem. Replace the disc.
- A blank disc may be set in the CD compartment.

**The sound drops out.**

- Reduce the volume.
- Clean the CD, or replace it if the CD is badly damaged.
- Place the unit in a location free from vibrations.
- Clean the lens with a commercially available blower.
- The sound may drop out or noise may be heard when using a poor quality CD-R/CD-RW or if there is a problem with the recording device or application software.

**Starting playback takes more time than usual.**

- The following discs take a longer time to start playback.
  - A disc recorded with a complicated tree structure.
  - A disc that has many folders, files or non-MP3 files.

**Radio**

**The sound is weak or reception is poor.**

- Replace all the batteries with new ones.
- Move the unit away from nearby TVs.
- For FM reception, extend the antenna to its full length, and reorient it for best FM reception. For AM reception, reorient the unit itself to find the best reception.
- If you are in a building, listen near a window.
- If a mobile phone is placed close to the unit, a loud noise may be heard from the unit. Keep the phone away from the unit.

**The TV picture is unstable.**

- If you are listening to an FM program near a TV with an indoor antenna, move the unit away from the TV.

**Tape**

**The tape does not move when you press an operation button.**

- Close the cassette compartment cover securely.

**Noise is heard during playback.**

- This is not a malfunction. You may hear background noise ("hissing noise"), mechanical noise, or noise due to electromagnetic interference in the playback.

**The ● [4] button does not function or the tape does not start playback or recording.**

- Make sure that the overwrite protection tab has not been removed.

**Poor or distorted playback, recording or erasing quality.**

- Clean the capstan, pinch roller, play/recording head and erase-head. See "Cleaning the tape heads and tape path" for details.
- Demagnetize the heads using a commercially available tape head demagnetizer.
- Use Type I (normal) tapes only. Type II (high position), Type III (ferro-chrome) and Type IV (metal) tapes are not supported.

After trying the suggested remedies, if the problem persists, unplug the AC power cord or remove all the batteries. After all the indications on the display disappear, plug in the AC power cord again, or re-insert the batteries. If the problem persists, consult your nearest Sony dealer.

## Specifications

**AUDIO POWER SPECIFICATIONS**  
POWER OUTPUT AND TOTAL HARMONIC DISTORTION (The United States model only)  
With 4-ohm loads, both channels driven from 150 Hz – 10,000 Hz; rated 1.1 W per channel-minimum RMS power, with no more than 10 % total harmonic distortion in AC operation.

**CD player section**

System  
Compact disc digital audio system  
Laser diode properties  
Emission duration: Continuous  
Laser output: Less than 44.6 μW  
(This output is the value measurement at a distance of 200 mm from the objective lens surface on the optical pick-up block with 7 mm aperture.)

Number of channels  
2

Frequency response  
20 Hz – 20,000 Hz +/-1/2 dB

Wow and flutter  
Below measurable limit

Supported audio format  
MP3 (MPEG 1 Audio Layer-3)

**Radio section**  
Frequency range  
FM: 87.5 MHz – 108 MHz (100 kHz step)  
AM: 530 kHz – 1,710 kHz (10 kHz step)

Antennas  
FM: Telescopic antenna  
AM: Built-in ferrite bar antenna

**Tape deck section**

Recording system  
4-track 2-channel, stereo  
Fast winding time  
Approx. 150 s (sec.) with Sony cassette C-60  
Frequency response  
Type I (normal): 80 Hz – 10,000 Hz

**Input**  
AUDIO IN  
Stereo mini jack

**Output**  
⚠ (headphones) stereo mini jack  
For 16 Ω – 32 Ω impedance headphones

**General**  
Speaker  
Full range, 8 cm (3 1/4 in) dia., 4 Ω, cone type (2)

Power output  
1.7 W + 1.7 W (at 4 Ω, 10% harmonic distortion)

Power requirements  
120 V AC, 60 Hz (AC power supply)  
9 V DC (6 R14 (size C) batteries)

Power consumption  
11 W  
Less than 1 W (during standby mode)  
Battery Life\*1, \*2  
Playback of CD  
Approx. 10 hours (at a volume level of around 23)  
Recording FM programs  
Approx. 23 hours  
Playback of tape  
Approx. 15 hours (at a volume level of around 23)  
\*1 Measured by Sony standards. The actual battery life may vary depending on the circumstances of the unit or operating conditions.  
\*2 When using Sony alkaline batteries.

Dimensions  
Approx. 310 mm × 140 mm × 212 mm (12 1/4 in × 5 5/8 in × 8 3/8 in) (W/H/D) (incl. projecting parts)

Mass  
Approx. 1.9 kg (61.7 oz) (excl. batteries)  
Approx. 2.3 kg (81.2 oz) (incl. batteries)

**Supplied accessories**  
AC power cord (1)

Design and specifications are subject to change without notice.

## License and Trademark Notice

- MPEG Layer-3 audio coding technology and patents licensed from Fraunhofer IIS and Thomson.
- Other trademarks and trade names are those of their respective owners. In this manual, ™ and ® marks are not specified.

## For customers in the USA

Please register this product on line at the following website.

<http://www.sony.com/productregistration>

Proper registration will enable us to send you periodic mailings about new product, services and other important announcements. Registering your product will also allow us to contact you in the unlikely event that the product needs adjustment or modification. Thank you.