

Wireless Shooting Grip/Tripod / Remote Commander
GP-VPT3 / RMT-VP2

WW030588

Use this Help Guide when you have issues or questions on how to use your Wireless Shooting Grip/Tripod / Remote Commander.

This Help Guide is applicable to two models: GP-VPT3 and RMT-VP2



Supported camera models (GP-VPT3)

This unit is Wireless Shooting Grip/Tripod that supports the Bluetooth[®] function.
For camera models compatible with this unit, view here. (Another window will open.)



Supported camera models (RMT-VP2)

This unit is Remote Commander that supports the Bluetooth function.
For camera models compatible with this unit, view here. (Another window will open.)

Pairing the unit with the camera

Before establishing a Bluetooth connection, you must pair the unit with the camera (device registration). For the detailed procedure, view here.

What if the remote commander does not work?

In the event that the remote commander does not work, view here.

[Identifying the parts \(GP-VPT3\)](#)

[Identifying the parts \(RMT-VP2\)](#)

Preparations

[Unpacking](#)

[Attaching/detaching the remote commander \(GP-VPT3\)](#)

[About the battery.](#)

[Pairing the unit with the camera](#)

[Mounting the camera \(GP-VPT3\)](#)

[Adjusting the angle and direction \(GP-VPT3\)](#)

[Preventing accidental operations](#)

Shooting

[About the camera shooting styles \(GP-VPT3\)](#)

[Shooting a still image](#)

[Shooting a movie](#)

[Zooming the camera](#)

[Adjusting the camera focus](#)

[Indicator activities](#)

[Activating the camera's C1 or AF-ON function](#)

About this unit

[Notes on use](#)

[Specifications](#)

[Licenses](#)


[Trademarks](#)

Troubleshooting

[What if the remote commander does not work?](#)

Identifying the parts (GP-VPT3)

Main unit

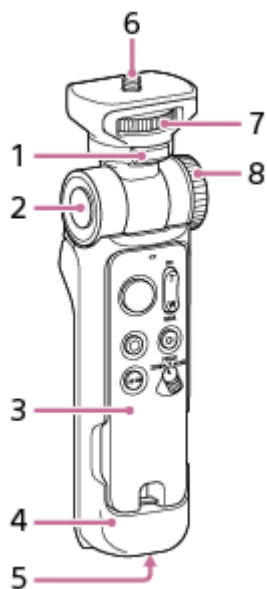

1. Flip button

Flips around the mounted camera. For details, see “[Adjusting the angle and direction \(GP-VPT3\).](#)”

2. Angle adjusting button

Adjusts the angle of the grip. For details, see “[Adjusting the angle and direction \(GP-VPT3\).](#)”

3. Remote commander

4. Grip/tripod

5. Strap holder

6. Camera mounting screw


7. Camera mounting wheel

8. Adjustment wheel

Adjusts feel of the resistance when changing the angle of the grip.

Remote commander

The remote commander for this unit is the same as RMT-VP2.

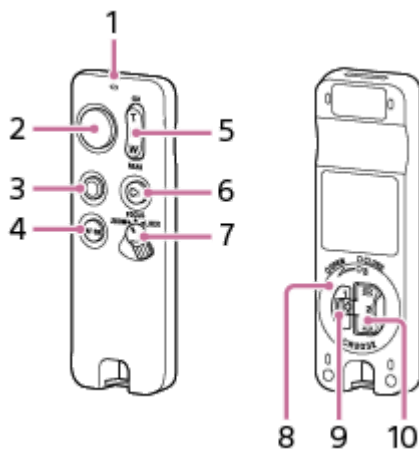

1. Indicator

Indicates the camera's operational state in accordance with the remote commander operation. For details, see ["Indicator activities."](#)

2. Shutter button

Releases the camera shutter. For details, see ["Shooting a still image."](#)

3. MOVIE button

Starts recording a movie with the camera. For details, see ["Shooting a movie."](#)

4. AF-ON button*

5. Zoom/Focus button

Zooms in/out the camera or adjusts the camera focus. Set the remote commander's ZOOM/FOCUS/LOCK switch to the "ZOOM" or "FOCUS" position suitable for your purpose. For details, see ["Zooming the camera"](#) or ["Adjusting the camera focus."](#)

6. C1 button*

7. ZOOM/FOCUS/LOCK switch

When the switch is set to the "LOCK" position, the remote commander is disabled to prevent accidental operation of the camera.

To reduce battery consumption, it is recommended to set the switch to the "LOCK" position when this unit is not in use.

8. Battery cover


9. Battery cover locking latch

10. Battery cover turning knob

* Each of these buttons activates the function assigned to either the AF-ON button or the C1 button on the camera, if the camera has those buttons. For details about the camera's settings, refer to the Help Guide of your camera.

About the built-in Bluetooth antenna

The remote commander is equipped with a built-in Bluetooth antenna at the section shown in the following illustration. When you operate the remote commander, keep your hand away from the section to prevent a possible Bluetooth connection failure.

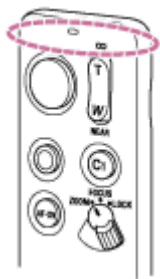


Related Topic

- [Activating the camera's C1 or AF-ON function](#)
- [Preventing accidental operations](#)
- [Attaching/detaching the remote commander \(GP-VPT3\)](#)
- [About the battery](#)
- [Pairing the unit with the camera](#)

5-068-464-11(2) Copyright 2025 Sony Corporation

Identifying the parts (RMT-VP2)

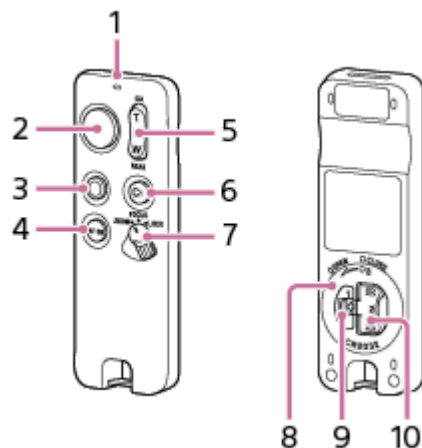

1. Indicator

Indicates the camera's operational state in accordance with the remote commander operation. For details, see ["Indicator activities."](#)

2. Shutter button

Releases the camera shutter. For details, see ["Shooting a still image."](#)

3. MOVIE button

Starts recording a movie with the camera. For details, see ["Shooting a movie."](#)

4. AF-ON button*

5. Zoom/Focus button

Zooms in/out the camera or adjusts the camera focus. Set the remote commander's ZOOM/FOCUS/LOCK switch to the "ZOOM" or "FOCUS" position suitable for your purpose. For details, see ["Zooming the camera"](#) or ["Adjusting the camera focus."](#)

6. C1 button*

7. ZOOM/FOCUS/LOCK switch

When the switch is set to the "LOCK" position, the remote commander is disabled to prevent accidental operation of the camera.

To reduce battery consumption, it is recommended to set the switch to the "LOCK" position when this unit is not in use.

8. Battery cover


9. Battery cover locking latch

10. Battery cover turning knob

* Each of these buttons activates the function assigned to either the AF-ON button or the C1 button on the camera, if the camera has those buttons. For details about the camera's settings, refer to the Help Guide of your camera.

About the built-in Bluetooth antenna

The remote commander is equipped with a built-in Bluetooth antenna at the section shown in the following illustration. When you operate the remote commander, keep your hand away from the section to prevent a possible Bluetooth connection failure.

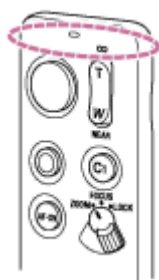

Related Topic

- [Activating the camera's C1 or AF-ON function](#)
- [Preventing accidental operations](#)
- [About the battery](#)
- [Pairing the unit with the camera](#)

Unpacking

If you find anything missing, please contact your dealer.
The number in the parentheses indicates the quantity.

GP-VPT3

- Remote commander (1)
- Grip/tripod (1)
- Lithium coin cell battery (CR2032) (installed) (1)
- Pouch (1)
- Set of printed documentation

RMT-VP2


- Remote commander (1)
- Lithium coin cell battery (CR2032) (installed) (1)
- Set of printed documentation

Attaching/detaching the remote commander (GP-VPT3)

When attaching or detaching the remote commander to or from the main unit, follow the instructions below. Improper attachment or detachment may cause the remote commander to fall, leading to accidents, injuries, or damage to this unit.

To attach the remote commander

Insert the remote commander (①) into the remote commander compartment of the main unit, starting from the tip, and push it in until you hear a click (②).

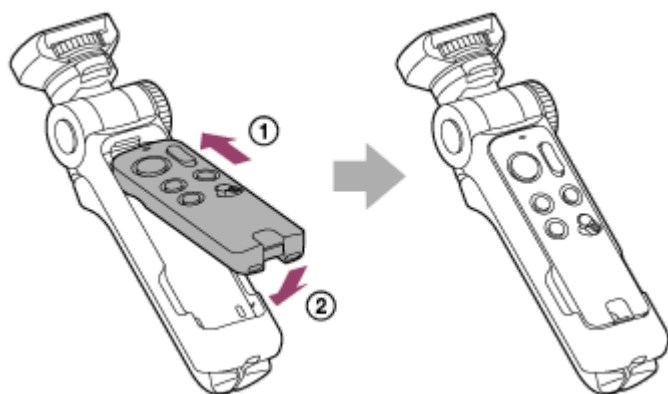


Note

- Be careful not to pinch your fingers when attaching the remote commander.

To detach the remote commander

Put your fingers in the notches (①) on the main unit, grab both sides of the remote commander, and pull it up (②).

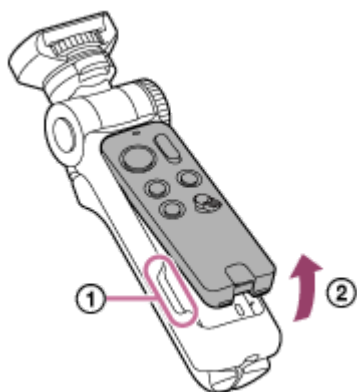

Note

- When using this unit, or when lifting or carrying it, always hold it by the grip/tripod. If you use or lift it by holding only the remote commander, the remote commander may be detached from the grip/tripod, causing the camera to fall and possibly resulting in an accident or injury.

Wireless Shooting Grip/Tripod / Remote Commander
GP-VPT3 / RMT-VP2

About the battery


The supplied lithium coin cell battery is installed in the remote commander at the time of purchase. Open the battery cover and remove the insulating sheet before use.

Hint

- If you are using GP-VPT3, detach the remote commander from the main unit. For detailed instructions on how to detach it, see [“Attaching/detaching the remote commander \(GP-VPT3\).”](#)

1 Turn the battery cover on the back of the remote commander toward “OPEN.”

While sliding the battery cover locking latch in the direction of the arrow (①), lift the battery cover turning knob (②), and then rotate it counterclockwise (③).

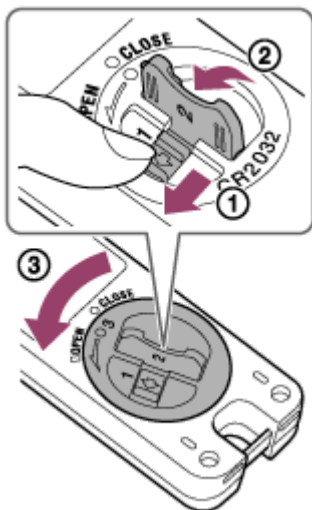


2 Open the battery cover and remove the insulating sheet.



3 Turn the battery cover until you reach “CLOSE.”


To insert the battery

When inserting the battery, ensure that the + side of the battery is facing upward.
(+ on the battery chamber indicates the direction of the battery.)

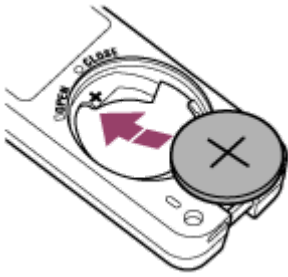

To remove the battery

Take out the battery towards you, as shown by the arrow in the illustration below.

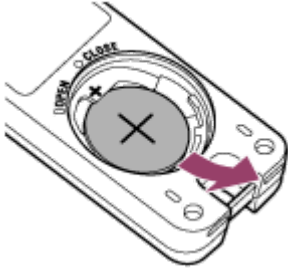

5-068-464-11(2) Copyright 2025 Sony Corporation

Pairing the unit with the camera

Establish a Bluetooth connection between this unit and a camera.

Before establishing a Bluetooth connection, you must pair the unit with the camera (device registration).

Make sure that the ZOOM/FOCUS/LOCK switch on the unit is NOT set to the "LOCK" position in advance.

Note

- For notes on camera operation via the Bluetooth connection, refer to the Help Guide of your camera.

- 1 On the camera, select MENU →  (network) → [Bluetooth] or [Bluetooth Settings] → [Bluetooth Function] → [On].

If the pairing screen appears on the camera's screen, proceed to step 4.

- 2 On the camera, select MENU →  (network) → ([Bluetooth]) → [Bluetooth Rmt Ctrl] → [On].*


If the pairing screen appears on the camera's screen, proceed to step 4.

* Depending on your camera, the following menu may appear instead.

MENU →  (network) → [Transfer/Remote] → [Bluetooth Rmt Ctrl] → [On]

- 3 On the camera, select MENU →  (network) → [Bluetooth] or [Bluetooth Settings] → [Pairing] to display the pairing screen.

- 4 On this unit, press and hold the MOVIE button and the C1 button simultaneously for at least 3 seconds.

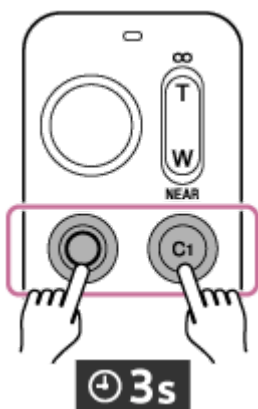

- 5 When a confirmation message appears on the camera's screen, select [OK].

Hint

- When pairing GP-VPT3 with the camera, the model name of the remote commander "RMT-VP2" will appear on the camera screen.

When pairing is complete, [Paired.] appears.

If the remote commander is not operated for a certain period while the Bluetooth connection is active, /  (no Bluetooth connection) may appear on the camera's screen. In this case, operating the remote commander will automatically re-establish the Bluetooth connection.

Icons displayed on the camera screen

/  (Bluetooth connection available): The Bluetooth connection between this unit and the camera has been established.

/  (Bluetooth connection unavailable): The Bluetooth connection between this unit and the camera is not established.

 (remote commander mark): You can operate the camera using this unit.

Note


- If pairing fails, the indicator on this unit flashes rapidly. If this happens, start again from step 3.
A pairing attempt times out when a certain amount of time elapses between the actions in step 4 and step 5.
- In the following cases, you need to perform pairing again.
 - When operating another camera with this unit (If you want to use the original camera again after pairing another camera with this unit, you will need to pair it again.)
 - When resetting the camera's network settings
- Depending on the camera you are using, the following functions cannot be used when [Bluetooth Rmt Ctrl] is set to [On]. If you want to use the following functions after using this unit, set [Bluetooth Rmt Ctrl] to [Off]. For information about the camera's functions, refer to the Help Guide for your camera.
 - Power-saving mode
 - Infrared remote commander

Mounting the camera (GP-VPT3)

Mount a camera to this unit.

Install the battery pack and a memory card in the camera before mounting to this unit.

- 1 **Fit the camera mounting screw on this unit into the tripod screw hole on the bottom of the camera (①), and then turn the camera mounting wheel to secure the camera (②).**

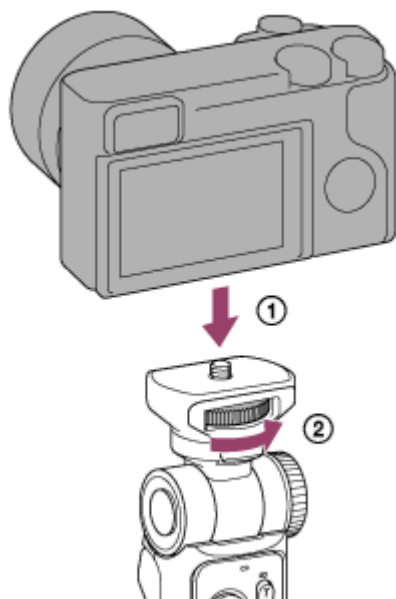

Note

- Be careful not to drop the camera or this unit.
- When you are finished with using this unit, remove it from the camera and keep it in the supplied pouch. Before removing the unit from the camera, set the ZOOM/FOCUS/LOCK switch to the "LOCK" position.

Adjusting the angle and direction (GP-VPT3)


Adjust the tilt angle of the grip or the facing direction of the camera mounted on this unit.

To adjust the tilt angle of the grip

By pressing the angle adjusting button, you can change the tilt angle of the grip by 10 degrees.

- 1 Press and hold the angle adjusting button (①) and release the button when the grip is adjusted to the desired angle (②).


Before you press the angle adjusting button, be sure to hold the camera with your hand in case it tilts all at once. Do not change the angle of the grip by force without pressing the angle adjusting button.

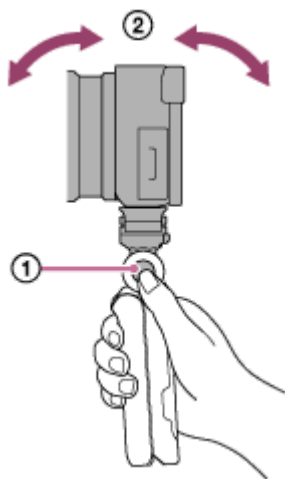

- 2 Make sure that the angle adjusting button rises back into position to indicate that the grip is locked at the desired angle.

To adjust feel of the resistance when changing the angle of the grip

Turn the adjustment wheel (①).

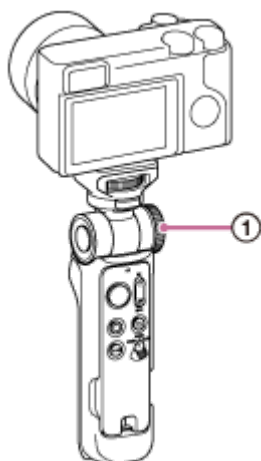


Hint

- If the camera mounted on this unit is heavy, the camera may tilt all at once while you are adjusting the tilt angle of the grip by pressing the angle adjusting button. To avoid this, it is recommended that you tighten the adjustment wheel (by turning it clockwise).
If the camera is light, on the other hand, it is easier to adjust the tilt angle of the grip when the adjustment wheel is loose.
- Do not tighten the adjustment wheel excessively.
- When the adjustment wheel is excessively tightened, you can use a coin or an equivalent to loosen the wheel.

To change the facing direction of the camera

By pressing the flip button (①), you can flip around the camera (②). Each time you press the button, the camera flips by 90 degrees.

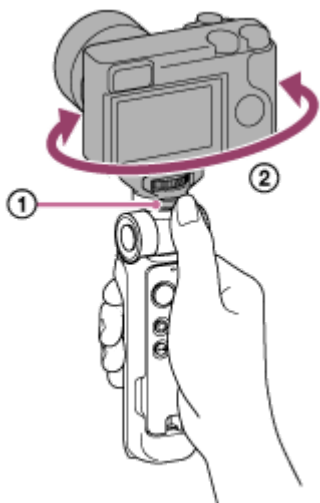


Note

- Make sure that the angle adjusting button has risen back into position. If not, the grip is not locked. Hold the camera and change the angle by moving the grip until the angle adjusting button rises back into position.
- Depending on the tilt angle of the grip, the remote commander may be blocked and become inoperable. In such a case, readjust the tilt angle of the grip.

Preventing accidental operations

You can disable the remote commander to prevent accidental camera operations that may occur while carrying the unit along with the camera.

- 1 Turn the **ZOOM/FOCUS/LOCK** switch to the **“LOCK”** position.

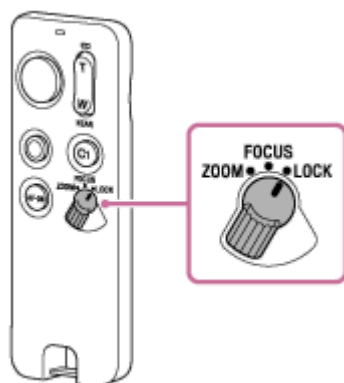


To enable the remote commander, set the ZOOM/FOCUS/LOCK switch to the “ZOOM” or “FOCUS” position.

Wireless Shooting Grip/Tripod / Remote Commander
GP-VPT3 / RMT-VP2

About the camera shooting styles (GP-VPT3)

For camera shooting, hold the grip in your hand or use it as a tripod by opening the legs of the unit.

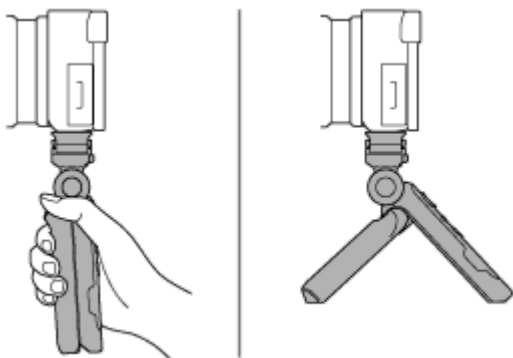

By detaching the remote commander from the main unit and using it separately, you can operate the camera from a distance.




Note

- When using this unit, or when lifting or carrying it, always hold it by the grip/tripod. If you use or lift it by holding only the remote commander, the remote commander may be detached from the grip/tripod, causing the camera to fall and possibly resulting in an accident or injury.
- When using this unit as a tripod, spread its legs to full extent and place the unit on a flat surface. Depending on the tilt angle of the grip head or the mounted camera, the unit may lose its balance and wobble. Do not use the unit if it wobbles.

To use a strap (commercially available)

You can attach a strap to this unit.

When using the strap, put it around your wrist as shown in the illustration, and then hold the grip.

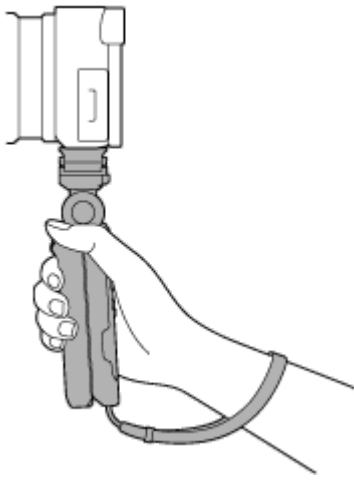**Note**

- When using the strap, observe the following:
 - Always hold the grip/tripod section. Do not carry this unit by holding only the strap.
 - Do not subject this unit to strong shocks or vibrations. This may cause accidents or injuries.


Shooting a still image

Operate this unit that has a Bluetooth connection with a camera to shoot a still image.

1 Press the Shutter button (①).

Press the button halfway down to focus, and then press it all the way down to shoot.
The indicator on this unit turns on when:

- The camera is in focus using the auto focus function
- A shot is successfully taken

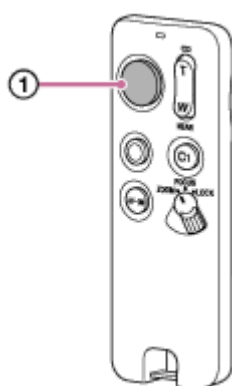

Related Topic

- [Pairing the unit with the camera](#)
- [Shooting a movie](#)


Shooting a movie

Operate this unit that has a Bluetooth connection with a camera to shoot a movie.

1 Press the MOVIE button (①).

Movie shooting starts. To stop shooting, press the MOVIE button once again.

When shooting starts, the indicator on this unit turns on. When shooting stops, the indicator turns off.

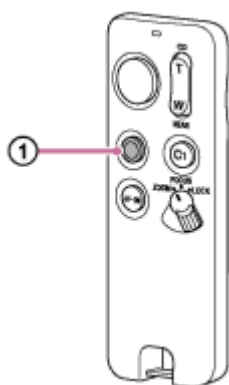


Related Topic

- [Pairing the unit with the camera](#)
- [Shooting a still image](#)

Zooming the camera

Operate this unit that has a Bluetooth connection with a camera to zoom in/out the camera.


- 1 Set the ZOOM/FOCUS/LOCK switch to the "ZOOM" position.

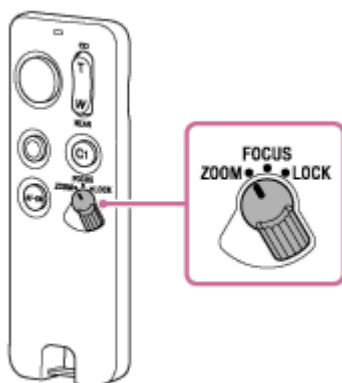

- 2 Press the Zoom/Focus button (①).

Press the T (Telephoto) end of the button to zoom in on a subject.

Press the W (Wide-angle) end of the button to zoom out on a subject.

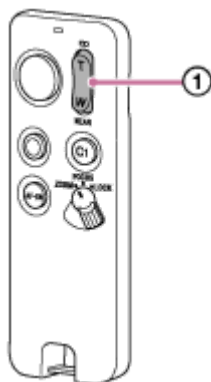

Pressing the Zoom/Focus button deeply speeds up the zooming.

Depending on the camera you are using, some models may not support this function. Check the following websites for a list of compatible cameras.

- GP-VPT3: <https://www.sony.net/dics/gpvpt3/>
- RMT-VP2: <https://www.sony.net/dics/rmtvp2/>

Note

- The zoom speed varies depending on the camera or lens.
- The zoom function works with a camera or lens featuring a built-in electronic power zoom. If the digital zoom function of the camera is turned on, digital zooming will be performed.

Related Topic

- [Pairing the unit with the camera](#)
- [Adjusting the camera focus](#)

5-068-464-11(2) Copyright 2025 Sony Corporation


Adjusting the camera focus

Operate this unit that has a Bluetooth connection with a camera to adjust the camera's focus.

Note


- You can adjust the camera's focus with this unit only when the camera is set to manual focus mode.

- 1 Set the ZOOM/FOCUS/LOCK switch to the “FOCUS” position.

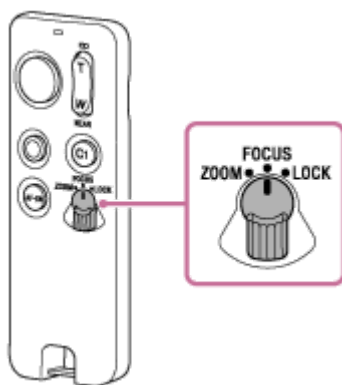

- 2 Press the Zoom/Focus button (①).

Press the ∞ (Infinity symbol) end of the button to focus on a distant subject.
Press the NEAR end of the button to focus on a close subject.

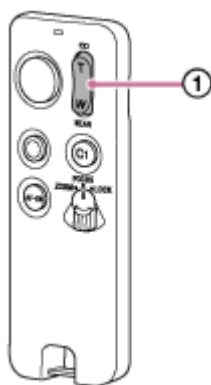

Related Topic

- [Pairing the unit with the camera](#)
- [Zooming the camera](#)

Indicator activities

The indicator on this unit lights up or blinks as follows, depending on the remote commander operation, as well as the camera's operation and status.

Lights	● when the camera is in focus using the auto focus function ● when you shoot a still image or start recording by pressing the Shutter button ● while movie shooting is in progress ● when the camera receives zoom/focus signals from this unit
Flashes	● while pairing is in progress ● while the self-timer is in operation
Flashes rapidly	● when the camera fails to receive remote operation signals from this unit ● when pairing fails ● when the battery level is low and the ZOOM/FOCUS/LOCK switch is set to the “ZOOM” or “FOCUS” position

Related Topic

- [Identifying the parts \(GP-VPT3\)](#)
- [Identifying the parts \(RMT-VP2\)](#)

Activating the camera's C1 or AF-ON function

By pressing the C1 or AF-ON button on this unit, you can activate the function assigned to the camera's C1 or AF-ON button*.

For details about the camera's C1 or AF-ON button, refer to the Help Guide of your camera.

* Depending on the camera you are using, the C1 button, the AF-ON button, or both may not be available.

Notes on use

- To avoid the risk of a fire or an electric shock, observe the following:
 - Do not disassemble or alter this unit.
 - Do not use this unit with wet hands.
 - Do not allow ingress of water or foreign matters (metal, flammable substances, etc.) to this unit.
- To avoid the risk of damage or a malfunction, observe the following:
 - This unit is precision equipment. Do not drop the unit, hit it, or subject it to a strong physical impact.
 - Do not touch the electrical contacts on this unit with bare hands.
 - Do not use or store this unit in a place subject to high temperatures and humidity.
 - When using this unit outdoors, keep the unit from exposure to rain or seawater.
- For interior inspection and repair of this unit, contact your Sony dealer or local authorized Sony service facility.
- When using this unit in an aircraft or a hospital, follow the instructions from the airline company or the hospital to avoid possible interference with instruments or medical devices caused by radio waves from this unit.
- Although this unit is designed and built to be dustproof and drip-proof, it cannot completely prevent the ingress of dust or water droplets.

Notes on the grip/tripod (GP-VPT3)

- If the total weight of the mounted camera and attached accessories exceeds the maximum weight limit of this unit, the unit may fall over, resulting in damage.
- Be sure to mount your camera securely to this unit. Also, when shooting while holding the grip/tripod, be sure to hold it firmly. Dropping the camera or the unit could result in accidents or injuries.
- Do not swing this unit around while a camera is mounted on it.
- Depending on the camera mounted on this unit, the camera's screen may not fully open due to interference with the grip head. If this happens, do not force the screen open.
- When adjusting the tilt angle of the grip/tripod or the facing direction of the camera mounted on this unit, be sure to hold the camera or its lens with your hand.
- When using this unit, or when lifting or carrying it, always hold it by the grip/tripod. If you use or lift it by holding only the remote commander, the remote commander may be detached from the grip/tripod, causing the camera to fall and possibly resulting in an accident or injury.
- Do not carry this unit by holding only the strap (commercially available).
- When using the strap, do not subject this unit to strong shocks or vibrations. This may cause accidents or injuries.

- For instructions on how to properly attach/detach the remote commander to/from the grip/tripod, see [“Attaching/detaching the remote commander \(GP-VPT3\).”](#) Improper attachment or detachment may cause the remote commander to fall, leading to accidents, injuries, or damage to this unit.
- Be careful not to pinch your fingers in the following situations.
 - When attaching the remote commander
 - When opening and closing the tripod
 - When adjusting the angle of the grip
- When using this unit as a tripod, spread its legs to full extent and place the unit on a flat surface. Depending on the tilt angle of the grip head or the mounted camera, the unit may lose its balance and wobble. Do not use the unit if it wobbles.
- When using this unit with a camera that has accessories attached, make sure the unit remains balanced. Depending on the accessories, some may not be compatible for use.
- Do not use this unit in a place subject to blowing wind or vibration to avoid the risk of falling over.

Places to avoid for usage and storage

Places exposed to direct sunlight or near heat sources

Storing or using the unit in such places may cause discoloration, deformation, or malfunction.

Notes on the battery

- Do not ingest battery, chemical burn hazard.
This unit contains a coin/button cell battery. If the coin/button cell battery is swallowed or placed inside any part of the body, it can cause severe or fatal internal burns in just within 2 hours and can lead to death.
Keep new and used batteries away from children. If the battery compartment does not close securely, stop using the product and keep it away from children.
If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.
- Make sure that the battery is worn out before disposal. To dispose of the battery, insulate the battery contacts with an adhesive strip.
If the battery fluid leaks, wipe away any fluid on the battery chamber before inserting a new battery.
If the battery fluid comes in contact with your body or clothing, thoroughly rinse it away with water.
- Depending on the length of the post production period, even a new battery may have a shorter life.

Notes on cleaning

Clean this unit surface with a soft cloth slightly moistened with water, then wipe the surface with a dry cloth. To prevent damage to the finish:

- Do not expose this unit to chemical products such as thinner, benzene, alcohol, disposable cloths, insect repellent, sunscreen or insecticide.
- Do not touch this unit with any of the above on your hand.
- Do not leave this unit in contact with rubber or vinyl for a long time.

Related Topic

- [About the battery](#)

Specifications

GP-VPT3

Rated Voltage	3 V 
Power consumption	1.8 mW
Maximum weight limit	Up to 1.5 kg (53.0 oz) (total weight of the mounted camera and accessories)
Dimensions (Approx.)	With the legs folded: 49.5 mm × 173.0 mm × 39.8 mm (2 in. × 6 7/8 in. × 1 5/8 in.) With the legs unfolded: 146.3 mm × 133.5 mm × 164.6 mm (5 7/8 in. × 5 3/8 in. × 6 1/2 in.) (W/H/D)
Mass (Approx.)	179 g (6.4 oz) (Black) /174 g (6.2 oz) (White) (Without the battery)

RMT-VP2

Rated Voltage	3 V 
Power consumption	1.8 mW
Dimensions (Approx.)	32.8 mm × 98.0 mm × 12.2 mm (1 5/16 in. × 3 7/8 in. × 1/2 in.) (W/H/D)
Mass (Approx.)	29.9 g (1.1 oz) (Without the battery)

Design and specifications are subject to change without notice.

Licenses

- This product contains software that Sony uses under a licensing agreement with the owner of its copyright. We are obligated to announce the contents of the agreement to customers under requirement by the owner of copyright for the software. Please access the following URL and read the contents of the license.
https://rd1.sony.net/help/di/acc_el25/en/
- Services offered by third parties may be changed, suspended, or terminated without prior notice. Sony does not bear any responsibility in these sorts of situations.

Wireless Shooting Grip/Tripod / Remote Commander
GP-VPT3 / RMT-VP2

Trademarks

- The Bluetooth® word mark and logos are registered trademarks owned by the Bluetooth SIG, Inc. and any use of such marks by Sony Group Corporation is under license.

What if the remote commander does not work?

Check the Bluetooth settings on the camera

- [Bluetooth Function] may be set to [Off] on the camera.
On the camera, select MENU →  (network) → [Bluetooth] or [Bluetooth Settings] → [Bluetooth Function] and make sure that [On] is selected.
- [Bluetooth Rmt Ctrl] may be set to [Off] on the camera.
On the camera, select MENU →  (network) → ([Bluetooth]) → [Bluetooth Rmt Ctrl] and make sure that [On] is selected.*
* Depending on your camera, the following menu may appear instead.
MENU →  (network) → [Transfer/Remote] → [Bluetooth Rmt Ctrl] → [On]

Check the settings on this unit

- The remote commander may be disabled. Set the ZOOM/FOCUS/LOCK switch on this unit to the “ZOOM” or “FOCUS” position.
- The pairing with the camera may be lost. Pair this unit with the camera all over again.
- The battery in this unit may be worn out. Replace the battery with a new one.

Related Topic

- [Preventing accidental operations](#)
- [Pairing the unit with the camera](#)
- [About the battery](#)