

Head Mounted Display

Startup Guide



Before use, also refer to "Health Precautions" and "Precautions" in the "Reference Guide."


HMZ-T2

Resolving lack of audio, video, or 3D playback from a PlayStation®3 (PS3™)

Audio and video issues may occur when changing the output of the PS3™ with either following method.

- Changed the output to this system using the system's HDMI pass-through function.
- Changed the output to this system, connecting PS3™ and this system directly, after using PS3™ with TV.

In this case, while the system is on, turn off the PS3™, and then hold the PS3™ power button for at least 5 seconds (until you hear another beep) to restart it.

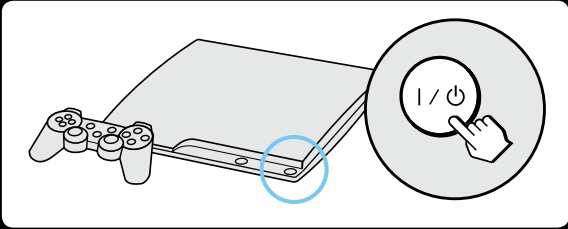

"PlayStation" is a registered trademark of Sony Computer Entertainment Inc. Also, "PS3" is a trademark of the same company.

What's in the box




Printed using VOC (Volatile Organic Compound)-free vegetable oil based ink.

© 2012 Sony Corporation Printed in Japan
4-439-021-11(1)

1 Connect

1 Connect playback equipment and a TV.

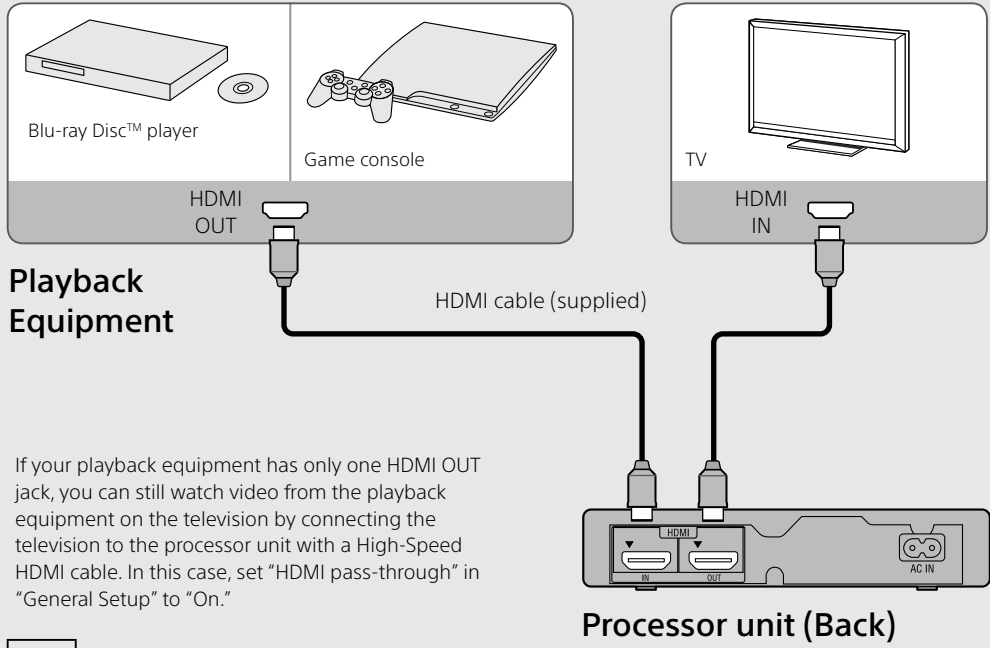


If your playback equipment has only one HDMI OUT jack, you can still watch video from the playback equipment on the television by connecting the television to the processor unit with a High-Speed HDMI cable. In this case, set "HDMI pass-through" in "General Setup" to "On."


Note

- HDMI pass-through does not enable simultaneous video playback on the head mounted unit and TV.


2 Connect the head mounted unit.

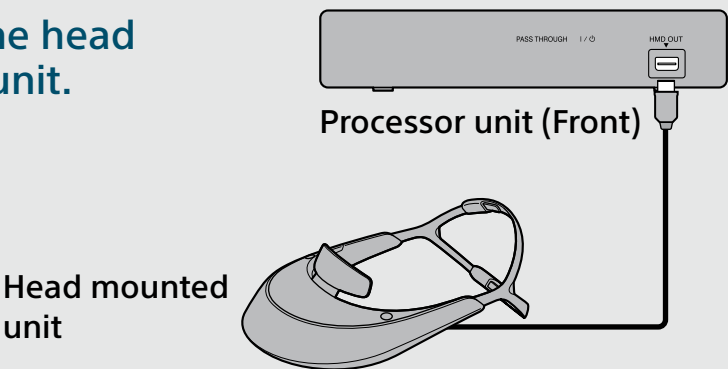

3 Connect the supplied headphones.

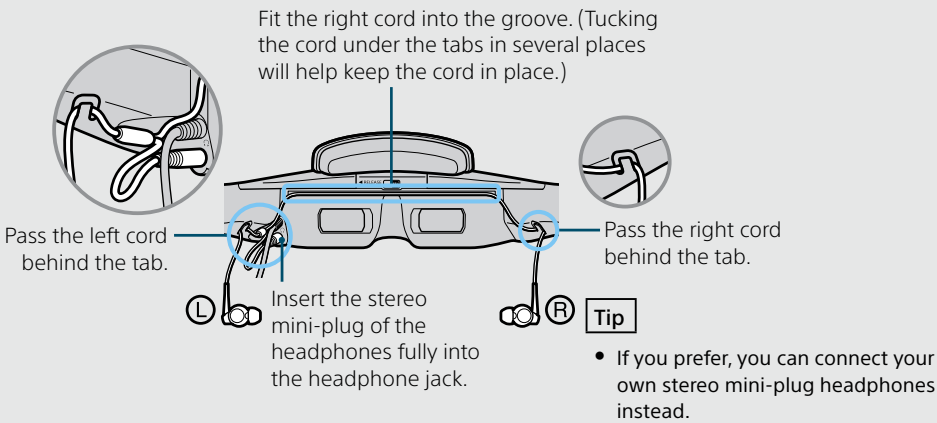

4 Connect the AC power cord (mains lead) and plug it in.

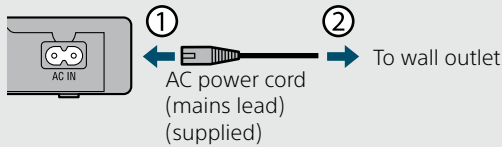

5 Turn the system on (⏻).


The power indicator on the processor unit is now lit in green.



6 Turn the playback equipment on (⏻).

2 Wear


Wearing the unit will prevent you from seeing outside the display. Before you put it on, take a moment to review steps 2 – 4 (Wear, Set up, and Enjoy), so that you know the sequence of procedure.

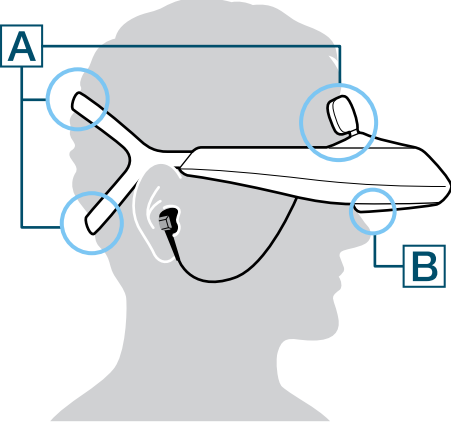

A Support the unit with your forehead and at two positions on the back of your head.


B Do not rest on your nose.

C Adjust the unit so that the screens are in front of your eyes.

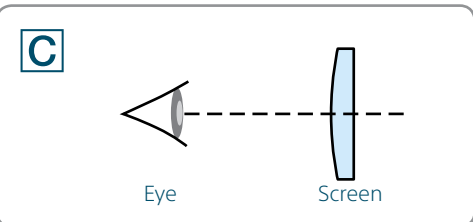


Eye Screen

If you normally wear glasses or contact lenses, wear them as usual during use (with the exception of reading glasses). Note that watching with bifocals may be less than optimal.

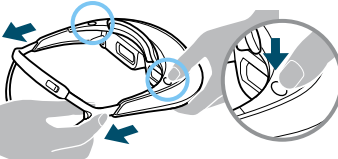


1 Pull out the headband.

On one side after another, hold the band release button down and pull out the headband.

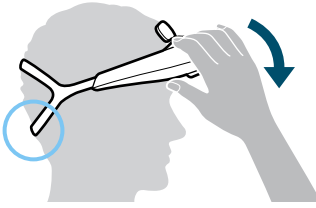

2 Put the head mounted unit on your head.

Lower the bottom headband strap to the base of your head.

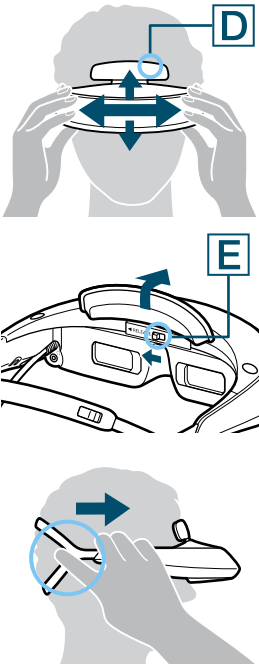

D Adjust the position on your head.

E Tighten the headband securely.

3 Adjust the position on your head.

Carefully adjust the unit left, right, up, and down to find the best position for viewing the center of the screens.

Notes

- If the unit detects that the forehead supporter **D** is not against your forehead during viewing, the screens will be deactivated. Make sure the forehead supporter rests securely against your forehead.
- If the forehead supporter **D** is too far back (toward your forehead), it may be difficult to see the screens. In this case, holding the lock lever **E** toward the left, lift the forehead supporter and push the supporter forward.


4 Tighten the headband securely.

Tip

- The length of the top and bottom headband straps can be adjusted. For details, see the "Reference Guide."

5 Wear the headphones.

Wear the earpiece marked R in your right ear and the one marked L in your left ear.

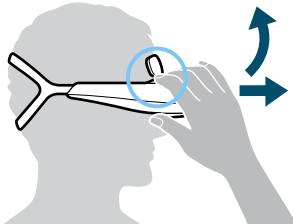

To remove the head mounted unit

- Remove the headphones from your ears before taking off the head mounted unit.
- Hold the band release buttons on both sides and pull the unit forward as you lift it off.


3 Set Up

Follow the instructions displayed on the screen for operations.




1 Select a display language (first time only).

Press the ▲/▼ button to select a language, and then press the MENU or ► button.

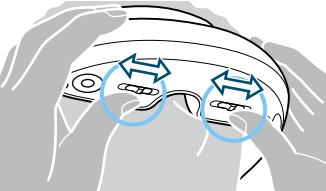


2 Adjust the lens span.

Slide each lens span adjuster until you can see both screens clearly. After adjustment, press the MENU button or ► button.

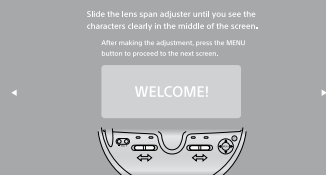


Tips

- If you cannot see the screen clearly after lens span adjustment, start over from "2 Wear."
- If adjustment is difficult, try sliding both adjusters to the center position before adjustment.

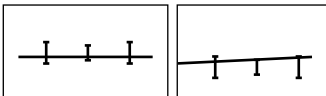

3 Check display alignment.

Confirm that all three "I" marks and the horizontal line intersect, and then press the MENU or ► button. It is acceptable if the "I" marks and the horizontal line intersect in a position other than the center of the screen.

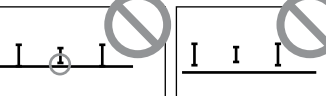


4 Follow the instructions displayed.

After reading the information, press the MENU or ► button.

4 Enjoy

Control playback from compatible playback sources.

Controlling Playback from the Unit

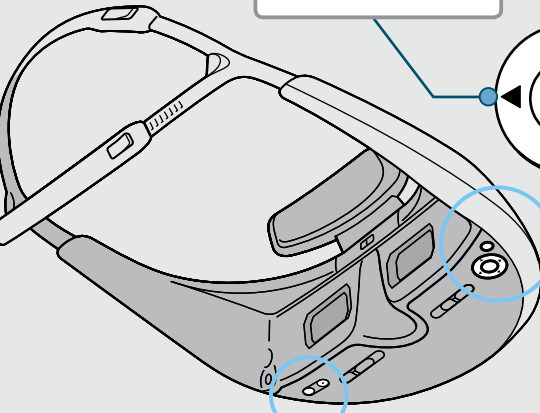

Fast-rewind

Hold the button down to jump to the previous chapter.

Play

Power on/standby

Hold the button down to enter standby mode.

Fast-forward

Hold the button down to jump to the next chapter.

Pause

Volume

– VOL +

Notes

- The system cannot be used for advanced playback equipment control, such as menu operations.
- Control using these buttons is only possible when the "Control for HDMI" in "General Setup" is set to "On" (default setting).
- Some playback equipment cannot be controlled using the head mounted unit buttons.

For details on configuring menu settings and attaching accessories, see the "Reference Guide."

Note

- To resolve a lack of audio, video, or 3D playback when the system is connected to a PlayStation®3 (PS3™), see the instructions on the page to the right of the cover for troubleshooting.