

FM/AM Clock Radio

Operating Instructions Mode d'emploi (au dos)

ICF-CS10iP

DREAM MACHINE

Dream Machine is a trademark of Sony Corporation.
Dream Machine est une marque de fabrique de Sony Corporation.



No Power No Problem is a trademark of Sony Corporation.

©2009 Sony Corporation Printed in China http://www.sony.net/

Important Safety Instructions

- 1) Read these instructions.
- 2) Keep these instructions.
- 3) Heed all warnings.
- 4) Follow all instructions.
- 5) Do not use this apparatus near water.
- 6) Clean only with dry cloth.
- 7) Do not block any ventilation openings.
- 8) Install in accordance with the manufacturer's instructions.
- 9) Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 10) Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 11) Use only attachments/accessories specified by the manufacturer.
- 12) Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.

To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.
To reduce the risk of fire, do not cover the ventilation of the apparatus with newspapers, tablecloths, curtains, etc. And do not place lighted candles on the apparatus.
To reduce the risk of fire or electric shock, do not expose this apparatus to dripping or splashing, and do not place objects filled with liquids, such as vases, on the apparatus.

Do not install the appliance in a confined space, such as a bookcase or built-in cabinet.
Do not expose the batteries (battery pack or batteries installed) to excessive heat such as sunshine, fire or the like for a long time.

 
As the main plug is used to disconnect the unit from the mains, connect the unit to an easily accessible AC outlet. Should you notice an abnormality in the unit, disconnect the main plug from the AC outlet immediately.

The unit is not disconnected from the AC power source (mains) as long as it is connected to the wall outlet, even if the unit itself has been turned off.

The nameplate and important information concerning safety are located on the bottom exterior.

You are cautioned that any changes or modifications not expressly approved in this manual could void your authority to operate this equipment.

CAUTION
Danger of explosion if battery is incorrectly replaced. Replace only with the same type.

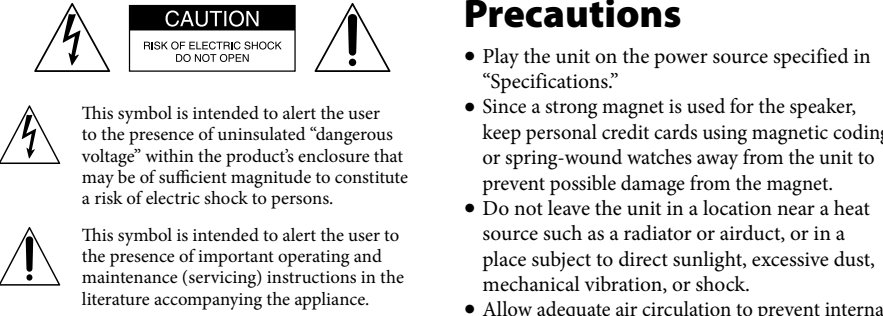


NOTE
This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
— Reorient or relocate the receiving antenna.
— Increase the separation between the equipment and receiver.
— Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
— Consult the dealer or an experienced radio/TV technician for help.

NOTES ON LITHIUM BATTERY
• Wipe the battery with a dry cloth to assure a good contact.
• Be sure to observe the correct polarity when installing the battery.
• Do not hold the battery with metallic tweezers, otherwise a short-circuit may occur.


If you have any questions or problems concerning your unit, please consult your nearest Sony dealer.

Features

 - Clock Radio compatible with iPod/iPhone
- Wake or Sleep to iPod/Radio/Buzzer
- Easy to set A-B alarm
- 2.5~5-day alarm
- LCD Brightness control
- MEGA BASS
- MEGA Xpand
- Wireless Remote Commander
- No Power No Problem alarm system to keep the clock and the alarm operating during a power interruption with a CR2032 battery installed

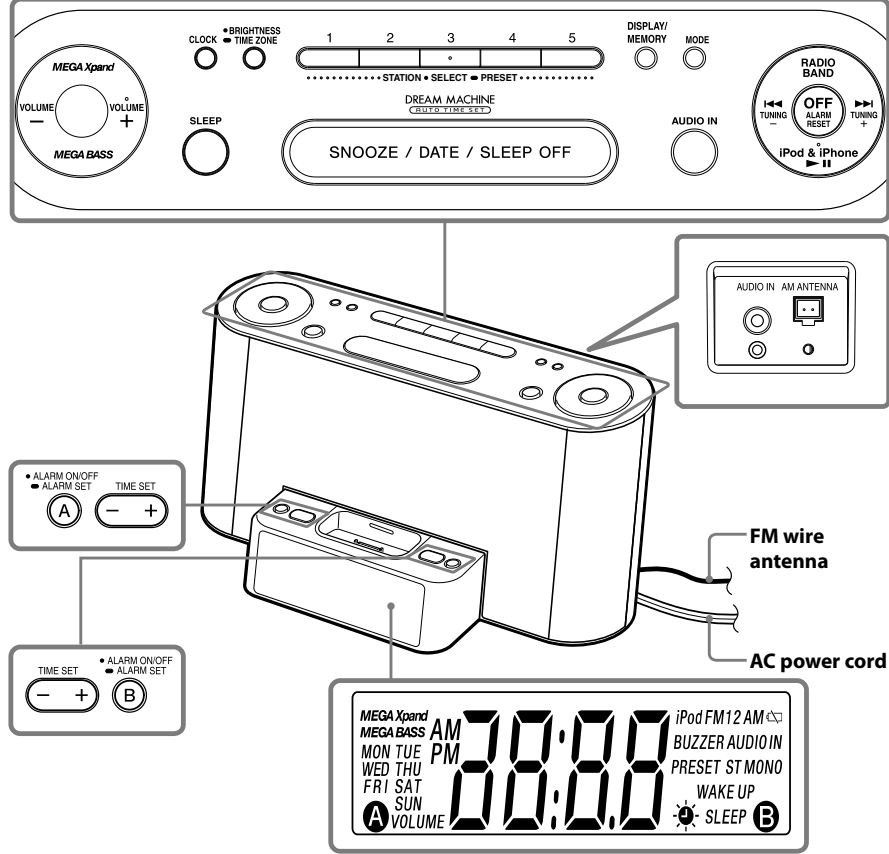

 
The STATION • SELECT • PRESET 3, VOLUME + and iPod & iPhone ►II buttons have a tactile dot.

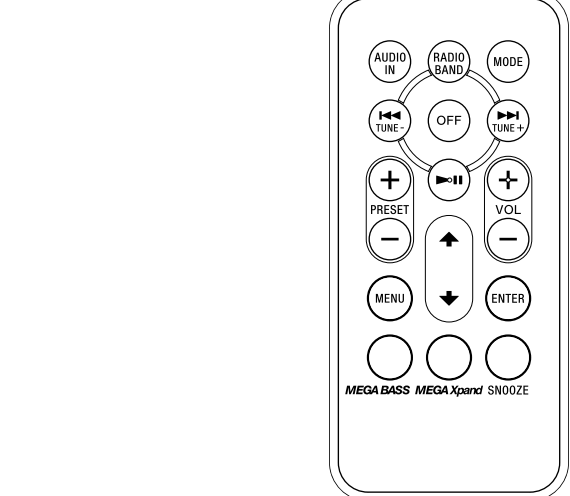

The ►II and VOL + buttons have a tactile dot.

Compatible iPod/iPhone models

 Compatible iPod/iPhone models are as follows. Update your iPod/iPhone to use the latest software before you use it.

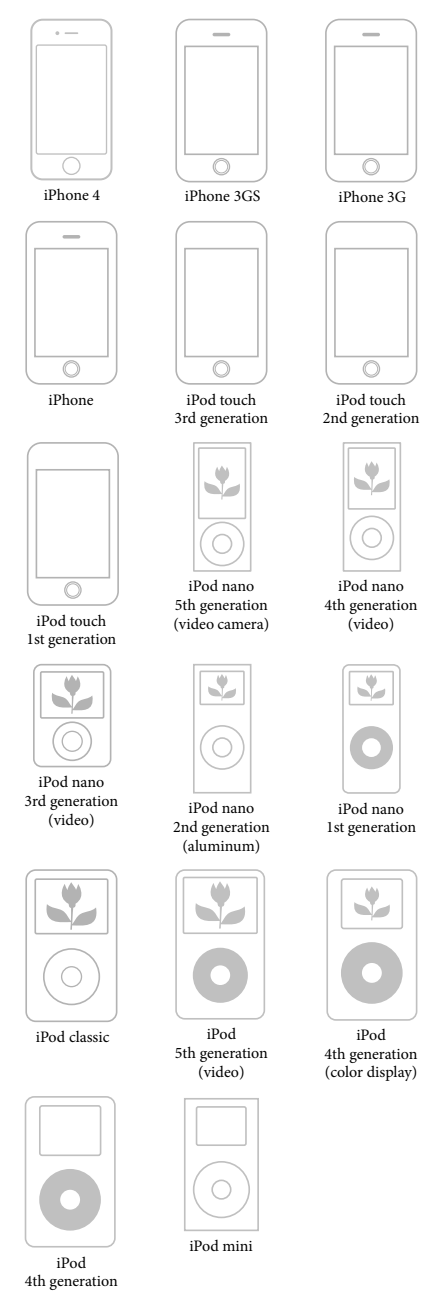



Notes
• In these Operating Instructions, "iPod" is used as a general reference to iPod functions on an iPod or iPhone, unless otherwise specified by the text or illustrations.
• The connector of the unit is for sole use with an iPod. If you use devices that do not match with the connector, connect to the AUDIO IN jack of this unit with the supplied audio connecting cable.
• Sony cannot accept responsibility in the event that data recorded to an iPod is lost or damaged when using an iPod connected to this unit.

Connecting the antenna


To connect the AM loop antenna

The shape and the length of the antenna is designed to receive AM signals. Do not dismantle or roll up the antenna.

  - 1 Remove only the loop part from the plastic stand.
- 2 Set up the AM loop antenna.

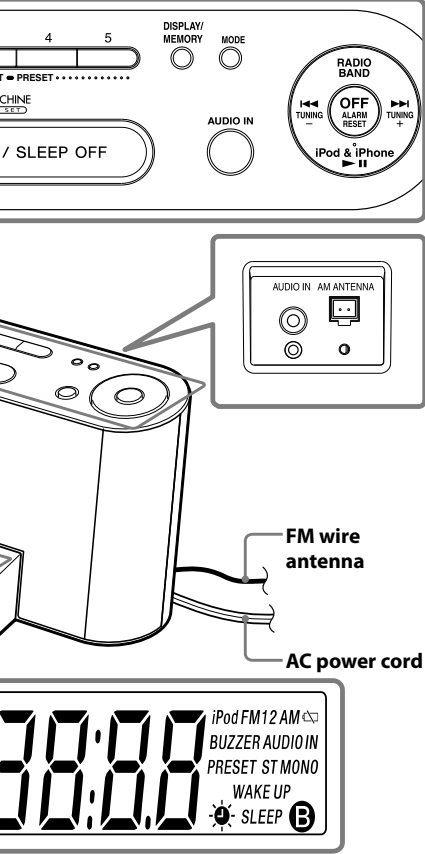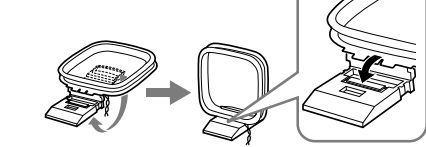

 
The STATION • SELECT • PRESET 3, VOLUME + and iPod & iPhone ►II buttons have a tactile dot.

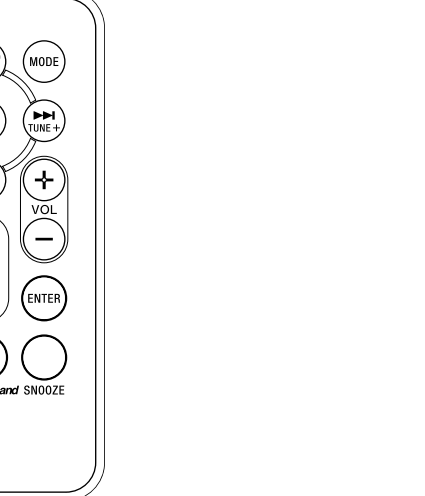

The ►II and VOL + buttons have a tactile dot.

Compatible iPod/iPhone models

 
Compatible iPod/iPhone models are as follows. Update your iPod/iPhone to use the latest software before you use it.

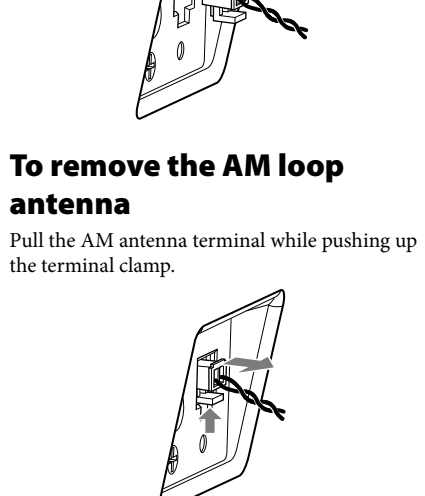

Notes
• In these Operating Instructions, "iPod" is used as a general reference to iPod functions on an iPod or iPhone, unless otherwise specified by the text or illustrations.
• The connector of the unit is for sole use with an iPod. If you use devices that do not match with the connector, connect to the AUDIO IN jack of this unit with the supplied audio connecting cable.
• Sony cannot accept responsibility in the event that data recorded to an iPod is lost or damaged when using an iPod connected to this unit.


Preparing the remote commander

 Before using the card remote commander for the first time, remove the insulation film.



To know when to replace the battery

 With normal use, the battery (CR2025) should last for about six months. When the remote commander no longer operates the unit, replace the battery with a new one.

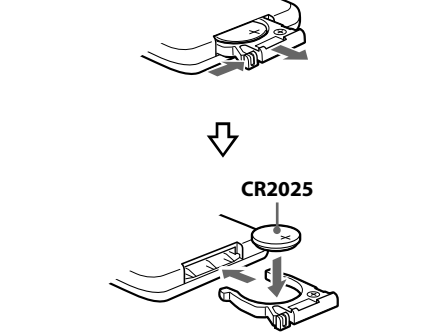

Notes

- Do not attempt to charge the battery.
- If you are not going to use the remote commander for a long time, remove the battery to avoid any damage that may be caused by leakage and corrosion.

About the backup battery

To keep accurate time, this unit contains a CR2032 battery as a backup power source. The battery keeps the clock and the alarm operating in the event of a power interruption.

Note for customers in Canada

The clock is preset at the factory, and its memory is powered by the preinstalled Sony CR2032 battery. If the "AM 12:00" appears on the display when the unit is connected to AC outlet for the first time, the battery may be weak. In this case, consult a Sony dealer. The preinstalled CR2032 battery is considered part of the product, and is covered by the warranty. You are required to show "Note for customers in Canada" (in this instruction) to a Sony dealer in order to validate the warranty for this product.

To know when to replace the battery

 
When the battery becomes weak, "CO" appears in the display.
If a power interruption occurs while the battery is weak, the current time and alarm will be erased. Replace the battery with a Sony CR2032 lithium battery. Use of another battery may cause a fire or explosion.

To replace the battery

- 1 Keep the AC plug connected to the AC outlet, remove the screw that secures the battery compartment lid at the bottom of the unit using a screwdriver, and open the lid (see Fig. ①).
- 2 Insert a new battery in the battery compartment with the ► side facing up (see Fig. ②).
- 3 Close the battery compartment lid and secure it with the screw (see Fig. ③).
- 4 Press iPod & iPhone ►II, RADIO BAND, AUDIO IN or SNOOZE/DATE/ SLEEP OFF to turn "CO" off in the display.


Note

When you replace the battery, do not disconnect the plug from the AC outlet. Otherwise, the calendar, current time, alarm and station presets will be erased.

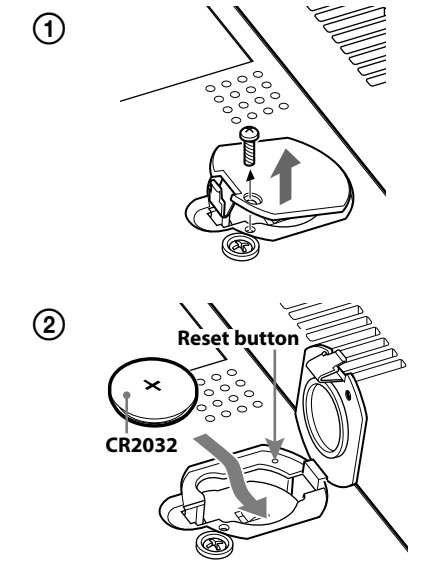

To remove the AM loop antenna

 Pull the AM antenna terminal while pushing up the terminal clamp.

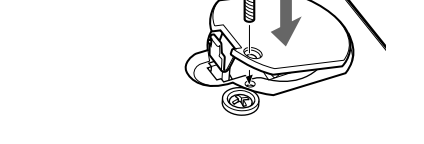

If the time in the display is incorrect after the battery is changed (Reset)

Press the reset button with a pointed device. The reset button is in the small hole located in the battery compartment (see Fig. ②).

Setting the clock for the first time

This unit is preset to the current EST (Eastern Standard Time) at the factory, and is powered by a backup battery. All you need to do the first time is just plug it in and select your time zone.

- 1 Plug in the unit.
The current EST (Eastern Standard Time) appears in the display.
- 2 Press and hold ►TIME ZONE for at least 2 seconds.
Area number "2" flashes in the display.
- 3 Press TIME SET + or – repeatedly to select the number as follows:

Area number	Time zone
1	Atlantic standard Time
2	Eastern standard Time (default setting)
3	Central standard Time
4	Mountain standard Time
5	Pacific standard Time
6	Yukon standard Time
7	Hawaiian standard Time

- 4 Press ►TIME ZONE to set.

Note
Though the clock is correctly set at the factory, discrepancies may arise during transport or storage. If necessary, set the clock to the correct time by referring to "Setting the clock manually."

When Daylight Saving Time (summer time) begins

This model automatically adjusts for Daylight Saving Time (summer time).
• "S" is displayed from the beginning of Daylight Saving Time (summer time) and disappears at the end of Daylight Saving Time (summer time) automatically.
• Daylight Saving Time (summer time) begins at: 2:00 AM on the second Sunday of March.
• Standard Time begins at: 2:00 AM on the first Sunday of November.

To cancel Automatic DST/Summer Time adjustment during the Daylight Saving Time (summer time) period
The Automatic DST/Summer Time adjustment can be canceled.
Press and hold CLOCK and SNOOZE/DATE/ SLEEP OFF at the same time at least 2 seconds while the clock is displayed.

*"S" and "OFF" appear in the display when Automatic DST/Summer Time adjustment has been canceled. The display returns to the clock.

- Changes to Automatic DST/Summer Time adjustment by the unit (see above) are subject to circumstances and laws in each country/region. Should this interfere with desired adjustment, cancel the Automatic DST/Summer Time adjustment and set the DST display manually as necessary. Customers living in a country/region that does not use Daylight Saving Time (summer time) must cancel Automatic DST/Summer Time adjustment before using the unit.
- To activate Automatic DST/Summer Time adjustment again, press and hold CLOCK and SNOOZE/DATE/SLEEP OFF at the same time at least 2 seconds.

*"S" and "On" appear in the display to show that Automatic DST/Summer Time adjustment has been activated. The display returns to the clock.

Setting the clock manually

- 1 Plug in the unit.
- 2 Press and hold CLOCK until the year flashes in the display.
- 3 Press TIME SET + or – repeatedly to set the year.
- 4 Press CLOCK.
- 5 Repeat steps 3 and 4 to set the month, day, hour and minute, and then press CLOCK.
The seconds start incrementing from zero.

Notes

- If you do not press any button for about 1 minute while setting the clock, the clock setting will be canceled.
- A calendar is installed in this unit. When the date is set, the day of the week is automatically displayed.
MON = Monday, TUE = Tuesday, WED = Wednesday, THU = Thursday, FRI = Friday, SAT = Saturday, SUN = Sunday

To display the year and date

Press SNOOZE/DATE/SLEEP OFF (SNOOZE on the remote) once for the date, and press it again for the year.
After a few seconds, the display will change back to the current time automatically.

Setting the brightness of the display

Three levels of brightness are available by pressing ►BRIGHTNESS.

High (default) → Middle → Low

Even if you set the level of brightness to Low, it will be changed to Middle, while alarm is occurring.

Playing the radio

–Manual tuning

- 1 Press RADIO BAND to turn on the radio.
- 2 Press RADIO BAND repeatedly to select the desired band.
Each press changes the band as follows:
FM1 → FM2 → AM
FM1 and FM2 are the same frequency bands.
- 3 Press TUNING + or – (TUNE + or – on the remote) to tune into the desired station.
- 4 Adjust volume using VOLUME + or – (VOL + or – on the remote).
To turn off the radio, press OFF.

Tuning in to a station

The unit automatically scans AM or FM stations.

- 1 Follow steps 1 to 2 in "Manual tuning" and select the AM or FM band.
- 2 Press and hold TUNING + or – (TUNE + or – on the remote).
+ : scans upward through the frequency bands.
– : scans downwards through the frequency bands.
Scanning starts from the currently-tuned frequency. When a station is received, scanning stops.
- 3 Adjust the volume using VOLUME + or – (VOL + or – on the remote).

 
–Preset tuning

You can preset up to 10 stations in FM (5 stations in FM1, 5 stations in FM2), and 5 stations in AM.

Presetting a station

- 1 Follow steps 1 to 4 in "Manual tuning" and manually tune into the station you wish to preset.
- 2 Press and hold the desired STATION • SELECT • PRESET 1 to 5 buttons until the preset number display changes from flashing to fully lit.

Example: To preset FM 99.8 MHz onto the preset 1 button.

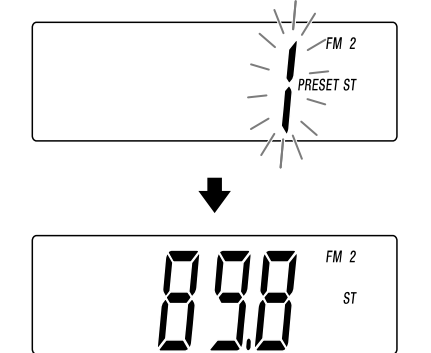

After a while, the display will return to the current time.
To preset another station, repeat these steps.
To change the preset station, tune into the desired station and hold down the STATION • SELECT • PRESET 1 to 5 button. The new station will replace the previous station on the preset button.

Tuning in to a preset station

- 1 Follow steps 1 to 2 in "Manual tuning" and select the AM or FM band.
- 2 Press one of the STATION • SELECT • PRESET buttons where the desired station is stored.
The preset station can also be selected by PRESET + or – on the remote.

- 3 Adjust the volume using VOLUME + or – (VOL + or – on the remote).

–Auto preset tuning

- 1 Follow steps 1 to 2 in "Manual tuning" and select the AM or FM band.
- 2 Press and hold RADIO BAND until "AP" flashes in the display.
- 3 Press DISPLAY/MEMORY.
The unit automatically presets the available channels in order.

Tip

To stop auto preset tuning, press OFF/ALARM RESET.

To display the preset number and frequency of the current station
Press DISPLAY/MEMORY once for the preset number, and press it again for the frequency. If you press DISPLAY/MEMORY once only, the display shows the preset number for about 2 seconds, then changes to the frequency. After a few moments, the display returns to the current time.

Improving the reception

FM: Extend the FM wire antenna fully to increase reception sensitivity.

AM: Connect the supplied AM loop antenna to the unit. Rotate the antenna horizontally for optimum reception.

Notes on radio reception

- Keep digital music players or mobile phones away from the AM loop antenna or the FM antenna, as this may lead to reception interference.
- When you are listening to the radio with an iPhone connected to the unit, interference with radio reception may occur.
- When you are listening to the radio while charging an iPod, interference with radio reception may occur.

Tip

If the FM broadcast is noisy, press MODE until "MONO" appears in the display, the radio will play in monaural and the sound will become clearer.

Playing an iPod

You can enjoy audio from iPod by connecting to this unit. To use an iPod, refer to the user's guide of your iPod.

If you are using an iPhone, iPhone 3G, iPhone 3GS or iPhone 4, attach the supplied universal dock adapter for iPhone, iPhone 3G, iPhone 3GS or iPhone 4 before connecting.
The adapter number, ②, ③ or ④, is shown on the bottom rear of the supplied universal dock adapters. ② is for the iPhone, ③ is for the iPhone 3G & iPhone 3GS and ④ is for the iPhone 4. Check the adapter number before use.

 
Universal Dock Adapter



Notes

- When inserting an iPod into the unit, be sure to use the universal dock adapter supplied with your iPod or commercially available from Apple Inc.
- The connector of the unit is exclusively for use with an iPod. If you use a device that does not match the connector, connect it to the AUDIO IN jack of this unit with the supplied audio connecting cable.
- Sony cannot accept responsibility in the event that data recorded on an iPod is lost or damaged when using an iPod connected to this unit.
- For details of environmental conditions for operating your iPod, check the website of Apple Inc.

- 1 Attach the adapter for your iPod/iPhone.
- 2 Insert your iPod/iPhone into the connector of the unit.

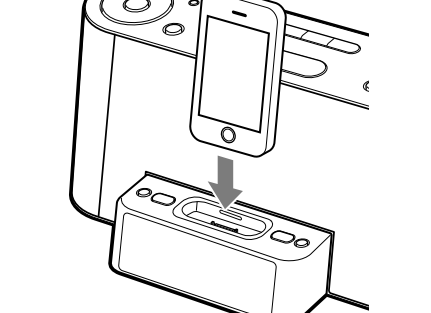

- 3 Press iPod & iPhone ►II.
The iPod begins to play automatically. You can operate the connected iPod by this unit or the iPod buttons.
- 4 Adjust the volume using VOLUME + or – (VOL + or – on the remote).

To	Press
Turn off the iPod	OFF, or press and hold iPod & iPhone ►II
Pause playback	iPod & iPhone ►II To resume play, press it again.
Go to the next track	►II (forward)
Go back to the previous track	◄◄ (backward)*
Locate a point while listening to the sound	►II (forward) or ◄◄ (backward) while playing and hold it until you find the point.
Locate a point while observing the display	►II (forward) or ◄◄ (backward) in pause and hold it until you find the point.
Go back to the previous menu	MENU**
Select a menu item or a track for playback	• (up) / • (down)**
Execute the selected menu or begin playback	ENTER**
Change to the shuffle mode	MODE

- * During playback, this operation goes back to the beginning of the current track. To go back to the previous track, press twice.
- ** These operations are available only when using the supplied remote commander.

Notes

- When placing or removing the iPod, hold the iPod at the same angle as that of the connector on this unit, and do not twist or bend the iPod as connects.
- Do not carry the unit with an iPod set on the connector. Doing so may cause a malfunction.
- When placing or removing the iPod, hold the Docking Tray securely with one hand and take care not to press the controls of the iPod by mistake.

- Before disconnecting the iPod, please playback.

To use the unit as a battery charger
You can use the unit as a battery charger. Charging begins when the iPod is connected to the unit.
Charging status appears in the display of iPod. For details, see the user's guide of your iPod.

Notes

On copyrights
iPod, iPhone, iPod classic, iPod nano, and iPod touch are trademarks of Apple Inc., registered in the U.S. and other countries.
"Made for iPod," and "Made for iPhone" mean that an electronic accessory has been designed to connect specifically to iPod or iPhone, respectively, and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. Please note that the use of this accessory with iPod or iPhone may affect wireless performance.

Setting the alarm

This clock radio is equipped with 3 alarm modes—iPod, radio and buzzer. Before setting the alarm, make sure to set the clock (see "Setting the clock for the first time").

To set the alarm

- 1 Press and hold ►ALARM SET A or B. "WAKE UP" appears and the hour flashes in the display.
- 2 Press TIME SET + or – repeatedly until the desired hour appears.
To cycle the hour rapidly, press and hold TIME SET + or –.
- 3 Press ►ALARM SET A or B. The minute flashes.
- 4 Repeat step 2 to set the minute.
- 5 Press ►ALARM SET A or B. The days of the week flash.
You can select the days from the following three options:
Every day: MON TUE WED THU FRI SAT SUN
Week day: MON TUE WED THU FRI
Week-end: SAT SUN
- 7 Press ►ALARM SET A or B. The alarm mode setting is entered.
- 8 Press TIME SET + or – repeatedly until the desired alarm mode flashes.
You can choose one of 5 settings: "iPod", "FM1", "FM2", "AM" or "BUZZER". Set the alarm mode as follows:
– iPod: see [A] Setting the iPod alarm."
– FM1, FM2 or AM: see [B] Setting the radio alarm."
– BUZZER: see [C] Setting the buzzer alarm."

[A] Setting the iPod alarm

- 1 Perform steps 1 to 8 in "To set the alarm."
- 2 Press ►ALARM SET A or B to select "iPod" alarm mode.
"VOLUME" appears in the display.
- 3 Press TIME SET + or – to adjust the volume.
- 4 Press ►ALARM SET A or B. The setting is entered.
- 5 If "A" or "B" does not appear in the display, press ►ALARM SET A or B again.
The iPod will sound at the set time.

When using an iPod touch/iPhone

- To wake up to music stored in an iPod touch/iPhone, connect the iPod touch/iPhone to the unit first, follow the steps above to set alarm time, and then select the music function.
- Even if the iPod alarm setting is complete, if you turn the iPod touch/iPhone power off before inserting the iPod touch/iPhone into the unit, the iPod alarm will not work.

[B] Setting the radio alarm

- 1 Perform steps 1 to 8 in "To set the alarm."
- 2 Press ►ALARM SET A or B to select radio band ("FM1", "FM2" or "AM").
Preset number flashes in the display.
- 3 Press TIME SET + or – to select the desired preset number corresponding the bands or "–".
"–" is the last station received.
- 4 Press ►ALARM SET A or B. "VOLUME" appears in the display.
- 5 Press TIME SET + or – to adjust the volume.
- 6 Press ►ALARM SET A or B. The setting is entered.
- 7 If "A" or "B" does not appear in the display, press ►ALARM SET A or B again.
The radio will turn on at the set time.

[C] Setting the buzzer alarm

- 1 Perform steps 1 to 8 in "To set the alarm."
- 2 Press ►ALARM SET A or B to select "BUZZER" alarm mode.
The setting is entered.
- 3 If "A" or "B" does not appear in the display, press ►ALARM SET A or B again.
The buzzer will sound at the set time.

Note

The volume cannot be set for the buzzer alarm.

To confirm an alarm time setting
Press TIME SET + or –. The setting will be displayed for about 4 seconds.

To change an alarm setting
Press and hold TIME SET + for at least 2 seconds to move the alarm time forwards. Press and hold TIME SET – for at least 2 seconds to move the alarm time back.
When you release the button, the changed time will flash for about 2 seconds. To change the alarm time again, press TIME SET + or – within these 2 seconds, otherwise the setting change will be fixed as displayed.

To doze for a few more minutes
Press SNOOZE/DATE/SLEEP OFF (SNOOZE on the remote).
The sound turns off but will automatically come on again after about 10 minutes.
You can change the snooze time by pressing SNOOZE/DATE/SLEEP OFF (SNOOZE on the remote) repeatedly within 4 seconds.
The maximum length of the snooze time is 60 minutes.

To stop the snooze timer, press OFF/ALARM RESET (OFF on the remote).

To stop the alarm
Press OFF/ALARM RESET (OFF on the remote) to turn off the alarm.
The alarm will sound again at the same time the next day.

To deactivate the alarm
Press ►ALARM ON/OFF A or B to turn off the alarm A or B indicator from the display.

To activate the alarm

Press ►ALARM ON/OFF A or B to turn on the alarm A or B indicator in the display.

Notes

- With the alarm mode is set to iPod, when the alarm time met

