


SONY®


Reader
Daily Edition™



Navigation Controls

The Reader Daily Edition features an intuitive, easy-to-use touch screen.

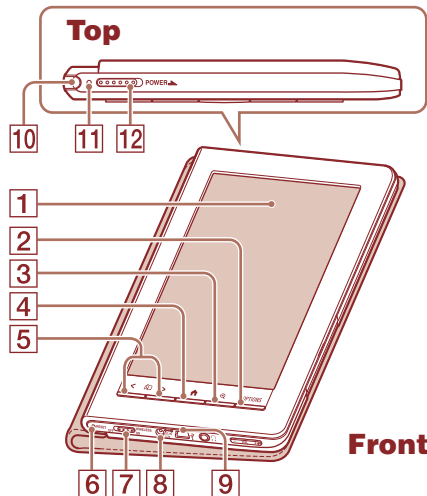

1 Touch screen

Provides simple commands by touching the screen.

2 OPTIONS button

Displays the option menu.

3 (Size) button

Allows you to view in 6 text sizes.

4 (Home) button

Displays the “Home” menu.

5 < > (Page Turn) buttons

Turns the page.

6 RESET button

7 WIRELESS switch

8 DC IN jack

Connects the supplied AC adapter for Reader (AC-S5220E).

9 USB connector

10 Stylus

Provides precise touch screen operations.

11 Charge/Busy indicator

Lights up red while charging.


12 POWER switch

Getting Started

Preparing the Reader

Install the supplied battery

- 1 Pull out the media slot cover ①, push portion ① to slide the battery cover on the rear to the left and remove it ②, then insert the supplied battery pack with the label side facing up, and the connectors aligned ③.

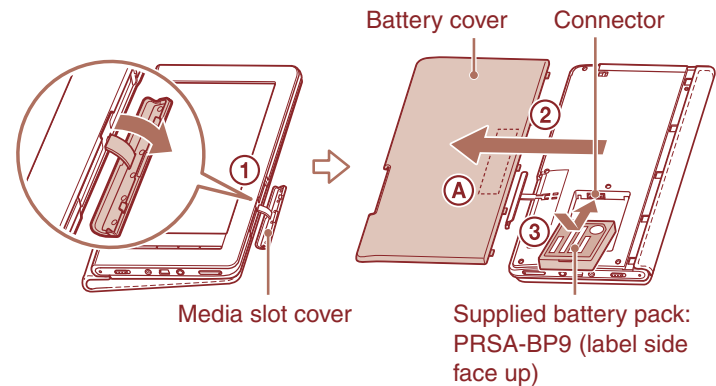

- 2 Place the battery cover so that all the tabs are inserted into their slots ④, slide the battery cover to the right until it clicks ⑤, then attach the media slot cover ⑥.




Make sure that there is no gap around the edge of the Reader when closed.

Getting Started (continued)

Charge the installed battery

Connect the AC adapter to the DC IN jack of the Reader, then connect the AC adapter to an AC outlet using the power cord.

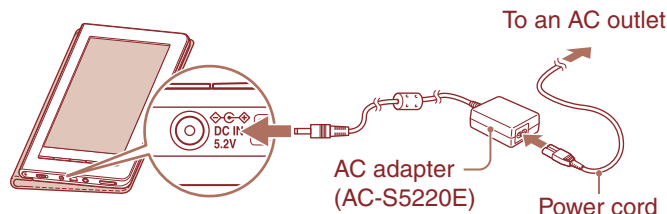

The Reader requires about 2.5 hours to fully charge, after which the charge/busy indicator (lights up red while charging) goes off.


Complete the initial settings

Slide the POWER switch to turn on the Reader, then complete the initial settings.

Reading eBooks

Some sample content is pre-loaded. Sample content is provided to allow you to start reading right away.

- 1 Press the  (Home) button, then tap  “Books” → desired book in the “Books” list.
- 2 Swipe your finger on the touch screen, or press the  > (Page Turn) buttons.

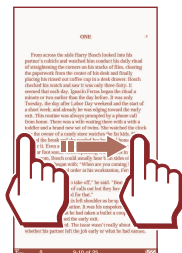


Hints

- To return to the “Books” list from the book page, press the OPTIONS button, then tap “Return to List.”
- To return to the “Home” menu, press the  (Home) button.


Getting eBooks

You can shop at the online “Reader Store” and choose from among thousands of eBooks via 3G wireless network or via the “Reader Library” software on your PC or Mac.

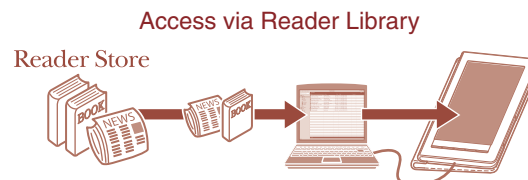

Accessing the Reader Store

First, make sure that the WIRELESS switch is set to ON. When the wireless status icon that is displayed in the bottom left of the screen shows  or , a wireless network is available. To access the Reader Store, tap the  “Store” tab in the “Home” menu. In your first visit, the store registration window appears.

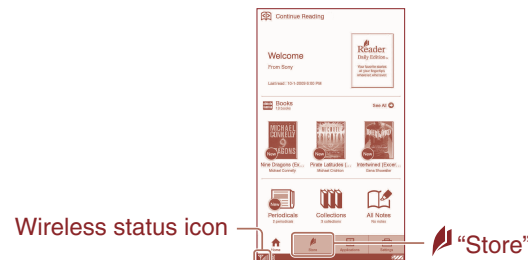

* The above image is a sample of the “Home” menu.

Note


- If you cannot access the Reader Store, refer to the User's Guide that is stored in the “Books” list.

The Reader Store registration

In order to purchase and download eBooks or periodicals, you need to register an account at the Reader Store, or if you already have a Reader Store account or Sony Style account, you can sign in via your e-mail address and password using the on-screen keyboard.

Browsing the Reader Store

Browse the Reader Store to find your desired books and purchase them by following the on-screen instructions. You can find your purchased books in the “Home” menu.

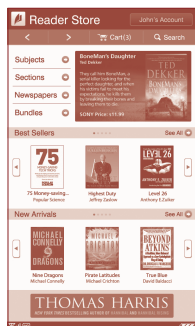

Reader Store

* The above image is a sample of the home page.

Accessing the Reader Store via Reader Library

You can also access the Reader Store via Reader Library on your computer. You can install Reader Library by launching the installer (stored on the Reader). For details, refer to the User's Guide.

Support

For more detailed information on operation and safety information, refer to the User's Guide. To view the User's Guide, follow these steps.

1 Press the  (Home) button.

2 Tap  “Books.”

3 Tap “User's Guide.”

You can also download the User's Guide to your computer from the support web site that is referred to below.

If you encounter an issue, visit the support web site or contact Customer Support.

Support Web site:

<http://www.sony.com/readersupport>

Customer Support:

Phone number: 1-866-962-7669

Notice for users

Before use, please read through the End User License Agreement (EULA). To view the EULA, follow these steps.

1 Press the  (Home) button.

2 Tap the  “Settings” tab.

3 Tap  “About.”

4 Swipe your finger on the touch screen or press the <  > (Page Turn) buttons to locate “END-USER LICENSE AGREEMENT.”

Supplied items

Digital Book Reader (with Soft Cover and Stylus) (1)
Rechargeable Battery Pack (PRSA-BP9) (1)
AC Adapter for Reader (AC-S5220E) (1)
Power Cord (1)
USB Cable (1)