 



Other Operations

Searching content

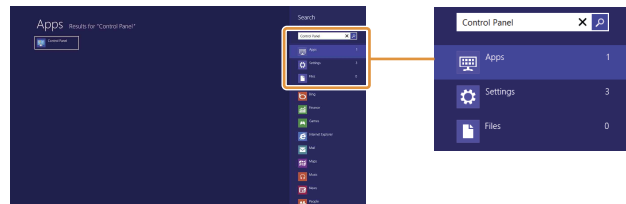

- 1 Click the **Search** charm (see cover).
- 2 Click **Apps**, **Settings**, or **Files**.
- 3 Enter a keyword (e.g. **Control Panel**) in the **Search** box.

 Entering sleep or shutting down

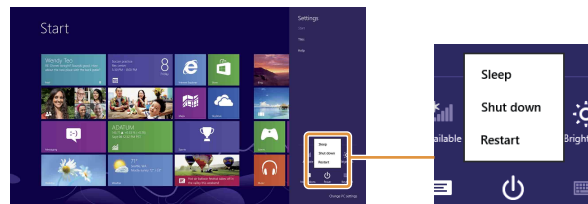

- 1 Click the **Settings** charm (see cover).
- 2 Click **(Power)**, then click **Sleep**, **Shut down**, or **Restart**.

More about how to use Windows 8

Refer to **Windows Help and Support**.

- 1 Click the **Search** charm (see cover).
- 2 Enter "Help and Support" in the **Search** box, click **Apps**, and then click the icon.

Learning how to use the touch pad

- 1 Click the **Search** charm (see cover).
- 2 Enter "VAIO Control Center" in the **Search** box, click **Apps**, and then click the icon.
- 3 Click **Mouse and Keyboard**, then click **Watch Movies on How to Use the Touchpad**.

Screenshots on this guide are examples in English.
Content in this guide is subject to change without notice.

Microsoft, Windows, the Windows logo are trademarks of the Microsoft group of companies. In the manual, the TM or (R) marks are not specified.



4 - 4 4 5 - 1 2 3 - 1 1

SONY

Windows 8 Getting Started

New Start Screen and Menu

Start screen

You can add shortcuts to apps, the desktop, and websites that you use the most.

 
- **With a mouse/touch pad**
Open the charms, then click the **Start** charm.
- **With a keyboard**
Press the **(Windows)** key.



Charms

Search for apps and files, share content, play content on other devices or print, and set up your PC.

- **With a mouse/touch pad**
Point to the upper-right corner, then move downward.
With a touch pad, you can also swipe in from the right edge.

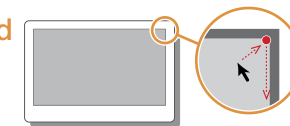

- **With a keyboard**

Press the **(Windows)** key and the **C** key at the same time.

 


Tiles

Click a tile to start an app and personalize the **Start** screen by adding and rearranging tiles.

Using Apps

Starting apps

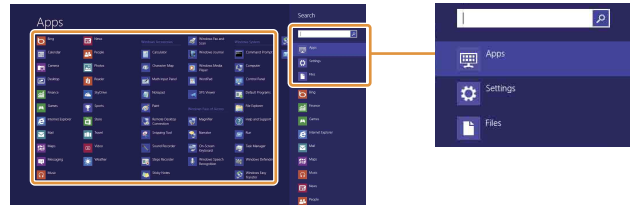


- 1 Click the  **Search** charm (see cover).
- 2 Enter a keyword in the **Search** box, click **Apps**, and then click the app icon.


Viewing running apps



 Point to the upper-left corner, then move downward. Click to switch apps.

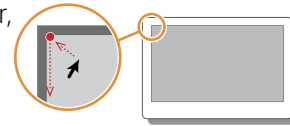


Closing apps

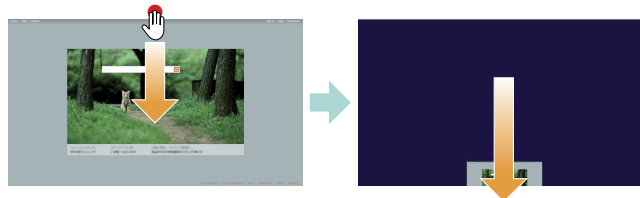 

- 1 When an app is open, move the cursor to the top-center of the screen until the hand icon appears.
- 2 Drag the app to the bottom of the screen until the app disappears from the screen.

 
Opening the apps menu

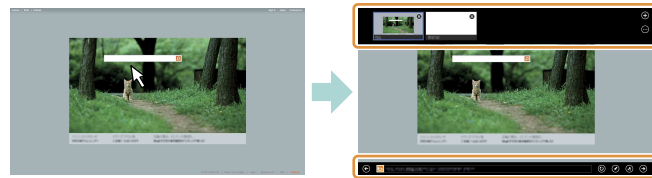

When an app is open, right-click (on a touch pad, click the bottom-right area).


Using the Internet

 Connecting to a Wireless LAN

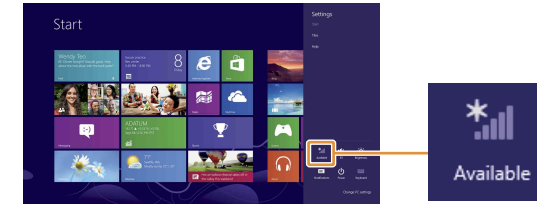

- 1 Click the  **Settings** charm (see cover).
- 2 Click the network icon.
- 3 Select your wireless network from the list, then click **Connect**.

 
Opening websites

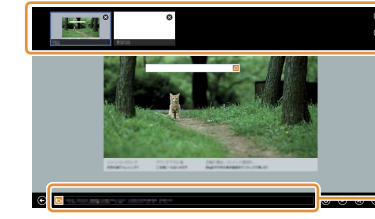

- 1 On the **Start** screen, click the **Internet Explorer** tile.
- 2 Enter a URL or keyword to search websites.
- 3 To open a new tab, open the apps menu (see left page) and click the  icon.

You can also find the traditional style **Internet Explorer** on the desktop.

 Installing apps from Windows Store

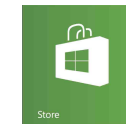

You can add apps from **Windows Store**.

- 1 Connect to the Internet.
- 2 Click the **Store** icon on the **Start** screen, and then find an app to install.

Microsoft Account

You will need a Microsoft account to use some of the apps or services, including **Windows Store**. On how to create and what you can do with a Microsoft account, refer to **Windows Help and Support** (see back page).