

SONY®

User guide

Xperia™ Z2 Tablet
SGP511/SGP512

Contents

Getting started.....	6
About This User Guide.....	6
Overview.....	6
Assembly.....	7
Screen Protection.....	8
Starting Your Device for the First Time.....	8
Why do I need a Google™ account?.....	8
Device security.....	10
Making Sure your Device is Protected.....	10
Screen Lock.....	10
Unlocking Your Device Automatically.....	12
Finding the identification number of your device.....	15
Finding a lost device	16
Learning the basics.....	18
Using the touchscreen.....	18
Locking and Unlocking the Screen.....	19
Home screen.....	20
Application screen.....	21
Navigating Applications.....	21
Widgets.....	22
Shortcuts and folders.....	23
Background and Themes.....	23
Taking a screenshot.....	24
Notifications.....	24
Icons in the status bar.....	26
Application Overview.....	28
Battery and Maintenance.....	30
Charging Your Device.....	30
Battery and Power Management.....	30
Updating your device.....	32
Maintenance Using a Computer.....	33
Storage and Memory.....	34
Backing Up and Restoring Content.....	35
Downloading applications.....	39
Downloading applications from Google Play™.....	39
Downloading applications from other sources.....	39
Internet and networks.....	40
Browsing the web.....	40
Wi-Fi.....	40

Tethering with Xperia Link™	41
Virtual private networks (VPNs).....	42
Synchronizing data on your device.....	44
Synchronizing with Online Accounts.....	44
Synchronizing with Microsoft® Exchange ActiveSync®.....	44
Basic settings.....	46
Accessing settings.....	46
Sound volume.....	46
Do not disturb mode settings.....	47
Screen settings.....	48
Application settings.....	49
Resetting Your Applications.....	50
Daydream.....	51
Language settings.....	51
Date and time.....	52
X-Reality™ for mobile.....	52
Super-Vivid Mode.....	52
Enhancing the sound output.....	52
Noise cancellation.....	53
Multiple User Accounts.....	53
Typing text.....	56
On-screen keyboard.....	56
Entering text using voice input.....	57
Editing text.....	57
Personalizing the On-Screen Keyboard.....	58
Contacts.....	60
Transferring contacts.....	60
Searching and viewing contacts.....	61
Adding and editing contacts.....	62
Favorites and groups.....	63
Sending contact information.....	63
Avoiding duplicate entries in the Contacts application.....	63
Backing Up Contacts.....	64
Email.....	65
Setting up email.....	65
Sending and Receiving Email Messages.....	65
Organizing your email messages.....	66
Email account settings.....	67
Gmail™.....	67
Music.....	69
Transferring Music to Your Device.....	69
Listening to music.....	69

Music home screen menu.....	70
Playlists.....	71
Sharing music.....	72
Enhancing the sound.....	72
Recognizing Music with TrackID™.....	72
FM radio.....	74
Listening to the Radio.....	74
Favorite radio channels.....	75
Sound settings.....	75
Camera.....	76
Taking photos and recording videos.....	76
Face Detection.....	77
Using Smile Shutter™ to capture smiling faces.....	77
Adding the Geographical Position to Your Photos.....	78
General camera settings.....	78
Still camera settings.....	81
Video camera settings.....	85
Photos and videos in Album.....	88
Viewing Photos and Videos.....	88
Sharing and Managing Photos and Videos.....	89
Editing photos with the Photo editor application.....	90
Editing videos with the Video editor application.....	91
Hiding photos and videos.....	91
Album homescreen menu.....	92
Viewing your photos on a map.....	92
Videos.....	94
Watching videos in the Video application.....	94
Transferring video content to your device.....	95
Managing video content.....	95
Movie Creator.....	95
Connectivity.....	97
Mirroring the Screen of Your Device on a TV Using a Cable.....	97
Mirroring the Screen of your Device Wirelessly.....	97
Sharing Content with DLNA Certified™ Devices.....	98
Connecting Your Device to USB Accessories.....	100
Connecting Your Device to a DUALSHOCK™ Series Wireless Controller.....	101
NFC.....	101
Bluetooth® Wireless Technology.....	103
Smart apps and features that save you time.....	106
Controlling Accessories and Settings with Smart Connect™.....	106
Using your device as a fitness hub with ANT+™.....	107

Using your device as a wallet.....	108
Travel and maps.....	109
Using location services.....	109
Google Maps™ and Navigation.....	109
Using your device with a car infotainment system.....	109
Airplane mode.....	110
Calendar and alarm clock.....	111
Calendar.....	111
Clock.....	112
Accessibility.....	115
Magnification Gestures.....	115
Large Text.....	115
Color Correction.....	115
TalkBack.....	115
Support and Legal.....	117
Support Application.....	117
Xperia™ Tips.....	117
Help in menus and applications.....	117
Running Diagnostic Tests on Your Device.....	117
Restarting, Resetting, and Repairing.....	118
Help us improve our software.....	119
Warranty, SAR, and Usage Guidelines.....	119
Recycling Your Device.....	119
Legal information.....	120

Getting started

About This User Guide

This is the **Xperia™ Z2 Tablet** User Guide for the **Android™ 6.0** software version. If you're not sure which software version your device is running, you can check it in the Settings menu.

- ! System and application updates can present the features in your device in another way than described in this User Guide. The Android™ version might not be affected in an update. For more information about software updates, see *Updating your device* on the 32 page.

To check the current software version of your device

- 1 From your Homescreen, tap .
- 2 Find and tap **Settings** > **About tablet** > **Android™ version**.

To Find the Model Number and Name of Your Device

- 1 From your **Home screen**, tap .
- 2 Find and tap .


The device model number and name are displayed.

Limitations to Services and Features


Some of the services and features described in this User Guide may not be supported in all countries or regions, or by all networks or service providers. The GSM International Emergency Number can always be used in all countries, regions, networks and by all service providers, provided that the device is connected to the cellphone network. Please contact your network operator or service provider to determine the availability of any specific service or feature and whether additional access or usage fees apply.

The use of certain features and applications described in this guide may require access to the internet. You may incur data connection charges when you connect to the internet with your device. Contact your wireless service provider for more information.

Overview

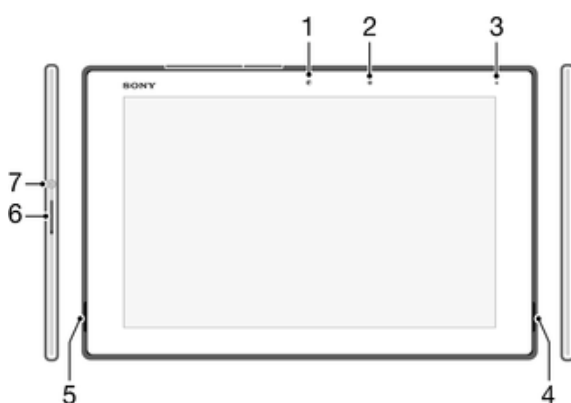

- | | |
|---|-----------------------------|
| 1 | Front camera |
| 2 | Light sensor |
| 3 | Charging/Notification light |
| 4 | Speaker A |
| 5 | Speaker B |
| 6 | Volume/Zoom key |
| 7 | Power key |

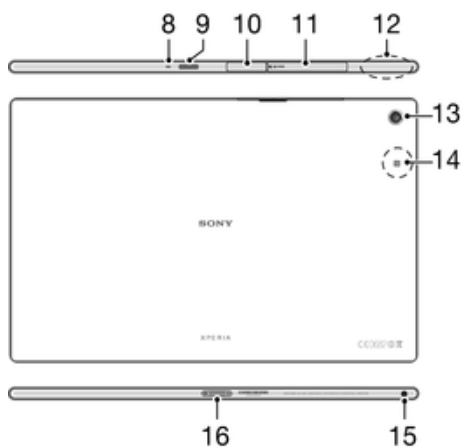


- | | |
|----|----------------------------------|
| 8 | Microphone |
| 9 | Infrared sensor |
| 10 | Charger/USB port cover |
| 11 | Memory card slot cover |
| 12 | Wi-Fi/GPS/Bluetooth antenna area |
| 13 | Main camera |
| 14 | NFC™ detection area |
| 15 | Headset jack |
| 16 | Charging dock connector |

Assembly

A protective plastic sheet is attached to the screen. You should peel off this sheet before using the touchscreen. Otherwise, the touchscreen might not function properly.

To insert a memory card

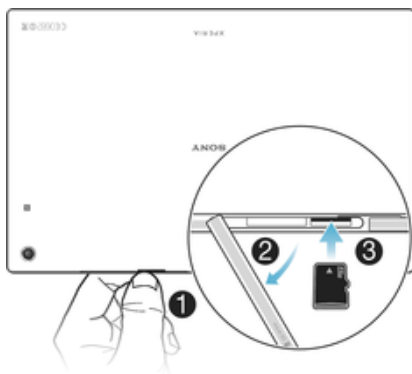

- 1 Insert a fingernail into the gap between the memory card slot cover and the top side of the device, then detach the cover.
- 2 Place the memory card in the memory card slot, with the gold-colored contacts facing down, then push the memory card all the way into the slot until you hear a locking sound.
- 3 Reattach the memory card cover.

To Remove the Memory Card

- 1 Turn off the device and detach the memory card slot cover.
 - 2 Push the memory card inward, and then release it immediately.
 - 3 Draw the memory card fully outward and remove it.
 - 4 Re-attach the cover.
- 💡 You can also remove the memory card without turning the device off as described in step 1. To use this method, you must first unmount the memory card. Tap **Settings** > **Storage**, then tap  beside **SD card**, and then follow the rest of the instructions above.

Screen Protection

- ! Before using your device, remove the transparent protection film by pulling up on the protruding tab.

It is recommended to protect your device with a Sony-branded screen cover or a protector intended for your Xperia™ model. The use of third-party screen protection accessories may prevent your device from working correctly by covering sensors, lenses, speakers, or microphones, and can invalidate the warranty.


Starting Your Device for the First Time

It is recommended that you charge the battery for at least 30 minutes before starting up your device for the first time. You can still use your device while it is charging. For more information on charging, see *Charging Your Device* on page 30.

The first time you start your device, a setup guide helps you to configure basic settings, personalize your device, and sign in to your accounts, for example a Google™ account.

To turn on the device

- ! Make sure that the battery is charged for at least 30 minutes before you turn on the device for the first time.

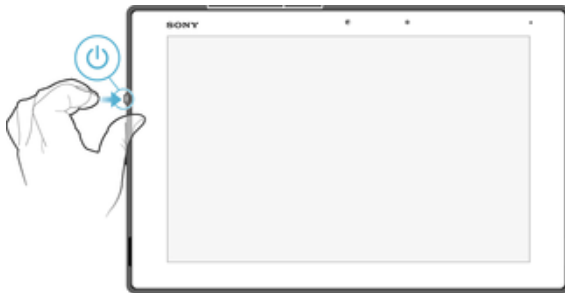

- 1 Press and hold down the power key  until the device vibrates.
- 2 Wait a while for the device to start.

To Turn off the Device

- 1 Press and hold down the power key  until the options menu opens.
 - 2 In the options menu, tap **Power off**.
- ! It may take a while for the device to shut down.

Why do I need a Google™ account?

Your Xperia™ device from Sony runs on the Android™ platform developed by Google™. A range of Google™ applications and services is available on your device when you purchase it, for example, Gmail™, Google Maps™, YouTube™ and the Play Store™ application, which gives you access to the Google Play™ online store for downloading Android™ applications. To get the most out of these services, you need a Google™ account. For example, a Google™ account is mandatory if you want to:

- Download and install applications from Google Play™.

- Synchronize email, contacts and the calendar using Gmail™.
- Chat with friends using the Hangouts™ application.
- Synchronize your browsing history and bookmarks using the Google Chrome™ web browser.
- Identify yourself as the authorized user after a software repair using Xperia™ Companion.
- Remotely find, lock or clear a lost or stolen device using the my Xperia™ or Android™ Device Manager services.

For more information about Android™ and Google™, go to <http://support.google.com>.

- ! It is crucial that you remember your Google™ account username and password. In some situations, you may need to identify yourself for security reasons using your Google™ account. If you fail to give your Google™ username and password in such situations, your device is locked. Also, if you have more than one Google™ account, make sure to enter the details for the relevant account.

To Set up a Google™ Account on Your Device

- 1 From your Homescreen, tap .
 - 2 Find and tap **Settings > Accounts > Add account > Google**.
 - 3 Follow the registration wizard to create a Google™ account, or sign in if you already have an account.
- 💡 You can also sign in to or create a Google™ account from the setup guide the first time you start your device. Or you can go online and create an account at www.google.com/accounts.

Device security

Making Sure your Device is Protected

You can prevent other people from using your device without your permission. For example, if your device is lost, stolen, or wiped, only someone with your Google™ account or screen lock information can use the device. To make sure your device is protected, it is important that you set a secure screen lock and add your Google™ account to your device. It is crucial that you remember both your screen lock information and your Google™ account credentials. To make sure your device is protected, you can:

- Set a secure screen lock on your device, that is, a PIN, password, or pattern screen lock to prevent anyone from resetting your device. For more information, see *Screen Lock* on the 10 page.
- Add a Google™ account to prevent others from using your device if it gets stolen and/or wiped. For more information, see *Why do I need a Google™ account?* on the 8 page.
- Activate either the “Protection by my Xperia” or the Android™ Device Manager web service. Using one of these services, you can remotely locate, lock, or format a lost device. For more information, see *Finding a lost device* on the 16 page.

Verifying the Ownership of Your Device

Certain protection features require you to either unlock your screen with your PIN, password, or pattern, or enter your Google™ account information. Below are examples of protection features and some of the required credentials:

Factory Data Reset protection	You must unlock your screen before you are allowed to perform a Factory Data Reset.
Protection by my Xperia	If you remotely reset your device using this service, you must enter the username and password for a Google™ account associated with the service. The device must be connected to the internet before the setup process can be completed. Otherwise, you will not be able to use your device after the reset.
Android™ Device Manager	If you remotely reset your device using this service, you must enter the username and password for a Google™ account. The device must be connected to the internet before the setup process can be completed. Otherwise, you will not be able to use your device after the reset.
Software repair	If you use the Xperia™ Companion software to perform a software repair, you're asked to enter your Google™ account username and password when you start the device after the repair is complete.

- ! For Android™ Device Manager, it is necessary to enter information from a Google™ account. This can be any Google™ account which you have set up on the device as an owner. If you cannot provide the relevant account information during a setup process, you won't be able to use the device at all.

Screen Lock

There are several ways to lock the screen. The security level of each lock type is listed below in order of weakest to strongest:

- **Swipe**
 - no protection, but you have quick access to the Homescreen
- **Pattern**
 - draw a simple pattern with your finger to unlock your device
- **PIN**
 - enter a numeric PIN of at least four digits to unlock your device
- **Password**

– enter an alpha-numeric password to unlock your device

- ! It is very important that you remember your screen unlock pattern, PIN, or password. If you forget this information, it may not be possible to restore important data such as contacts and messages.

To Create a Screen Lock Pattern

- 1 From your Homescreen, tap .
 - 2 Find and tap **Settings > Security > Screen lock > Pattern**.
 - 3 Follow the instructions on your device.
- ! If your lock pattern is rejected five times in a row when you try to unlock your device, you must wait 30 seconds before you can try again.

To change screen lock type

- 1 From your Homescreen, tap .
- 2 Find and tap **Settings > Security > Screen lock**.
- 3 Follow the instructions in your device and select another screen lock type.

To change the screen lock pattern

- 1 From your Homescreen, tap .
- 2 Find and tap **Settings > Security > Screen lock**.
- 3 Draw your screen unlock pattern.
- 4 Tap **Pattern** and follow the instructions on your device.

To Create a Screen Lock PIN

- 1 From your Homescreen, tap .
- 2 Find and tap **Settings > Security > Screen lock > PIN**.
- 3 Enter a numeric PIN, then tap **Continue**.
- 4 Re-enter and confirm your PIN, then tap **OK**.
- 5 Follow the instructions on your device.

To Create a Screen Lock Password

- 1 From your Homescreen, tap .
- 2 Find and tap **Settings > Security > Screen lock > Password**.
- 3 Enter a password, then tap **Continue**.
- 4 Re-enter and confirm your password, then tap **OK**.
- 5 Follow the instructions on your device.

To Activate The Swipe Unlock Function

- 1 From your Homescreen, tap .
- 2 Find and tap **Settings > Security > Screen lock**.
- 3 Draw your screen unlock pattern, or enter your PIN or password if one of these screen lock types is enabled.
- 4 Tap **Swipe**.

Resetting a Forgotten Screen Lock

If you forgot your screen lock PIN, password, or pattern, you might be able to reset it using the Protection by my Xperia service. No content on your device is lost after you perform a screen lock reset using the Protection by my Xperia service.

To activate the Protection by my Xperia service, see *Finding a lost device* on the 16 page.

To Reset the Screen Lock using Protection by my Xperia

- 1 Make sure you know your Google™ account username and password and that you have enabled the Protection by my Xperia service on your device.
 - 2 Go to myxperia.sonymobile.com using any internet-connected device.
 - 3 Sign in using the same Google™ account you have set up on your device.
 - 4 Click the picture of your device under **Your devices**.
 - 5 Select **Lock** or **Change PIN2** to replace the current screen lock with a new PIN code.
 - 6 Follow the on-screen instructions provided by Protection by my Xperia.
- ! Depending on your security settings, your device may lock after a screen lock reset. You then need to enter your Google™ account username and password in order to use the device.

Unlocking Your Device Automatically

- ! The Smart Lock feature may not be available in every market, country, or region.

The Smart Lock feature makes unlocking your device easier by letting you set it to unlock automatically in certain situations. You can keep your device unlocked, for example, when it's connected to a Bluetooth® device or when you're carrying it with you.

You can set Smart Lock to keep your device unlocked using the following settings:

- **Trusted face:** Unlock your device by looking at it.
- **Trusted voice:** Set up voice recognition to search in any screen.
- **Trusted devices:** Keep your device unlocked when a trusted Bluetooth® or NFC device is connected.
- **Trusted places:** Keep your device unlocked when you're in a trusted location.
- **On-body detection:** Keep your device unlocked when you're carrying your device with you.

You have to manually unlock your device if you don't use it for 4 hours and after you restart it.

- ! The Smart Lock feature is developed by Google™ and the exact functionality may change over time due to updates from Google™.

To Enable Smart Lock

- 1 Make sure you've set a pattern, PIN, or password for your screen lock.
- 2 From your Homescreen, tap .
- 3 Find and tap **Settings > Security > Trust agents**.
- 4 Drag the slider beside **Smart Lock (Google)** to the right.
- 5 Tap the back arrow next to **Trust agents**.
- 6 Find and tap **Smart Lock**.
- 7 Enter your pattern, PIN, or password. You need to enter this screen lock every time you want to change your Smart Lock settings.
- 8 Select a Smart Lock type.

Setting When to Keep the Device Automatically Unlocked

You can set Smart Lock to keep your device unlocked using the following settings:

- **Trusted devices** – Keep your device unlocked when a trusted Bluetooth® device is connected.
- **Trusted places** – Keep your device unlocked when you're in a trusted location.
- **On-body detection** – Keep your device unlocked when you're carrying your device with you.
- **Trusted face** – Unlock your phone by looking at it.
- **Trusted voice** – Set up voice recognition to search in any screen.

You have to manually unlock your device when you don't use it for 4 hours and after you restart it.

Connecting to trusted Bluetooth® devices

You can designate a connected Bluetooth® device as a trusted device and keep your Xperia™ device unlocked while it's connected to it. So if you have Bluetooth® devices that you connect to regularly, such as a car speaker or home entertainment system, a Bluetooth® watch or a fitness tracker, you can add them as trusted devices and bypass the added security of the lockscreen to save time. This feature is suitable if you're normally in a relatively secure place when you use these devices. In some cases, you may still need to manually unlock your device before a trusted device can be connected.

- ! It is not recommended to add devices that are constantly connected to your device as trusted devices, such as Bluetooth® keyboards or cases.
- 💡 As soon as a trusted Bluetooth® device is switched off or moves out of range, your screen locks and you need your PIN, pattern, or password to unlock it.

To Add a Trusted Bluetooth® Device

- 1 Make sure your device is paired and connected to the Bluetooth® device that you want to add as a trusted device.
- 2 Find and tap **Settings > Security > Smart Lock > Add trusted device > Bluetooth**.
- 3 Tap a device name to select it from the list of connected devices. Only paired devices appear in this list.
- 4 Depending on the security of your connection, you may need to manually unlock your device before the trusted device can keep it unlocked.

To Remove a Trusted Bluetooth® Device

- 1 From your Homescreen, tap .
- 2 Find and tap **Settings > Security > Smart Lock > Trusted devices**.
- 3 Tap the device you want to remove.
- 4 Tap **Remove trusted device**.

Making Sure You're Secure when Using Trusted Devices

Different Bluetooth® devices support different Bluetooth® standards and security capabilities. There's a chance someone could keep your Xperia™ device unlocked by imitating your Bluetooth® connection, even if your trusted device is no longer nearby. Your device is not always able to determine whether your connection is secure from someone trying to imitate it.

When your device can't determine that you're using a secure connection, you'll get a notification on your Xperia™ device and may need to manually unlock it before the trusted device can keep it unlocked.

Bluetooth® connectivity range can vary depending on factors like the model of your device, the connected Bluetooth® device, and your environment. Depending on these factors, Bluetooth® connections can work over distances of up to 325 feet (100 meters). If someone takes your Xperia™ device while it's near a trusted device, they may be able to access your Xperia™ device if the trusted device has unlocked it.

Connecting to Trusted Places

When the Trusted places feature is set up, the lockscreen security on your Xperia™ device gets disabled when you are in a designated trusted location. For this feature to work, you must have an internet connection (preferably over Wi-Fi) and allow your device to use your current location.

To set up trusted places, first make sure high-accuracy location mode or battery-saving location mode is enabled on your device before you add home or custom locations.

- ! The exact dimensions of a trusted location are an estimate and may extend beyond the physical walls of your home or other areas you have added as trusted locations. This feature can keep your device unlocked within a radius of up to 80 meters. Also be aware that location signals can be replicated or manipulated. Someone with access to specialized equipment could unlock your device.

To Add Your Home Location

- 1 Make sure location is turned on and you are using either the **High accuracy** or **Battery saving** Location mode setting.
- 2 From your Homescreen, tap .
- 3 Find and tap **Settings > Security > Smart Lock > Trusted places > Home**.
- 4 Tap **Turn on this location**.

To Edit Your Home Location

- 1 Make sure location mode is turned on and you are using either the **High accuracy** or **Battery saving** setting.
 - 2 From your Homescreen, tap .
 - 3 Find and tap **Settings > Security > Smart Lock > Trusted places**.
 - 4 Select your home location.
 - 5 Tap **Edit**.
 - 6 In the search bar, enter the location you want to use as your home location.
-  If your home has multiple buildings at the same address, the trusted place you want to add might be different from the actual address. To ensure better location accuracy, you can add the actual location of your home within the building complex as a custom place.

To Remove Your Home Location

- 1 Make sure location mode is turned on and you are using either the **High accuracy** or **Battery saving** setting.
- 2 From your Homescreen, tap .
- 3 Find and tap **Settings > Security > Smart Lock > Trusted places > Home**.
- 4 Tap **Turn off this location**.

Using Custom Locations

You can add any location as a trusted, custom place where your device can remain unlocked.

To Add a Custom Place

- 1 Make sure location mode is turned on and you are using either the **High accuracy** or **Battery saving** setting.
- 2 From your Homescreen, tap .
- 3 Find and tap **Settings > Security > Smart Lock > Trusted places**.
- 4 Tap **Add trusted place**.
- 5 To use your current location as a trusted, custom place, tap **Select this location**.
- 6 Alternately, to enter another location, tap the magnification glass icon and type the address. Your device searches for the entered location. To use the suggested address, tap the address.
- 7 To fine-tune the location, tap the back arrow next to the address, then drag the location pin to the desired location and tap **Select this location**.

To Edit a Custom Place

- 1 Make sure location mode is turned on and you are using either the **High accuracy** or **Battery saving** setting.
- 2 From your Homescreen, tap .
- 3 Find and tap **Settings > Security > Smart Lock > Trusted places**.
- 4 Select the place you want to edit.
- 5 Tap **Edit Address**.
- 6 To enter another location, tap the magnification glass icon and type the address. Your device searches for the entered location. To use the suggested address, tap the address.
- 7 To fine-tune the location, tap the back arrow next to the address, then drag the location pin to the desired location and tap **Select this location**.

To Remove a Custom Place

- 1 Make sure location mode is turned on and you are using either the **High accuracy** or **Battery saving** setting.
- 2 From your Homescreen, tap .
- 3 Find and tap **Settings > Security > Smart Lock > Trusted places**.
- 4 Select the place you want to remove.
- 5 Tap **Delete**.

Keeping Your Device Unlocked while You're Carrying It

Using the On-body detection feature, you can have your device stay unlocked when you have it on you, for example, if you're carrying it in your hand, pocket, or bag. The accelerometer in your device keeps your device unlocked when it senses that it's being carried. The device locks when the accelerometer detects that the device has been put down.

- ! The On-body detection feature can't distinguish whose body is connected. If you give your device to someone else while it's unlocked using On-body detection, your device may stay unlocked for the other user. Keep in mind that On-body detection as a security feature is less secure than a pattern, PIN, or password.

To Enable On-Body Detection

- 1 From your Homescreen, tap .
- 2 Find and tap **Settings > Security > Smart Lock > On-body detection**.
- 3 Drag the slider to the On position, and then tap **Continue**.

Using On-body Detection

When you use the On-body detection feature, you need to be aware of the following behaviors:

- When your device senses that it's on your body, it stays unlocked after you unlock it.
- Any time you put your device down and it senses that it's no longer on your body, your device locks automatically.
- After you put your device down, for example, if you place it on a table, your device can take up to one minute to lock.
- After you get into a car, bus, train, or other land vehicle, your device can take between 5 and 10 minutes to lock.
- Note that when you get on an airplane or a boat (or other non-land-based vehicles), your device may not lock automatically, so be sure to lock it manually if needed.
- When you pick up your device again or get out of the vehicle, just unlock it once and your device then stays unlocked for as long as you have it on you.


To Turn off On-Body Detection

- 1 From your Homescreen, tap .
- 2 Find and tap **Settings > Security > Smart Lock > On-body detection**.
- 3 Drag the slider to the Off position.

Finding the identification number of your device

Your device has a unique ID (identification) number. You should keep a copy of this number. You may require it, for example, when you access the Xperia™ Care support service and need to register your device.

To View Your Device's ID Number

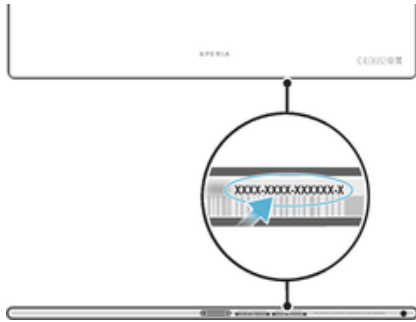

To View the Device ID Number via the Device Settings

- 1 From your Homescreen, tap .
- 2 Find and tap **Settings** > **About tablet** > **Status**.
- 3 Scroll to **IDID** to view the ID number.

Finding a lost device



If you have a Google™ account, the my Xperia web service can help you locate and secure your device if you ever lose it. You can:

- Locate your device on a map.
 - Sound an alert, even if the device is in silent mode.
 - Remotely lock the device and make the device display your contact information to anyone who finds it.
 - As a last resort, remotely clear the internal and external memory of the device.
- ! The my Xperia service may not be available in all countries/regions.

To Activate the My Xperia Service

- 1 From your Homescreen, tap .
 - 2 Find and tap **Settings** > **Security** > **Protection by my Xperia** > **Activate**.
 - 3 Mark the checkbox, then tap **Accept**.
 - 4 If prompted, sign in to your Sony Entertainment Network account, or create a new one if you don't have one.
 - 5 Enable location services on your device if this function is not already enabled.
- ! To verify that the my Xperia service can locate your device, go to myxperia.sonymobile.com and sign in using either the Google™ account or the Sony Entertainment Network account that you have set up on your device.
- ! If you are using a device with multiple users, my Xperia service can only be used by the owner.

Finding a Lost Device Using Android™ Device Manager

Google™ offers a location and security web service called Android™ Device Manager. You can use it in parallel with, or as an alternative to, the Protection by my Xperia service. If you lose your device, you can use Android™ Device Manager to:

- Find and show where your device is located.

- Ring or lock your device, erase everything on it, or add a phone number to the lockscreen.

For additional information about Android™ Device Manager, go to www.support.google.com.

- ! Android™ Device Manager does not work if your device is turned off or if it does not have a connection to the internet. The Android™ Device Manager service may not be available in all countries or regions.

To Activate Android™ Device Manager

- 1 If you are using a device with multiple users, be sure you are logged in as the owner.
- 2 Make sure you have an active data connection and that location services are enabled.
- 3 From your Homescreen, tap .
- 4 Find and tap **Settings** > **Google** > **Security**.
- 5 Drag the sliders beside **Remotely locate this device** and **Allow remote lock and erase** to the On position.
- 6 If prompted, agree to the terms and conditions by tapping **Activate**.
- 7 To verify that Android™ Device Manager can locate your device after you activate the service, go to www.android.com/devicemanager and sign in using your Google™ account.

Learning the basics


Using the touchscreen

Tapping




- Open or select an item.
- Mark or unmark a checkbox or option.
- Enter text using the on-screen keyboard.

Touching and holding

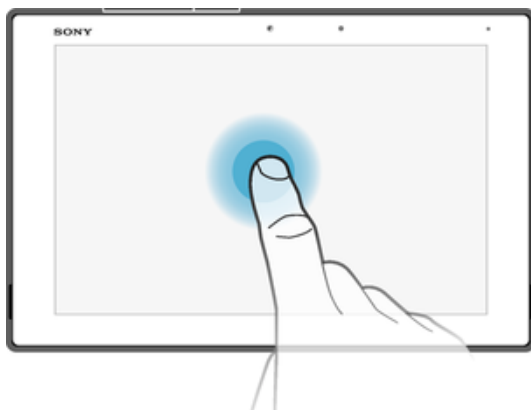


- Move an item.
- Activate an item-specific menu.
- Activate selection mode, for example, to select several items from a list.

Pinching and spreading

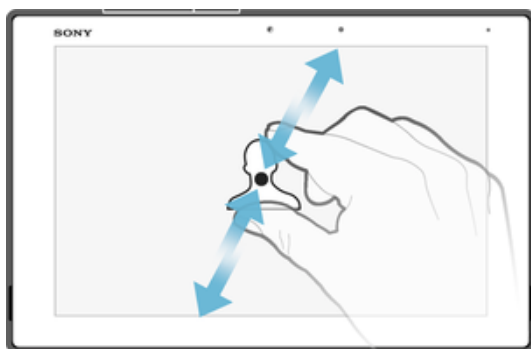


- Zoom in or out on web pages, photos, and maps, and when you're taking photos or shooting videos.

Swiping

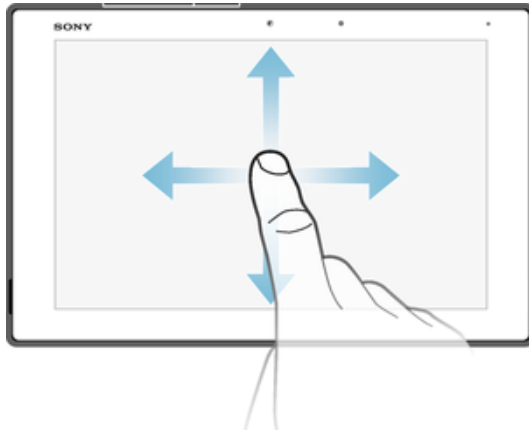

- Scroll up or down a list.
- Scroll left or right, for example, between Homescreen panes.
- Swipe left or right to reveal more options.


Flicking

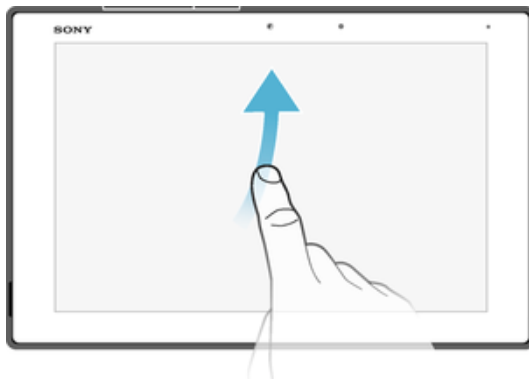

- Scroll quickly, for example, in a list or on a web page. You can stop the scrolling movement by tapping the screen.

Locking and Unlocking the Screen

When your device is on and left idle for a set period of time, the screen darkens to save battery power and locks automatically. This lock prevents unwanted actions on the touchscreen when you are not using it. When you buy your device, a basic screen swipe lock is already set. This means you have to swipe upward on the screen to unlock it. You can change the security settings later and add other kinds of locks. See *Screen Lock* on the 10 page.

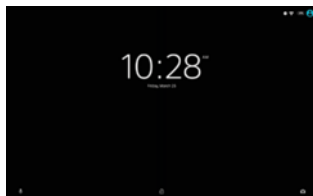

To activate the screen

- Briefly press the power key .

To lock the screen

- When the screen is active, briefly press the power key .

Home screen

The Homescreen is the starting point for using your device. It's similar to the desktop on a computer screen. Your Home screen can have up to seven panes, which extend beyond the regular screen display width. The number of Home screen panes is represented by a series of dots at the lower part of the Home screen. The highlighted dot shows the pane that you are currently in.



To go to the Home screen

- Press .

To browse the Home screen



Home screen panes

You can add new panes to your Home screen (up to a maximum of seven panes) and delete panes. You can also set the pane that you want to use as the main Home screen pane.



To Set a Pane as the Main Homescreen Pane

- 1 Touch and hold any area on your Homescreen until the device vibrates.
- 2 Flick left or right to browse to the pane you want to set as your main Homescreen pane, and then tap  in the top-left corner.

To add a pane to your Homescreen

- 1 Touch and hold an empty area on your Homescreen.
- 2 To browse the panes, flick all the way to the right or left, then tap .

To Delete a Pane from your Homescreen

- 1 Touch and hold any area on your Homescreen until the device vibrates.
- 2 Flick left or right to browse to the pane you want to delete, then tap  in the top-right corner of the pane.

Homescreen Settings

Use the **Home Settings** shortcut to adjust some basic settings on your Homescreen. For example, you can set your Homescreen to auto-rotate and adjust the size of icons.

To Set your Homescreen to Auto Rotate

- 1 Touch and hold an empty area on your Homescreen, and then tap **Settings**.
- 2 Drag the slider beside **Auto rotation** to the On position.

To Adjust the Size of Icons on Your Homescreen

- 1 Touch and hold an empty area on your Homescreen, then tap **Home Settings**.
- 2 Tap **Icon size**, then select an option.

Application screen

The Application screen, which you open from the Homescreen, contains the applications that come pre-installed on your device as well as applications that you download.



To view all applications on the Application screen

- 1 From your Home screen, tap .
- 2 Flick left or right on the Application screen.

To open an application from the Application screen

- Flick left or right to find the application, then tap the application.

To Search for an Application from the Application Screen

- 1 When the Application screen is open, tap **Search applications**.
- 2 Enter the name of the application you want to search for.

To Arrange Applications on the Application Screen

- 1 When the Application screen is open, tap .
- 2 Tap **Sort apps**, then select an option.

To add an application shortcut to the Home screen

- 1 On the Application screen, touch and hold an application icon until it becomes selected, then drag the icon to the top of the screen. The Home screen opens.
- 2 Drag the icon to the desired location on the Home screen, then release your finger.

To Move an Application on the Application Screen


- 1 When the Application screen is open, tap .
- 2 Make sure **Own order** is selected under **Sort apps**.
- 3 Touch and hold the application until it becomes selected, then drag it to the new location.

To Uninstall an Application from the Application Screen

- 1 Touch and hold any area on the Application screen until the device vibrates. All applications that can be uninstalled are then indicated by .
- 2 Select the application you want to uninstall, and then tap **Delete**.

Navigating Applications

You can navigate between applications using the navigation keys, the favorites bar, and the recently used applications window, which lets you switch easily between all recently used applications. The navigation keys are the Home key, the Recent apps key, and the Back key. Some applications get closed when you press the Home key  to exit, while others are paused or continue to run in the background. If an application is paused or running in the background, you can continue where you left off the next time you open the application.

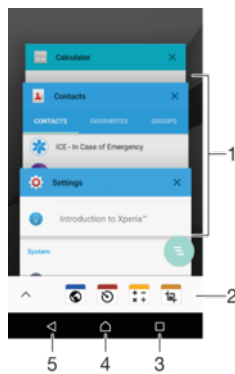

- 1 Recently used applications window – Open a recently used application
- 2 Favorites bar – Use a shortcut to access applications or widgets
- 3 Recent apps key – Open the recently used applications window and the favorites bar
- 4 Home key – Exit an application and go back to the Homescreen
- 5 Back key – Go back to the previous screen within an application or close the application

To open the recently used applications window

- Press .

To Close All the Recently Used Applications

- Tap  and then tap .

To open a menu in an application

- While using the application, press .
- ! A menu is not available in all applications.

Widgets

Widgets are small applications that you can use directly on your Homescreen. They also function as shortcuts. For example, the Weather widget allows you to see basic weather information directly on your Homescreen. When you tap the widget, the full Weather application opens. You can download additional widgets from Google Play™.

To add a widget to the Home screen

- 1 Touch and hold an empty area on your Homescreen, then tap **Widgets**.
- 2 Find and tap the widget that you want to add.

To resize a widget

- 1 Touch and hold a widget until it magnifies, then release the widget. If the widget can be resized, for example, the Calendar widget, then a highlighted frame and resizing dots appear.
- 2 Drag the dots inward or outward to shrink or expand the widget.
- 3 To confirm the new size of the widget, tap anywhere on the Homescreen.

To move a widget

- Touch and hold the widget until it magnifies, then drag it to the new location.

To Remove a Widget

- Touch and hold the widget until it is selected, then drag it to **Remove from home screen**.

Shortcuts and folders

Use shortcuts and folders to manage your applications and keep your Home screen tidy.



- 1 Access an application using a shortcut
- 2 Access a folder containing applications

To add an application shortcut to your Home screen

- 1 Touch and hold an empty area on your Homescreen.
 - 2 In the customization menu, tap **Widgets > Apps**.
 - 3 Scroll through the list of applications and select an application. The selected application gets added to the Homescreen.
- 💡 In step 3, alternatively, you can tap **Widgets > Shortcuts** and then select an application from the list available. If you use this method to add shortcuts, some of the applications available allow you to add specific functionality to the shortcut.

To Move an Item on the Homescreen

- Touch and hold the item until it is selected, then drag the item to the new location.

To Remove an Item from the Homescreen

- Touch and hold the item until it becomes selected, then drag the item to **Remove from home screen** at the top of the screen.

To Create a Folder on the Homescreen

- Touch and hold an application icon or a shortcut until it is selected, then drag and drop it on top of another application icon or shortcut.

To Add Items to a Folder on the Homescreen

- Touch and hold an item until it is selected, then drag the item to the folder.

To rename a folder on the Home screen

- 1 Tap the folder to open it.
- 2 Tap the folder's title bar to show the **Folder name** field.
- 3 Enter the new folder name and tap **Done**.

Background and Themes

You can adapt the Homescreen to your own style using wallpapers and themes.

To change your Home screen wallpaper

- 1 Touch and hold an empty area on your Homescreen.
- 2 Tap **Wallpapers** and select an option.

To set a theme

- 1 Touch and hold an empty area on your Homescreen.
- 2 Tap **Themes**.
- 3 Select an option and follow the instructions in your device.

! When you change a theme, the background also changes in some applications.

Taking a screenshot

You can capture still images of any screen on your device as a screenshot. Screenshots you take are automatically saved in Album.

To Take a Screenshot

- 1 Press and hold down the power key until a prompt window appears.
- 2 Tap [+].

💡 You can also take a screenshot by pressing and holding down the power key and volume down key at the same time. Once the screenshot is captured, you can release the keys.

To View your Screenshot

- Drag the status bar fully downward, and then tap the screenshot you want to view.
- 💡 You can also view your screenshots in the Album application.

Notifications

Notifications inform you of events such as new messages and calendar notifications as well as activities in progress, such as file downloads. Notifications appear in the following places:

- The status bar
- The Notification panel
- The lockscreen

To open or close the Notification panel



- 1 To open the Notification panel, drag the status bar downward.
- 2 To close the Notification panel, drag the panel upward.

To Take Action on a Notification in the Notification Panel

- Tap the notification.

To dismiss a notification from the Notification panel

- Place your finger on a notification and flick left or right.

To Expand a Notification on the Notification Panel

- Drag the notification downward.

! Not all notifications are expandable.

To Clear All Notifications from the Notification Panel

- Tap .

To Take Action on a Notification from the Lockscreen

- Double-tap the notification.

To dismiss a notification from the lockscreen

- Place your finger on the notification and flick left or right.

To Expand a Notification on the Lockscreen

- Drag the notification downward.
- ! Not all notifications are expandable.

Managing Notifications on the Lockscreen

You can set up your device so that only selected notifications get displayed on your lockscreen. You can make all notifications and their content accessible, hide sensitive content for all notifications or specific apps, or choose not to show any notifications at all.

To Select the Notifications to Display on the Lockscreen

- 1 From your Homescreen, tap .
- 2 Find and tap **Settings** > **Sound & notification** > **When device is locked**.
- 3 Select an option.

Notification Display Options on the Lockscreen

Show all notification content	Get all notifications on the lockscreen. When you have this setting turned on, keep in mind that all content (including the content of incoming email and chat messages) will be visible on your lockscreen unless you designate the relevant apps as Hide sensitive content in the App notifications settings menu.
Hide sensitive notification content	You must have a PIN, password, or pattern set up as your screen lock in order for this setting to be available. Contents hidden is displayed on the lockscreen when sensitive notifications arrive. For example, you'll get a notification for an incoming email or chat, but the content won't be visible on your lockscreen.
Don't show notifications at all	You won't get any notifications on the lockscreen.

Setting the Notification Level for an App

You can set different notification behaviors for individual applications. For example, you can block all email notifications, prioritize Facebook™ notifications, and make the content of messaging notifications invisible on the lockscreen.

To Set the Notification Level for an App

- 1 From your Homescreen, tap .
- 2 Find and tap **Settings** > **Sound & notification** > **App notifications**.
- 3 Select the app you want to change the notification settings for.
- 4 Drag the relevant slider to the right.

Notification levels and options for specific applications

Block all	Never show notifications for the selected app.
Treat as priority	Receive the selected app's notifications when Do not disturb is set to Priority only.
Allow peeking	Let the selected app emphasize certain notifications by sliding them briefly into view on the current screen.

Notification Light

The notification light informs you about battery status and some other events. The notification light is enabled by default but can be disabled manually.



- ! When the notification light is disabled, it only lights up when there is a battery status warning, such as when the battery level falls below 15 percent.

To Enable the Notification Light

- 1 From your Homescreen, tap .
- 2 Find and tap **Settings** > **Sound & notification**.
- 3 Drag the slider beside **Notification light** to the right.

Icons in the status bar

Status icons



A Wi-Fi connection is enabled and data is being transmitted



Wi-Fi connection is enabled but there is no internet connection.

This icon also appears when you are trying to connect to a secured Wi-Fi network. After a successful login, the exclamation mark will disappear.

If Google™ is blocked in your area, the exclamation mark may appear even when the device is connected to a Wi-Fi network and there is a working internet connection.



Battery status



The battery is charging



Airplane mode is activated



The Bluetooth® function is activated



The microphone is muted



The speakerphone is on



Do not disturb mode



Vibrate mode



An alarm is set



GPS is activated



Synchronization is ongoing



Problem with sign-in or synchronization

- ! Depending on your service provider, network, and/or region, the functions or services represented by some icons in this list may not be available.

To Manage Status Bar Icons

- 1 From your Homescreen, tap .
- 2 Find and tap **Settings > Display > System icons**.
- 3 Mark the checkboxes for the system icons that you want to appear in the status bar.

Notification icons

	New voicemail message
	New email message
	Downloading data
	Uploading data
	Perform a basic setup of your device
	A software update is available
	System updates are available
	Downloading system updates
	Tap to install the downloaded system updates
	STAMINA mode is activated
	Noise canceling is on
	Screenshot captured
	New Hangouts™ chat message has arrived
	Video chat with friends using the Hangouts™ application
	Upcoming calendar event
	A small app is running
	Smart Connect is activated
	A song is playing
	The radio is playing
	The device is connected to a computer via a USB cable
	Internal storage is 75% full. Tap to transfer data to the memory card
	Warning
	More (undisplayed) notifications

- ! Not all icons that may appear in your device are listed here. These icons are for reference purposes only, and changes may be made without notice.

To block an application from sending notifications

- 1 From your Home screen, tap .
- 2 Find and tap **Settings > Sound & notification > App notifications**.
- 3 Select an application.
- 4 Drag the slider beside **Block all** to the right.

Application Overview

-  Use the Clock application to set various kinds of alarms.
-  Use the web browser to navigate and view web pages, and manage bookmarks, text, and images.
-  Use the Calculator application to perform calculations.
-  Use the Calendar application to keep track of events and manage your appointments.
-  Use the Camera application to take photos and record video clips.
-  Use the Contacts application to manage phone numbers, email addresses, and other information related to your contacts.
-  Use the Downloads application to access your browser's download history.
-  Use the Email application to send and receive email through both private and corporate accounts.
-  Use the Facebook™ application to engage in social networking with friends, family members, and co-workers around the world.
-  Use the FM radio application to browse and listen to FM radio stations.
-  Use the Album application to view, edit, and share your photos and videos.
-  Use the Gmail™ application to read, write, and organize email messages.
-  Use the Google™ application to search your device and the web.
-  Use the Google Maps™ application to view your current location, find other locations and places, and calculate routes.
-  Use the Play Store™ application to download free and paid applications for your device.
-  Use the Video application to play videos on your device and share content with your friends.
-  Use the Music application to organize and play music, audio books, and podcasts.
-  Use the News & Weather application to read news and check the weather forecast.
-  Use the Settings application to customize your phone's settings.
-  Use the Hangouts™ application to chat with friends online.
-  Use the TrackID™ application to identify music tracks you hear playing in your surroundings, and to get artist, album, and other info.
-  Use the YouTube™ application to share and view videos from around the world.
-  Use the Backup and restore application to back up or restore content on your device, such as contacts, bookmarks, calendar data, etc.
-  Use the Smart Connect™ application to set what happens in your device when you connect or disconnect an accessory.
-  The Xperia® Movie Creator automatically creates short videos around 30 seconds long using existing photos and videos. The application automatically determines the timeline to create its movie.



Use the Lifelog application to automatically log events about your daily life. For example, you can set goals and track your progress in achieving them, or bookmark special moments.



Use the Support application to access user support on your device. For example, you can access a User guide, troubleshooting information, plus tips and tricks.

! Some applications are not supported or listed by all service providers in all areas.

Battery and Maintenance

Charging Your Device


- ! Always use an original Sony charger and USB cable intended for your specific Xperia™ model. Other chargers and cables may increase charging time, not charge at all, or may even damage your device. Make sure all USB ports and connectors are completely dry, before inserting the USB cable.

A wall socket charger will charge your device faster than charging via your computer. You can still use your device while charging.

If the battery is depleted, it may take up to 30 minutes for your device to respond to the charging. During this time, the screen may remain completely dark, not showing the charging icon. Also note that it can take up to 4 hours for a completely drained battery to charge fully.

- ! Your device has an embedded, rechargeable battery that can only be replaced by an authorized Sony repair center. You should never try to open or take apart the device yourself. Doing so can cause damage and void your warranty.

To charge your device

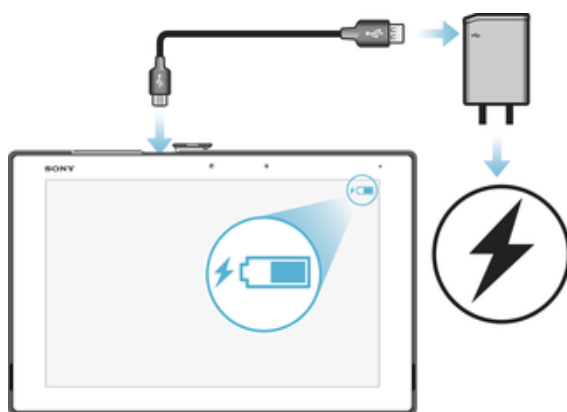

- 1 Plug the charger into a power outlet.
 - 2 Plug one end of the USB cable into the charger (or into the USB port of a computer).
 - 3 Plug the other end of the cable into the micro USB port on your device, with the USB symbol facing up. The notification light illuminates when charging begins.
 - 4 When the device is fully charged, disconnect the cable from your device by pulling it straight outward. Make sure not to bend the connector.
- 💡 If the battery is completely discharged, it may take a few minutes before the notification light illuminates and the charging icon ⚡ appears.

Battery notification light status

Green	The battery is charging and the battery charge level is greater than 90%
Red	The battery is charging and the battery charge level is less than 15%
Orange	The battery is charging and the battery charge level is less than 90%

Battery and Power Management

Your device has an embedded battery. To get the most use from it, keep track of the power consumed by different apps and features. Background power-saving features are activated by default to help you reduce battery consumption, and additional power saving modes are available to help you reduce battery consumption further when necessary.

Power-saving features lower the priority for certain non-essential device functions, such as higher-grade image performance, network activities such as location services, app synchronization and background Wi-Fi scanning. If you do not want an application to be affected, you can exempt it in the Battery Optimization menu.

- ! System updates may change the power saving features available on your device.

To View Battery Consumption, Estimated Time, and Power-Saving Tips

- 1 From your **Home screen**, tap .
- 2 Find and tap **Settings > Battery**. An overview appears showing the battery percentage and an estimated battery time.
- 3 Tap **SHOW BATTERY USAGE** to view a list of features and services that have consumed battery power since the last charging cycle. Tap an item to get information on how to reduce its battery consumption.

To View Battery Consumption For Applications

- 1 From your **Home screen**, tap .
- 2 Find and tap **Settings > Apps**.
- 3 Select an application and review its battery consumption under **Battery usage**.

General Usage Tips to Improve Battery Performance

The following tips can help you improve battery performance:

- Lower the screen brightness level, see *Screen settings* on page 48.
- Turn off Bluetooth®, Wi-Fi, and location services when you don't need these features.
- Turn off your device or use Airplane mode if you are in an area with no or low network coverage. Otherwise, your device repeatedly scans for available networks, and this consumes power.
- Change the synchronization settings for your email, calendar, and contacts, see *Synchronizing with Online Accounts* on page 44.
- Check the applications that have a high battery consumption and consider the battery saving tips provided on your device for these applications.
- Change the notification level for an application, see *Notifications* on page 24.
- Turn off the location-sharing permission for an application, see *Application settings* on page 49.
- Uninstall applications that you are not using, see *Application screen* on page 21.
- Use a Sony original handsfree device to listen to music. Handsfree devices consume less battery than your device's loudspeakers.
- Restart your device every now and then.

To Make Specific Applications Exempt From Battery Optimization

- 1 From your **Home screen**, tap .
- 2 Find and tap **Settings > Battery**.
- 3 Tap  and select **Battery optimization**. You will see a list of applications that are not optimized.
- 4 To add or remove applications from this list, tap **Apps** and select or de-select an application from the list to edit its optimization settings.
- 5 The list of applications that are not optimized will get updated according to your settings.

-  You can also configure **Battery optimization** from the **Apps** menu by tapping .

Power-Saving Modes

There are several power-saving modes available for you to use if you want to make your battery last longer:

STAMINA mode

Depending on the STAMINA level, different features will be restricted or disabled in order to reduce battery consumption. These include rendering performance, animation and screen brightness, image enhancement, background app data syncing, vibration (except for incoming calls), streaming, and GPS (while the screen is off).  60%+ appears in the status bar.

To Activate or Deactivate STAMINA Mode

- 1 From your **Home screen**, tap .
 - 2 Find and tap **Settings** > **Battery**.
 - 3 Tap **STAMINA mode** and tap the slider to activate or deactivate the function.
When STAMINA mode is activated you can select additional options, for example you can adjust the Auto-start percentage according to your preferences.
-  You can exempt applications from being optimized by STAMINA mode in the Battery Optimization menu.

Updating your device

You should update the software on your device to get the latest functionality, enhancements, and bug fixes in order to ensure optimal performance. When a software update is available,  appears in the status bar. You can also check for new updates manually, or schedule an update.

Before updating your device, consider the following:

- Ensure you have sufficient storage capacity before attempting to update.
- If you are using a device with multiple users, you must log in as the owner, that is, the primary user, to update the device.
- System and application updates can present the features on your device in another way than described in this User Guide. The Android™ version might not be affected after an update.

For more information about software updates, go to <http://support.sonymobile.com/software/>.

To check for new software

- 1 If you are using a device with multiple users, make sure you are logged in as the owner.
 - 2 From your Homescreen, tap .
 - 3 Find and tap **Settings** > **About tablet** > **Software update**.
-  If no new software is available, it's possible that you may not have enough free memory on your device. If your Xperia™ device has less than 500 MB of free internal memory (device memory) available, you do not receive any information about new software. The following notification appears in the Notification panel to warn of the lack of storage space:
Storage space running out. Some system functions may not work.
If you receive this notification, you must free up internal memory (device memory) before you can get notifications about new software being available.

Updating your device wirelessly

Use the Update Center application to update your device wirelessly. It handles both application updates and system updates and can also facilitate the download of new applications developed for your device.

To download and install a system update

- 1 If you are using a device with multiple users, make sure you are logged in as the owner.
- 2 From your Homescreen, tap .
- 3 Find and tap **Settings** > **About tablet** > **Software update**.
- 4 If a system update is available, tap **Download** to download it to your device.
- 5 When the download is finished, tap **Install** and follow the on-screen instructions to complete the installation.

To Set Up Automatic Installation

- 1 From your **Home screen**, tap .
- 2 Find and tap **Settings** > **About tablet** > **Software update**.
- 3 Tap , then tap **Settings** and select an option.

To Update Your Device Using a Computer

- 1 Using a USB cable, connect your device to the computer.
 - 2 Make sure the screen of your device is unlocked, and the USB connection mode on the device is set to **Transfer files (MTP)**.
 - 3 Open Xperia™ Companion, if it is not automatically launched.
 - 4 Make sure the computer can access the internet.
 - 5 **Computer:** If a new software update is detected, a popup window appears. Follow the on-screen instructions to run the relevant software updates.
- ! If you don't have the Xperia™ Companion software installed on the relevant computer, connect your device to the computer and follow the on-screen installation instructions. Make sure you are using the USB cable that came with your device and it is properly connected to the device and computer.

Maintenance Using a Computer

Xperia™ Companion

Xperia™ Companion is a software service which provides a collection of tools and applications you can use when you connect your device to a computer. With Xperia™ Companion, you can:

- Update or repair your device's software.
- Transfer your content from an old device using Xperia™ Transfer.
- Back up and restore content on your computer.
- Sync multimedia content—photos, videos, music, and playlists—between your device and computer.
- Browse files on your device.

To use Xperia™ Companion, you need an internet-connected computer running one of the following operating systems:

- Microsoft® Windows® 7 or later
- Mac OS® X 10.11 or later

Learn more and download Xperia™ Companion for Windows at <http://support.sonymobile.com/tools/xperia-companion/> or Xperia™ Companion for Mac at <http://support.sonymobile.com/tools/xperia-companion-mac/>.

Managing Files Using a Computer

Use a USB cable connection between a Windows® computer and your device to transfer and manage your files.

Once the two devices are connected, you can choose if you want to charge your device, transfer files, use it as a power supply, or use it for MIDI input. Your computer will detect your device when you select the **Transfer files (MTP)** connection mode. The default connection mode is set to **Charging only**.

With Xperia™ Companion you can access the file system of your device. If you do not have Xperia™ Companion installed, you are requested to install it when you connect your device to the computer.

- ! Always use a USB cable intended for your specific Xperia™ model and make sure it is completely dry.

USB Connection Mode

You can use the **Transfer files (MTP)** connection mode for managing files and updating device software. This USB mode is used with Microsoft® Windows® computers. Charging is enabled by default.

Using the **MIDI** mode, your device can function as a MIDI input for musical instrument apps.

To Change USB Connection Mode

- 1 Attach a USB connector to your device.
- 2 Drag the Status bar downward to access the Notifications panel.
- 3 A notification shows the current connection mode, **USB charging this device** or **USB for file transfer**.
- 4 Tap the notification, and then tap the desired connection mode.

Storage and Memory

Your device has several different storage and memory options.

- The **internal storage** is about **12 GB** and is used to store downloaded or transferred content along with personal settings and data. Some examples of data saved to internal storage are alarm, volume, and language settings; emails; bookmarks; calendar events; photos; videos and music.
 - You can use a removable **memory card** with a storage capacity of up to **128 GB** to get more storage space. Media files and some apps, along with their associated data, can be moved to this type of memory to free up internal storage. Some apps, for example, the Camera app, can save data directly to a memory card.
 - The **dynamic memory (RAM)** is about **3 GB** and cannot be used for storage. RAM is used to handle running applications and the operating system.
- ! You may have to purchase a memory card separately.
- 💡 Read more about the use of memory in Android devices by downloading the White paper for your device at www.sonymobile.com/support/.

Improving Memory Performance

The memory in your device tends to fill up as a result of normal usage. If the device starts to slow down, or applications suddenly shut down, you should consider the following:

- Always have more than **100 MB** of free internal storage available.
 - Close down running applications that you are not using.
 - Clear the memory cache for all applications.
 - Uninstall downloaded applications that you don't use.
 - Move applications to the memory card if the internal storage is full.
 - Transfer photos, videos, and music from the internal memory to the memory card.
 - If your device can't read content on the memory card, you may need to format the card. Note that all content on the card gets erased when you format it.
- ! If you are using a device with multiple users, you must log in as the owner, that is, the primary user, to be able to perform certain actions, such as transferring data to the memory card and formatting the memory card.

To view the memory status

- 1 From your Homescreen, tap .
- 2 Find and tap **Settings > Storage**.

To view the amount of free and used RAM

- 1 From your Homescreen, tap .
- 2 Find and tap **Settings > Apps**.

To clear the cache memory for all applications

- 1 From your Homescreen, tap .
- 2 Find and tap **Settings** > **Storage**.
- 3 Tap **Internal storage** > **Cached data** > **OK**.

! When you clear the cache memory, you don't lose any important information or settings.

To transfer media files to the memory card

- 1 Make sure you have a memory card inserted in your device.
- 2 From your Homescreen, tap .
- 3 Find and tap **Settings** > **Storage** > **Transfer data to SD card**.
- 4 Mark the file types you want to transfer to the memory card.
- 5 Tap **Transfer**.

To move apps to the memory card

- 1 From your Homescreen, tap .
- 2 Find and tap **Settings** > **Apps**.
- 3 Select the app that you want to move, then tap **Storage**, then under Storage used tap **Change** > **SD Card** > **Move**.

! Some apps cannot be moved to the memory card.

To stop applications and services from running

- 1 From your Homescreen, tap .
- 2 Find and tap **Settings** > **Apps**.
- 3 Select an application or service, then tap **FORCE STOP** > **OK**.

To format the memory card

- 1 From your Homescreen, tap .
- 2 Find and tap **Settings** > **Storage** > **Erase SD card**.
- 3 To confirm, tap **Erase SD card** > **Erase everything**.

! All content on the memory card gets erased when you format it. Be sure to make backups of all data that you want to save before formatting the memory card. To back up your content, you can copy it to a computer. For more information, see *Managing Files Using a Computer* on the 33 page.

Backing Up and Restoring Content

Generally, you should not save photos, videos, and other personal content solely on the internal memory of your device. If your device is damaged, lost or stolen, the data stored on its internal memory may be impossible to recover. It is recommended to use the Xperia™ Companion software to make backups which save your data safely to an external device. This method is especially recommended if you are updating your device software to a newer Android version.

The Xperia™ Backup & restore application is recommended for backing up data before you do a factory data reset. With this application you can back up data to an online account, an SD card or to an external USB storage device that you have connected to your device using a USB Host adapter:

With the Google Backup & restore application, you can back up data to a Google server.

Backing up Data to a Computer

Use the Xperia™ Companion software to back up data from your device to a PC or an Apple® Mac® computer. You can back up the following types of data:

- Contacts
- Calendar
- Settings and bookmarks
- Media files such as music and videos

- Photos and images

To Back Up Your Data Using a Computer

- 1 Unlock the screen of your device and connect it to the computer using a USB cable.
 - 2 Open the Xperia™ Companion software on your computer if it is not automatically launched. After a few moments, the computer detects your device. Make sure to select **Transfer files (MTP)** mode on your device.
 - 3 Click on **Backup** on the Xperia™ Companion main screen.
 - 4 Follow the on-screen instructions to back up data from your device.
- ! If you do not have Xperia™ Companion installed, you are requested to install it when you connect your device to the computer.

To Restore Your Data Using a Computer

- 1 Unlock the screen of your device and connect it to the computer using a USB cable.
 - 2 Open the Xperia™ Companion software on your computer if it is not automatically launched. After a few moments, the computer detects your device. Make sure to select **Transfer files (MTP)** mode on your device.
 - 3 Click on **Restore** on the Xperia™ Companion main screen.
 - 4 Select a backup file from the backup records, then click on **Next** and follow the on-screen instructions to restore data to your device.
- ! If you do not have Xperia™ Companion installed, you are requested to install it when you connect your device to the computer.

Backing Up Data with the Xperia™ Backup & Restore Application

Using the Xperia™ Backup & Restore application, you can make an online backup or a local backup of data. For example, you can back up data manually or turn on the automatic backup function to save data periodically.

The Xperia™ Backup & Restore application is recommended for backing up data before you do a factory data reset. With this application you can back up the following types of data to an online account, an SD card, or an external USB storage device that you have connected to your device using a USB host adapter:

- Bookmarks
- Contacts
- Calendar data
- Email accounts
- Wi-Fi networks
- Device settings
- Applications
- Xperia™ Home layout

To Back Up Content to an Online Account of the Xperia Backup & Restore Service

- 1 From your **Home screen**, tap .
- 2 Find and tap **Settings > Backup & reset**.
- 3 To enable the automatic backup function, tap **Automatic backup**, then tap the on-off switch.
- 4 To enable the manual backup function, tap **More > Manual backup**.
- 5 If the automatic backup function is enabled, under **Select storage**, tap **Online account**.
- 6 If prompted, read the relevant terms and, provided you agree, tap **I agree**, then follow the on-screen instructions to sign in to your Google™ account.
- 7 If the manual backup function is enabled, under **Where to store files**, tap **Select storage > Online account**.
- 8 Select the data to back up.
- 9 If the manual backup function is enabled, tap **Backup**.

To Set up the Automatic Backup Function

- 1 If you are backing up content to a USB storage device, make sure the storage device is connected to your device using the USB Host adapter. If you are backing up to an SD card, make sure the SD card is properly inserted in your device.
- 2 From your Homescreen, tap .
- 3 Find and tap **Backup & Restore**.
- 4 To enable the automatic backup function, drag the slider beside **Automatic backup** to the right.
- 5 Tap **Automatic backup** again, then select a backup frequency, where to save backup files, and the types of data to back up.
- 6 To save your settings, tap .

To Back up Content Manually

- 1 If you are backing up content to a USB storage device, make sure the storage device is connected to your device using the USB Host adapter. If you are backing up to an SD card, make sure the SD card is properly inserted in your device.
- 2 From your Homescreen, tap .
- 3 Find and tap **Backup & Restore**.
- 4 Tap **Manual backup**, then select a backup destination and the data types that you want to back up.
- 5 Tap **Backup**.
- 6 After the data is backed up, tap **Finish**.

To Edit a Backup File

- 1 From your **Home screen**, tap .
- 2 Find and tap **Settings > Backup & reset**.
- 3 Under **Xperia™ Backup & restore**, tap **More**.
- 4 Tap **Edit backup file**, then select a backup source and the data types you want to delete.
- 5 Tap **Delete data**.
- 6 Tap **OK** to confirm.
- 7 After the data is deleted, tap **Finish**.

To Restore Backed-Up Content

- 1 If you are restoring content from a USB storage device, ensure the storage device is connected to your device using the USB Host adapter. If you are restoring content from an SD card, ensure the SD card is properly inserted in your device.
 - 2 From your Homescreen, tap .
 - 3 Find and tap **Backup & Restore**.
 - 4 Tap **Restore data**, then select a restore source and the data types you want to restore.
 - 5 Tap **Restore data**.
 - 6 After the content is restored, tap **Finish**.
- ! Remember that any changes you make to your data and settings after you create a backup, including any applications you download, get deleted during a restore procedure.

Backing Up Data With the Google Backup & Restore Application

Using the Google Backup & restore application, you can back up data to a Google server. You can also turn on the automatic restore function to restore application data and settings when you reinstall an application.

With this application you can back up the following types of data:

- Applications
- Bookmarks
- Wi-Fi networks
- Other settings

To Back Up Data to a Google™ Account

- 1 From your **Home screen**, tap .
- 2 Find and tap **Settings > Backup & reset**.
- 3 Under **Google™ Backup & restore**, tap **Back up my data**, then tap the slider.

To Enable or Disable Automatic Restore when you Reinstall an Application

- 1 From your **Home screen**, tap .
- 2 Find and tap **Settings > Backup & reset**.
- 3 Under **Google™ Backup & restore**, tap the **Automatic restore** slider.

Downloading applications

Downloading applications from Google Play™

Google Play™ is the official online Google store for downloading applications, games, music, movies and books. It includes both free and paid applications. Before you start downloading from Google Play™, make sure that you have a working internet connection.

- ! To use Google Play™, you need to have a Google™ account. Google Play™ may not be available in all countries or regions.

To download an application from Google Play™

- 1 From the Homescreen, tap .
 - 2 Find and tap **Play Store**.
 - 3 Find an item you wish to download by browsing categories, or by using the search function.
 - 4 Tap the item to view its details, and follow the instructions to complete the installation.
- ! Some applications may need to access data, settings and various functions on your device in order to work properly. Only install and give permissions to applications that you trust. You can view the permissions granted to a downloaded application and also change their status by tapping the application under **Settings > Apps**.

Downloading applications from other sources

When your device is set to allow downloads from sources other than Google Play™, you can download applications directly from other websites by following the relevant download instructions.

- ! Installing applications of unknown or unreliable origin can damage your device. Download applications only from reliable sources. Contact the application provider if you have any questions or concerns.
- ! If you are using a device with multiple users, only the owner, that is, the primary user, can allow downloads from sources other than Google Play™. Changes made by the owner affect all other users.

To allow downloading of applications from other sources

- 1 From your Homescreen, tap .
 - 2 Find and tap **Settings > Security**.
 - 3 Drag the slider beside **Unknown sources** to the right.
 - 4 Tap **OK**.
- ! Some applications may need to access data, settings and various functions on your device in order to work properly. Only install and give permissions to applications that you trust. You can view the permissions granted to a downloaded application and also change their status by tapping the application under **Settings > Apps**.

Internet and networks

Browsing the web

The Google Chrome™ web browser for Android™ devices comes pre-installed in most markets. Go to <http://support.google.com/chrome> and click the "Chrome for Mobile" link to get more detailed information about how to use this web browser.

To browse with Google Chrome™

- 1 From your Homescreen, tap .
- 2 Find and tap .
- 3 If you are using Google Chrome™ for the first time, select to either sign in to a Google™ account or browse with Google Chrome™ anonymously.
- 4 Enter a search term or web address in the search and address field, then tap **Go** on the keyboard.

Wi-Fi

Use Wi-Fi to surf the internet, download applications, or send and receive emails. Once you connect to a Wi-Fi network, your device remembers the network and automatically connects to it the next time you come within range.

Some Wi-Fi networks require you to log in to a web page before you can get access. Contact the relevant Wi-Fi network administrator for more information.

Available Wi-Fi networks may be open or secured:

- Open networks are indicated by  next to the Wi-Fi network name.
 - Secured networks are indicated by  next to the Wi-Fi network name.
- ! Some Wi-Fi networks do not show up in the list of available networks because they do not broadcast their network name (SSID). If you know the network name, you can add it manually to your list of available Wi-Fi networks.

To Turn Wi-Fi On or Off

- 1 From your **Home screen**, tap .
 - 2 Find and tap **Settings > Wi-Fi**.
 - 3 Tap the slider to enable or disable Wi-Fi.
- ! It may take a few seconds before Wi-Fi is enabled.


To Connect to A Wi-Fi Network

- 1 From your **Home screen**, tap .
 - 2 Find and tap **Settings > Wi-Fi**.
 - 3 Tap the slider to turn on Wi-Fi. All available Wi-Fi networks are displayed.
 - 4 Tap a Wi-Fi network to connect to it. For secured networks, enter the relevant password.  is displayed in the status bar once you are connected.
- 💡 To search for new available networks, tap , then tap **Refresh**. If you cannot connect to a Wi-Fi network successfully, refer to the relevant troubleshooting tips for your device at www.sonymobile.com/support/.

To Add a Wi-Fi Network Manually

- 1 From your Homescreen, tap .
 - 2 Find and tap **Settings** > **Wi-Fi**.
 - 3 Tap  > **Add network**.
 - 4 Enter the **Network name (SSID)** information.
 - 5 To select a security type, tap the **Security** field.
 - 6 If required, enter a password.
 - 7 To edit advanced options, such as proxy and IP settings, tap **Advanced options** and then edit the options as desired.
 - 8 Tap **Save**.
- ! Contact your Wi-Fi network administrator to get the network SSID and password.

Increasing Wi-Fi Signal Strength

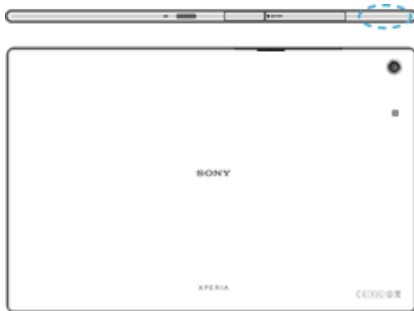

- There are a number of things you can do to improve Wi-Fi reception:
- Move your device closer to the Wi-Fi access point.
 - Move the Wi-Fi access point away from any potential obstructions or interference.
 - Don't cover the Wi-Fi antenna area of your device (the highlighted area in the illustration).

Wi-Fi Settings

When you are connected to a Wi-Fi network or when there are Wi-Fi networks available in your vicinity, you can view the status of these networks. You can also enable your device to notify you whenever an open Wi-Fi network is detected.

To Enable Wi-Fi Network Notifications

- 1 Turn on Wi-Fi if it isn't on already.
- 2 From your Homescreen, tap .
- 3 Find and tap **Settings** > **Wi-Fi**.
- 4 Tap  > **Advanced**.
- 5 Drag the slider beside **Network notification** to the right.

To View Detailed Information About a Connected Wi-Fi Network

- 1 From the Homescreen, tap .
- 2 Find and tap **Settings** > **Wi-Fi**.
- 3 Tap the Wi-Fi network you are currently connected to. Detailed network information is displayed.

To Find the MAC Address for Your Device

- 1 From the **Home screen**, tap .
- 2 Find and tap **Settings** > **Wi-Fi**.
- 3 Tap . The **MAC address** is displayed in the list.

Tethering with Xperia Link™

If you have an Xperia™ device, you can share your internet connection with another Xperia™ device. This way, your device can connect to the internet without having to use its own connection. This feature is useful when you are out and about and your device doesn't have or support a cellular or Wi-Fi connection on your tablet. Before you use

tethering with Xperia Link™, make sure the Xperia Link™ application is installed and set up on both devices. Also, your Xperia™ device must have a camera with auto focus.

- ! The Xperia Link™ application is only supported by Xperia™ devices running the Android™ 4.0 software version or higher. If the Xperia Link™ application is not pre-installed on your Xperia™ device, you can download it from Google Play™.

To Connect Your Xperia™ Devices Using a QR Code™

- 1 Make sure the Bluetooth function is activated on both Xperia™ devices and that the devices have an active internet connection.
- 2 **Tablet:** From your Homescreen, tap  > **Xperia Link** > **Add device**, then follow the instructions to complete the setup. A QR Code™ appears on the screen.
- 3 **The other device:** From your Homescreen, tap  > **Xperia Link** > **Add device** > **Scan**.
- 4 Hold your device over the QR Code™ on the screen until the complete QR Code™ is visible in the viewfinder of the device.
- 5 Your device automatically scans the QR Code™ and connects to your tablet once the QR Code™ is recognized.
- 6 To confirm the connection, tap **OK**.

To Connect Your Tablet with an Xperia™ Device Using NFC

- 1 Make sure the NFC and the Android Beam functions are activated on both your Xperia™ devices and have an active internet connection.
- 2 **Tablet:** From your Homescreen, tap  > **Xperia Link** > **Add device**, then follow the instructions to complete the setup. Once the setup is complete, a QR Code™ appears on the screen. You can ignore this code.
- 3 **The other device:** From your Homescreen, tap  > **Xperia Link** > **Add device**.
- 4 Hold the devices back to back so the NFC detection areas of each device touch each other.
- 5 When **Touch your screen to beam** appears, touch the screen of one of the devices.
- 6 To confirm the connection, tap **OK**.

Virtual private networks (VPNs)

Use your device to connect to virtual private networks (VPNs), which allow you to access resources inside a secured local network from a public network. For example, VPN connections are commonly used by corporations and educational institutions for users who need to access intranets and other internal services when they are outside of the internal network, for example, when they are traveling.

VPN connections can be set up in many ways, depending on the network. Some networks may require you to transfer and install a security certificate on your device. For detailed information on how to set up a connection to your virtual private network, please contact the network administrator of your company or organization.

To add a virtual private network

- 1 From your Homescreen, tap .
- 2 Find and tap **Settings** > **More** > **VPN**.
- 3 Tap **+**.
- 4 Select the type of VPN to add.
- 5 Enter your VPN settings.
- 6 Tap **Save**.

To connect to a virtual private network

- 1 From your Homescreen, tap .
- 2 Find and tap **Settings** > **More** > **VPN**.
- 3 In the list of available networks, tap the VPN you want to connect to.
- 4 Enter the required information.
- 5 Tap **Connect**.

To disconnect from a virtual private network

- 1 Drag the status bar downwards.
- 2 Tap the notification for the VPN connection to turn it off.

Synchronizing data on your device

Synchronizing with Online Accounts

Synchronize your device with contacts, email, calendar events, and other information from online accounts, for example, email accounts such as Gmail™ and Exchange ActiveSync, Facebook™, Flickr™, and Twitter™. You can synchronize data automatically for such accounts by activating the auto-sync function. Or you can synchronize each account manually.

To Set Up an Online Account for Synchronization

- 1 From your Homescreen, tap .
- 2 Tap **Settings** > **Accounts** > **Add account**, then select the account you want to add.
- 3 Follow the instructions to create an account, or sign in if you already have an account.

To synchronize manually with an online account

- 1 From your Homescreen, tap  > **Settings** > **Accounts**.
- 2 Under **Accounts**, tap the name of the account that you want to synchronize with. A list of items appears showing what can be synchronized with the account.
- 3 Tap the items that you want to synchronize.

To remove an online account

- 1 From your Homescreen, tap  > **Settings** > **Accounts**.
- 2 Under **Accounts** tap the name of the account that you want to remove.
- 3 Tap , then tap **Remove account**.
- 4 Tap **Remove account** again to confirm.

Synchronizing with Microsoft® Exchange ActiveSync®

Using a Microsoft Exchange ActiveSync account, you can access your corporate email messages, calendar appointments, and contacts directly on your device. After setup, you can find your information in the **Email**, **Calendar**, and **Contacts** applications.

To Set Up an EAS Account for Synchronization

- 1 Be sure to have your domain and server details available (as provided by your corporate network administrator).
 - 2 From your Homescreen, tap .
 - 3 Tap **Settings** > **Accounts** > **Add account** > **Exchange ActiveSync**.
 - 4 Enter your corporate email address and password.
 - 5 Tap **Next**. Your device begins to retrieve your account information. If a failure occurs, enter the domain and server details for your account manually and then tap **Next**.
 - 6 Tap **OK** to allow your corporate server to control your device.
 - 7 Select what data you want to sync with your device, such as contacts and calendar entries.
 - 8 If desired, activate the device administrator to allow your corporate server to control certain security features on your device. For example, you can allow your corporate server to set password rules and set storage encryption.
 - 9 When the setup is done, enter a name for the corporate account.
- ! When you change the login password for an EAS account on your computer, you have to log in again to the EAS account on your device.

To Change the Settings of an EAS Account

- 1 From your Homescreen, tap .
- 2 Find and tap **Email**, and then tap .
- 3 Tap **Settings**, select an EAS account, and then change the settings of the EAS account as desired.

To set a synchronisation interval for an EAS account

- 1 From your Homescreen, tap .
- 2 Tap **Email**, then tap .
- 3 Tap **Settings** and select an EAS account.
- 4 Tap **Check frequency** > **Check frequency** and select an interval option.

To Remove an EAS Account

- 1 From your Homescreen, tap  > **Settings** > **Accounts**.
- 2 Under **Accounts**, tap **Exchange ActiveSync**, then select the EAS account you want to remove.
- 3 Tap , then tap **Remove account**.
- 4 Tap **Remove account** again to confirm.

Basic settings

Accessing settings

View and change settings for your device from the Settings menu. The Settings menu is accessible from both the Application screen and the Quick settings panel.

To open the device settings menu from the Application screen

- 1 From your Homescreen, tap .
- 2 Tap **Settings**.

To view information about your device

- 1 From your Homescreen, tap .
- 2 Find and tap **Settings** > **About tablet**.

To Activate the Screen Using Tap to Wake Up Mode

- 1 Be sure that Tap to Wake Up mode is turned on. To turn it on, tap **Settings** > **Display**, then drag the slider beside **Tap to wake up** to the right.
- 2 Double-tap the screen.

To Open or Close the Quick Settings Panel

- To open the Quick settings panel, drag the status bar downward.

To Turn On the Flashlight

- 1 Drag the status bar downward using two fingers.
- 2 Tap .

To Select which Settings to Display on the Quick Settings Panel

- 1 Using two fingers, drag the status bar downward, then tap .
- 2 In the bar at the top of the screen, touch and hold the icon for the quick setting you want to add, then drag and drop it in the lower part of the screen.

To Rearrange the Quick Settings Panel

- 1 Using two fingers, drag the status bar downward, then tap .
- 2 Touch and hold an icon, then move it to the desired position.

Sound volume

You can adjust the ringtone volume for notifications as well as for music and video playback.

To Adjust the Media Playing Volume with the Volume Key

- When playing music or watching video, press the volume key up or down, even when the screen is locked.

To Turn On Vibrate Mode

- Press the volume key down or up until  appears in the status bar.

To Adjust the Volume Levels

- 1 From your Homescreen, tap .
 - 2 Find and tap **Settings** > **Sound & notification**.
 - 3 Drag the volume sliders to the desired positions.
- ! You can also press the volume key up or down and tap  to adjust the notification, media playback, or alarm volume levels separately.

To Select the Notification Sound

- 1 From your Homescreen, tap .
 - 2 Find and tap **Settings** > **Sound & notification** > **Notification sound**.
 - 3 Select an option from the list or tap **+** and select a music file that is saved on your device.
 - 4 To confirm, tap **Done**.
- 💡 Some applications have their own specific notification sounds, which you can select from the application settings.

To Enable Touch Tones

- 1 From your Homescreen, tap .
- 2 Find and tap **Settings** > **Sound & notification** > **Other sounds**.
- 3 Drag the slider beside **Touch sounds** to the right.

Do not disturb mode settings

You can set your device to Do not disturb mode and decide how long your device will be in Do not disturb mode manually. You can also preset when your device will be in Do not disturb mode automatically.

No time limit Keep the device silent until you manually turn the sound back on.

For one hour Keep the device silent for one hour. You can tap the minus and plus icons to adjust the duration.

To Activate Do Not Disturb Mode

- Press the volume key down until  appears.

To Quickly Shift Between Do Not Disturb/Vibrate/Sound Mode

- 1 Press the volume key down or up until , , or  appears.
- 2 Tap , , or  to quickly shift between Do not disturb/Vibrate/Sound mode. To activate Do not disturb mode, press the volume key down when in vibrate mode.

To Schedule Do Not Disturb Mode Time Intervals

- 1 From your Homescreen, tap .
- 2 Find and tap **Settings** > **Sound & notification** > **Do not disturb** > **Automatic rules**.
- 3 Select the time or event to schedule Do not disturb mode for, or add a new rule.
- 4 Find and tap **Days** and mark the checkboxes for the relevant days, and then tap **Done**.
- 5 To adjust the start time, tap **Start time** and select a value, and then tap **OK**.
- 6 To adjust the end time, tap **End time** and select a value, and then tap **OK**. Your device stays in Do not disturb mode during the selected time interval.

Setting Exceptions for Do Not Disturb Mode

You can select which types of notifications are allowed to sound in Do not disturb mode and you can filter exceptions based on who the notifications come from. The most common types of exceptions include:

- Events and reminders
- Messages
- Alarms

To Allow Exceptions in Do Not Disturb Mode

- 1 From the Homescreen, tap .
- 2 Find and tap **Settings** > **Sound & notification** > **Do not disturb** > **Allowed in Priority only**.
- 3 Drag the slider beside the desired option.

To Associate Exceptions with Specific Contact Types

- 1 From the Homescreen, tap .
- 2 Find and tap **Settings** > **Sound & notification** > **Do not disturb** > **Allowed in Priority only**.
- 3 Tap **Calls** or **Messages**.
- 4 Select an option.

Screen settings

To Adjust the Screen Brightness

- 1 From your Homescreen, tap .
 - 2 Find and tap **Settings** > **Display** > **Brightness level**.
 - 3 Drag the slider to adjust the brightness.
-  Lowering the brightness level increases battery performance.

To Enable Vibrate on Touch

- 1 From your Homescreen, tap .
- 2 Find and tap **Settings** > **Sound & notification** > **Other sounds**.
- 3 Drag the slider beside **Vibrate on touch** to the On position. The phone now vibrates when you tap soft keys.

To adjust the idle time before the screen turns off

- 1 From your Homescreen, tap .
 - 2 Find and tap **Settings** > **Display** > **Sleep**.
 - 3 Select an option.
-  To turn off the screen quickly, briefly press the power key .

Smart backlight control

The smart backlight control keeps the screen on as long as the device is held in your hand. Once you put down the device, the screen turns off according to your sleep setting.

To Turn on the Smart Backlight Control Function

- 1 From your Homescreen, tap .
- 2 Find and tap **Settings** > **Display** > **Smart backlight control**.
- 3 Drag the slider to the right.

Screen Pinning

Use screen pinning to set your device to display only the screen for a specific application. For example, if you are playing a game and you accidentally touch the Home navigation key, the screen pinning feature prevents the active game app screen from being minimized. You can also use this feature when you lend your device to another person to make it harder for them to access more than one application. For example, you can lend your device to somebody to take a photo and pin the screen to the Camera application so that the person can't easily use other apps such as Email.

-  Screen pinning is not a security feature and does not fully prevent other users from unpinning a screen and accessing your device. To protect your data, you should set up your device to request a screen lock PIN, password, or pattern before someone can unpin the screen.

To Activate Screen Pinning

- 1 From your Homescreen, tap .
- 2 Find and tap **Settings** > **Security** > **Screen pinning**.
- 3 Drag the slider to the right.
- 4 If you haven't set up a pattern, PIN, or password screen lock on your device, drag the slider beside **Lock device when unpinning** to the right, then select an option. If you already have a screen lock enabled, then drag the slider to activate the relevant security option after you activate screen pinning.

💡 A pattern, PIN, or password is not mandatory for screen pinning to work.

To Pin a Screen

- 1 Make sure screen pinning is activated on your device.
- 2 Open an app and go to the screen you want to pin.
- 3 Tap .
- 4 To display the screen pinning icon , swipe upward.
- 5 Tap .
- 6 In the pop-up window that appears, tap **Got it**.

To Unpin a Screen

- 1 On the pinned screen, touch and hold  and  at the same time.
- 2 Release both buttons.

💡 If you selected a security option when you activated the screen pinning function, you have to enter your pattern, PIN, or password to unlock the device before the screen can be unpinned.

Application settings

Some apps will ask for permissions once you start using them. You can allow or deny permissions individually for each app, either from the Settings menu or from the Permission confirm dialog. Permission requirements depend on the app's design.

Allowing or denying permissions

You can choose whether to allow or deny permissions when the dialog is shown. If you have used another Android version previously, most apps will have already been granted the necessary permissions.

To allow a permission

- 1 To allow a permission, tap **Allow**.
- 2 When the confirm dialog appears for the second time, you can choose the **Never ask again** option if you wish.
- 3 A dialog will also explain why the app needs the permissions and what it uses them for specifically. To dismiss this dialog, tap **OK**.

To deny a permission

- To deny a permission, tap **Deny** when the dialog is shown.
- 💡 Some applications can still be used even if you have denied permissions.

Critical permissions

Some permissions are mandatory for apps to work as intended. In such cases, a dialog will inform you.

To configure applications

- 1 From your Homescreen, tap .
- 2 Find and tap **Settings** > **Apps** > .
- 3 Select a configuration option, for example **App permissions**, then choose an application that you want to configure.

To allow critical permissions

- 1 To allow a permission, tap **Continue** > **APP INFO** > **Permissions**.
 - 2 Find the critical permission you need.
 - 3 Drag the slider to the right.
- ! You can also manage permissions in **Settings** > **Apps**. Tap an app and change the permissions as desired.

Allowing or Denying Automatic Application Updates

If the automatic update feature is enabled, your applications get updated without you being asked, so you may not realize that large volumes of data are being downloaded. In order to avoid potentially high data transfer costs, you can disable automatic updates or enable automatic updates only over Wi-Fi connection. You have to disable the automatic update feature both in the Play Store™ app and the What's New app (where available) to avoid the automatic updating of apps.

To Enable or Disable Automatic Updates for All Applications in the Play Store

- 1 From your **Home screen**, tap , then find and tap .
- 2 Tap , then tap **Settings** > **Auto-update apps**.
- 3 Select the preferred option.

To Enable or Disable Automatic Updates for All Applications in What's New

- 1 From your **Home screen**, tap , then find and tap .
- 2 Tap , then tap **Settings** > **Auto-update apps**.
- 3 Select the preferred option.

Application linking

Your device can determine the default app to handle a particular web link. This means that if the link is set, you don't need to select an app each time you open a link. You can change the default app any time you want.

To manage app links from the Settings menu

- 1 From your Homescreen, tap .
- 2 Find and tap **Settings** > **Apps**.
- 3 Tap  and find **App links**.
- 4 Select the app for which you want to set the supported links.
- 5 Set the **App links** property to **Open in this app** option.

Resetting Your Applications

You can reset an application or clear application data if your application stops responding or causes issues with your device.

To Reset Application Preferences

- 1 From your Homescreen, tap .
 - 2 Find and tap **Settings** > **Apps**.
 - 3 Tap , then tap **Reset app preferences**.
- ! Resetting application preferences does not delete any application data from your device.

To clear application data

- 1 From your Homescreen, tap .
 - 2 Find and tap **Settings** > **Apps**.
 - 3 Select an application or service, then tap **Storage** > **CLEAR DATA**.
- ! When you clear application data, data for the selected application is deleted from your device permanently. The option to clear application data is not available for all applications or services.

To clear application cache

- 1 From your Homescreen, tap .
 - 2 Find and tap **Settings** > **Apps**.
 - 3 Select an application or service, then tap **Storage** > **CLEAR CACHE**.
- ! The option to clear the application cache is not available for all applications or services.

To clear the application default setting

- 1 From your Homescreen, tap .
 - 2 Find and tap **Settings** > **Apps**.
 - 3 Select an application or service, then tap **Open by default** > **CLEAR DEFAULTS**.
- ! The option to clear the application default setting is not available for all applications or services.

Daydream

Daydream is an interactive screen saver that automatically displays colors, photos or a slideshow while your device is docked or charging and the screen is idle.

-  On a device with multiple users, each user can have individual Daydream settings.

To Activate the Daydream Screen Saver

- 1 From your Homescreen, tap .
- 2 Find and tap **Settings** > **Display** > **Daydream**.
- 3 Drag the slider to the right.

To Select Content for the Daydream Screen Saver

- 1 From your Homescreen, tap .
- 2 Find and tap **Settings** > **Display** > **Daydream**.
- 3 Drag the slider to the right.
- 4 Select what you want to display when the screen saver is active.

To Set when the Daydream Screen Saver Starts

- 1 From your Homescreen, tap .
- 2 Find and tap **Settings** > **Display** > **Daydream**.
- 3 Drag the slider to the right.
- 4 To activate the Daydream screen saver immediately, tap , then tap **Start now**.
- 5 To set automatic activation options, tap , then tap **When to daydream**, and select an option.

Language settings

You can select a default language for your device and change it again at a later time. You can also change the writing language for text input. See *Personalizing the On-Screen Keyboard* on page 58.

To change the language

- 1 From the Homescreen, tap .
 - 2 Find and tap **Settings** > **Language & input** > **Language**.
 - 3 Select an option.
 - 4 Tap **OK**.
- ! If you select the wrong language and cannot read the menu texts, find and tap . Then select the text beside  and select the first entry in the menu that opens. You can then select the language you want.

Date and time

You can change the date and time on your device.

To Set the Date Manually

- 1 From the Homescreen, tap .
- 2 Find and tap **Settings > Date & time**.
- 3 Drag the slider beside **Automatic date & time** to the left.
- 4 Tap **Set date**.
- 5 Scroll up and down to select the desired date.
- 6 Tap **OK**.

To Set the Time Manually

- 1 From your Homescreen, tap .
- 2 Find and tap **Settings > Date & time**.
- 3 Drag the slider beside **Automatic date & time** to the left.
- 4 Tap **Set time**.
- 5 Select the relevant hour and minute values.
- 6 Tap **OK**.

To set the time zone

- 1 From your Homescreen, tap .
- 2 Find and tap **Settings > Date & time**.
- 3 Tap **Select time zone**.
- 4 Select an option.

X-Reality™ for mobile

Sony's X-Reality™ for mobile technology improves the viewing quality of photos and videos, giving you clearer, sharper, and more natural images. X-Reality™ for mobile is turned on by default, but you can turn it off if you want to reduce battery consumption.

To turn on X-Reality™ for mobile

- 1 From your Home screen, tap .
- 2 Find and tap **Settings > Display > Image enhancement**.
- 3 Tap the **X-Reality for mobile** radio button if it is not already selected.

Super-Vivid Mode

Super-Vivid mode enhances the color brightness and saturation of your photos and videos while you view them on your device.

To turn on Super-vivid mode

- 1 From your Home screen, tap .
- 2 Find and tap **Settings > Display > Image enhancement**.
- 3 Tap the **Super-vivid mode** radio button if it is not already selected.

Enhancing the sound output

You can enhance the sound of your device by manually enabling individual sound settings such as Equalizer and Surround sound. You can also enable the Dynamic normalizer to minimize volume differences between songs or videos.

To Enhance the Sound Output Manually

- 1 From your Homescreen, tap .
- 2 Find and tap **Settings > Sound & notification > Audio settings**.
- 3 Drag the slider beside **ClearAudio+** to the right.

To adjust the sound settings manually

- 1 From the Home screen, tap .
- 2 Find and tap **Settings** > **Sound** > **Audio settings**.
- 3 Unmark the **ClearAudio+** checkbox if it is marked.
- 4 Tap **Sound effects**.
- 5 Adjust the sound settings by dragging the frequency band buttons up or down.

To Minimize Volume Differences Using the Dynamic Normalizer

- 1 From the Homescreen, tap .
- 2 Find and tap **Settings** > **Sound & notification** > **Audio settings**.
- 3 Drag the slider beside **Dynamic normalizer** to the right.

Noise cancellation

Your device supports noise canceling headsets. By using a noise canceling headset with your device, you can get much clearer audio quality when listening, for example, to music in a noisy environment, such as on a bus, a train or a plane. You can also use this feature to create a silent environment in which to study, work or read.

- 💡 To ensure optimal performance, noise canceling headsets from Sony are recommended.

To Use a Noise-Canceling Headset

- 1 Connect the noise-canceling headset to your device.
 - 2 From your Homescreen, tap  > **Settings** > **Sound & notification** > **Accessory settings** > **Noise canceling**, then drag the slider beside **Noise canceling** to the right.
 - 3 If you want **Noise canceling** to be enabled only during music or video playback or when the screen is active, drag the slider beside **Power save mode** to the right.
 - 4 If you want **Noise canceling** to be enabled for as long as the headset is connected, drag the slider beside **Power save mode** to the left.
- ! A noise-canceling headset may not be included with your device at purchase.

To Adjust the Settings to the Noise Environment

- 1 Make sure a noise-canceling headset is connected to your device.
- 2 From your Homescreen, tap .
- 3 Find and tap **Settings** > **Sound & notification** > **Accessory settings** > **Noise canceling** > **Noise environment**.
- 4 Select the relevant noise environment type, then tap **OK**.

Multiple User Accounts

Your device supports multiple user accounts so that different users can log in separately to the device and use it. Multiple user accounts work well in situations where you share the same device with other people or lend your device to someone to use for a while. The user who sets up the device for the first time becomes the owner of the device. Only the owner can manage the accounts of other users. Apart from the owner account, there are three different types of accounts:

- Regular User: This account type is suitable for someone who regularly uses your device.
 - Guest User: Enable the guest account option for someone who just wants to use your device temporarily.
 - Restricted Profile: Use this option if you want to make only a restricted number of applications available to a person using your device.
- ! Some features are only available to the owner. For example, only the owner can allow downloads from sources other than Google Play™.

About the Regular User Account

By adding Regular User accounts, you can allow different users to have different homecreens, wallpapers, and general settings. They also get separate access to applications and memory storage for files such as music and photos. You can add up to seven Regular User accounts on your device.

To Add a Regular User Account

- 1 Make sure you are logged in as the owner, that is, the user who set up the device for the first time.
 - 2 From your Homescreen, tap .
 - 3 Find and tap **Settings > Users > Add user or profile > User**.
 - 4 Tap **OK**. The new account is created.
 - 5 Tap **SET UP NOW**. The screen locks and an icon representing the newly added user appears in the top-right corner.
 - 6 Unlock the screen by swiping upward.
 - 7 Follow the on-screen instructions to set up the account for the new user.
- 💡 In cases where the person using the new account wants to set up the account but is not available at the time, you can tap **NOT NOW** in step 5. When the user is ready, they can select **Users** under **Settings** and see the new account, which appears as **New user**. Just tap the account and follow the instructions to finish setting it up.
- 💡 You can also add a regular user account from the status bar on any screen. Just drag the status bar downward using two fingers and tap the user icon, then tap **Add user**.

To Delete a Regular User Account from Your Device

- 1 Be sure you are logged in as the owner.
- 2 From your Homescreen, tap .
- 3 Find and tap **Settings > Users**.
- 4 Tap  beside the name of the user you want to delete, then tap **Remove user > Delete**.

About the Guest User Account

If someone just wants to use your device temporarily, you can enable a guest account for that user. In Guest mode, your device starts up as a freshly installed system with only the preinstalled apps. Once your guest is finished using your device, you can wipe the session clean so that the next guest can start fresh. The Guest User account is preinstalled and cannot be deleted.

To Activate the Guest User Account

- 1 Make sure you are logged in as the owner, that is, the user who set up the device for the first time.
 - 2 From your Homescreen, tap .
 - 3 Find and tap **Settings > Users > Guest**.
- 💡 You can also activate the guest user account from the status bar on any screen. Just drag the status bar downward using two fingers and tap the user icon, then tap **Add guest**.

To clear the guest session data

- 1 Make sure you are logged in to the guest account.
 - 2 From your Home screen, tap .
 - 3 Find and tap **Settings > Users**.
 - 4 Find and tap **Remove guest**.
 - 5 Tap **Remove**.
- 💡 You can also clear the guest session from the status bar on any screen as long as you are logged in to the guest account. Just drag the status bar downwards using two fingers and tap the user icon, then tap **Remove guest**.

About Restricted Profiles

You can add Restricted Profiles, which only allow restricted access to apps from the owner account. For example, you can create a restricted profile for children to prevent them from playing games or viewing mature content from your account. You can add up to seven restricted profiles on your device.

To Add a Restricted Profile

- 1 Be sure you are logged in as the owner, that is, the user who set up the device for the first time.
 - 2 From your Homescreen, tap .
 - 3 Find and tap **Settings > Users > Add user or profile**.
 - 4 Tap **Restricted profile**. A list of available apps appears.
 - 5 To name the profile, tap **New profile** and enter a name, then tap **OK**.
 - 6 Drag the relevant slider to the right beside the apps you want to grant access to.
- 💡 If you don't have a PIN, password, or pattern set up as your screen lock when you are adding a restricted profile, after tapping **Restricted profile** in step 4, you will be asked to set up a screen lock and select an option about how to display notifications on your lockscreen. Please follow the on-screen instructions you are prompted with. For more information about notification display options on the lockscreen, see *Notification Display Options on the Lockscreen* on page 25.

To Delete a Restricted Profile from Your Device

- 1 Be sure you are logged in as the owner.
- 2 From your Homescreen, tap .
- 3 Find and tap **Settings > Users**.
- 4 Tap  beside the name of the profile you want to delete, then tap  > **Delete**.

Switching between Multiple User Accounts

To Switch between Multiple User Accounts

- 1 To view the list of users, drag the status bar downward using two fingers, then tap the user icon at the top right of the screen.
 - 2 Tap the icon representing the user account you want to switch to. The lockscreen for that user account appears.
- 💡 When you switch to the guest account, tap **Start over** if you want to wipe the previous session, or tap **Yes, continue** to continue the previous session.
- 💡 Each user can set their own lockscreen. See *Screen Lock* on the 10 page.

Settings for Multiple User Accounts

There are three different types of settings on devices with multiple users:

- Settings that can be changed by any user and affect all users. Examples include language, Wi-Fi, Airplane mode, NFC, and Bluetooth®.
- Settings that only affect an individual user account. Examples include automatic data syncing, screen lock, various accounts added, and wallpaper.
- Settings that are only visible to the owner and affect all users, for example, VPN settings.

Typing text

On-screen keyboard

You can enter text with the on-screen QWERTY keyboard by tapping each letter individually, or you can use the Gesture input feature and slide your finger from letter to letter to form words. If you prefer to use a smaller and moveable version of the on-screen keyboard, you can activate the thumb keyboard or the mini keyboard instead.

You can select up to three languages for text input. The Smart language detection feature detects the language you are using and predicts the words for that language as you type.



- 1 Delete a character before the cursor.
- 2 Insert a new line or confirm text input.
- 3 Switch between lower case ⇩, upper case ⇧, and caps ⇨. For some languages, this key is used to access extra characters in the language.
- 4 Shift to the moveable thumb keyboard or the mini keyboard.
- 5 Enter a space.
- 6 Personalize your keyboard. This key disappears after the keyboard is personalized.
- 7 Display numbers and symbols. For even more symbols, tap = & \$.

To display the on-screen keyboard to enter text

- Tap a text entry field.

To enter text character by character

- 1 To enter a character visible on the keyboard, tap the character.
- 2 To enter a character variant, touch and hold a regular keyboard character to get a list of available options, then select from the list. For example, to enter "é," touch and hold "e" until other options appear, then, while keeping your finger pressed on the keyboard, drag to and select "é."

To enter a period

- After you enter a word, double-tap the space bar.

To switch between the full keyboard and a smaller keyboard

- 1 When you enter text using the on-screen keyboard, tap , , or .
 - 2 Select a keyboard.
- 💡 Tap and hold , then drag it to move the small keyboard as desired.

To Change the Gesture Input Settings

- 1 When the on-screen keyboard is displayed, tap .
- 2 Tap , then tap **Keyboard settings**.
- 3 To activate or deactivate the Gesture input function, drag the slider beside **Gesture input** to the on or off position.

To enter text using the Gesture input function

- 1 When the on-screen keyboard is displayed, slide your finger from letter to letter to trace the word that you want to write.
- 2 After you finish entering a word, lift up your finger. A word suggestion appears based on the letters that you have traced.
- 3 If the word that you want does not appear, tap  to see other options and select accordingly. If the desired option does not appear, delete the entire word and trace it again, or enter the word by tapping each letter individually.

Entering text using voice input

When you enter text, you can use the voice input function instead of typing the words. Just speak the words that you want to enter. Voice input is an experimental technology from Google™, and is available for a number of languages and regions.

To Enable Voice Input

- 1 When the on-screen keyboard is displayed, tap .
- 2 Tap , then tap **Keyboard settings**.
- 3 Drag the slider beside **Google™ voice typing key** to the right.
- 4 Tap  to save your settings. A microphone icon  now appears on your on-screen keyboard.

To enter text using voice input

- 1 Open the on-screen keyboard.
 - 2 Tap . When  appears, speak to enter text.
 - 3 When you're done, tap  again. The suggested text appears.
 - 4 Edit the text manually if necessary.
- 💡 To make the keyboard appear and enter text manually, tap .

Editing text

You can select, cut, copy and paste text as you write. You can access the editing options by double-tapping the entered text. The editing options then become available via an application bar.

Application bar

The following actions are available on the selected text:

- **Cut**
- **Copy**
- **Paste**
- **Share**
- **Select all**

- ! The **Paste** option only appears when you have text saved on the clipboard.

To select text

- 1 Enter some text, then double-tap the text. The word you tap gets highlighted by tabs on both sides.
- 2 Drag the tabs to the left or right to select more text.

To edit text

- 1 Enter some text, then double-tap the entered text to make the application bar appear.
- 2 Select the text that you want to edit, then use the application bar to make your desired changes.

To use the magnifier

- When you enter text, tap and hold on the text field to view the text magnified and to place the cursor where you want within the text field.

Personalizing the On-Screen Keyboard

When entering text using the on-screen keyboard, you can access keyboard and other text input settings that help you, for example to set options for writing languages, text prediction and correction. You can get word suggestions for one language at a time by deactivating the Smart language detection feature.

The keyboard can use text that you have written in messaging and other applications to learn your writing style. There is also a Personalization guide that runs you through the most basic settings to get you started quickly. You can select to use other keyboards and switch between keyboards. For example, you can select the Xperia™ Chinese keyboard or the Xperia™ Japanese keyboard.

To access the on-screen keyboard settings

- 1 When you enter text using the on-screen keyboard, tap .
- 2 Tap , then tap **Keyboard settings** and change the settings as desired.
- 3 To add a writing language for text input, tap **Writing languages** and mark the relevant checkboxes.
- 4 Tap **OK** to confirm.

To change the word suggestion settings

- 1 When you enter text using the on-screen keyboard, tap .
- 2 Tap , then tap **Keyboard settings** > **Word suggestions**.
- 3 Select an option.

To Select a Keyboard

- 1 When you enter text using the on-screen keyboard, tap  at the bottom-right of the screen.
 - 2 Select an option.
-  To enable more keyboard options, tap **More keyboards**, then drag the relevant sliders to the right.

To Change Writing Language Using the On-Screen Keyboard

-  This feature is only available if you have added more than one input language and the Smart language detection feature is off, or if the languages that you selected include non-Latin languages.
- When you enter text using the on-screen keyboard, tap the writing language icon to switch between the selected writing languages. For example, tap  until the desired writing language appears.

To Change the Smart Language Detection Settings

-  To use Smart language detection, more than one language must be selected in **Writing languages**. Also note that only languages using the Latin alphabet are supported.
- 1 When the on-screen keyboard is displayed, tap .
 - 2 Tap , then tap **Keyboard settings**.
 - 3 To activate or deactivate the Smart language detection function, drag the slider beside **Smart language detection** to the on or off position.

To Change the Use My Writing Style Settings

- 1 When you enter text using the on-screen keyboard, tap .
- 2 Tap , then tap **Keyboard settings** > **Use my writing style** and select an option.

To Select a Keyboard Layout Variant

- ! Layout variants for the on-screen keyboard may not be available for all writing languages. You can select different keyboard layouts for each writing language.
- 1 When you enter text using the on-screen keyboard, tap .
 - 2 Tap , then tap **Keyboard settings**.
 - 3 Tap **Writing languages**, then tap  beside a writing language.
 - 4 Select a keyboard layout variant.
 - 5 Tap **OK** to confirm.

Contacts

Transferring contacts

There are several ways to transfer contacts to your new device. You can sync contacts from an online account or import contacts directly from another device.

Transferring Contacts Using a Computer

Xperia™ Transfer is an application that helps you to collect contacts from your old device and transfer them to your new device. Xperia™ Transfer, which you can access from within the Xperia™ Companion software, supports cellular devices that run on iOS/iCloud and Android™. If you are switching from an iOS device, the App Matching feature suggests the Android equivalents of your iOS apps.

To use Xperia™ Transfer, you need:

- An internet-connected computer.
 - Your new Android™ device.
 - A USB cable for your new Android™ device.
 - Your old device.
 - A USB cable for your old device.
- 💡 You may not need your old device. For iOS devices, you can connect directly to iCloud or use a local backup. For previously owned Sony devices, you can use local backups.

To Transfer Contacts to Your New Device

- 1 Search for and download Xperia™ Companion for Windows at <http://support.sonymobile.com/tools/xperia-companion/> or Xperia™ Companion for Mac at <http://support.sonymobile.com/tools/xperia-companion-mac/> if the software is not already installed.
- 2 Using a USB cable, connect your device to the computer.
- 3 After successful installation, open the Xperia™ Companion software if it is not automatically launched, and then click *Xperia™ Transfer* and follow the relevant instructions to transfer your contacts.

Transferring contacts using an online account

If you sync the contacts in your old device or your computer with an online account, for example, Google Sync™, Facebook™, or Microsoft® Exchange ActiveSync®, you can transfer your contacts to your new device using that account.

To synchronize contacts to your new device using a synchronization account

- 1 From your Homescreen, tap , then tap .
 - 2 Tap , then tap **Settings > Accounts & sync**.
 - 3 Select the account that you want to sync your contacts with, then tap  > **Sync now**.
- ! You need to be signed in to the relevant sync account before you can sync your contacts with it.

Other methods for transferring contacts

There are several other ways to transfer contacts from your old device to your new device. For example, you can copy contacts to a memory card, or use Bluetooth® technology. For more specific information about transferring the contacts from your old device, refer to the relevant User guide.

To import contacts from a memory card

- 1 From your Homescreen, tap , then tap .
- 2 Press , then tap **Import contacts** > **SD card**.
- 3 Select where to store your contacts.
- 4 Select the files that you want to import and tap **OK**.

To import contacts using Bluetooth® technology

- 1 Make sure you have the Bluetooth® function turned on and that your device is set to visible.
- 2 When you are notified of an incoming file to your device, drag the status bar downward and tap the notification to accept the file transfer.
- 3 Tap **Accept** to start the file transfer.
- 4 Drag the status bar downward. When the transfer is complete, tap the notification.
- 5 Tap the received file and select where to store your contacts.

Searching and viewing contacts



- 1 Search for contacts
- 2 View more options
- 3 Contacts, Favorites, and Groups tabs
- 4 Edit and view medical and emergency contact information
- 5 View contact details
- 6 Jump to contacts starting with the selected letter
- 7 Add a contact

To search for a contact

- 1 From your Homescreen, tap , then tap .
- 2 Tap  and enter a phone number, name, or other information in the **Search contacts** field. The result list is filtered as you enter each character.

To select which contacts to display in the Contacts application

- 1 From your Homescreen, tap , then tap .
- 2 Press , then tap **Filter**.
- 3 In the list that appears, mark or unmark the desired options. If you have synchronized your contacts with a synchronization account, that account appears in the list. To further expand the list of options, tap the account.

Adding and editing contacts

To Add a Contact

- 1 From your Homescreen, tap , then tap .
 - 2 Tap .
 - 3 If you have synchronized your contacts with one or more accounts and you are adding a contact for the first time, you must select the account you want to add this contact to. Alternately, tap **No backup** if you only want to use and save this contact on your device.
 - 4 Enter or select the desired information for the contact.
 - 5 When you are done, tap **SAVE**.
- ! After you select a synchronization account in step 3, that account will show as the default account offered the next time you add a contact. When you save a contact to a particular account, that account will show as the default account to save to the next time you add a contact. If you have saved a contact to a particular account and want to change it, you need to create a new contact and select a different account to save them to.
- 💡 If you add a plus sign and the country code before a contact's phone number, you do not have to edit the number again when you make calls from other countries.

To Edit a Contact

- 1 From your Homescreen, tap , then tap .
 - 2 Tap the contact that you want to edit, then tap .
 - 3 Edit the desired information.
 - 4 When you are done, tap **SAVE**.
- ! Some synchronization services do not allow you to edit contact details.

To Associate a Picture with a Contact

- 1 From your Homescreen, tap , then tap .
 - 2 Tap the contact that you want to edit, then tap .
 - 3 Tap , then select a method for adding the contact picture and edit as desired.
 - 4 After you add the picture, tap **SAVE**.
- 💡 You can also add a picture to a contact directly from the **Album** application. If you want to add a picture that is saved to an online account, you must download the picture first.

To personalize the ringtone for a contact

- 1 From your Homescreen, tap , then tap .
- 2 Tap the contact that you want to edit, then tap .
- 3 Tap  > **Set ringtone**.
- 4 Select an option from the list or tap  to select a music file saved to your device, then tap **Done**.
- 5 Tap **SAVE**.

To Delete Contacts

- 1 From your Homescreen, tap , then tap .
- 2 Touch and hold the contact you want to delete.
- 3 To delete all contacts, tap the downward arrow to open the drop-down menu, then select **Mark all**.
- 4 Tap , then tap **Delete**.

To Edit Contact Information about Yourself

- 1 From your Homescreen, tap , then tap .
- 2 Tap **Myself**, then tap .
- 3 Enter the new information or make the changes you want.
- 4 When you are done, tap **SAVE**.

Favorites and groups

You can mark contacts as favorites so that you can get quick access to them from the Contacts application. You can also assign contacts to groups, to get quicker access to a group of contacts from within the Contacts application.

To mark or unmark a contact as a favorite

- 1 From the Homescreen, tap , then tap .
- 2 Tap the contact you want to add to or remove from your favorites.
- 3 Tap .

To View Your Favorite Contacts

- 1 From your Homescreen, tap , then tap .
- 2 Tap **Favorites**.

To Assign a Contact to a Group

- 1 In the Contacts application, tap the contact that you want to assign to a group.
- 2 Tap , then tap the bar directly under **Groups**.
- 3 Mark the checkboxes for the groups you want to add the contact to.
- 4 Tap **SAVE**.

Sending contact information

To Send Your Business Card

- 1 From your Homescreen, tap , then tap .
- 2 Tap **Myself**.
- 3 Tap , then tap **Share**.
- 4 Select an available transfer method and follow the on-screen instructions.

To Send a Contact

- 1 From your Homescreen, tap , then tap .
- 2 Tap the contact whose details you want to send.
- 3 Tap , then tap **Share**.
- 4 Select an available transfer method and follow the on-screen instructions.

To send several contacts at once

- 1 From your Homescreen, tap , then tap .
- 2 Press , then tap **Mark several**.
- 3 Mark the contacts you want to send, or select all if you want to send all contacts.
- 4 Tap , then select an available transfer method and follow the on-screen instructions.

Avoiding duplicate entries in the Contacts application

If you synchronize your contacts with a new account or import contact information in other ways, you could end up with duplicate entries in the Contacts application. If this happens, you can join such duplicates to create a single entry. And if you join entries by mistake, you can separate them again later.

To link contacts

- 1 From your Homescreen, tap , then tap .
- 2 Tap the contact that you want to link with another contact.
- 3 Press , then tap **Link contact**.
- 4 Tap the contact whose information you want to join with the first contact, then tap **OK** to confirm. The information from the first contact is merged with the second contact, and the linked contacts are displayed as one contact in the Contacts list.

To separate linked contacts

- 1 From your Homescreen, tap , then tap .
- 2 Tap the linked contact that you want to edit, then tap .
- 3 Tap **Unlink contact** > **Unlink**.

Backing Up Contacts

You can use a memory card or a USB storage device to back up contacts. See *Transferring contacts* on page 60 for more information about how to restore contacts to your device.

To export all contacts to a memory card

- 1 From your Homescreen, tap , then tap .
- 2 Press , then tap **Export contacts** > **SD card**.
- 3 Tap **OK**.

To Export All Contacts to a USB Storage Device

- ! When you export contacts using this method, you must first connect your device to a USB storage device, such as a flash drive or an external hard drive, using a USB Host adapter cable. See *Connecting Your Device to USB Accessories* on page 100 for more information about how to connect your device to a USB storage device.
- 1 From your Homescreen, tap , then tap .
 - 2 Tap , then tap **Export contacts** > **USB storage**.
 - 3 Tap **OK**.

Email

Setting up email

Use the email application in your device to send and receive email messages through your email accounts. You can have one or several email accounts at the same time, including corporate Microsoft Exchange ActiveSync accounts.


To set up an email account

- 1 From your Homescreen, tap .
 - 2 Find and tap **Email**.
 - 3 Follow the instructions that appear on the screen to complete the setup.
- 💡 For some email services, you may need to contact your email service provider for information on detailed settings for the email account.

To add an extra email account

- 1 From your Homescreen, tap .
- 2 Find and tap **Email**.
- 3 Tap , then tap **Settings > Add account**.
- 4 Enter the email address and password, then tap **Next**. If the settings for the email account cannot be downloaded automatically, complete the setup manually.
- 5 When you are finished, tap **Next**.

Sending and Receiving Email Messages

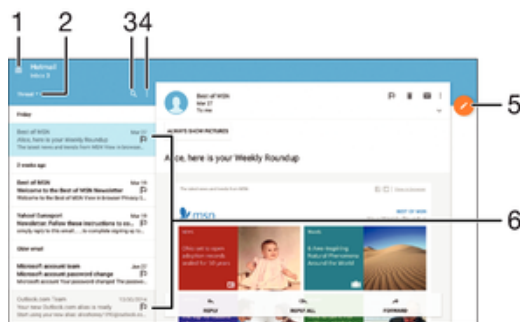

- 1 View a list of all email accounts and recent folders
- 2 Sort email messages
- 3 Search for email messages
- 4 Access settings and options
- 5 Write an email message
- 6 List of email messages

To download new email messages

- When the inbox is open, swipe downward on the message list.

To Read Your Email Messages

- 1 From your Homescreen, tap .
- 2 Find and tap **Email**.
- 3 If you are using several email accounts, tap  and select the account you want to check. If you want to check all your email accounts at once, tap , and then tap **Combined inbox**.
- 4 In the email inbox, scroll up or down and tap the email message you want to read.

To Create and Send an Email Message

- 1 From your Homescreen, tap , and then find and tap **Email**.
- 2 If you are using several email accounts, tap  and select the account you want to send the email from.
- 3 Tap , and then type the recipient's name or email address and select one or more recipients from the drop-down list.
- 4 Enter the email subject and message text, and then tap .

To reply to an email message

- 1 In your email inbox, find and tap the message that you want to reply to, then tap **Reply** or **Reply all**.
- 2 Enter your reply, then tap .

To Forward an Email Message

- 1 In your email inbox, find and tap the message that you want to forward, then tap **Forward**.
- 2 Enter the recipient's name or email address, then select one or more recipients from the drop-down list.
- 3 Enter your message text, then tap .

To view an email message attachment

- 1 Find and tap the email message containing the attachment that you want to view. Email messages with attachments are indicated by .
- 2 After the email message opens, tap **Load**. The attachment starts to download.
- 3 After the attachment finishes downloading, tap **View**.

To Save a Sender's Email Address to Your Contacts

- 1 Find and tap a message in your email inbox.
- 2 Tap the name of the sender, tap **Add to Contacts** then tap **OK**.
- 3 Select an existing contact, or tap **Create new contact**.
- 4 Edit the contact information, if desired, then tap **Save**.

Organizing your email messages

To Sort your Email

- 1 From your Homescreen, tap .
- 2 Find and tap **Email**.
- 3 If you are using several email accounts, tap  and select the account with the inbox you want to sort. If you want to sort email in all your email accounts at once, tap , and then tap **Combined inbox**.
- 4 Tap , and then tap **Sort**.
- 5 Select a sorting option.

To Search for Emails

- 1 From your Homescreen, tap , and then find and tap **Email**.
- 2 If you are using several email accounts, tap  and select the account you want to search. If you want to search all your email accounts at once, tap , and then tap **Combined inbox**.
- 3 Tap .
- 4 Enter your search text, and then tap  on the keyboard.
- 5 The search result appears in a list sorted by date. Tap the email message you want to open.

To View All Folders for One Email Account

- 1 From your Homescreen, tap , then find and tap **Email**.
- 2 Drag the left edge of the screen to the right, then select the account you want to check.
- 3 Under the account you want to check, select **Show all folders**.

To delete an email message

- In your email inbox, flick the message that you want to delete to the right.

To move an email message to another folder

- 1 In your email inbox, flick the message that you want to move to the left.
- 2 Tap **Move**, then select a folder.

Email account settings

To remove an email account from your device

- 1 From your Homescreen, tap .
- 2 Find and tap **Email**.
- 3 Press , then tap **Settings**.
- 4 Select the account you want to remove.
- 5 Tap **Delete account** > **OK**.

To change the inbox check frequency

- 1 From your Homescreen, tap .
- 2 Find and tap **Email**.
- 3 Tap , then tap **Settings**.
- 4 Select the account for which you want to change the inbox check frequency.
- 5 Tap **Check frequency** > **Check frequency** and select an option.

To set an Out of Office auto-reply in an Exchange Active Sync account

- 1 From your Homescreen, tap , then find and tap **Email**.
- 2 Press , then tap **Settings**.
- 3 Select the EAS (Exchange Active Sync) account for which you want to set an Out of Office auto-reply.
- 4 Tap **Out of office**.
- 5 Drag the slider beside **Out of office** to the right to turn on the function.
- 6 If needed, mark the **Set time range** checkbox and set the time range for the auto reply.
- 7 Enter your Out of Office message in the body text field.
- 8 Tap **OK** to confirm.

Gmail™

If you have a Google™ account, you can use the Gmail™ application to read and write email messages.



- 1 View a list of all Gmail accounts and folders
- 2 Search for email messages
- 3 Archive an email message

- 4 Delete an email message
- 5 Mark an email message as unread
- 6 Move an email message to a folder
- 7 Access settings and options
- 8 List of email messages
- 9 Write an email message

[To Learn More About Gmail™](#)

- When the Gmail application is open, drag the left edge of the screen to the right, and then find and tap **Help**.

Music


Transferring Music to Your Device

There are different ways to transfer music from a computer to your device:

- You can transfer music files between your device and a computer using the provided USB cable. After connecting, select **Transfer files (MTP)** on your device and then simply copy and paste or drag and drop the files using the computer. See *Managing Files Using a Computer* on page 33.
 - You can use the Xperia™ Companion software to transfer your media files between the computer and your device. Learn more and download Xperia™ Companion for Windows at <http://support.sonymobile.com/tools/xperia-companion/> or Xperia™ Companion for Mac at <http://support.sonymobile.com/tools/xperia-companion-mac/>.
- ! The Music application may not support all music file formats. For more information about supported file formats and the use of multimedia (audio, image, and video) files, download the White Paper for your device at www.sonymobile.com/support/.

Listening to music

Use the Music application to listen to your favorite music and audio books.

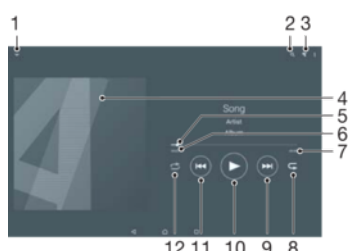

- 1 Go to the Music home screen
- 2 Search all songs saved to your device
- 3 View the current play queue
- 4 Album art (if available)
- 5 Progress indicator – Drag the indicator or tap along the line to fast forward or rewind
- 6 Elapsed time of current song
- 7 Total time length of current song
- 8 Repeat all songs in the current play queue
- 9 Tap to go to the next song in the play queue
Touch and hold to fast forward within the current song
- 10 Play or pause a song
- 11 Tap to go to the previous song in the play queue
Touch and hold to rewind within the current song
- 12 Shuffle songs in the current play queue

Music home screen



- 1 Drag the left edge of the screen to the right to open the Music home screen menu
- 2 Scroll up or down to view content
- 3 Play a song using the Music application
- 4 Return to the music player screen
- 5 Play all songs in shuffle mode

To Play a Song Using the Music Application

- 1 From your Homescreen, tap , then find and tap .
- 2 Drag the left edge of the screen to the right.
- 3 Select a music category.
- 4 Tap a song to play it.

- ! You might not be able to play copyright-protected items. Verify that you have the necessary rights for the material you intend to share.

To Find Song-Related Information Online

- While a song is playing in the Music application, tap the Album art, then tap **More about this**.
- 💡 Online resources related to the song can include videos on YouTube™, song lyrics, and artist information on Wikipedia.

To Edit Music Information and Download Album Art

- 1 From the Music application, tap the Album art, and then tap **Edit music info**.
 - 2 Edit the information as desired.
 - 3 To set or download album art, tap , then select an option.
 - 4 When you are finished, tap **SAVE**.
- 💡 You can also set album art to download automatically in the Music menu, under Settings.

To adjust the audio volume

- Press the volume key.

To Minimize the Music Application


- When a song is playing, tap  to go to the Homescreen. The Music application keeps running in the background.

To open the Music application when it is playing in the background

- 1 While a song is playing in the background, tap the  to open the recently used applications window.
- 2 Tap the Music application.

Music home screen menu

The Music home screen menu gives you an overview of all the songs on your device. From here you can manage your albums and playlists.

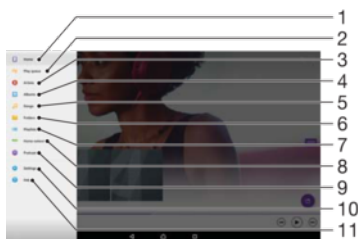

- 1 Return to the Music home screen
- 2 View the current play queue

- | | |
|----|--|
| 3 | Browse all artists |
| 4 | Browse all albums |
| 5 | Browse all songs |
| 6 | Browse your music library and filter by artist, album or song name |
| 7 | Browse all playlists |
| 8 | Play a shared music file on another device |
| 9 | View all subscribed or downloaded files in Podcast |
| 10 | Open the settings menu for the Music application |
| 11 | Open the support menu for the Music application |

To open the Music homescreen menu

- 1 From your Homescreen, tap , then find and tap .
- 2 Drag the left edge of the screen to the right.

To return to the Music homescreen

- When the Music homescreen menu is open, tap **Home**.
- When the Music homescreen menu is open, tap on the screen to the right of the menu.

To delete a song

- 1 From the Music homescreen menu, browse to the song that you want to delete.
- 2 Touch and hold the song title, then tap **Delete** in the list that appears.
- 3 Tap **Delete** again to confirm.

Playlists

On the Music homescreen, you can create your own playlists from the music that is saved on your device.

To Create Your Own Playlists

- 1 From the Music homescreen, touch and hold the name of the album or song that you want to add to a playlist.
- 2 In the menu that opens, tap **Add to playlist** > **Create new playlist**.
- 3 Enter a name for the playlist and tap **OK**.

 You can also tap the album art and then tap **Add to playlist** to create a new playlist.

To play your own playlists

- 1 Open the Music homescreen menu, then tap **Playlists**.
- 2 Under **Playlists**, select the playlist that you want to open.
- 3 If you want to play all songs, tap **Shuffle all**.

To Add Songs to a Playlist

- 1 From the Music homescreen, browse to the song or album that you want to add to a playlist.
- 2 Touch and hold the song or the album title, then tap **Add to playlist**.
- 3 Tap the name of the playlist you want to add the album or song to. The album or song is now added to the playlist.

To remove a song from a playlist

- 1 In a playlist, touch and hold the title of the song that you want to delete.
- 2 Tap **Remove from playlist**.

 You might not be able to delete a song that is saved on the memory card or on your device's internal storage.

To delete a playlist

- 1 Open the Music homescreen menu, then tap **Playlists**.
- 2 Touch and hold the playlist that you want to delete.
- 3 Tap **Delete**.
- 4 Tap **Delete** again to confirm.

! You cannot delete smart playlists.

Sharing music

To share a song

- 1 From the Music homescreen, browse to the song or album that you want to share.
- 2 Touch and hold the song title, then tap **Share**.
- 3 Select an application from the list, then follow the on-screen instructions.

💡 You can also share albums and playlists in the same way.

Enhancing the sound

To Improve the Sound Quality Using the Equalizer


- 1 Open the Music homescreen menu, and then tap **Settings > Audio settings > Sound effects > Equalizer**.
- 2 To adjust the sound manually, drag the frequency band buttons up or down. To adjust the sound automatically, tap **✓** and select a style.

To turn on the Surround sound feature

- 1 Open the Music home screen menu, then tap **Settings > Audio settings > Sound effects > Surround sound (VPT)**.
- 2 Flick left or right to select a setting, then tap **OK** to confirm.

Recognizing Music with TrackID™

Use the TrackID™ music recognition service to identify a song you hear playing in your surroundings. Just record a short sample of the song and you'll get artist, title, and album info within seconds. You can purchase tracks identified by TrackID™ and you can view TrackID charts to see what TrackID users around the globe are searching for. For best results, use TrackID™ in a quiet area.

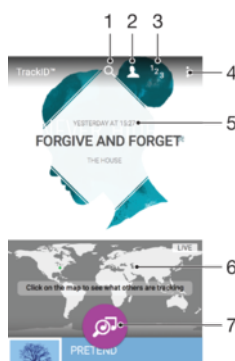

- 1 Search for tracks, albums, and artists
- 2 Create an online TrackID™ profile
- 3 View current music charts
- 4 View TrackID™ options
- 5 View the history of your previous searches
- 6 Check out what others are tracking

- ! The TrackID™ application and the TrackID™ service are not supported in all countries/regions or by all networks and/or service providers. TrackID™ can be connected to music streaming services available in your country.

To Identify Music Using TrackID™ Technology

- 1 From your Homescreen, tap .
 - 2 Find and tap **TrackID™**, then hold your device close to the music source.
 - 3 Tap . If the song is recognized by the TrackID™ service, the results appear on the screen.
- 💡 To return to the **TrackID™** start screen, tap .

To View Artist Information for a Song

- 1 After a song is recognized by the **TrackID™** application, the result is displayed on the TrackID™ homescreen.
- 2 Scroll to the result you want to view and then tap to open it.

To Delete a Song from the Track History

- 1 Open the **TrackID™** application, then browse to the song that you want to delete.
- 2 Touch and hold the screen to make  appear.
- 3 Tap .

To Use TrackID™ LIVE


You can use TrackID™ LIVE to see real-time LIVE trackings from around the world. There are two ways to start TrackID™ LIVE:

- Tap the map on the TrackID™ homescreen.
 - Or press , then tap TrackID™ LIVE.
- 💡 You can change how fast you want to get the trackings and you can mute or unmute the song previews.

FM radio

Listening to the Radio

The FM radio in your device works like any FM radio. For example, you can browse and listen to FM radio stations and save them as favorites. You must connect a wired headset or headphones to your device before you can use the radio. This is because the headset or headphones act as an antenna. After one of these devices is connected, you can then switch the audio to the speaker, if desired.

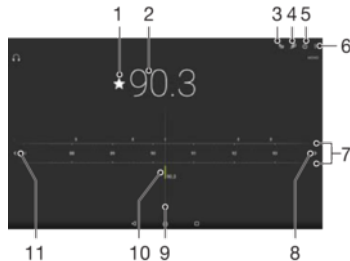

- | | |
|----|--|
| 1 | Save or remove a channel as a favorite |
| 2 | Tuned frequency |
| 3 | Favorites list |
| 4 | Launch the TrackID™ music recognition application |
| 5 | Radio on/off button |
| 6 | View menu options |
| 7 | Frequency band – drag left or right to move between channels |
| 8 | Move up the frequency band to search for a channel |
| 9 | Tuning dial |
| 10 | A saved favorite channel |
| 11 | Move down the frequency band to search for a channel |

To listen to the FM radio

- 1 Connect a headset or a set of headphones to your device.
- 2 From your Homescreen, tap .
- 3 Find and tap **FM radio** . The available channels appear as you scroll through the frequency band.

! When you start the FM radio, available channels appear automatically. If a channel has RDS information, it appears a few seconds after you start listening to the channel.

To move between radio channels

- Drag the frequency band left or right.

To start a new search for radio channels

- 1 When the radio is open, press .
- 2 Tap **Search for channels**. The radio scans the whole frequency band, and all available channels are displayed.

To switch the radio sound to the speaker

- 1 When the radio is open, press .
- 2 Tap **Play in speaker**.

💡 To switch the sound back to the wired headset or headphones, press  and tap **Play in headphones**.

To identify a song on the FM radio using TrackID™

- 1 While the song is playing on your device's FM radio, tap .
 - 2 A progress indicator appears while the TrackID™ application samples the song. If successful, you are presented with a track result, or a list of possible tracks.
 - 3 Press  to return the FM Radio.
- ! The TrackID™ application and the TrackID™ service are not supported in all countries/regions, or by all networks and/or service providers in all areas.

Favorite radio channels

To save a channel as a favorite

- 1 When the radio is open, navigate to the channel that you want to save as a favorite.
- 2 Tap .
- 3 Enter a name and select a color for the channel, then press **Save**.

To listen to a favorite radio channel

- 1 Tap .
- 2 Select an option.

To remove a channel as a favorite

- 1 When the radio is open, navigate to the channel that you want to remove.
- 2 Tap , then tap **Delete**.

Sound settings

To switch between mono and stereo sound mode


- 1 When the radio is open, press .
- 2 Tap **Enable stereo sound**.
- 3 To listen to the radio in mono sound mode again, press  and tap **Force mono sound**.

To select the radio region

- 1 When the radio is open, press .
- 2 Tap **Set radio region**.
- 3 Select an option.

Camera

Taking photos and recording videos

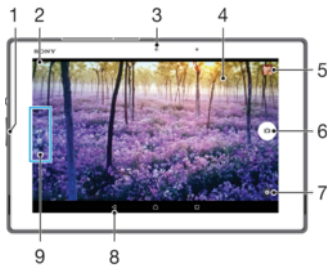

- | | |
|---|--|
| 1 | Zoom in or out |
| 2 | Switch between the front and main camera |
| 3 | Front camera |
| 4 | Main camera screen |
| 5 | View photos and videos |
| 6 | Take photos or record videos |
| 7 | Adjust capturing mode settings |
| 8 | Go back a step or exit the camera |
| 9 | Select capturing mode |

To Take a Photo from the Lockscreen

- 1 To activate the screen, briefly press the power key .
- 2 To activate the camera, touch and hold the camera icon , then drag it to the left.
- 3 After the camera opens, tap .

To Take a Photo by Touching the Screen

- 1 Activate the camera.
- 2 Tap .
- 3 Drag the **Touch capture** slider to the right.
- 4 Point the camera toward the subject.
- 5 To take a photo, tap any area on the screen that you want the camera to focus on.

To take a photo by tapping the on-screen camera button

- 1 Activate the camera.
- 2 Point the camera toward the subject.
- 3 Tap the on-screen camera button . The photo is taken as soon as you release your finger.

To take a selfie using the front camera

- 1 Activate the camera.
- 2 Tap .
- 3 To take the photo, tap the on-screen camera button . The photo is taken as soon as you release your finger.

To use the zoom function

- When the camera is open, press the volume key up or down.
- When the camera is open, pinch in or pinch out on the camera screen.

To Record a Video

- 1 Activate the camera.
- 2 If video mode is not selected, swipe the screen to select .
- 3 Point the camera toward the subject.
- 4 To start recording, tap .
- 5 To pause when recording a video, tap . To resume recording, tap .
- 6 To stop recording, tap .

To take a photo when recording a video

- To take a photo when recording a video, tap . The photo is taken as soon as you release your finger.

To view your photos and videos

- 1 Activate the camera, then tap a thumbnail to open a photo or video.
- 2 Flick left or right to view your photos and videos.

To delete a photo or recorded video

- 1 Browse to the photo or video that you want to delete.
- 2 Tap the screen to make  appear.
- 3 Tap .
- 4 Tap **Delete** to confirm.

Face Detection

The camera automatically detects faces and indicates them with frames. A colored frame shows which face has been selected for focus. Focus is set to the face closest to the camera. You can also tap one of the frames to select which face should be in focus.

To turn on face detection

- 1 Swipe the screen to select  **Manual** capturing mode.
- 2 Tap .
- 3 Find and tap **Focus mode** > **Face detection**.

To take a photo using face detection

- 1 When the camera is open and **Face detection** turned on, point the camera at your subject. Up to five faces can be detected, and each detected face is framed.
- 2 Tap the frame you want to select for focus. Do not tap if you want the camera to select focus automatically.
- 3 A colored frame shows which face is in focus. Tap the screen to take the photo.

Using Smile Shutter™ to capture smiling faces

Use Smile Shutter™ technology to photograph a face just as it smiles. The camera detects up to five faces and selects one face for smile detection and auto-focus. When the selected face smiles, the camera automatically takes a photo.

To turn on Smile Shutter™

- 1 Activate the camera.
- 2 Tap .
- 3 Find and tap **Smile Shutter** and select a smile level.

To take a photo using Smile Shutter™

- 1 When the camera is open and Smile Shutter™ is turned on, point the camera at your subject. The camera selects which face to focus on.
- 2 The face selected appears inside a colored frame and the photo is taken automatically.
- 3 If no smile is detected, tap the screen to take the photo manually.

Adding the Geographical Position to Your Photos

Turn on geotagging to add the approximate geographical location (a geotag) to photos when you take them. The geographical location is determined either by wireless networks (mobile or Wi-Fi networks) or GPS technology.

When  appears on the camera screen, geotagging is turned on but the geographical position has not been found. When  appears, geotagging is turned on and the geographical location is available, so your photo can get geotagged. When neither of these two symbols appears, geotagging is turned off.

To Turn on Geotagging

- 1 From your Homescreen, tap .
- 2 Tap **Settings** > **Location**.
- 3 Tap the on-off switch.
- 4 Activate the camera.
- 5 Tap .
- 6 Find **Save location**. Drag the slider to the right.

General camera settings

Capturing Mode Settings Overview

-  **Superior auto**
Optimize your settings to suit any scene.
-  **Manual**
Adjust camera settings manually.
-  **Background defocus**
Blur the background of your photos to make your subject look sharper in comparison.
-  **AR effect**
Take photos or videos with virtual scenes and characters.
-  **Creative effect**
Apply effects to photos or videos.
-  **Timeshift burst**
Find the best photo from a burst of images.
-  **Sweep Panorama**
Take wide-angle and panoramic photos.
-  **Face in picture**
Take photos using the front and rear cameras at the same time.
-  **Multi camera**
Record the same scene from multiple angles on a single screen.
-  **Sound Photo**
Take photos with background sound.
-  **AR fun**
Play in your camera view finder with virtual objects and enrich your photos or videos.

To switch between capturing modes

- 1 Activate the camera.
- 2 Swipe the screen to the desired capturing mode.

Superior Auto

Superior auto mode detects the conditions you are taking photos in and automatically adjusts the settings to ensure you take the best photos possible.

Manual mode

Use Manual mode when you want to manually adjust your camera settings for photos and videos.

AR effect

You can apply AR (augmented reality) effects to your photos or videos and make them more fun. When using the camera, this setting lets you integrate 3D scenes into your photos or videos. Just select the scene you want and adjust its position in the viewfinder.

Creative effect

You can apply different effects on your photos or videos. Add a Nostalgic effect to make photos look older, or a Sketch effect for a more fun image.

Sweep Panorama

You can take wide-angle and panoramic photos from the horizontal or vertical direction in an easy press-and-sweep motion.

To take a panoramic photo

- 1 Activate the camera.
- 2 Swipe the screen to go to , then select .
- 3 To select a shooting direction, tap .
- 4 Tap the screen and move the camera slowly and steadily in the direction of movement indicated on the screen.

Timeshift Burst

The camera takes a burst of 61 photos in a window of two seconds—one second before and after you tap the on-screen camera button. So you can go back and find the perfect image.

To Use Timeshift Burst

- 1 Activate the camera.
- 2 Swipe the screen to go to , and then select .
- 3 Take photos. The photos taken appear in thumbnail view.
- 4 Scroll through the thumbnails and select the photo you want to save, and then tap .

Background Defocus Mode

Use your camera's blurred background effect to make your subjects look sharper and more vivid in comparison with their background. In Background defocus mode, the camera takes two shots, identifies the background, and then blurs it while keeping the subject sharp and in focus, like shooting with a digital SLR camera. You can select from three different blur variations and tune the blur level in the preview display.

Face in Picture

You can use the Face in Picture mode to turn on the front and main cameras at the same time, so you can take a photo of yourself together with the subject.

Multi-Camera Mode

Multi-camera mode lets you take a photo that combines images from two different angles and devices. You see two images in the camera viewfinder of your device—one from your own camera and one from a connected Xperia™ device or a Sony camera that supports NFC and Wi-Fi Direct™ technology. You can then edit what you see in the viewfinder before taking a photo.

So if you're at a concert venue, for example, and you want to capture a photo that combines a view of the band from one angle and the audience from another, you can use multi-camera mode for the best effect.

You can set up multi-camera mode using NFC, which launches the pairing of the two devices using Wi-Fi Direct™ technology.

To use Multi camera mode

- 1 Turn on the NFC functions on both devices that you want to connect.
- 2 Activate the camera on your device.
- 3 Swipe the screen to go to , then select .
- 4 On the screens of both devices, tap .
- 5 Touch the NFC detection areas of each device to one other. Both devices should now connect using Wi-Fi Direct™ technology.
- 6 Once the devices are connected, two images appear in the viewfinder of your device – one from the viewfinder of your camera and another from the viewfinder of the connected device.
- 7 To edit the images in your viewfinder, tap .
- 8 Edit the images as desired. For example, you can tap and hold an image and drag it to the other side of the viewfinder to change the order.
- 9 When you are finished editing and are ready to capture the final combined image, tap **Done** > .

Downloading Camera Applications

You can download free or paid camera applications from Google Play™ or other sources. Before you start downloading, make sure you have a working internet connection, preferably over Wi-Fi to limit data traffic charges.

To download camera applications

- 1 Open the camera application.
- 2 Swipe the screen to go to , then tap .
- 3 Select the application that you want to download, and follow the instructions to complete the installation.

Quick Launch

Use Quick launch settings to launch the camera when the screen is locked.

Launch only

After you drag  inward, the main camera is launched from sleep mode.

Launch and capture

After you drag  inward, the still camera is launched from sleep mode and a photo is captured.

Launch and record video

After you drag  inward, the video camera is launched from sleep mode and starts recording.

Off

Save location

Add geographical location (geotag) information to your photos when you take them.

Touch capture

Identify a focus area, and then touch the camera screen with your finger. The photo is taken as soon as you release your finger.

Sound

Choose to turn on or turn off the shutter sound.

Data storage

You can choose to save your data either to a removable SD card or to your device's internal storage.

Internal storage

Photos or videos are saved on the device memory.

SD card

Photos or videos are saved on the SD card.

Touch Block

You can disable the touchscreen to avoid unintended touches when you are using the camera.

White Balance

This setting, which is only available in **Manual** capturing mode, adjusts the color balance according to the lighting conditions. It also allows you to adjust the exposure manually in the -2.0 EV to +2.0 EV range. For example, you can increase the image brightness or decrease the overall exposure by tapping the plus or minus controls accordingly when the white balance setting icon  is displayed.



Auto

Adjusts the color balance automatically to suit the lighting conditions.



Incandescent

Adjusts the color balance for warm lighting conditions, such as under light bulbs.



Fluorescent

Adjusts the color balance for fluorescent lighting.



Daylight

Adjusts the color balance for sunny outdoor conditions.



Cloudy

Adjusts the color balance for a cloudy sky.

Still camera settings

To adjust the still camera settings

- 1 Activate the camera.
- 2 To display all settings, tap .
- 3 Select the setting that you want to adjust, then edit as desired.

Still camera settings overview

Resolution

Choose between several resolutions and aspect ratios before taking a photo. A photo with a higher resolution requires more memory.

8MP

3264×2448(4:3)

8 megapixel resolution with 4:3 aspect ratio. Suitable for photos that you want to view on non-widescreen displays or print in high resolution.

6MP

3264×1836(16:9)

6 megapixel picture size with 16:9 aspect ratio. Suitable for photos that you want to view on non-widescreen displays or print in high resolution.

3MP

2048×1536(4:3)

3 megapixel resolution with 4:3 aspect ratio. Suitable for photos that you want to view on non-widescreen displays or print in high resolution.

2MP

1920×1080(16:9)

2 megapixel resolution with 16:9 aspect ratio. Suitable for photos you want to view on widescreen displays.

! This setting is only available in **Manual** capturing mode.

Self-Timer

With the self-timer you can take a photo without holding the device. Use this function to take self-portraits, or group photos where everyone can be in the photo. You can also use the self-timer if you want to avoid shaking the camera when taking photos.

On (10 sec.)

Set a 10-second delay from when you tap the camera screen until the photo is taken.

On (2 sec.)

Set a 2-second delay from when you tap the camera screen until the photo is taken.

0.5 sec.

Set a half-second delay from when you tap the camera screen until the photo is taken.

Off

The photo is taken as soon as you tap the camera screen.

Smile Shutter™

Use the Smile Shutter™ function to determine what kind of smile the camera reacts to before taking a photo.

Focus Mode

The focus function controls which part of a photo should be sharp. When continuous autofocus is on, the camera keeps adjusting focus so that the area within the focus frame stays sharp.

Single autofocus

The camera automatically focuses on the selected subject. Continuous autofocus is on. Touch and hold the camera screen until the focus frame changes color, indicating that the focus is set. The photo is taken when you release your finger.

Multi autofocus

The focus is automatically set on several areas of the image. Touch and hold the camera screen until the focus frame changes color, indicating that the focus is set. The photo is taken when you release your finger. Continuous autofocus is off.

Face detection

The camera automatically detects up to five human faces, indicated by frames on the screen. The camera automatically focuses on the nearest face. You can also select which face to focus on by tapping it on the screen. When you tap the camera screen, a colored frame shows which face is selected and in focus. Face detection cannot be used for all scene types. Continuous autofocus is on.

Touch focus

Touch a specific area on the camera screen to set the area of focus. Continuous autofocus is off. Touch and hold the camera screen until the focus frame changes color, indicating that the focus is set. The photo is taken when you release your finger.

Object tracking

When you select an object by touching it in the viewfinder, the camera tracks it for you.

! This setting is only available in **Manual** capturing mode.

HDR

Use the HDR (High Dynamic Range) setting to take a photo against strong backlight or in conditions where the contrast is sharp. HDR compensates for the loss of detail and produces a picture that is representative of both dark and bright areas.

! This setting is only available in **Manual** capturing mode.

ISO

You can reduce image blurring caused by dark conditions or moving subjects by increasing the ISO sensitivity. Also, if you want to capture a bright image even in dark conditions, you can set the ISO sensitivity to a higher value.

Auto

Sets the ISO sensitivity automatically.

50

Sets the ISO sensitivity to 50.

100

Sets the ISO sensitivity to 100.

200

Sets the ISO sensitivity to 200.

400

Sets the ISO sensitivity to 400.

800

Sets the ISO sensitivity to 800.

1600

Sets the ISO sensitivity to 1600.

! This setting is only available in **Manual** capturing mode.

Metering

This function automatically determines a well-balanced exposure by measuring the amount of light striking the image you want to capture.

Center

Measures the center of the image, and determines the exposure based on the brightness of the subject there.

Spot

Adjusts the exposure in a very small part of the image that you want to capture.

Face

Measures the amount of light on the face, and adjusts the exposure so that the face is neither too dark or too bright.

Multi

Divides the image into multiple regions, and measures each region to determine a well-balanced exposure.

! This setting is only available in **Manual** capturing mode.

Preview

You can choose to preview photos just after you shoot them.

Unlimited

The preview of the photo or video appears after you shoot it.

5 seconds

The preview of the photo or video appears for 5 seconds after you shoot it.

3 seconds

The preview of the photo or video appears for 3 seconds after you shoot it.

Edit

The photo or video opens for editing after you shoot it.

Off

The photo or video is saved after you shoot it, and no preview appears.

Face Recognition

You can register faces in the Camera application so that the camera automatically focuses on these faces when they appear in the viewfinder.

Scene selection

Use the Scene selection feature to quickly set up the camera for common situations using pre-programmed scenes. The camera determines a number of settings for you to fit the selected scene, ensuring the best possible photo.

SCN Off

The Scene selection feature is off and you can take photos manually.



Soft skin

Take photos of faces using an enhanced beauty effect.



Soft snap

Use for shooting photos against a soft background.



Anti motion blur

Use for minimizing camera shake when shooting a slightly dark scene.



Landscape

Use for landscape photos. The camera focuses on distant objects.



Backlight correction HDR

Use to improve details in high contrast shots. The built-in backlight correction analyzes the image and automatically adjusts it to give you a perfectly lit shot.



Night portrait

Use for portrait photos taken at night or in poorly lit environments. Due to the long exposure time, the camera must be held still or placed on a stable surface.



Night scene

Use when taking photos at night or in poorly lit environments. Due to the long exposure time, the camera must be held still or placed on a stable surface.



Hand-held twilight

Use for taking hand-held low-light photos with reduced noise and blur.



High sensitivity

Use for taking photos without a flash under low light conditions. Reduces blur.



Gourmet

Use for shooting food arrangements in bright color.



Pet

Use for taking photos of your pet. Reduces blur and red eyes.



Beach

Use for taking photos of seaside or lakeside scenes.



Snow

Use in bright environments to avoid overexposed photos.



Party

Use for indoor photos in poorly lit environments. This scene picks up indoor background lighting or candlelight. Due to the long exposure time, the camera must be held still or placed on a stable surface.



Sports

Use for taking photos of fast-moving objects. Short exposure time minimizes motion blurring.



Document

Use for photos of text or drawings. Gives the photo increased, sharper contrast.



Fireworks

Use for taking photos of fireworks in all their glory.

! This setting is only available in **Manual** capturing mode.

Video camera settings

To adjust the video camera settings

- 1 Activate the camera.
- 2 Swipe to .
- 3 To display settings, tap .
- 4 Select the setting that you want to adjust, then make your changes.

Video camera settings overview

Video Resolution

Adjust the video resolution for different formats.

Full HD

1920×1080(16:9)

Full HD (Full High Definition) format with 16:9 aspect ratio.

HD

1280×720(16:9)

HD (High Definition) format with 16:9 aspect ratio.

VGA

640×480(4:3)

VGA format with 4:3 aspect ratio.

MMS

Record videos suitable for sending in multimedia messages. The recording time of this video format is limited so that video files can fit in a multimedia message.

Self-Timer

With the self-timer, you can record a video without holding the device. Use it to record group videos where everyone can be in the video. You can also use the self-timer if you want to avoid shaking the camera when recording videos.

On (10 sec.)

Set a 10-second delay from when you tap the camera screen until the video begins to record.

On (2 sec.)

Set a 2-second delay from when you tap the camera screen until the video begins to record.

0.5 sec.

Set a half-second delay from when you tap the camera screen until the video begins to record.

Off

The video begins to record as soon as you tap the camera screen.

Smile Shutter™(video)

Use the Smile Shutter™ function to determine what kind of smile the camera reacts to before recording a video.

Focus mode

The focus setting controls which part of a video-recorded subject should be sharp. When continuous autofocus is on, the camera keeps adjusting focus so that the area within the white focus frame stays sharp.

Single autofocus

The camera automatically focuses on the selected subject. Continuous autofocus is on.

Face detection

The camera automatically detects up to five human faces, indicated by frames on the screen. The camera automatically focuses on the nearest face. You can also select which face to focus on by tapping it on the screen. When you tap the camera screen, a yellow frame shows which face is selected and in focus. Face detection cannot be used for all scene types. Continuous autofocus is on.

Object tracking

When you select an object by touching it in the viewfinder, the camera tracks it for you.

HDR video

Use the video HDR (High-Dynamic Range) setting to record a video against strong backlight or in conditions where the contrast is sharp. Video HDR compensates for the loss of detail and produces a picture that is representative of both dark and bright areas.

! This setting is only available in **Manual** capturing mode.

Metering

This function automatically determines a well-balanced exposure by measuring the amount of light striking the image you want to capture.

Center

Measures the center of the image, and determines the exposure based on the brightness of the subject there.

Spot

Adjusts the exposure in a very small part of the image that you want to capture.

Face

Measures the amount of light on the face, and adjusts the exposure so that the face is neither too dark or too bright.

Multi

Divides the image into multiple regions, and measures each region to determine a well-balanced exposure.

! This setting is only available in **Manual** capturing mode.

SteadyShot™

When recording a video, it can be difficult to hold the device steady. The stabilizer helps by compensating for the small movements of your hand.

Standard

Activate to remove the camera shakes.

Off

The stabilizer is turned off.

Scene selection

The Scene selection feature helps you to quickly set up the camera for common situations using preprogrammed video scenes. Each scene setting is designed to produce the best quality video possible in a specific recording environment.

SCN Off

The Scene selection feature is off and you can shoot videos manually.



Soft snap

Use for shooting videos against soft backgrounds.



Landscape

Use for videos of landscapes. The camera focuses on distant objects.



Night scene

When turned on, light sensitivity is increased. Use in poorly lit environments. Videos of fast-moving objects may get blurred. Hold your hand steady, or use a support. Turn off night mode when lighting conditions are good, to improve the video quality.



Beach

Use for videos of seaside or lakeside scenes.



Snow

Use in bright environments to avoid overexposed videos.



Sports

Use for videos of fast-moving objects. Short exposure time minimizes motion blurring.



Party

Use for indoor videos in poorly lit environments. This scene picks up indoor background lighting or candlelight. Videos of fast-moving objects may get blurred. Hold your hand steady, or use a support.

Photos and videos in Album

Viewing Photos and Videos

Use the Album application to view photos and play videos you've taken with your camera, or to view similar content you've saved to your device. All photos and videos are displayed in a chronologically ordered grid.



- 1 Tap the icon to open the Album homescreen menu
- 2 View a slideshow of all images or just the ones you've added to your favorites
- 3 Drag the left edge of the screen to the right to open the Album homescreen menu
- 4 The date range of items in the current group
- 5 Tap a photo or video to open it in full-screen view
- 6 Scroll up or down to view content

To View Photos and Videos

- 1 From your Homescreen, tap .
 - 2 Find and tap **Album**.
 - 3 Tap a photo or video you want to view. If prompted, tap .
 - 4 Flick left to view the next photo or video. Flick right to view the previous photo or video.
-  If the screen orientation does not change automatically when you turn your device sideways, you can enable this by tapping **Rotate the contents of the screen** under **Settings > Display > When device is rotated**.

To change the size of the thumbnails

- When viewing thumbnails of photos and videos in Album, spread two fingers apart to zoom in, or pinch two fingers together to zoom out.

To zoom a photo

- When you are viewing a photo, spread two fingers apart to zoom in, or pinch two fingers together to zoom out.

To watch a slideshow of your photos

- 1 When you are viewing a photo, tap the screen to display the toolbars, then tap  > **Slideshow** to start playing all the photos in an album.
- 2 Tap a photo to end the slideshow.

To Play a Video

- 1 In Album, find and tap the video you want to play.
- 2 Tap .
- 3 If the playback controls are not displayed, tap the screen to display them. To hide the controls, tap the screen again.

To pause a video

- 1 When a video is playing, tap the screen to display the controls.
- 2 Tap .

To fast forward and rewind a video

- 1 When a video is playing, tap the screen to display the controls.
- 2 Drag the progress bar marker left to rewind, or right to fast forward.

To adjust the volume of a video

- Press the volume key.

Sharing and Managing Photos and Videos

You can share photos and videos that you've saved on your device. You can also manage them in different ways. For example, you can work with photos in batches, delete photos and link them to contacts. If you have lots of photos saved on your device, it's a good idea to routinely transfer them to a computer or to an external storage device in order to avoid any inadvertent loss of data. Doing so also frees up more space on your device. See *Managing Files Using a Computer* on the 33 page.

- ! You might not be able to copy, send, or transfer copyright-protected items. Also, some items may not send if the file size is too large.

To share a photo or video

- 1 In Album, find and tap the photo or video that you want to share.
- 2 Tap the screen to display the toolbars, then tap .
- 3 Tap the application that you want to use to share the photo, then follow the steps to send it.

To use a photo as a contact picture

- 1 When you are viewing a photo, tap the screen to display the toolbars, then tap  > **Use as > Contact picture.**
- 2 Select a contact, then edit the photo as desired.
- 3 Tap **Save**.

To use a photo as wallpaper

- 1 When you are viewing a photo, tap the screen to display the toolbars, then tap  > **Use as > Wallpaper.**
- 2 Follow the instructions on the screen.

To rotate a photo

- 1 When you are viewing a photo, tap the screen to display the toolbars, then tap .
- 2 Tap **Rotate**, then select an option. The photo is saved in the new orientation.

To delete a photo or video

- 1 When you are viewing a photo, tap the screen to display the toolbars, then tap .
- 2 Tap **Delete**.

To Work with Batches of Photos or Videos in Album

- 1 When viewing thumbnails of photos and videos in Album, touch and hold an item until it's highlighted.
- 2 Tap other desired items to select and work with them. If you want to select all items, tap , then tap **Select all**.
- 3 Use the tools in the toolbar to work with your selected items.

Analyzing photos with faces in Album

You can analyze any photos on your device that feature people's faces. Once activated, the photo analysis feature stays on, and new photos get analyzed as they are added. After running an analysis, you can then group all photos of the same person in one folder.

To turn on the photo analysis feature

- 1 From your Homescreen, tap .
- 2 Find and tap **Album**.
- 3 Drag the left edge of the Album home screen to the right, then tap **Faces**. All photos on your device get analyzed and grouped in the Unnamed faces folder.

To name a face

- 1 In the **Faces** tile, tap the **Unnamed faces** folder, then browse to the **Other faces** folder and choose the face that you want to name.
- 2 Tap **Add name**.
- 3 Type a name, then tap **Done** > **Add as new person**.

To edit a face name

- 1 When you are viewing a face in full-screen view, tap the screen to display the toolbars, then tap  > **Edit name tags**.
- 2 Tap **OK**.
- 3 Tap the name of the face that you want to edit.
- 4 Edit the name, then tap **Done** > **Add as new person**.

Editing photos with the Photo editor application

You can edit and apply effects to original photos that you've taken with your camera. For example, you can change the light effects. After you save the edited photo, the original unchanged version of the photo remains on your device.

To edit a photo

- When you are viewing a photo, tap the screen to display the toolbars, then tap .

To crop a photo

- 1 When you are viewing a photo, tap the screen to display the toolbars, then tap .
- 2 If prompted, select **Photo editor**.
- 3 Tap  > **Crop**.
- 4 Tap **Crop** to select an option.
- 5 To adjust the crop frame, touch and hold the edge of the crop frame. When the circles at the edges disappear, drag inward or outward to resize the frame.
- 6 To resize all sides of the crop frame at the same time, touch and hold one of the four corners. When the circles at the edges disappear, drag the corner accordingly.
- 7 To move the crop frame to another area of the photo, touch and hold inside the frame, then drag it to the desired position.
- 8 Tap .
- 9 To save a copy of the photo as you cropped it, tap **Save**.

To Apply Special Effects to a Photo

- 1 When you are viewing a photo, tap the screen to display the toolbars, then tap .
- 2 If prompted, select **Photo editor**.
- 3 Tap , then select an option.
- 4 Edit the photo as desired, then tap **Save**.

To Add a Photo Frame Effect to a Photo

- 1 When you are viewing a photo, tap the screen to display the toolbars, and then tap .
- 2 If prompted, select **Photo editor**.
- 3 Tap , and then select an option.
- 4 To save a copy of the edited photo, tap **Save**.

To Adjust the Light Settings for a Photo

- 1 When you are viewing a photo, tap the screen to display the toolbars, then tap .
- 2 If prompted, select **Photo editor**.
- 3 Tap , then select an option and edit as desired.
- 4 To save a copy of the edited photo, tap **Save**.

To Set the Saturation Level of Colors in a Photo

- 1 When you are viewing a photo, tap the screen to display the toolbars, then tap .
- 2 If prompted, select **Photo editor**.
- 3 Tap , then select an option.
- 4 To save a copy of the edited photo, tap **Save**.

Editing videos with the Video editor application

You can edit videos that you've taken with your camera. For example, you can trim a video to the desired length or adjust the speed of a video. After you save the edited video, the original unchanged version of the video remains on your device.

To Trim a Video

- 1 In the Album, find and tap the video you want to edit.
- 2 Tap the screen to display the toolbars, and then tap .
- 3 If prompted, select **Video Editor**, and then tap **Trim**.
- 4 To move the trim frame to another part of the timeline, touch and hold the edge of the trim frame and drag it to the desired position, and then tap **Apply**.
- 5 To save a copy of the trimmed video, tap **Save**.

To Adjust the Speed of a Video

- 1 In the Album, find and tap the video you want to play.
- 2 Tap the screen to display the toolbars, and then tap .
- 3 If prompted, select **Video Editor**, and then tap **Speed**.
- 4 Select an option, touch and hold the edge of the timeline and drag it to the desired position, and then tap **Apply**.
- 5 To save a copy of the edited video, tap **Save**.

Hiding photos and videos

You can hide any photos and videos from the Album homescreen. Once photos and videos are hidden from the Album homescreen, they can only be viewed from the Hidden folder.

To hide a photo or video

- 1 In Album, find and tap the photo or video that you want to hide.
- 2 Tap the screen to display the toolbars, then tap .
- 3 Tap **Hide** > **OK**.

To view your hidden photos and videos


- 1 In Album, drag the left edge of the Album homescreen to the right, then tap **Hidden**.
- 2 Tap a photo or video to view it.
- 3 Flick left to view the next photo or video. Flick right to view the previous photo or video.

To unhide a photo or video

- 1 In Album, drag the left edge of the Album homescreen to the right, then tap **Hidden**.
- 2 Tap a photo or video that you want to unhide.
- 3 Tap the screen to display the toolbars, then tap ⋮.
- 4 Tap **Don't hide**.

Album homescreen menu

From the Album homescreen menu, you can browse your photo albums, including photos and videos taken using special effects, as well as content that you have shared online via services such as Picasa™ and Facebook. Once you are logged in to such platforms, you can manage content and view online images. From the Album application, you can also add geotags to photos, perform basic editing tasks, and use methods, like Bluetooth® wireless technology and email to share content.

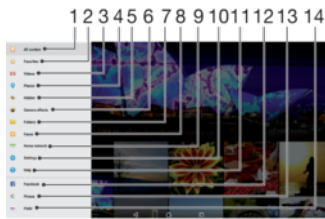

- 1 Return to the Album application homescreen to view all content
- 2 View your favorite photos and videos
- 3 View all videos saved to your device
- 4 View your photos on a map or in Globe view
- 5 View photos and videos that you have hidden from view
- 6 View all photos and videos taken by your device's camera using special effects
- 7 View all photos and videos saved to your device in different folders
- 8 View all photos with faces
- 9 View photos and videos on devices in the same network
- 10 Open the settings menu for the Album application
- 11 Open web support
- 12 View photos and videos on Facebook™
- 13 View photos and videos on Picasa™
- 14 View photos and videos on Flickr™

To view photos from online services in Album

- 1 From your Homescreen, tap .
- 2 Find and tap **Album**, then drag the left edge of the Album homescreen to the right.
- 3 Tap the desired online service, then follow the on-screen instructions to get started. All available online albums that you have uploaded to the service are displayed.
- 4 Tap any album to view its content, then tap a photo in the album.
- 5 Flick left to view the next photo or video. Flick right to view the previous photo or video.

Viewing your photos on a map

Adding location information to photos is referred to as geotagging. You can view and tag your photos on a map and show friends and family where you were when you took a

particular photo. See *Adding the Geographical Position to Your Photos* on page 78 for more information.

- 💡 If you have turned on location detection and activated geotagging in the camera, you can tag your photos directly for map viewing at a later stage.



- 1 View geotagged photos in Globe view
- 2 Search a location on the map
- 3 View menu options
- 4 Double tap to zoom in. Pinch to zoom out. Drag to view different parts of the map
- 5 A group of photos and/or videos geotagged with the same location
- 6 Thumbnails of the selected group of photos and/or videos. Tap an item to view it in full screen

- 💡 If several photos were taken at the same location, only one of them appears on the map. The total number of photos appears in the top right corner, for example, 12. To view all photos in the group, tap the cover photo and then tap one of the thumbnails at the bottom of the screen.

To Add a Geotag to a Photo

- 1 When you are viewing a photo, tap the screen to display the toolbars.
- 2 Tap , then tap **Add geotag** to open the map screen.
- 3 Tap on the map to set the location for the photo.
- 4 To reset the location for the photo, tap the new location on the map.
- 5 When you are done, tap **OK**.

To view geotagged photos on a map

- 1 From your Homescreen, tap .
- 2 Find and tap **Album**.
- 3 Drag the left edge of the Album home screen to the right, then tap **Places**.
- 4 Tap the photo that you want to view on a map.

To view geotagged photos on a globe

- 1 From your Homescreen, tap .
- 2 Find and tap **Album**.
- 3 Drag the left edge of the Album homescreen to the right, then tap **Places** > .
- 4 Tap the photo that you want to view on a globe.

To change the geotag of a photo

- 1 When viewing a photo on the map in Album, touch and hold the photo until its frame turns blue, then tap the desired location on the map.
- 2 Tap **OK**.

To change the map view

Videos

Watching videos in the Video application

Use the Video application to play movies and other video content that you've saved or downloaded to your device. The Video application also helps you get poster art, plot summaries, genre info, and director details for each movie. You can also play your movies on other devices that are connected to the same network.

- ! Some video files may not be playable in the Video application.



- 1 Tap the icon to open the Video homescreen menu
- 2 View all videos saved to your device
- 3 View online videos
- 4 Scroll up or down to view content

To play a video in Video

- 1 From your Homescreen, tap , then find and tap **Video**.
- 2 Find and tap the video that you want to play. If the video is not displayed on the screen, drag the left edge of the screen to the right to open the Video homescreen menu, then find and tap the video that you want to play.
- 3 To display or hide the controls, tap the screen.
- 4 To pause playing, tap . To resume playing, tap .
- 5 To rewind, drag the progress bar marker to the left. To fast forward, drag the progress bar marker to the right.

To play a video on an external device

- 1 When the video is playing, tap the screen to display all the controls.
- 2 Tap  > **Throw**.
- 3 Select an external device on which to play the video. If there is no external device available, follow the on-screen instructions to add one.

To change settings in Video

- 1 From your Homescreen, tap , then find and tap **Video**.
- 2 Drag the left edge of the screen to the right to open the Video home screen menu, then tap **Settings**.
- 3 Change the settings as desired.

To Change the Sound Settings While a Video is Playing

- 1 While a video is playing, tap the screen to display the controls.
- 2 Tap  > **Audio settings**, then change the settings as desired.
- 3 When you're done, tap **OK**.

To Share a Video

- 1 When a video is playing, tap , then tap **Share**.
- 2 Tap the application that you want to use to share the selected video, then follow the relevant steps to send it.

Transferring video content to your device

Before you start using the Movies application, it's a good idea to transfer movies, TV shows and other video content to your device from other devices, such as a computer. There are several ways to transfer your content:

- For Windows® only: Connect your device to a computer using a USB cable and drag and drop the video files directly using the file manager application on the computer. See *Managing Files Using a Computer* on page 33.
- If you have a PC or an Apple® Mac® computer, use Xperia™ Companion to organize content and transfer video files to your device.

Managing video content

To get movie information manually

- 1 Make sure that your device has an active data connection.
 - 2 When a video is playing, tap the screen to display the controls.
 - 3 Tap  > **Information**.
 - 4 Tap  > **Search for info**.
 - 5 In the search field, enter keywords for the video, then tap the confirm key on the keyboard. All matches are displayed in a list.
 - 6 Select a search result, then tap **Done**. The download of the information begins.
- ! You can get information about newly added videos automatically every time the Video application opens if you activate the **Get video details** button under Settings.
- 💡 If the downloaded information is not correct, search again using different keywords.

To clear information about a video

- 1 When a video is playing, tap the screen to display the controls.
- 2 Tap  > **Information**.
- 3 Tap  > **Clear info**.

To Delete a Video

- 1 From your Homescreen, tap , then find and tap **Video**.
- 2 Drag the left edge of the screen to the right to open the Video homescreen menu, and then browse to the video file you want to delete.
- 3 Touch and hold the video thumbnail, and then tap **Delete** from the list that appears.
- 4 Tap **Delete** again to confirm.

Movie Creator

The Xperia™ Movie Creator automatically creates short videos of around 30 seconds in length using existing photos and videos. The application automatically determines the timeline to create its movie. For example, it could take a selection of photos and videos from a Saturday afternoon outing or from a random seven-day period and create a movie for you. When this highlight-style movie is ready, you get notified. You can then edit it as desired. For example, you can edit the title, delete scenes, change the music, or add more photos and videos.

To open Movie Creator

- 1 From your Homescreen, tap .
 - 2 Find and tap **Movie Creator**.
- ! If no photos or videos are saved on your device, no functionality is available when you open the Movie Creator application.

To turn off Movie Creator notifications

- 1 From your Homescreen, tap .
- 2 Find and tap **Movie Creator**.
- 3 Tap , then tap **Settings** and deactivate **Notifications**.

To disable Movie Creator

- 1 From your Homescreen, tap .
- 2 Find and tap **Settings > Apps**.
- 3 Find and tap **Movie Creator > DISABLE**.

Connectivity

Mirroring the Screen of Your Device on a TV Using a Cable

You can connect your device to a compatible TV set using an MHL cable and mirror the screen of your device on the TV screen.

💡 MHL and HDMI™ cables and adaptors are sold separately.

! Sony does not guarantee that all types of MHL and HDMI™ cables and adaptors are supported by your device.

To view content from your device on a TV which supports MHL input

- 1 Connect your device to the TV using an MHL cable.  appears in your device's status bar after a connection is established.
 - 2 The TV displays the screen of your device.
- ! If your device fails to detect the display that is connected to the MHL cable, reconnect the MHL cable and tap **Settings > Device connection > USB Connectivity > Detect USB device**.

To View Content from Your Device on a TV Which Supports HDMI™ Input

- 1 Connect your device to an MHL adaptor, and connect the adaptor to a powered USB port.
- 2 Connect the adaptor to a TV using a HDMI™ cable.  appears in your device's status bar after a connection is established.
- 3 The TV displays the screen of your device.

To View Help About Using a TV Remote Control

- 1 While your device is connected to the TV set, drag the status bar downward to open the Notification panel.
 - 2 Tap **MHL connected**. The MHL settings appear on the TV screen.
 - 3 Select **Remote control usage**.
- ! You can select **Video Output Size** to adjust the size of the output on the TV screen. If the TV already has an auto-scaling option enabled, this setting does not appear under the MHL settings.
- 💡 You can also press the yellow button on the TV remote control to open the Notification panel.

To Disconnect Your Device from a TV Set

- Disconnect the MHL cable or the MHL adaptor from your device.

Mirroring the Screen of your Device Wirelessly

You can use the Screen Mirroring feature to share the screen of another Xperia™ device on the screen of your device without using a cable connection. You can also view content on your device on a display or TV that supports Wi-Fi CERTIFIED Miracast™.

To mirror the screen of another Xperia™ device on your own device

- 1 **Your device:** From your Homescreen, tap .
- 2 Find and tap **Settings > Device connection > Screen mirroring**.
- 3 Under **Receive**, tap **Start**.
- 4 **Other device:** From the Homescreen, tap .
- 5 Find and tap **Settings > Device connection > Screen mirroring > Start**.
- 6 Tap **OK** and select a device.
- 7 **Your device:** Tap **Accept** to allow the connection to your device.

To Mirror the Screen of Your Device on a TV Screen

- 1 TV: Follow the instructions in the User Guide of your TV to turn on the Screen mirroring function.
 - 2 Your device: From your **Home screen**, tap .
 - 3 Find and tap **Settings** > **Device connection** > **Screen mirroring**.
 - 4 Tap **Start**.
 - 5 Tap **OK** and select a device.
- ! Your TV must support Screen mirroring based on Wi-Fi CERTIFIED Miracast™ for the function to work. If your TV does not support Screen mirroring, you may need to purchase a wireless display adapter separately. Also, when using Screen mirroring, do not cover the Wi-Fi antenna area of your device.

To stop screen mirroring between devices

- 1 From your Homescreen, tap .
- 2 Find and tap **Settings** > **Device connection** > **Screen mirroring**.
- 3 Tap **Disconnect**, then tap **OK**.

Sharing Content with DLNA Certified™ Devices

You can view or play media content saved to your device on other devices such as a TV or a computer. These devices must be on the same wireless network and can be Sony TVs or speakers, or products that are DLNA Certified™ by the Digital Living Network Alliance. You can also view or play content from other DLNA Certified™ devices on your device.

After you set up media sharing between devices, you can listen to music files stored on your home computer from your device or view photos taken with your device's camera on a large-screen TV, for example.

Playing files from DLNA Certified™ devices on your device

When you play files from another DLNA Certified™ device on your device, this other device acts as a server. In other words, it shares content over a network. The server device must have its content sharing function enabled and give access permission to your device. It also must be connected to the same Wi-Fi network as your device.

To play a shared music track on your device

- 1 Make sure the devices that you want to share files with are connected to the same Wi-Fi network as your device.
- 2 From your Homescreen, tap , then find and tap .
- 3 Drag the left edge of the Music home screen to the right, then tap **Home network**.
- 4 Select a device from the list of connected devices.
- 5 Browse the folders of the connected device and select the track that you want to play. Once selected, the track starts playing automatically.

To Play a Shared Video on Your Device

- 1 Make sure the devices that you want to share files with are connected to the same Wi-Fi network as your device.
- 2 From your Homescreen, tap , and then find and tap **Video**.
- 3 Drag the left edge of the Video homescreen to the right, then tap **Home network**.
- 4 Select a device from the list of connected devices.
- 5 Browse the folders of the connected device and select the video that you want to play.

To view a shared photo on your device

- 1 Make sure the devices that you want to share files with are connected to the same Wi-Fi network as your device.
- 2 From your Homescreen, tap , then find and tap **Album**.
- 3 Drag the left edge of the Album home screen to the right, and tap **Home network**.
- 4 Select a device from the list of connected devices.
- 5 Browse the folders of the connected device and select a photo to view it.

Playing files from your device on DLNA Certified™ devices

Before you can view or play media files from your device on other DLNA Certified™ devices, you must set up file sharing on your device. The devices that you share content with are called client devices. For example, a TV, computer or tablet can act as client devices. Your device works as a media server when it makes content available to client devices. When you set up file sharing on your device, you must also give access permission to client devices. After you do so, such devices appear as registered devices. Devices that are waiting for access permission are listed as pending devices.

To Set up File Sharing with other DLNA Certified™ Devices

- 1 Connect your device to a Wi-Fi network.
 - 2 From your Homescreen, tap , and then find and tap .
 - 3 Tap , and then tap **Media server**.
 - 4 To turn on the **Share media** function, drag the slider.  appears in the status bar. Your device can now work as a media server.
 - 5 Connect your computer or other devices to the same Wi-Fi network as your device.
 - 6 A notification appears in the status bar of your device. Open the notification and set access permissions for each device.
- ! The instructions for setting up file sharing using DLNA™ differ depending on the client device. Refer to your client device User guide for more information. If the device cannot connect to a client on the network, check if your Wi-Fi network is working.
- 💡 You can also access the **Media server** menu from certain applications, like Music, Album or Video, by dragging the left edge of the application's homescreen to the right and then tapping **Settings > Media server**.

To stop sharing files with other DLNA Certified™ devices

- 1 From your Homescreen, tap .
- 2 Find and tap **Settings > Device connection > Media server**.
- 3 Drag the slider beside **Share media** to the left.

To set access permissions for a pending device

- 1 From your Homescreen, tap .
- 2 Find and tap **Settings > Device connection > Media server**.
- 3 Select a device from the **Pending devices** list.
- 4 Select an access permission level.

To change the name of a registered device

- 1 From your Homescreen, tap .
- 2 Find and tap **Settings > Device connection > Media server**.
- 3 Select a device from the **Registered devices** list, then select **Change name**.
- 4 Enter a new name for the device.

To change the access level of a registered device

- 1 From your Homescreen, tap .
- 2 Find and tap **Settings > Device connection > Media server**.
- 3 Select a device from the **Registered devices** list.
- 4 Tap **Change access level** and select an option.

To get help with sharing content with other DLNA Certified™ devices

- 1 From your Homescreen, tap .
- 2 Find and tap **Settings** > **Device connection** > **Media server**.
- 3 Tap  and then tap **Help**.

Playing files on a Digital Media Renderer device

Using DLNA™ technology, you can push media content saved on your device to another device connected to the same Wi-Fi network. The other device must be able to function as a Digital Media Renderer (DMR) device and render or play content received from your device. A TV with DLNA features or a PC running Windows® 7 or higher are examples of DMR devices.

- ! The settings for enabling the Digital Media Renderer may vary depending on the device. Refer to the user guide of the DMR device for more information.
- ! Content secured with Digital Rights Management (DRM) cannot be played on a Digital Media Renderer device using DLNA™ technology.

To View Photos or Videos from Your Device on a DMR Device

- 1 Make sure that you have correctly set up the DMR device and that it is connected to the same Wi-Fi network as your device.
 - 2 From your Homescreen, tap .
 - 3 Find and tap **Album**.
 - 4 Browse and open the photos or videos you want to view.
 - 5 Tap the screen to display the toolbar, then tap  and select a DMR device you want to share your content with. The selected content starts playing in chronological order on the device that you select.
 - 6 To disconnect from the DMR device, tap  and select **Disconnect**. The file stops playing on the DMR device but continues playing on your device.
- 💡 You can also share a video from the Video application on your device by tapping the video and then tapping .

To play a music track from your device on a DMR device

- 1 Make sure that you have correctly set up the DMR device and that it is connected to the same Wi-Fi network as your device.
- 2 From your Homescreen, tap , then find and tap .
- 3 Select a music category and browse to the track that you want to share, then tap the track.
- 4 Tap  and select a DMR device to share your content with. The track plays automatically on the device that you select.
- 5 To disconnect from the DMR device, tap  and select your device. The track stops playing on the DMR device but continues playing on your device.

Connecting Your Device to USB Accessories

You can use a USB host adapter to connect your device to USB accessories such as USB mass storage devices, game controllers, USB keyboards, and USB mice. If the USB accessory has a micro USB connector, a USB host adapter is not necessary.

- ! USB host adapters are sold separately. Sony does not guarantee that all USB accessories are supported by your device.

To connect a USB accessory using a USB host adapter

- 1 Attach the USB Host adapter to your device, then connect the adapter to the USB accessory.
 - 2 From your Homescreen, tap .
 - 3 Find and tap **Settings > Device connection > USB Connectivity > Detect USB device**.
- ! Additional steps or software may be required to set up game controllers, USB audio and USB Ethernet accessories. Sony does not guarantee that all USB accessories are supported by your device.

To access content on a USB mass storage device using a USB Host adapter

- 1 Attach the USB Host adapter to your device, then connect the adapter to the USB mass storage device.
 - 2 From your Homescreen, tap .
 - 3 Find and tap **Settings > Device connection > USB Connectivity > Detect USB device**.
 - 4 To access files and folders on the USB storage device, use a file manager app such as File Commander.
- 💡 You can also open the relevant media application on your device to view content directly. For example, you can open the Album application to view photos stored on USB mass storage devices.

To disconnect a USB mass storage device

- 1 To open the Notification Panel, drag the status bar downward, then tap **USB storage connected**.
- 2 Tap **OK**.
- 3 Detach the USB Host adapter from your device.

To connect a USB accessory using a micro USB connector

- 1 Attach the micro USB connector of the USB accessory to your device.
 - 2 From your Homescreen, tap .
 - 3 Find and tap **Settings > Device connection > USB Connectivity > Detect USB device**.
- ! Sony does not guarantee that all USB accessories with a micro USB connector are supported by your device.

Connecting Your Device to a DUALSHOCK™ Series Wireless Controller

You can play games stored on your device using a DUALSHOCK™ series wireless controller. You can also mirror your device on a TV or other display. For more information about Screen Mirroring, refer to the relevant section of the User guide.

To Connect a DUALSHOCK™4 Wireless Controller to your Device

- 1 From your Homescreen, tap .
- 2 Find and tap **Settings > Device connection > DUALSHOCK™4**.
- 3 Tap **Pair controller**, and then follow the on-screen instructions to complete the connection.

NFC

Use Near Field Communications (NFC) to share data with other devices, such as a video, photo, web page address, music file, or contact. You can also use NFC to scan tags that give you more information about a product or service as well as tags that activate certain functions on your device.

NFC is a wireless technology with a maximum range of one centimeter, so the devices sharing data must be held close to each other. Before you can use NFC, you must first turn on the NFC function, and the screen of your device must be active.

- ! NFC may not be available in all countries and/or regions.

To Turn on the NFC Function

- 1 From your Homescreen, tap .
- 2 Find and tap **Settings** > **More**.
- 3 Tap the on-off switch beside **NFC**.

To share a contact with another device using NFC

- 1 Make sure that both devices have the NFC function turned on, and that both screens are active.
- 2 To view contacts, go to your Homescreen, tap , then tap .
- 3 Tap the contact that you want to share.
- 4 Hold your device and the receiving device back to back so that the NFC detection areas of each device touch each other. When the devices connect, a thumbnail of the contact appears.
- 5 Tap the thumbnail to start the transfer.
- 6 When the transfer is done, the contact information is displayed on the screen of the receiving device and is also saved on the receiving device.

To Share a Music File with Another Device Using NFC

- 1 Make sure both your device and the receiving device have the NFC function turned on, and that both screens are active.
- 2 To open the Music application, tap , then find and tap .
- 3 Select a music category and browse to the track you want to share.
- 4 Tap the track to play it. You can then tap  to pause the track. The transfer works whether the track is playing or paused.
- 5 Hold your device and the receiving device back to back so that the NFC detection areas of each device touch each other. When the devices connect, a thumbnail of the track appears.
- 6 Tap the thumbnail to start the transfer.
- 7 When the transfer is done, the music file plays immediately on the receiving device. At the same time, the file is saved on the receiving device.

To share a photo or video with another device using NFC

- 1 Make sure that both devices have the NFC function turned on, and that both screens are active.
- 2 To view photos and videos in your device, go to your Homescreen, tap , then find and tap **Album**.
- 3 Tap the photo or video that you want to share.
- 4 Hold your device and the receiving device back to back so that the NFC detection areas of each device touch each other. When the devices connect, a thumbnail of the track appears.
- 5 Tap the thumbnail to start the transfer.
- 6 When the transfer is done, the photo or video is displayed on the screen of the receiving device. At the same time, the item is saved on the receiving device.

To Share a Web Address with Another Device Using NFC

- 1 Be sure both devices have the NFC function turned on, and both screens are active.
- 2 From your Homescreen, tap .
- 3 To open the web browser, find and tap .
- 4 Load the webpage you want to share.
- 5 Hold your device and the receiving device back to back so that the NFC detection areas of each device touch each other. When the devices connect, a thumbnail appears.
- 6 Tap the thumbnail to start the transfer.
- 7 When the transfer is done, the webpage is displayed on the screen of the receiving device.

Scanning NFC tags

Your device can scan various kinds of NFC tags. For example, it can scan embedded tags on a poster, on a billboard advertisement, or beside a product in a retail store. You can receive additional information, such as a web address.

To scan an NFC tag

- 1 Make sure that your device has the NFC function turned on and that the screen is active.
- 2 Place your device over the tag so that the NFC detection area touches it. Your device scans the tag and displays the content collected. Tap the content of the tag to open it.
- 3 To open the tag, tap it.

Connecting to an NFC-Compatible Device

You can connect your device to other NFC-compatible devices produced by Sony, such as a speaker or a headphone. When establishing this kind of connection, refer to the User Guide of the compatible device for more information.

- ! You may need to have Wi-Fi or Bluetooth® activated on both devices for the connection to work.

Bluetooth® Wireless Technology

Use the Bluetooth® function to send files to other Bluetooth®-compatible devices, or to connect to handsfree accessories. Bluetooth® connections work better within 10 meters (33 feet), with no solid objects in between. In some cases you have to manually pair your device with other Bluetooth® devices.

- ! Interoperability and compatibility among Bluetooth® devices can vary.
- ! If you are using a device with multiple users, each user can change the Bluetooth® settings, and the changes affect all users.

To Turn on the Bluetooth® Function

- 1 From your Homescreen, tap .
- 2 Find and tap **Settings** > **Bluetooth**.
- 3 Tap the on-off switch beside **Bluetooth** so the Bluetooth® function is turned on. Your device is now visible to nearby devices and a list of available Bluetooth® devices appears.

Naming your device

You can give your device a name. This name is shown to other devices after you have turned on the Bluetooth® function and your device is set to visible.

To Give Your Device a Name

- 1 Be sure the Bluetooth® function is turned on.
- 2 From your Homescreen, tap .
- 3 Find and tap **Settings** > **Bluetooth**.
- 4 Tap  > **Rename this device**.
- 5 Enter a name for your device.
- 6 Tap **Rename**.

Pairing with another Bluetooth® device

When you pair your device with another device, you can, for example, connect your device to a Bluetooth® headset or a Bluetooth® car kit and use these other devices to share music.

Once you pair your device with another Bluetooth® device, your device remembers this pairing. When pairing your device with a Bluetooth® device, you may need to enter a passcode. Your device will automatically try the generic passcode 0000. If this does not work, refer to the user guide for your Bluetooth® device to get the device passcode. You do not need to re-enter the passcode the next time you connect to a previously paired Bluetooth® device.

- ! Some Bluetooth® devices, for example, most Bluetooth® headsets, require you to both pair and connect with the other device.
- ! You can pair your device with several Bluetooth® devices, but you can only connect to one Bluetooth® profile at the same time.

To pair your device with another Bluetooth® device

- 1 Make sure the device you want to pair with has the Bluetooth® function activated and is visible to other Bluetooth® devices.
- 2 From your device's Homescreen, tap .
- 3 Find and tap **Settings** > **Bluetooth**.
- 4 Drag the slider beside **Bluetooth** to turn on the Bluetooth® function. A list of available Bluetooth® devices appears.
- 5 Tap the Bluetooth® device you want to pair with.
- 6 Enter a passcode, if required, or confirm the same passcode on both devices.

To connect your device to another Bluetooth® device

- 1 From your Homescreen, tap .
- 2 Find and tap **Settings** > **Bluetooth**.
- 3 Tap the Bluetooth® device you want to connect to.

To Unpair a Bluetooth® Device

- 1 From your Homescreen, tap .
- 2 Find and tap **Settings** > **Bluetooth**.
- 3 Under **Paired devices**, tap  beside the name of the device you want to unpair.
- 4 Tap **Forget**.

Sending and receiving items using Bluetooth® technology

Share items with other Bluetooth® compatible devices such as phones or computers. You can send and receive several kinds of items using the Bluetooth® function, such as:

- Photos and videos
- Music and other audio files
- Contacts
- Web pages

To Send Items Using Bluetooth™

- 1 In the **receiving device**, make sure the Bluetooth™ device you want to send the item to has Bluetooth™ turned on and is visible to other Bluetooth™ devices.
- 2 In the sending device, open the application which contains the item you want to send and scroll to the item.
- 3 Depending on the application and the item you want to send, you may need to touch and hold the item, open the item, or press . Other ways to send an item may exist.
- 4 Select a share or send menu item.
- 5 In the menu that appears, select **Bluetooth**.
- 6 Turn on Bluetooth™, if you are asked to do so.
- 7 Tap the name of the receiving device.
- 8 **Receiving device:** If asked, accept the connection.
- 9 If asked, enter the same passcode on both devices, or confirm the suggested passcode.
- 10 **Receiving device:** Accept the incoming item. If needed, drag the status bar downward to find the notification.

To receive items using Bluetooth®

- 1 Make sure that the Bluetooth® function is on and is visible to other Bluetooth® devices.
- 2 The sending device now starts sending data to your device.
- 3 If prompted, enter the same passcode on both devices, or confirm the suggested passcode.
- 4 When you are notified of an incoming file to your device, drag the status bar downward and tap the notification to accept the file transfer.
- 5 Tap **Accept** to start the file transfer.
- 6 To view the progress of the transfer, drag the status bar downward.
- 7 To open a received item, drag the status bar downward and tap the relevant notification.

To view files you have received using Bluetooth®

- 1 From your Homescreen, tap .
- 2 Find and tap **Settings > Bluetooth**.
- 3 Press  and select **Show received files**.

Smart apps and features that save you time

Controlling Accessories and Settings with Smart Connect™


Use the Smart Connect™ application to set what happens in your device when you connect or disconnect an accessory. For example, you can decide to always start the FM radio application when you connect a headset.

You can also use Smart Connect™ to set a specific action or a group of actions to launch on your device at certain times of the day. For example, when you connect your headset between 7 am and 9 am, you can decide that:

- the FM radio application starts;
- your favorite social networking app opens, for example, Facebook;

With Smart Connect™, you can also manage accessories such as Xperia™ SmartTags or a watch from the Sony SmartWatch series. Refer to the User guide of the specific accessory for more information.

- ! If you are using a device with multiple users, you must log in as the owner, that is, the primary user, to use the Smart Connect™ application.

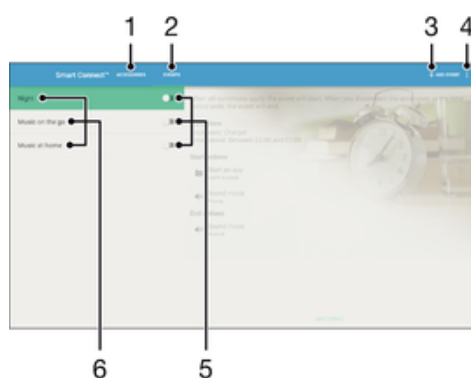

1 Tap to display available accessories

2 Tap to display all events

3 Add an accessory or an event

4 View menu options

5 Tap to activate an event

6 Tap to view details of an event

To Create a Smart Connect™ Event

- 1 From your Homescreen, tap , then find and tap .
- 2 If you are opening Smart Connect™ for the first time, tap **OK** to close the introduction screen.
- 3 On the **Events** tab, tap **+**.
- 4 If you are creating an event for the first time, tap **OK** again to close the introduction screen.
- 5 Add conditions you want to trigger the event under. A condition could be the connection with an accessory, or a specific time interval, or both.
- 6 Tap **→** to continue.
- 7 Add what you want to happen when you connect an accessory, and set other settings as desired.
- 8 Tap **→** to continue.
- 9 Set an event name, then tap **Finish**.

 To add a Bluetooth® accessory, you have to first pair it with your device.

To Edit a Smart Connect™ Event

- 1 Start the Smart Connect™ application.
- 2 On the **Events** tab, tap an event.
- 3 If the event is switched off, drag the slider to the right to turn it on.
- 4 Tap **Edit event**, then adjust the settings as desired.

To Delete an Event

- 1 Start the Smart Connect™ application.
- 2 On the **Events** tab, touch and hold the event you want to delete, then tap **Delete event**.
- 3 Tap **Delete** to confirm.

 You can also open the event you want to delete, then tap  > **Delete event** > **Delete**.

Managing Accessories

Use the Smart Connect™ application to manage a range of smart accessories you can connect to your device, including Xperia™ SmartTags, a SmartWatch series watch, or a wireless headset from Sony. Smart Connect™ downloads any necessary applications and also finds third-party applications, when available. Previously connected accessories are shown in a list that allows you to get more information about the features of each accessory.

To Pair and Connect an Accessory

- 1 Start the Smart Connect™ application. If you are opening Smart Connect™ for the first time, tap **OK** to close the introduction screen.
- 2 Tap **Accessories**, then tap **+**.
- 3 Turn on the Bluetooth® function if it is not already on, then tap the name of the accessory that you want to pair and connect with.
- 4 If required, enter a passcode, or confirm the same passcode on both your device and the accessory.

To Adjust the Settings for a Connected Accessory

- 1 Pair and connect the accessory with your device.
- 2 Start the Smart Connect™ application.
- 3 Tap **Accessories**, then tap the name of the connected accessory.
- 4 Adjust the desired settings.

Using your device as a fitness hub with ANT+™

You can use your device with health and fitness products that also support ANT+™ technology. For example, if you go running with an ANT+™ compatible heart rate monitor and a foot pod (to measure pace and distance), you can collect all the data from

the run on your device. You can then analyze your performance and see how you can improve.

You can download a range of applications from Google Play™ that support ANT+™ sport, fitness, and health devices. For information about ANT+™ compatible products, go to www.thisisant.com/directory.

Using your device as a wallet

Use your device as a wallet to pay for goods without reaching for your real wallet. All of your installed payment services are put together to be viewed and managed. Note that when making a payment, you must first turn on the NFC function before your device touches a card reader. For more information about NFC, see *NFC* on page 101.

- ! Mobile payment services may not yet be available in all regions.

To manage payment services

- 1 From your Homescreen, tap .
- 2 Find and tap **Settings** > **Tap & pay**. A list of payment services appears.
- 3 Manage the payment services as desired, for example, change your default payment service.

Travel and maps

Using location services

Location services allow applications such as Maps and the camera to use information from Wi-Fi networks as well as Global Positioning System (GPS) information to determine your approximate location. If you're not within a clear line of sight to GPS satellites, your device can determine your location using the Wi-Fi function.


In order to use your device to find out where you are, you need to enable location services.

To Enable or Disable Location Services

- 1 From your Homescreen, tap .
- 2 Find and tap **Settings** > **Location**, then tap the on-off switch accordingly to enable or disable location services.
- 3 If you selected to enable location services in step 2, tap **Agree** to confirm.

Improving GPS Accuracy

The first time you use the GPS function in your device, it can take a few minutes for your location to be found. To help the search, make sure you have a clear view of the sky. Stand still and don't cover the GPS antenna (the highlighted area in the image). GPS signals can pass through clouds and plastic, but not through most solid objects such as buildings and mountains. If your location isn't found after a few minutes, move to another location.

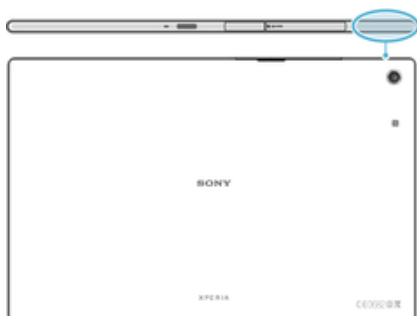

Google Maps™ and Navigation

Use Google Maps™ to track your current location, view real-time traffic situations, and receive detailed directions to your destination.

The Google Maps™ application requires an internet connection when used online. To get more detailed information about how to use this application, go to <http://support.google.com> and click the "Maps for mobile" link.

- ! The Google Maps™ application may not be available in every market, country, or region.

To Use Google Maps™

- 1 From your Homescreen, tap .
- 2 Find and tap **Maps**.

Using your device with a car infotainment system

Connect your device to a MirrorLink™ certified car infotainment system using a USB cable to, for example, use a navigation app or play music from your device while driving. The car infotainment system mirrors all features on your device and gives you access to

all applications. When connected, you can navigate the apps using the car infotainment system controls.

- ! Some applications may not be available in driving mode. Also, protected data, such as videos that are strictly protected under Digital Rights Management (DRM), is not made available via MirrorLink™.



To connect your device to a car infotainment system

- Connect your device and the car infotainment system using a USB cable. The screen of your device appears on the screen of the infotainment system.
- ! You may need to start MirrorLink™ manually if the connection between your device and the infotainment system is not established automatically.

To start MirrorLink™ manually

- 1 Make sure that your device is connected to the car infotainment system using a USB cable.
- 2 From your Homescreen, tap .
- 3 Find and tap **Settings** > **Xperia™ Connectivity** > **MirrorLink™**.
- 4 Tap **Start MirrorLink™**, then tap **OK**.
- 5 If the connection still fails, tap **Network address** to change to another network address in case the same network address is being used by other services such as Bluetooth® and Wi-Fi, and then try again.

Airplane mode

In Airplane mode, the network and radio transceivers are turned off to prevent disturbance to sensitive equipment. However, you can still play games, listen to music, watch videos and other content, as long as all this content is saved on your memory card or internal storage. You can also be notified by alarms, if alarms are activated.

- 💡 Turning on Airplane mode reduces battery consumption.

To Turn on Airplane Mode

- 1 From your Homescreen, tap .
- 2 Find and tap **Settings** > **More**.
- 3 Drag the slider beside **Airplane mode** to the right.

Calendar and alarm clock

Calendar

Use the Calendar application to manage your time schedule. If you have signed in to and synchronized your device with one or several online accounts that include calendars, for example, your Google™ account or Xperia™ with Facebook account, then calendar events from these accounts will also appear in the Calendar application. You can select which calendars you want to integrate into the combined Calendar view.

When an appointment time approaches, your device plays a notification sound to remind you. Also,  appears in the status bar.



- 1 Select a view type and the calendars that you want to view
- 2 Search for events
- 3 Return to the current date
- 4 Access settings and other options
- 5 Selected date
- 6 Agenda for the selected day
- 7 Add a calendar event
- 8 Flick left or right to browse more quickly

To Create a Calendar Event

- 1 From your Homescreen, tap , then tap **Calendar**.
- 2 Tap .
- 3 If you have synchronized your calendar with one or more accounts, select the account you want to add this event to. If you only want to add this event on your device, tap **Device calendar**.
- 4 Enter or select the desired information and add attendees to the event.
- 5 To save the event and send out invites, tap **Save**.

To view a calendar event

- 1 From your Homescreen, tap , then tap **Calendar**.
- 2 Tap the event you want to view.

To View Multiple Calendars

- 1 From your Homescreen, tap , then find and tap **Calendar**.
- 2 Tap , then mark the checkboxes for the calendars you want to view.

To zoom the calendar view

- When the **Week** or the **Day** view is selected, pinch the screen to zoom in.

To display national holidays in the Calendar application

- 1 From your Homescreen, tap , then tap **Calendar**.
- 2 Tap , then tap **Settings > Calendar view settings**.
- 3 Tap **National holidays**.
- 4 Select an option, or a combination of options, then tap **OK**.

To Display Birthdays in the Calendar Application

- 1 From your Homescreen, tap , and then tap **Calendar**.
- 2 Tap , and then tap **Settings > Calendar view settings**.
- 3 Tap **Birthdays**, and then drag the slider to the right.

To Display Weather Forecasts in the Calendar Application

- 1 From your Homescreen, tap , and then tap **Calendar**.
- 2 Tap , and then tap **Settings > Calendar view settings**.
- 3 Tap **Weather forecast**, and then drag the slider to the right.
- 4 If location services are disabled, tap **Home location**, and then search for the city you want to add.

 For more information about how to enable location services, see *Using location services* on the 109 page.

To change weather forecast settings in the Calendar application

- 1 From your Homescreen, tap , then tap **Calendar**.
- 2 Tap , then tap **Settings > Calendar view settings**.
- 3 Tap **Weather forecast**.
- 4 Adjust the settings as desired.

Clock

You can set one or several alarms and use any sound saved on your device as the alarm signal. The alarm does not sound if your device is turned off.

The alarm time format displayed is the same as the format you select for your general time settings, for example, 12-hour or 24-hour.



- 1 Access the alarm homescreen
- 2 View a world clock and adjust settings
- 3 Access the stopwatch function
- 4 Access the timer function
- 5 View options
- 6 Open date and time settings for the clock
- 7 Turn an alarm on or off
- 8 Add a new alarm

To Set a New Alarm

- 1 From your Homescreen, tap .
- 2 Find and tap **Clock**.
- 3 Tap .
- 4 Tap **Time** and select the desired value.
- 5 Tap **OK**.
- 6 If desired, edit other alarm settings.
- 7 Tap **Save**.

To snooze an alarm when it sounds

- Tap **Snooze**.

To Turn Off an Alarm When It Sounds

- Drag  to the right.
- 💡 To turn off a snoozed alarm, you can drag down the status bar to open the Notification panel, then tap .

To Edit an Existing Alarm

- 1 Open the Clock application, and then tap the alarm you want to edit.
- 2 Make the desired changes.
- 3 Tap **Save**.

To Turn an Alarm On or Off

- Open the Clock application, and then drag the slider next to the alarm to the On or Off position.

To Delete an Alarm

- 1 Open the Clock application, and then touch and hold the alarm you want to delete.
- 2 Tap **Delete alarm**, and then tap **Yes**.

To Set the Sound for an Alarm

- 1 Open the Clock application, and then tap the alarm you want to edit.
 - 2 Tap **Alarm sound** and select an option, or tap  and select a music file.
 - 3 Tap **Done**, and then tap **Save**.
- 💡 For more information about how to adjust the alarm volume levels, see *Sound volume* on the 46 page.

To Adjust the Volume Level for an Alarm

- 1 Open the Clock application, and then tap the alarm you want to edit.
- 2 Drag the volume slider under **Alarm volume** to the desired position.
- 3 Tap **Save**.

To Set a Recurring Alarm

- 1 Open the Clock application, and then tap the alarm you want to edit.
- 2 Tap **Repeat**.
- 3 Mark the checkboxes for the relevant days, and then tap **OK**.
- 4 Tap **Save**.

To Activate the Vibrate Function for an Alarm

- 1 Open the Clock application, and then tap the alarm you want to edit.
- 2 Mark the **Vibrate** checkbox.
- 3 Tap **Save**.

To Set the Side Keys Behavior

- 1 Open the Clock application, and then select the alarm you want to edit.
- 2 Tap **Side keys behavior**, and then select the desired behavior of side keys when they are pressed during the alarm.
- 3 Tap **Save**.

Accessibility

Magnification Gestures

Magnification gestures allow you to zoom in on parts of the screen by tapping an area of the touchscreen three times in succession.

To enable or disable Magnification gestures

- 1 From your Homescreen, tap .
- 2 Find and tap **Settings** > **Accessibility** > **Magnification gestures**.
- 3 Tap the on-off switch.

To Magnify an Area and Pan Across the Screen

- 1 Ensure **Magnification gestures** is enabled.
- 2 Tap an area three times, and then hold and drag your finger across the screen.

Large Text

You can enable the Large Text option to increase the default size of text displayed on your device.

To enable or disable Large text

- 1 From your Homescreen, tap .
- 2 Find and tap **Settings** > **Accessibility**.
- 3 Drag the slider next to **Large text**.

Color Correction

The Color correction setting adjusts how colors are displayed on the screen for users who are color blind or have difficulty distinguishing between colors.

To enable Color correction

- 1 From your Homescreen, tap .
 - 2 Find and tap **Settings** > **Accessibility** > **Color correction**.
 - 3 Tap the on-off switch.
 - 4 Tap **Correction mode**, then select the appropriate color sensitivity.
- ! Color correction is currently an experimental feature and may affect device performance.

TalkBack

TalkBack is a screen reader service for visually impaired users. TalkBack uses spoken feedback to describe any events or actions performed on your Android device. TalkBack describes the user interface and reads out software errors, notifications, and messages.

To enable TalkBack

- 1 From your Homescreen, tap .
 - 2 Find and tap **Settings** > **Accessibility** > **TalkBack**.
 - 3 Tap the on-off switch and then tap **OK**.
- ! To change speech, feedback and touch preferences for TalkBack, tap **Settings**.
- 💡 TalkBack launches a tutorial immediately after you enable the feature. To exit the tutorial, tap the **Exit** button twice.

To disable TalkBack

- 1 From your Homescreen, double-tap .
- 2 Find and double-tap **Settings** > **Accessibility** > **TalkBack**.
- 3 Double-tap the on-off switch and then double-tap **OK**.

Support and Legal

Support Application

Use the Support application on your device to browse User Guides, troubleshooting guides, and to find information about software updates and other product-related information.

To Access the Support Application

- 1 From your **Home screen**, tap .
 - 2 Find and tap , then select the required support item.
-  Connect to the internet when using the Support application for the best available support.

Xperia™ Tips

Using Xperia™ Tips, you can get useful information for your device via notifications, and learn all you need to get started.

To Enable or Disable Xperia™ Tips

- 1 From your **Home screen**, tap .
- 2 Find and tap **Settings** > **Introduction & Tips**.
- 3 Tap the **Xperia™ Tips** slider.

Help in menus and applications

Some applications and settings have help available in the options menu, which is normally indicated by  in the specific applications.

Running Diagnostic Tests on Your Device

The Xperia™ Diagnostics application can test a specific function or run a full diagnostic test to check if your Xperia™ device is working properly.

Xperia™ Diagnostics can:

- Assess potential hardware or software issues on your Xperia™ device.
 - Analyze how well applications perform on your device.
 - Identify installed software and provide useful details about your device.
-  The Xperia™ Diagnostics application is pre-installed on most Android™ devices from Sony. If the Diagnostics option is not available under **Settings** > **About tablet**, you can download a light version from Google Play™.

To Run a Specific Diagnostic Test

- 1 From your Homescreen, tap .
- 2 Find and tap **Settings** > **About tablet** > **Diagnostics** > **Test**.
- 3 Select a test from the list.
- 4 Follow the instructions and tap **Yes** or **No** to confirm if a feature works.

To Run all Diagnostic Tests

- 1 From your Homescreen, tap .
- 2 Find and tap **Settings** > **About tablet** > **Diagnostics** > **Test** > **Run all**.
- 3 Follow the instructions and tap **Yes** or **No** to confirm if a feature works.

To View Details about Your Device

- 1 From your Homescreen, tap .
- 2 Find and tap **Settings** > **About tablet** > **Diagnostics** > **Facts**.

Restarting, Resetting, and Repairing

You can force your device to restart or shut down if it stops responding or won't restart normally. No settings or personal data get deleted.

You can also reset your device to its original factory settings. This action is sometimes necessary if your device stops functioning properly, but note that if you want to keep any important data, you should first back up this data to a memory card or other non-internal memory. For more information, see *Backing Up and Restoring Content* on page 35.


If your device fails to turn on or you want to reset your device's software, you can use Xperia™ Companion to repair your device. For more information on using Xperia™ Companion, see *Xperia™ Companion* on page 33.

- 💡 If you are sharing a device with multiple users, you may need to log in as the owner, that is, the primary user, to reset your device to its original factory settings.

To Restart Your Device

- ! Your device may fail to restart if the battery level is low. Connect your device to a charger and try restarting again.
- 1 Press and hold down the power key .
 - 2 In the menu that opens, tap **Restart**. The device restarts automatically.

To Force the Device to Shut Down

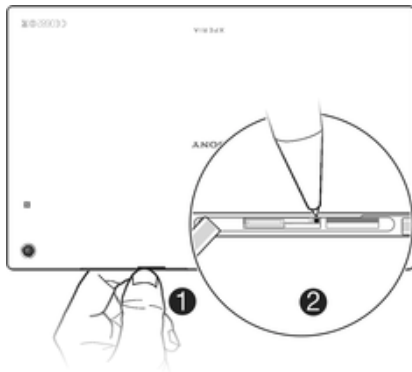

- 1 Remove the cover of the memory card slot.
 - 2 Using the tip of a pen or a similar object, press the OFF button.
- ! Do not use overly sharp objects that could damage the OFF button.

To Perform a Factory Data Reset

- ! To avoid permanent damage to your device, do not restart your device while a reset procedure is underway.
- 1 Before you start, be sure to back up any important data that is saved on the internal memory of your device to a memory card or other non-internal memory.
 - 2 From your Homescreen, tap .
 - 3 Find and tap **Settings > Backup & reset > Factory data reset**.
 - 4 To delete information like pictures and music from your internal storage, mark the **Erase internal storage** checkbox.
 - 5 Tap **Erase everything**.
 - 6 If required, draw your screen unlock pattern, or enter your screen unlock password or PIN to continue.
 - 7 To confirm, tap **Erase everything**.
- ! Your device does not revert to an earlier software version of Android™ when you perform a factory data reset.
 - ! If you forget your screen unlock password, PIN, or pattern, you can use the device repair feature in Xperia™ Companion to erase the security layer. You need to provide your Google

account login details to perform this operation. By running the repair feature, you reinstall software for your device and you may lose some personal data in the process.

Repairing the Device Software

If you forget your screen unlock password, PIN, or pattern, you can use the device repair feature in Xperia™ Companion to erase the security layer. You need to provide your Google account login details to perform this operation. By running the repair feature, you reinstall software for your device and you may lose some personal data in the process.

If you can't turn off your device before performing a software repair, force it to shut down.

- 💡 When you receive a new Google™ account username or password, you might not be able to use them to log in to and recover your device for 72 hours.

To Repair the Device Software Using Xperia™ Companion

- ! Before performing a software repair, make sure you know your Google™ account username and password. Depending on your security settings, you may need to enter them in order to restart the device after a software repair.

If your device seems to have frozen, restarts repeatedly or doesn't start at all after you updated the Xperia™ software or after you performed a software repair or a factory data reset, try forcing the device to shut down then try turning it back on. If the problem still exists, force the device to shut down then perform a software repair by following the steps below:

- 1 Make sure Xperia™ Companion is installed on your PC or Mac®.
- 2 Open the Xperia™ Companion software on the computer and click on **Software repair** on the main screen.
- 3 Follow the instructions that appear on the screen to reinstall the software and complete the repair.

Help us improve our software

You can enable the sending of usage info from your device so that Sony Mobile can receive anonymous bug reports and statistics that help improve our software. None of the information gathered includes personal data.

To allow the sending of usage info

- 1 From your Homescreen, tap .
- 2 Find and tap **Settings > About tablet > Usage info settings**.
- 3 Mark the **Send usage info** checkbox if it is not already marked.
- 4 Tap **Agree**.

Warranty, SAR, and Usage Guidelines

For information about warranty, SAR (Specific Absorption Rate), and safety guidelines, please read the **Important information** provided under **Settings > About phone > Legal information** on your device.

Recycling Your Device

Got an old device lying around the house? Why not recycle it? By doing so, you will help us reuse its materials and components, and you'll protect the environment, too! Find out more about the recycling options in your region at www.sonymobile.com/recycle/.

Legal information

Sony SGP511/SGP512

This User guide is published by Sony Mobile Communications Inc. or its local affiliated company, without any warranty. Improvements and changes to this User guide necessitated by typographical errors, inaccuracies of current information, or improvements to programs and/or equipment, may be made by Sony Mobile Communications Inc. at any time and without notice. Such changes will, however, be incorporated into new editions of this user guide. All illustrations are for illustrative purposes only and may not accurately depict the actual device.

All product and company names mentioned herein are the trademarks or registered trademarks of their respective owners. All other trademarks are property of their respective owners. Any rights not expressly granted herein are reserved. Visit www.sonymobile.com/us/legal/ for more information.

This User guide may reference services or applications provided by third parties. Use of such programming or services may require separate registration with the third party provider and may be subject to additional terms of use. For applications accessed on or through a third-party website, please review such websites' terms of use and applicable privacy policy in advance. Sony does not warrant or guarantee the availability or performance of any third-party websites or offered services.

Your cellular device has the capability to download, store, and forward additional content, for example, ringtones. The use of such content may be restricted or prohibited by rights of third parties, including but not limited to restriction under applicable copyright laws. You, and not Sony, are entirely responsible for additional content that you download to or forward from your mobile device. Prior to your use of any additional content, please verify that your intended use is properly licensed or is otherwise authorized. Sony does not guarantee the accuracy, integrity or quality of any additional content or any other third-party content. Under no circumstances will Sony be liable in any way for your improper use of additional content or other third party content.

Visit www.sonymobile.com for more information.

This product is protected by certain intellectual property rights of Microsoft. Use or distribution of such technology outside of this product is prohibited without a license from Microsoft.

Content owners use Windows Media digital rights management technology (WMDRM) to protect their intellectual property, including copyrights. This device uses WMDRM software to access WMDRM protected content. If the WMDRM software fails to protect the content, content owners may ask Microsoft to revoke the software's ability to use WMDRM to play or copy protected content. Revocation does not affect unprotected content. When you download licenses for protected content, you agree that Microsoft may include a revocation list with the licenses. Content owners may require you to upgrade WMDRM to access their content. If you decline an upgrade, you will not be able to access content that requires the upgrade.

This product is licensed under the MPEG-4 visual and AVC patent portfolio licenses for the personal and non-commercial use of a consumer for (i) encoding video in compliance with the MPEG-4 visual standard ("MPEG-4 video") or the AVC standard ("AVC video") and/or (ii) decoding MPEG-4 or AVC video that was encoded by a consumer engaged in a personal and non-commercial activity and/or was obtained from a video provider licensed by MPEG LA to provide MPEG-4 and/or AVC video. No license is granted or shall be implied for any other use. Additional information including that relating to promotional, internal, and commercial uses and licensing may be obtained from MPEG LA, L.L.C. See www.mpegla.com. MPEG Layer-3 audio decoding technology licensed from Fraunhofer IIS and Thomson.

SONY MOBILE WILL NOT BE LIABLE FOR ANY LOSS, DELETION, AND/OR DATA-OVERWRITING OF PERSONAL DATA OR FILES STORED ON YOUR DEVICE (INCLUDING BUT NOT LIMITED TO CONTACTS, MUSIC TRACKS, AND PICTURES) ARISING OUT OF ANY UPDATE OF YOUR DEVICE BY ANY OF THE METHODS DESCRIBED IN THIS USER GUIDE OR DOCUMENTATION. IN NO EVENT SHALL SONY MOBILE OR ITS SUPPLIERS' TOTAL LIABILITY TO YOU FOR ANY AND ALL DAMAGES, LOSSES AND CAUSES OF ACTION (WHETHER IN CONTRACT OR TORT, INCLUDING, BUT NOT LIMITED TO NEGLIGENCE OR OTHERWISE) EXCEED THE AMOUNT ACTUALLY PAID BY YOU FOR YOUR DEVICE.

© 2015 Sony Mobile Communications Inc.

All rights reserved.