

30W Fast Charger
XQZ-UC1



Introduction

[Function Overview](#)

[Hardware Overview](#)

Using your charger

[Charging](#)

Legal information

[General](#)

[FCC Statement \(AC-0540-JP\)](#)

30W Fast Charger
XQZ-UC1

Function Overview


The 30W Fast Charger XQZ-UC1 reduces the charging time for Xperia devices that support USB Power Delivery.

Note

- When charging a device with the 30W Fast Charger XQZ-UC1, always use the USB Type-C cable that was included with the charger at purchase.

30W Fast Charger
XQZ-UC1


Hardware Overview

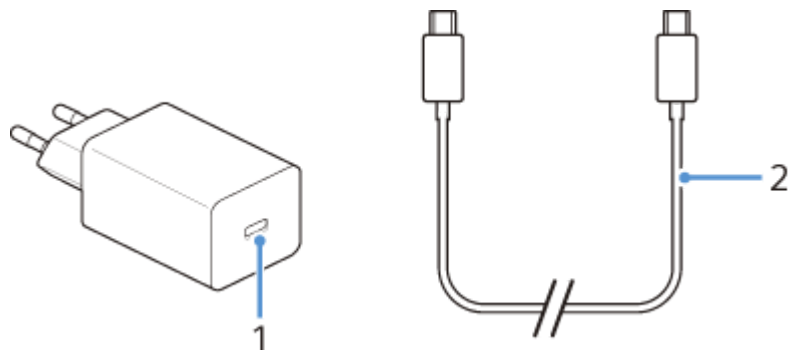

1. USB port
2. USB Type-C cable

Charging

To charge your device using the charger

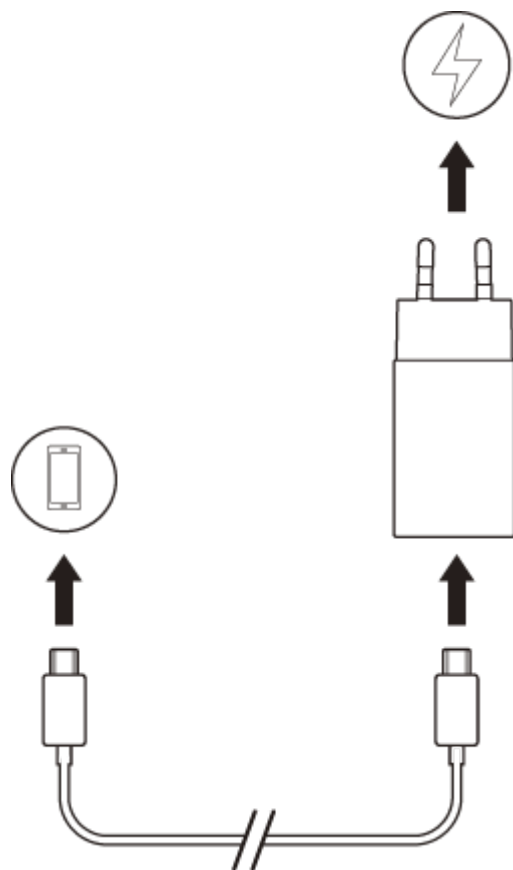

- 1** Connect one end of the USB Type-C cable to the USB port of the charger.
- 2** Plug the charger into a power outlet.
- 3** Connect the other end of the cable to the USB port of your device. Your device battery then starts to charge.

When your device is fully charged, unplug the charger from the power outlet and disconnect the cable from your device by pulling it straight outwards. Make sure not to bend the connector.

30W Fast Charger
XQZ-UC1

General

AC-0540-EU/AC-0540-UK



AC-0540-UK



Prior to use, please read the Important information leaflet separately provided.

This Help Guide is published by Sony Corporation or its local affiliated company, without any warranty. Improvements and changes to this Help Guide necessitated by typographical errors, inaccuracies of current information, or improvements to programs and/or equipment, may be made by Sony Corporation at any time and without notice. Such changes will, however, be incorporated into new editions of this Help Guide.

All rights reserved.

©2021 Sony Corporation

1-7-1 Konan Minato-ku Tokyo, 108-0075 Japan

Sony Europe B.V.
Da Vincilaan 7-D1, 1930 Zaventem, Belgium

Sony is the trademark or registered trademark of Sony Corporation.

All product and company names mentioned herein are the trademarks or registered trademarks of their respective owners. Any rights not expressly granted herein are reserved. All other trademarks are property of their respective owners.

Visit <https://www.xperiainfo.com/> for more information.

All illustrations are for illustration only and may not accurately depict the actual accessory.

30W Fast Charger
XQZ-UC1

FCC Statement (AC-0540-JP)

You are cautioned that any changes or modifications not expressly approved in this manual could void your authority to operate this equipment.

“Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.”

Supplier's Declaration of Conformity

Trade Name : Sony

Model : AC-0540-JP

Responsible Party : Sony Electronics Inc.

Address : 16535 Via Esprillo, San Diego, CA 92127 U.S.A.

Telephone Number : 858-942-2230