


Wireless Remote



Use & Care Manual | SV-R01


PRODUCT OVERVIEW

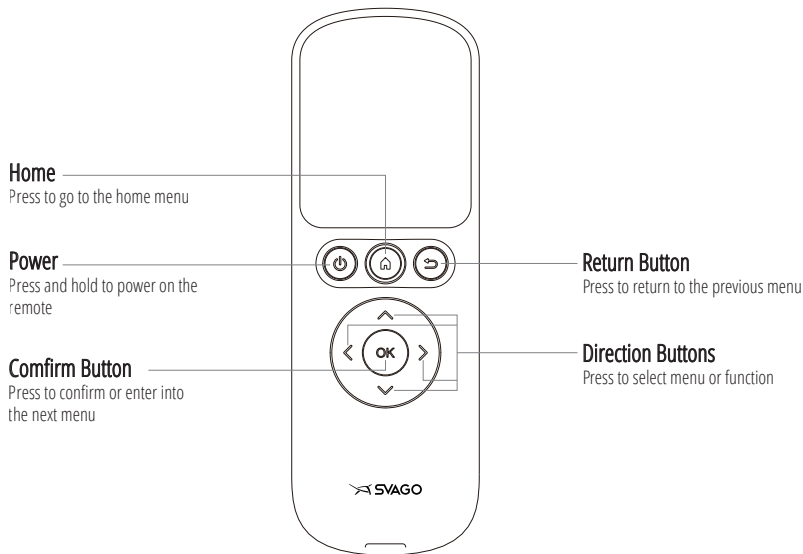

IMPORTANT: When there is not any operation for more than 20 seconds, the remote screen will automatically turn off and enter into the standby state. When you start using the remote again, the screen will light up and operation can continue.



GET READY

- Make sure the chair has been installed and powered on.
- Power on the wireless remote, choose the “Settings” icon on the home menu, then choose the “Bluetooth” icon to connect with the chair. Note that the code to connect the bluetooth is “Motion Mastery”.
- When the wireless remote button lights no longer flash, the connection is successful.

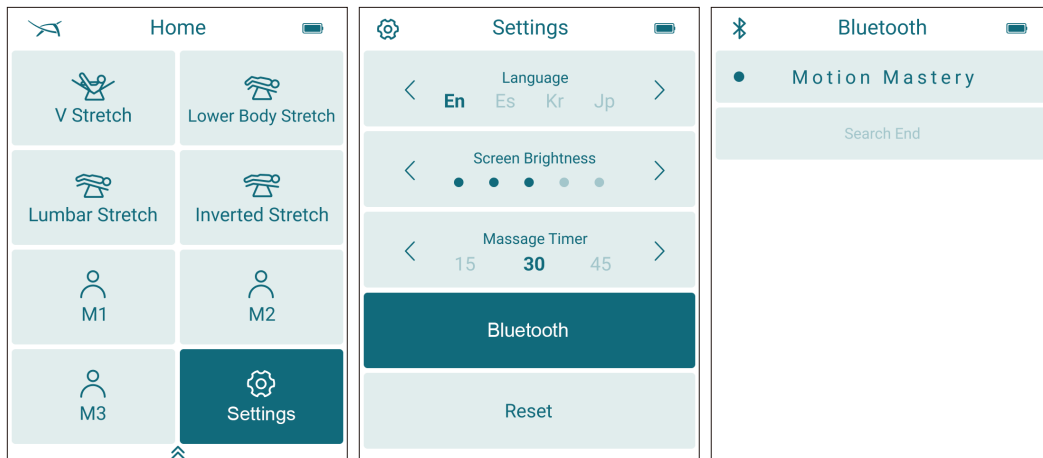

HOME INTERFACE


We have designed your chair with multiple massage options for your changing needs. Follow these simple instructions to begin a new auto massage.

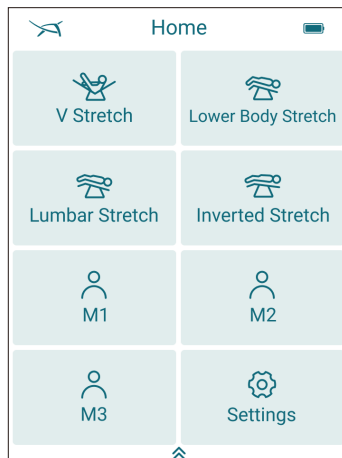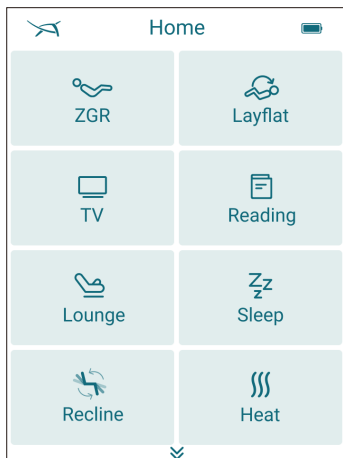

Choose 1 of the 10 auto programs and press "OK" to get into the auto program interface
(ZGR, Layflat, TV, Reading, Lounge, Sleep, V Stretch, Lower Body Stretch, Lumbar Stretch, Inverted Stretch)

AUTO MASSAGE INTERFACE



When entering into an auto program, the chair will go to the position set by the system and automatically turn on the massage and heat functions.

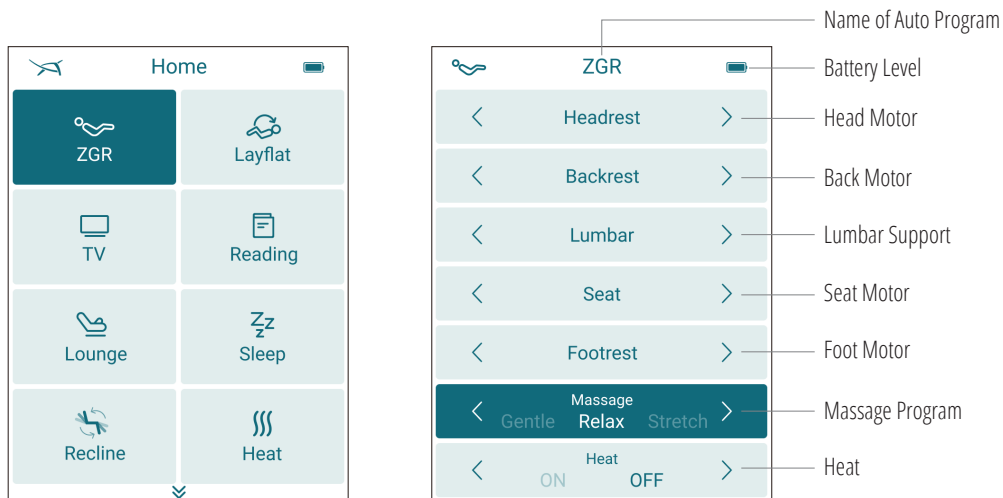

Select and adjust the positions and functions by "<" and ">" arrows
There are 5 massage programs - Relax, Stretch, Vigorous, Wave and Gentle

SLEEP INTERFACE



This is a sleep program, you can choose your favorite chair position and wake up time, then save it. When the time is up, the chair will begin a massage and return to the home position to help you wake up.

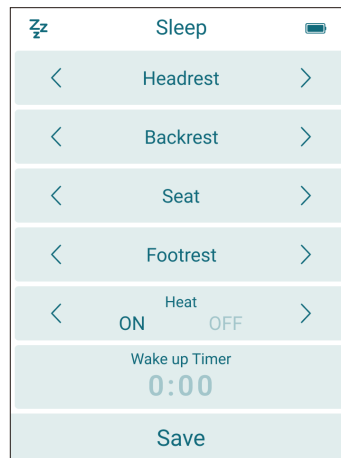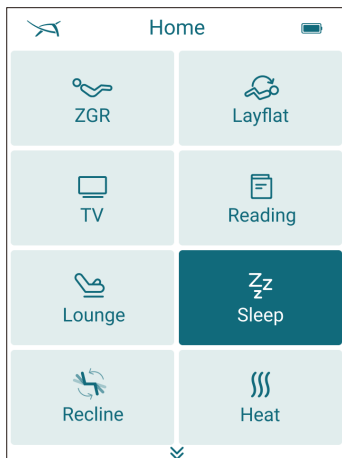

When setting the wake up timer, the hours can be adjusted by the "<" and ">" arrows, and the minutes can be adjusted by "∧" and "∨" arrows - after you set a time, press the "OK" icon to save the program



RECLINE INTERFACE

This is a manual program, you can choose your favorite chair position and massage program.

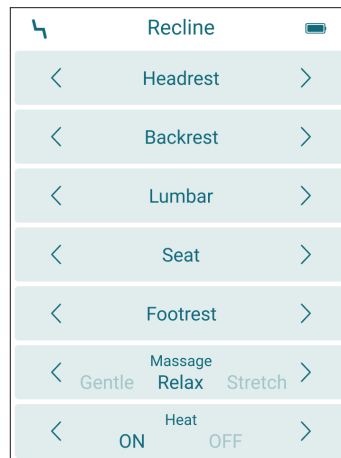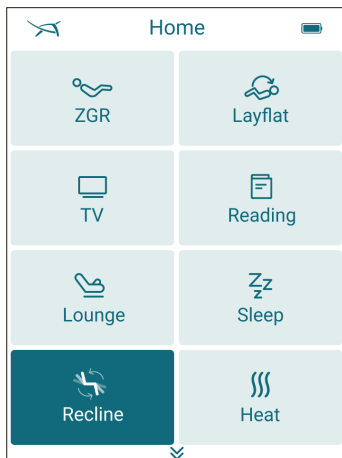



HEAT INTERFACE

In this interface, you can choose the heat temperature level of different areas and set a heat timer.

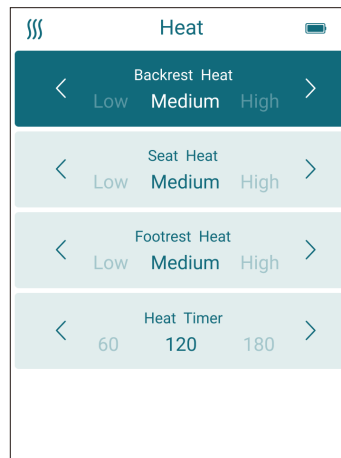
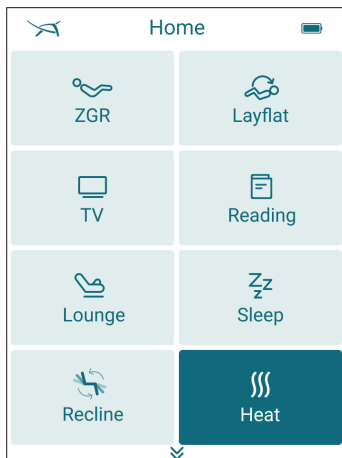


MEMORY INTERFACE

In this interface, you can choose your favorite chair position, massage program and heat function, and save it. Next time when entering into memory interface, it will execute the default option. You can create up to three memory programs.

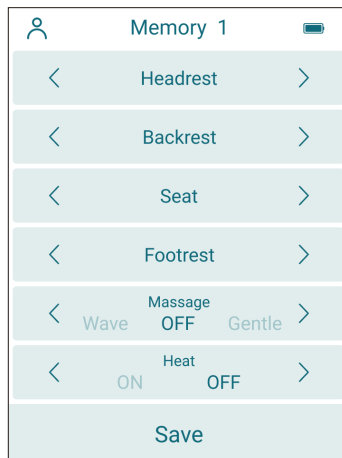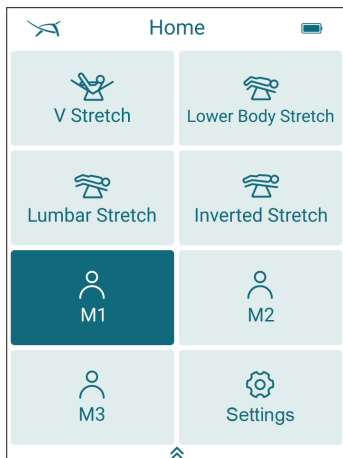

SETTING INTERFACE

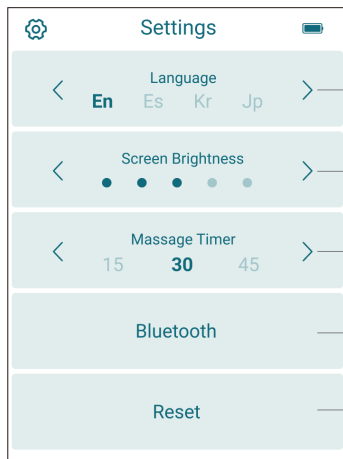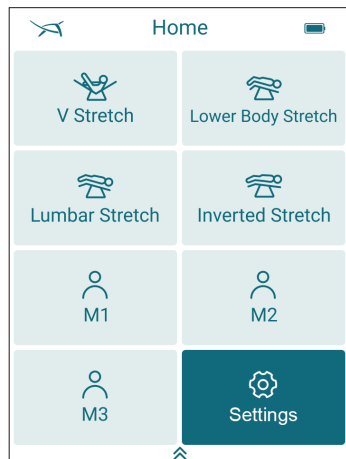

Language Adjust

Screen Brightness Adjust

Massage Time Adjust

Bluetooth Connection

System Reset

SAFETY GUIDES

To ensure safety and proper use of the product, please follow these simple care guidelines.

Use Environment

- Do not use the product under high humidity to avoid product malfunction.
- Do not place the product outdoors.
- Do not place the product near any electric heater, stove or in direct sunlight.
- Unplug the charger once charging is finished.
- Put the product in a cool and dry environment if not using.

Important Safety Notices

- Do not use the product in the following circumstances:
 - Damaged charging port or unable to charge
 - Product is dropped into the water
 - Product back cover bulges
 - Product overheatedPlease contact customer service center for replacement at 844.697.8246 or via email at service@cozziausa.com.
- This product contains a battery that is non-replaceable.
- Do not insert any object into the charging port.

