

vax[®]
ONE
PWR
CORDLESS

vax
HAND VAC
CORDLESS HANDHELD

USER GUIDE



CLHH-HVBSRB

1 year warranty

SAFETY GUIDE

This machine is intended for household use only and NOT for commercial or industrial use.

PLEASE KEEP INSTRUCTIONS FOR FURTHER USE AND USE ONLY AS INSTRUCTED IN THIS GUIDE.

DON'TS

- Don't leave the charger plugged in when unattended.
- Don't use the machine if it is faulty or has been dropped, damaged or left outdoors.
- Don't use the machine to pick up any flammable or combustible materials (lighter fluid, petrol, kerosene etc.) or use the machine in an area with explosive vapours or liquid.
- Don't use the machine to pick up hot coals, cigarette butts, matches or smoking hot burning items or use in an area where there may be harmful fluids (chlorine, bleach and ammonia drain cleaner).
- Don't handle the charger, battery or use the machine with wet hands.
- Don't unplug the charger by pulling on the power cord.
- The power cord cannot be replaced. If the cord is damaged the charger should be scrapped.
- Don't attempt to remove blockages with sharp objects as this may cause damage to the machine.
- Don't use the machine with the incorrect battery or charger as this may result in damage or injury to the user. The correct battery charger information is listed on the battery

pack ratings label.

- Don't charge the battery outdoors, or leave the charger connected to the mains when not in use.
- Don't use this machine with a damaged battery. If the battery is damaged contact us on:
08000 927737.
- Don't use on a surface that is damaged, uneven or incorrectly fitted.
- Don't over fill the dirt container to avoid blocking the air flow through the machine.

DO'S

- Only VAX ONEPWR batteries (BV15020/BV15030/BV25040) and charger (BV05100UK) should be used with this machine.
- Always stand the charger on a stable, level surface, uncovered and away from any heat source.
- Only VAX ONEPWR recommended tools and accessories should be used with this machine.
- Always remove the battery from the machine before carrying out any maintenance or if storing unused for a long period of time.
- Keep all openings clear and free from debris as this may affect the airflow/suction.
- Turn off all controls on the machine before disconnecting or connecting the battery.
- Only use the machine indoors on dry surfaces and keep the area you're cleaning well lit.
- Keep fingers, hair and loose clothing

away from moving parts and openings whilst using the machine.

- Store the machine in a cool, dry area. Keep the machine away from rain and moisture.
- This machine is not intended to be used or cleaned by persons with reduced physical, sensory or mental capabilities, or lack of experience or knowledge, unless they have been given instructions concerning the safe use of the machine by a person legally responsible for their safety. They should be supervised whilst using the machine. Children shall not use, clean or play with this machine, which when not in use should be secured out of their reach.
- Use only CE approved 13amp extension cords, non-approved extension cords may overheat. Care should be taken to arrange the extension cord as it can be a trip hazard.
- Take extra care when using the machine on the stairs.
- Always make sure the shroud and filter are fitted correctly before using the machine and only use the machine with the filter and shroud in place.

BATTERY SAFETY PRECAUTIONS

- Replace the battery with a VAX ONEPWR battery only. Use of another battery may present a risk of fire or explosion.
- Do not attempt to disassemble the battery, remove any component projecting from the battery terminals and do not dispose of in a fire. The battery and charger have no user serviceable parts. Fire or injury may result.
- Prior to disposal, protect exposed terminals with heavy insulating tape to prevent shorting. The battery is to be disposed of safely at your local battery recycling centre.
- When the battery pack is not in use, keep it away from other metal objects that can make a connection from one terminal to another. Shorting the battery terminals together may cause burns or a fire.
- In case of battery leakages, avoid any contact with skin and contact us on: **08000 927737**.

WARRANTY & TECHNICAL

WARRANTY

If a VAX ONEPWR machine is used in the way it is intended and it breaks down within the guarantee period, it's our responsibility to repair or replace it. Here's what isn't covered:

- Normal wear and tear of consumable items, for example: belts, filters, brushbars, fuses etc.
- Accidental damage
 - Damage as a result of use not in accordance with the product user guide.
 - Damage caused by not carrying out regular maintenance.
 - Damage to the charger cable.
 - Blockages caused by misuse.
- Faults caused by:
 - Negligent use, misuse, neglect or careless operation of the machine.
 - Use of the machine which is not in accordance with the user guide.
 - Use of a VAX ONEPWR machine for anything other than normal domestic household purposes in the country in which it was purchased.
 - Use of parts, accessories and consumables, which are not genuine VAX ONEPWR components.
 - Faulty installation or repairs – unless carried out by a qualified electrician or engineer.

TECHNICAL

EU Statement of Compliance: Manufacturer/EU importer: VAX Limited, hereby on our own responsibility, declare that the VAX ONEPWR Hand Vac is manufactured in compliance with the following Directives:

Safety: 2014/35/EU Low Voltage Directive.

EMC: 2014/30/EU Electromagnetic Compatibility Directive.



Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.

VAX is a trade mark of Techtronic Cordless GP.

© 2020 Techtronic Cordless GP. All rights reserved.

GETTING TO KNOW YOUR MACHINE



- 1 Main unit
- 2 Power ON/OFF
- 3 Dirt container release button
- 4 Shroud and filter
- 5 Dirt container
- 6 Crevice tool storage
- 7 Battery dock
- 8 Crevice tool

Available to purchase separately at **vax.co.uk**

- 9 ONEPWR Battery*
- 10 ONEPWR Charger*



8



9



10



TECHNICAL SPECIFICATION

VAX ONEPWR Hand Vac

Weight (without battery pack) 1.1kg

Capacity 0.3L

Runtime and charge time dependent on battery pack used.

*Battery and charger not included.

 
Subject to technical change without notice. Images are illustrative only.

GETTING STARTED


CHARGING THE BATTERY (BATTERY AND CHARGER NOT INCLUDED)

THIS MACHINE IS ONLY TO BE USED WITH VAX ONEPWR BATTERIES AND CHARGER. PLEASE READ THE SAFETY GUIDE BEFORE USE.


NOTE: Before first use, ensure the battery is fully charged. Failure to fully charge the battery before first use may result in poor battery performance. The life expectancy of the battery will vary depending on the usage of the machine.

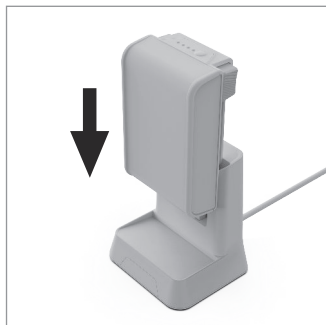

 Slide the battery down on to the charger.

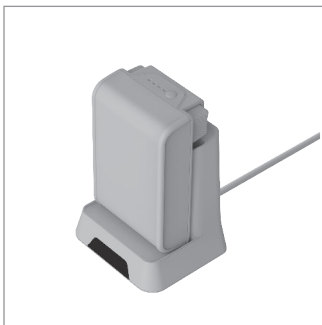

 The charger light will flash white to show when the battery is charging. The light on the charger will stop flashing and go off when the battery is fully charged.

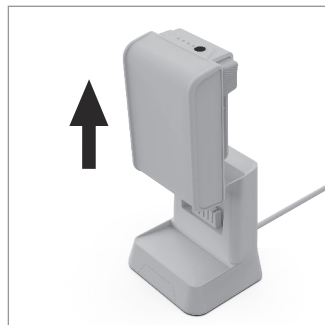

Once fully charged, slide the battery off the charger to remove.



To check the battery charge level press the battery symbol.

GETTING STARTED

FITTING THE BATTERY



Line up the battery underneath the handheld.



Slide the battery into the handheld until it clicks into place.

 
OPERATION



Push the on/off switch forwards to switch on.



To use the crevice tool, pull to remove from underneath the handheld.

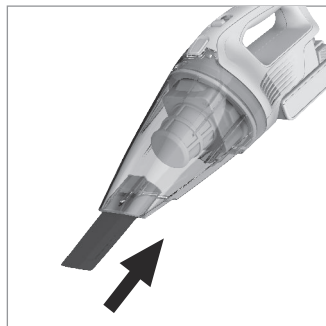

Push the crevice tool into the nozzle to secure.

CLEANING & MAINTENANCE

 
WARNING: Always remove the battery before carrying out any maintenance or troubleshooting.

CAUTION: Don't over fill the dirt container to avoid blocking the air flow through the machine. For best cleaning results, empty the dirt container after every use. Filters should be tapped over a bin every 4-6 uses to remove dirt and debris and replaced every 6-9 months.

EMPTYING THE DIRT CONTAINER



Press the dirt container release button and separate the dirt container from the handheld.

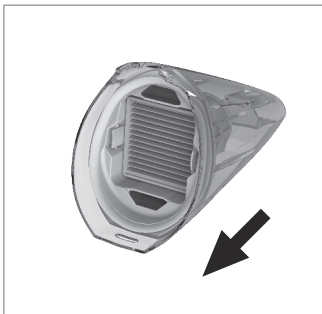


Pull out the shroud to separate from the dirt container.




Hold the dirt container over a bin allowing any dirt/debris to fall out.

 CLEANING THE FILTER AND SHROUD

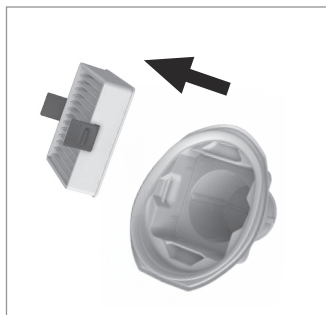

 Pinch the tabs either side of the filter and pull to remove from the shroud.

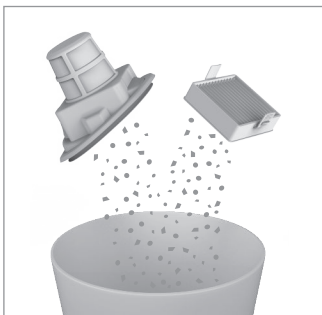

Tap the shroud and filter against a bin to remove any dust/debris.

TROUBLESHOOTING

THERE IS AN ACCESSORY MISSING

Check the contents on the back of the box.

WHY DOES THE MACHINE HAVE NO POWER?

- The battery is not fitted correctly. See OPERATION page 7.
- The battery has no charge. See CHARGING THE BATTERY page 6.
- The motor thermostat may have tripped. Empty the dirt container and check for blockages. Clean the filters and allow the machine to cool for approximately 1 hour. If you have washed the shroud, wait 24 hours to fully dry before placing back in the machine. See CLEANING THE FILTER AND SHROUD page 8.

WHY WON'T THE MACHINE PICK UP?

- The dirt container may not be correctly fitted. See EMPTYING THE DIRT CONTAINER page 8.
- The dirt container may be full. Empty the dirt container. See EMPTYING THE DIRT CONTAINER page 8.
- The filters may be clogged. See CLEANING THE FILTER AND SHROUD page 8.
- There may be a blockage in the crevice tool - use a blunt object to remove the blockage.