

Operating Instructions for 2-Speed Battery Trimmer Nail Grinder and Rechargeable Nail Grinder

3-YEAR LIMITED WARRANTY

Valid in U.S.A. Only

If your Wahl product fails to operate satisfactorily within (3) years from the date of original purchase or receipt as a gift, Wahl will, at our option, repair or replace the product and return it to you **FREE OF CHARGE. Do not return this product to store where purchased.** Products needing repair under this warranty should be returned with postage pre-paid to the following address or call 1-800-767-9245 for assistance.

**Wahl Clipper Corp.
Attn: Repair Department
3001 Locust Street
Sterling, Illinois 61081**

When mailing, please include a note describing the defect and the date of original purchase or receipt as a gift. Products out of warranty will be repaired at our standard repair charges.

This warranty does not cover products damaged by:

1. Modification or repair by anyone other than Wahl Clipper Corporation or a Wahl authorized service center;
2. Commercial (non-consumer) use or unreasonable use.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. No other written express warranty is given. No responsibility is assumed for incidental or consequential damages of any type or for the use of unauthorized attachments. Some states may not allow the exclusion or limitation of incidental or consequential damages, so the limitation may not apply to you. Warranty valid in U.S.A. only. Outside U.S.A., check with store for Wahl authorized distributor's warranty.

1

When using an electrical appliance, basic precautions should always be followed, including the following: Read all instructions before using this appliance.

DANGER

1. Do not reach for nail grinder if it has fallen into water.
2. This appliance can be used by children aged from 14 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction, by a person responsible for their safety, concerning the use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

2

WARNING

1. Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
2. Turn unit off before adding or removing attachments
3. Never operate nail grinder if it is not working properly, if it has been dropped or damaged, or dropped into water. Return to an Authorized Service Center for examination or repair.
5. Do not use outdoors or operate where aerosol (spray) or other flammable products are being used or where oxygen is being administered.
6. Do not touch the collet or attachment after use. These may be hot and cause burns to the skin.
7. Move the switch to the off, or "O" position, then remove the batteries.
8. Clean the nail grinder's air vents with compressed air on a regular basis. Material

3

9. Always wear safety glasses when using nail grinder. Do not wear loose jewelry or clothing when in use. Keep long hair pulled back out of work area.
10. Do not allow animal to lick or touch the nail grinder during use.
11. Make sure attachments are securely in place before use. Before each use, check that the sanding drum is sufficiently expanded to secure the sanding band during use. If sanding band is loose during operation, it may be ejected from grinder and cause injury.
12. During use, do not place or leave appliance where it may be (1) damaged by an animal or (2) exposed to the weather.
13. Do not over-grind or apply excessive pressure. (See **FIG. 1** 'Nail Anatomy' for further information to safely grind your pets nails.)
14. Keep this appliance dry.
15. With the exception of attachments (grinding drum sanding bands & stone), nail grinder does not have user-serviceable parts. Any maintenance not explained in this manual should be performed by Wahl Repair Service & Repair.

4

OPERATING INSTRUCTIONS:

HOW TO TRIM

Keep your pet's nails trimmed properly for greater comfort and well being

- Make sure the dog is relaxed and comfortable.
- Have the dog sit and talk to him/her softly to keep them calm.
- Always include a favorite treat during the session and at the end.
- Have a styptic powder or cornstarch readily available in plentiful amount.
- Grasp the foot from the ankle up in the palm of your hand, firmly but gently.

An illustration showing a human hand holding a dog's paw. The hand is positioned to grasp the foot from the ankle up, as described in the text. The dog's paw is shown with its toes and claws. Above the illustration, there are three paw prints: one solid black and two outlined.

5

NAIL ANATOMY:

- Before you begin trimming your pet's nails, you will need to identify the 'quick' of the nail. The diagram (**FIG1**) will help you identify the basic nail anatomy. The outer nail is hard and has no nerve endings and protects the inner soft part of the nail, known as the 'quick'. The quick has nerve endings, tiny blood vessels and is very sensitive should you accidentally cut or grind into it.

Please also reference the diagram for the appropriate angle for trimming the nail.

If by chance you happen to hit the quick of a nail and the nail starts to bleed, don't allow your dog to wrench away from you and run around. Hold him firm and reassure him that you know it hurts, your pet trusts you. You also need



Safety Nail Guard

TOY BREED → LARGE BREED

Nail Wrench

Use to tighten/loosen Collet

Use to tighten/loosen Grinding Drum

Safety Nail Guard Components:

- Safety Nail Guard
- Collet
- Collet lock button
- 2-Speed On/Off Switch
- Battery Chamber
- Port for power transformer on rechargeable units

 Grinding Stone with Concave Top - Long lasting grinding attachment. Ideal for grinding and rounding of nails.

 Course Grinding Bands - Quickly grind down bulk of nail

 Fine Grinding Band - Smooths rough edges

8

- ☒ Make sure sure unit has a set of fresh batteries or if rechargeable, unit is fully charged
- ☒ Install Grinding Drum & Band
 - Pressing Collet Lock Button found on back, while using the wrench supplied in kit, turn wrench counter clockwise to loosen Collet.
 - Insert Grinding Drum or Stone all the way down.
 - Tighten the Collet (turning wrench c it is tight. Check to make sure drum the Collet. Do not overtighten.
 - Select either the 60 or 120 grit sanding band (60 grit medium sanding band for quick and efficient grinding down of your pet's nail; 120 grit fine sanding band for smoothing uneven rough nails.)
 - Place the sanding band over the grinding drum until it is in place (please note, you will find it sits loosely over the grinding drum). While pressing the collet lock button to keep shaft from turning, use a screw driver at the top of the grinding drum. Screwing it in a clockwise direction will allow the drum to expand, creating the perfect fit for the band.
 - Verify Grind Band is pushed down all the way to eliminate rubbing on the safety guard preventing it from spinning

C

1. Run unit on first speed around the animal until they are comfortable with the sound and vibration before making contact with nail.

Take pets paw and gently squeeze the nail between the thumb and pointer finger to extract nail.

Turn grinder "ON". The "ON/OFF" switch is located on the front of the grinder. Start with 1st Speed.

Pull hair back from hair area. Always keep hair away from spinning parts. If hair is accidentally caught in spinning drum, immediately turn power OFF and untangle hair.

2. Slide nail into hole on safety guard according to where it fits best.

It is possible to not use the guard but caution must always be taken.

- Begin filing each nail for no more than 2-4 seconds at a time
Alternate between each nail - NEVER trim a nail completely at a time.



10

- After each use, remove any debris and dust from grinder by using a soft brush.
- To clean housing, use a soft, dry cloth.

Note: Certain cleaning agents and solvents can damage plastic parts. Use only a water-moistened cloth when wiping plastic housing.

- For maximum efficiency, ensure grinding attachments and sanding bands are properly replaced when worn or blunt.
- Periodically examine tool for any wear or damage. See Service and Repair.

-To order replacement accessories, please contact Wahl at 1-800-767-9245 or purchase from our website www.WahlUSA.com

- This appliance contains no user-serviceable parts.
- Any servicing should be done by Wahl Service and Repair or by an Authorized Service Center.
- Do not return this product to the store where purchased. If you have problems with your unit, send it prepaid with a note explaining the problem to:
Wahl Clipper Corporation
Attn: Service Department
3001 Locust Street
Sterling, Illinois 61081

1-800-767-9245 or visit www.wahlUSA.com


12

- When the battery is low, the speed of the unit will be slower. This means it is time to change your batteries.
- Please make sure the grinder is in the "OFF", or "O", position before changing batteries.

-The battery door is located on the bottom of the grinder. Hold the unit with one hand and unscrew the bottom cap (battery door) with the other hand. Twist door counter clockwise, lining up the arrow and the  symbol. You will feel it click into place, then pull two pieces apart.

-Once 4AA Alkaline batteries are placed within the shaft of the grinder, replace the bottom cap by screwing clockwise and line up the arrow with the .

-To place batteries in correctly, look for the + and - symbols on the bottom of the unit.

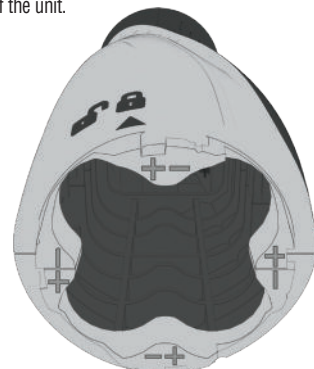

13

to get styptic or corn starch onto the end of the nail. Simply keep the original grasp you had on the paw and press the powder to the end of the nail until the bleeding stops. You may have to keep packing powder for two to three minutes, but the longer you are able to apply steady pressure, the more effectively you will stop the bleeding. Don't be concerned if your dog wants to lick the wound after initial bleeding stops. Do keep him from prancing about for at least fifteen minutes. Bleeding should stop within 15 minutes, if the nail is bleeding freely after 30 minutes of applying pressure and powder call your veterinarian.

- Ensure grinder is in the "OFF" or "O" position before changing attachments.
- Unscrew the protective cap
- Press Collet Lock and use provided wrench turning it counter clockwise. Doing so will open up collet. If there is already an attachment (Drum or stone) in collet, opening it will allow it to be easily removed by gently pulling on stem. Insert stem of grinding stone or sanding drum into collet and tighten by turning wrench clockwise.

- Select either the 60 or 100 grit sanding band (60 grit medium sanding band for quick and efficient grinding down of your pet's nail; 100 grit fine sanding band for smoothing uneven rough nails).
- While pressing the collet lock to keep shaft from turning, firmly, loosen the single screw on the top of the grinding drum by turning the screw counter clockwise.
- Slide off the sanding band and replace with a new sanding band.
- Retighten the screw on top of the grinding drum. This will allow the drum to expand, creating the perfect fit.
- Screw on the protective cap

7