

IMPORTANT SAFEGUARDS

READ ALL INSTRUCTIONS AND SAFEGUARDS BEFORE USING THIS APPLIANCE. When using an electrical appliance, basic precautions should always be followed, including the following:

DANGER:

- To reduce the risk of electrical shock.
- Do not reach for appliance that has fallen into water. Unplug immediately.
- Do not use while bathing or in a shower, tub or sink.
- Do not place or store appliance where it can fall or be pulled into a tub or sink. Do not place it on or drop into water or other liquid.
- Always unplug this appliance before electrical outlet immediately after using.
- Unplug this appliance before cleaning.

WARNING:

- To reduce the risk of burns, fire, electrical shock, or injury to person.
 - An appliance should never be left unattended when plugged in.
 - This appliance is not intended for use by children and other persons whose physical, sensory, or mental capabilities or lack of experience and knowledge prevents them from using the appliance safely without supervision or instruction by a responsible person to ensure that they can use the appliance safely. Children should be supervised by the responsible person to ensure that they do not play with the appliance.
 - Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by manufacturer.
 - Never operate this appliance if it has a damaged cord or plug if it is not working properly, if it has been damaged or dropped in water. Return the appliance to Wahl Clipper Corporation for examination and repair.
 - Keep the cord away from heated surface.
 - Never operate this appliance with the air opening blocked or while on a soft surface, such as a bed or a couch, where the air openings may be blocked. Keep the air openings free of lint, hair and the like.
 - Never drop or insert any object into any opening.
 - Do not operate where aerosol (spray) products are being used.
- Wahl Regular Blade Without Attachment #1037
- *The variables affecting length of cut are greater at these heights even though clipping is normally done with the grain.

Blade Attachment #1	Against the grain	5/32" to 7/32" 1/8" to 1/4"
Blade Attachment #2	With the grain	1/4" to 1/2"
Blade Attachment #3	With the grain	*1/2" to 3/4"
Blade Attachment #4	With the grain	*3/4" to 1"

STAINLESS STEEL BLADE ATTACHMENTS

With the STAINLESS STEEL BLADE ATTACHMENTS, Wahl brings you another fine time-saving development in pet grooming. Three sizes to give you the widest range of cutting heights WITH NO BLADE CHANGING.

—Improved Feed since it goes through most thick and matted hair easily.

—Improved cutting since it lifts and guides hair OVER the Clipper teeth without snagging.

—Polished Tips that won't scratch even delicate skin.

—Designed to quickly attach and lock securely in place.

—Fits all models of Wahl Adjustable Blade Clippers.

SCHNAUZER

Use the Wahl Regular Blade with the Blade Adjustment Lever in the "Coarse" position; use Blade Attachment #1 if a longer trim is desired.

With the Schnauzer, it is most important that it is trimmed at least once before the ear cropping is done, usually completed at 12 weeks of age.

Otherwise, your schnauzer will probably associate clipping with cropping and the next few grooming sessions will be most difficult.

- Stand dog on grooming table. Clip the top of the back from the base of the skull to the base of the tail. Clip the throat, front and sides of the body and the tail. Clip all the areas with the grain. Clip sides and back of rear legs toward the hock; curve the sides into the hock and do not clip the front of the rear legs. Remove Blade Attachment #1.
- Clip stomach area from the rear to the front; clip penis carefully with the grain. Clip skull from a point above the eyebrows to the base of the skull and to the ears. Clip from the outside corner of the eyes to the base of the ears and to the corner of the mouth.
- Set the Blade Adjustment Lever midway between "fine" and "coarse", #15 position, and clip both sides of the ears from the base to the tip.
- Scissor and trim front legs to gain a rounded and straight appearance. Scissor and trim body and rear legs; do the same with eyebrows, muzzle and mustache. The purpose is to achieve a straight and square look.

AIREDALE, IRISH, LAKE LAND, WELSH & WIRE FOX TERRIERS

If you plan to show your terrier and he has wire coat, stripping, not clipping is required. However, clipping is a far easier method of grooming for both pet and groomer.

These terriers are clipped in much the same manner as the Schnauzer except for the rear legs. Use the Wahl Regular Blade with the Blade Adjustment Lever in the "coarse", #10 position and install Blade Attachment #1. Do not clip the rear legs; blend the clipping of the sides into the hips. Scissor and trim the

- used, where oxygen is being administered or near flammable liquids, such as certain flammable blade lubricants or cleaning agents.
- Do not use this appliance with damaged or broken comb, as injury may occur.
- During use, do not place or leave appliance where it may be damaged by an animal or exposed to weather.
- Certain sanitizing solutions and spray lubricants may cause stress crack damage to clippers. We recommend blade lubrication and cleaning with WAHL CLIPPER OIL ONLY.
- To disconnect, turn all controls to "off," then remove plug from outlet.
- If your clipper is supplied with a 3-prong plug, you will need to connect to a properly grounded outlet only. See Grounding Instructions.

SAVE THESE INSTRUCTIONS

This clipper has been designed for household use. The appliance is intended for trimming purposes only.

CORD CARE

The cord should not be used to pull the clipper. Since freedom of movement needs to be maintained, care should be used to keep the cord untwisted and unobstructed.

For an appliance that is equipped with a polarized plug To reduce the risk of electric shock, this appliance has a polarized plug (one blade is wider than the other). This plug fits in a polarized outlet only one way. In the event the plug does not fit fully in the outlet, reverse the plug. In the event it still does not fit, contact a qualified electrician to install the proper outlet. Do not change the plug in any way.

FACTS ABOUT BLADES & CUTTING

- The blades are the single most important part of this clipper.
 - Blades do not become dulled from cutting hair — they are dulled by the abrasive particles on the hair: dirt, sand, etc.
 - Clipper blades should be oiled BEFORE, DURING, AND AFTER clipping; most clipper problems are due to a lack of oil to lubricate and cool.
- These attachments enable you to increase the cutting range of any Wahl Adjustable Blade Set in 1/4" increments, allowing for a longer cut without the purchase of additional blade sets.
- NOTE: These attachment combs are not compatible with the Model 1037-600 extra wide blade set.

GROOMING HORSES

When clipping large animals, care should be taken as some animals may be nervous around the noise and vibration of the clipper.

BEFORE YOU CUT

- Make sure clipper is clean and in perfect working condition.
- Spoke down your horse with clean water and towel dry. Then comb and brush the longer mane and tail.

CUTTING HAIR

- Start with the front legs. Clipping with the grain (or lay) of the hair will give a slightly longer cut. The leg can be clipped while the hoof is on the ground or with the leg in your hand. Clip the fetlocks, being careful around joints and projections. Proceed with all four legs.
- Clip the hair around the muzzle, chin and ears. All the hair on the outside of the ears can be clipped, but avoid clipping the hair on the inside. Be careful, also, when clipping the hair on the edges of the ears; do not hold the clipper with the blades pointing toward the edges, but parallel to the edges.
- If you wish to slick the hair on the mane and tail, hold the hair between your index and middle fingers with the amount of hair you wish to cut protruding above your fingers. Then cut that hair off with a parallel stroke across fingers.
- To thin the hair on the tail and mane, hold your clipper upside down with the blades pointed in toward the hair. Then, starting at the top of the hair and lightly stroking downward in a combing-like manner, remove just a little hair at a time.
- Hair on the body of the horse can either be cut or left longer for weather protection and additional padding. Remember when clipping, that less hair is removed when cutting with the grain; more hair is removed when cutting against the grain of the

eyebrows, muzzle and mustache to the recognized standard of the particular breed.

COCKERS-SETTERS-SPANIELS

Sporting dogs generally require little clipping. However, all longhaired Sporting Dogs can be more effective in the field when properly groomed.

The hunting dog with long, silky hair needs to have his coat kept brushed, clean and free of burrs and tangles. Clipping your dog several weeks in advance of the hunting season will facilitate better hunting, offer greater comfort to the dog and provide easier coat care. Clipping allows the growth of the shorter, denser coat that is both warmer and more resistant to burrs and stickers. Checking your dog's diet to assure a prime coat is also very important.

- Stand dog on grooming table. With the Wahl Regular Blade, Blade Adjustment Lever in the "coarse" position, clip the skull, base of the ears and the throat. Clip "With the Grain" and blend hair.
- Clipping With the Grain, clip the neck, shoulders and chest, using the same blade, with the Blade Adjustment Lever in the "Fine" position and Blade Attachment #1 installed. Blend the hair into the body and lower chest. Clip the legs and tail.
- If it is needed, clip the body. Blade Attachment #5 is suggested; it will leave the hair about 1/2" to 3/4" long. This type of clipping, even though it may detract from the dog's "looks" is a sensible approach for a dog used in hunting.

After a day in the field, go over your dog with a medium comb. A "tangle-remover" spray will help in getting rid of burrs. Check for and treat cuts and injured paws.

SERVICES AND REPAIR

This appliance contains no user-serviceable parts. Any servicing, other than changing of the blades, should be done by Wahl Service Department.

Do not return this product to the store where purchased. If you have problems with your clipper, send it prepaid with a note explaining the problem to:

PRECAUCIONES IMPORTANTES

LEA TODAS LAS INSTRUCCIONES Y PRECAUCIONES ANTES DE USAR ESTA CORTADORA. Cuando se está usando un electrodoméstico, han de seguirse unas precauciones básicas, incluyendo las siguientes:

PRECAUCIÓN:

- No intente recuperar un electrodoméstico que se haya caído en agua. Desenchufe inmediatamente.
- No lo use cuando se esté duchando o bañando. No coloque ni guarde al artefacto donde pueda caerse o ser arrastrado a una tina o un fregadero. No lo coloque ni lo deje caer en el agua u otro líquido.
- Desenchufe siempre este electrodoméstico de la red inmediatamente después de su uso.
- Desenchufe este electrodoméstico antes de limpiarlo.

PELIGRO:

Para reducir el riesgo de quemaduras, fuego, electrocución o daños a personas.

- Un electrodoméstico no se debe dejar desatendido mientras está enchufado.

Este artefacto no debe ser usado por niños o por personas cuyas capacidades físicas, psicológicas o mentales, o falta de experiencia y conocimiento necesarios, les impidan usarlo de forma segura sin la supervisión o instrucción de un responsable que garantice que pueden usarlo de forma segura. Los niños deben ser supervisados por un adulto responsable que garantice que no jueguen con el artefacto.

Use este electrodoméstico solamente para el uso al que ha sido destinado como se describe en este manual. No use accesorios no recomendados por el fabricante.

Nunca use este electrodoméstico si tiene el cable dañado o si el enchufe no está funcionando correctamente, o si ha caído en agua. Devuélvalo a Wahl Clipper para su reparación.

- Mantenga el cable alejado de superficies calientes.
- Nunca use este electrodoméstico si la salida de aire está bloqueada o mientras esté en una superficie blanda, como una cama o un sofá, donde se pueden bloquear esas salidas de aire. Mantenga las salidas de aire libres de residuos, pelo y similares.
- Nunca inserte o deje caer algún objeto en ninguna abertura.
- No use este electrodoméstico donde se estén usando

- Blades will not cut if abrasive particles are picked up and carried by the oil film between the blades. These particles tend to hold the blades apart and cause chattering and pulling instead of clean cutting.
 - Oil the blades performs two, distinct functions:
 - Provides a low friction, very thin film lubricant between the cutting blades so that they can take a full cutting stroke without becoming torn from frictional heat.
 - Flushes away debris and hairs out from between the blades.
- NOTE: If you cut into dirt, immediately wash the blades with oil to flush it out. Working the tapering lever back and forth will assist in removing the dirt particles.**

HOW TO OPERATE YOUR WAHL CLIPPER

By following these simple steps, your Wahl Quality Pet Clipper will provide years of satisfactory service.

- OIL** For maximum efficiency, your clipper blades **MUST** be oiled with each haircut. Place one or two drops of oil on blades while clipper is running. If clipper is brand new or hasn't been used your clipper blades are dry—they require oiling. Do NOT use a heavy oil like Wahl Clipper Oil.
- POWER SCREW** (Not found on all models of Wahl Clippers) If your clipper has a power screw, it has been adjusted for peak efficiency before leaving the factory. However, if voltage in your home is low, you may need to re-adjust it. To adjust power screw, use the plastic brush, a screwdriver or a thin coin to turn power screw in a clockwise direction until the arm strikes the coil, making a noise. Then, slowly turn power screw out (counterclockwise), just until noise stops. This is the maximum power setting.
- BLADES** Do not try to sharpen the clipper blades. Once they become dull, special equipment is needed to resharpen the blades. Also, never wash the blades in water. When the blades do not cut, they may need oiling or resharpening. If you determine the blades need resharpening, you can return them to Wahl Clipper Corp. for resharpening. If you decide to do so, remove the blades from the clipper, pack each blade individually in soft wrapping paper, enclose both blades in a durable container and send to Wahl the hair.
- When you are finished, clean the clipper and oil the blades before packing it away.

GROOMING AND STYLING YOUR DOG

Assemble your supplies: Clipper, oil, blades, screwdriver, slicker brush, attachment combs and comb, scissors, tear-free shampoo, dryer, rubber bath mat, nail cutter.

Be sure all your equipment is in good working condition and easy to reach.

Grooming should be done on a solid table (about 30" high) with a non-slip surface to give your dog a steady and secure footing. A grooming post to secure the dog would be of considerable aid. Good lighting is essential. The light should be adequately bright and evenly distributed; there should be no shadows.

Steps in Grooming:

- Brush out coat thoroughly
 - Remove all snarls, knots, tangles and mats.
- Part the hair
 - Soak the dog thoroughly.
 - Apply shampoo and work into a good lather.
 - Pay particular attention to the rectum and pads (bottom of the paws).
 - Rinse carefully also not to get soap in the dog's eyes (for safety use a "tear-free" shampoo).
 - Rinse very thoroughly.
 - Squeeze legs, ears and tail.
 - Towel dry.
 - Fluff dry or brush and dry.
- Start with the legs using a wire brush and moving up to the body.
 - Direct dry to the area you are brushing. Do one spot at a time.
 - Use light, fluffing strokes.
 - Use light, should be no snags or tangles when you are done.

POODLE

Because their hair grows so rapidly, poodles need to be groomed much more often than other breeds.

Clipping the Feet

- The feet are cut with a Wahl Regular Blade #1037-400.
- The adjustment lever is in the Coarse Position (#10 position)
- Clipping is done "Against the grain" (Fig. #6)
 - Sit the dog on the table facing you.
 - Bring rear leg forward near front leg (Fig. #7)
 - Clip sides of foot from NAIL to end of toes.
 - Clip hair on top of toes using the natural stop at the ankle joint-do not trim up the ankle.

NOW—Set Blade Adjustment Lever in middle between COARSE and FINE (#15 Position). Use Wahl Regular Blade #1037-400.

- Being careful not to nick the top webbing, use your free hand with the thumb on top (Fig. #8) and your forefinger, underneath to spread the toes apart. Cut the hair between the toes.
- Follow the same step and do the other 3 feet.
- Again grasp the rear leg and bring it toward you.
- Spread bottom pads with your thumb (Fig. #9) and cut hair between the toes and pads. Again, DO NOT NICK the webbing.
- Do the other three feet.
- Check feet for any stray hair.

Clipping the Tail

Clipping the TOP of the tail is done AGAINST the GRAIN. Clipping the BOTTOM of the tail is done WITH the GRAIN.

Use Wahl Regular Blade #1037-400 with Blade Adjustment lever in #15 position.

- Stand dog with his tail toward you.
- Hold tail with free hand and cut the top and sides from the middle toward the body.
- Clip bottom from the body toward the middle (Fig. #10).
- Comb out pom-pom (ball at end of tail).
- Use SCISSORS—Trim around pom-pom to make the largest ball possible (Fig. #11)

Clipping Claws and Throat

BLADE-WAHL REGULAR #1037-400

Wahl Clipper Corporation
Attn: Service Department
3001 Locust Street
Sterling, Illinois 61081
Telephone: 1-800-PRO-WAHL or visit www.wahl.com

Sharp clipper blades cut faster. FOR GENUINE FACTORY BLADE SHARPENING, remove as a set (do not send one blade only). Please wrap blades securely when mailing them to Wahl. Blades will be resharpened for a nominal charge.

Return to:

Wahl Clipper Corporation
Attn: Service Department
3001 Locust Street
Sterling, Illinois 61081

For products purchased in Europe, return to:
Wahl Europe
Herne Bay Trade Park
Herne Bay, Kent CT6 8JZ England

For products purchased outside the United States or Europe, contact your distributor.

New replacement blades are available from your retail tack or pet shop or from Wahl Clipper Corporation.

If a 13 amp (BS 1363) plug is used, a 3 amp fuse must be fitted, or if any other type of plug is used, a 5 amp fuse must be fitted either in the plug or adapter at the distribution board. Replacement fuses should be ASTA approved to BS 1362.

Fuse cover must be fitted when changing the fuse. If fuse cover is lost, the plug

- productos de aerosol, donde se esté administrando oxígeno o cerca de líquidos inflamables, como algunos lubricantes de cuchillas o agentes limpiadores.
- No use este electrodoméstico con uno de los peines roto o dañado, ya que podría producir lesiones.
- Durante su uso, no coloque o deje este electrodoméstico donde pueda ser dañado por animales o pueda estar expuesto a las inclemencias del tiempo.
- Algunos líquidos de limpieza y lubricantes en spray pueden causar daños de estrés a las cortadoras. Recomendamos la lubricación de las cuchillas y la limpieza con ACEITE WAHL CLIPPER SOLAMENTE.
- Para desconectar, apague todo los controles a la posición "OFF" y euego el enchufe de la salida de toma corrientes.
- Si su cortadora viene con un enchufe de 3 espigas, deberá conectarla únicamente a un tomacorriente con conexión a tierra apropiada. Vea las instrucciones de conexión a tierra

GUARDE ESTAS INSTRUCCIONES

Esta cortadora ha sido diseñada sólo para su uso do-méstico. El dispositivo está diseñado sólo con fines de recorte.

MANTENIMIENTO DEL CABLE

Para reducir el riesgo de electrocución, este electrodoméstico tiene un enchufe polarizado (una de las patas del enchufe es más ancha que la otra). Este enchufe encaja en una toma de corriente polarizada solamente de una forma. En el caso en el que el enchufe no entre en la toma de corriente, déle la vuelta. En caso de que todavía no quepa, contacte con un electricista cualificado para instalar la toma de corriente adecuada. No cambie el enchufe de ninguna forma.

NOTAS ACERCA DE CUCHILLAS Y CORTES

- Las cuchillas son el elemento más importante de esta cortadora.
- Las cuchillas no se gastan por cortar el pelo - se gastan por las partículas de la suciedad. Se cobrára un importe nominal por el realleado o sustitución. Para sacar las cuchillas, afilae y saque los dos tornillos de la cuchilla de abajo. Vuévalas a colocar y apriételes.
- ALINEADO DE LAS CUCHILLAS** Las cuchillas deben realinearse si se han sacado para limpieza o reemplazo.
- Si su cortadora tiene una palanca de control - coloque la palanca en la

- Clipper Corp., 3001 Locust Street, Sterling, IL 61081 ATTN: Service Dept. A nominal fee will be charged for resharpening. To remove cutting blades for sharpening or replacement, loosen and remove the 2 screws on bottom blade. Replace same and retighten.
- BLADE ALIGNMENT** Blades must be realigned if they have been removed for cleaning or replacement.
 - If your clipper has a taper lever - position the taper lever in the close position.
 - Flatten the blades with a clean, dry or dampened cloth. Do NOT USE benzine or thinner to clean the unit.
 - Do not store the clipper in a wet or moist environment.
 - Do not touch any of the internal mechanisms. If the unit should need repair, do not repair it yourself. Return it to Wahl Clipper Corporation.
 - When stored, make sure cord is not nicked, twisted or obstructed. It should be coiled and the unit placed in a dry place, away from children.
 - Only use the specified electric power source shown on the rating plate.
 - The cutting blades furnished with Wahl Pet Clippers are made of a special high carbon steel scientifically heat treated for correct hardness. Years of experience have created a special process for grinding these blades to a super sharpness.
 - Be careful not to drop your clipper or to "nick" the blades.
 - Always replace the blade guard when the clipper is not in use. This will help prevent accidental damage and blade dulling.
 - Periodically flip the teeth of the blade in a shallow pan of Wahl Clipper Oil (with clipper running) to flush out dirt and hair.
 - Run the clipper through the hair only as fast as it is able to completely cut until the hair falls. The taper lever adds versatility to your clipper by allowing you to gradually change the closeness of your cut without a guide comb. When the lever is in the uppermost position, Pushing the lever downward gradually increases the cutting length. In its lowest position, the taper lever will leave the hair approximately the same length as the 1/8" guide comb.
 - The taper lever will also extend the use of your blades since a different cutting edge is used in each setting. In addition, if extremely heavy haircutting has jammed the blades, it will help you remove hair that has become wedged between the two blades without removing the blades. While the clipper is running, rapidly move the lever from

- TAPER LEVER** Some Wahl Clippers are equipped with an adjustable taper lever. The taper lever is conveniently located near your thumb (if you're right-handed), so it can easily be adjusted while the clipper is in your hand. The taper lever adds versatility to your clipper by allowing you to gradually change the closeness of your cut without a guide comb. When the lever is in the uppermost position, Pushing the lever downward gradually increases the cutting length. In its lowest position, the taper lever will leave the hair approximately the same length as the 1/8" guide comb. The taper lever will also extend the use of your blades since a different cutting edge is used in each setting. In addition, if extremely heavy haircutting has jammed the blades, it will help you remove hair that has become wedged between the two blades without removing the blades. While the clipper is running, rapidly move the lever from

- groomed much more often than other breeds.
- Clipping the Feet
- The feet are cut with a Wahl Regular Blade #1037-400.
- The adjustment lever is in the Coarse Position (#10 position)
- Clipping is done "Against the grain" (Fig. #6)
 - Sit the dog on the table facing you.
 - Bring rear leg forward near front leg (Fig. #7)
 - Clip sides of foot from NAIL to end of toes.
 - Clip hair on top of toes using the natural stop at the ankle joint-do not trim up the ankle.
- NOW—Set Blade Adjustment Lever in middle between COARSE and FINE (#15 Position). Use Wahl Regular Blade #1037-400.
- Being careful not to nick the top webbing, use your free hand with the thumb on top (Fig. #8) and your forefinger, underneath to spread the toes apart. Cut the hair between the toes.
- Follow the same step and do the other 3 feet.
- Again grasp the rear leg and bring it toward you.
- Spread bottom pads with your thumb (Fig. #9) and cut hair between the toes and pads. Again, DO NOT NICK the webbing.
- Do the other three feet.
- Check feet for any stray hair.

Clipping the Tail

Clipping the TOP of the tail is done AGAINST the GRAIN. Clipping the BOTTOM of the tail is done WITH the GRAIN.

Use Wahl Regular Blade #1037-400 with Blade Adjustment lever in #15 position.

- Stand dog with his tail toward you.
- Hold tail with free hand and cut the top and sides from the middle toward the body.
- Clip bottom from the body toward the middle (Fig. #10).
- Comb out pom-pom (ball at end of tail).
- Use SCISSORS—Trim around pom-pom to make the largest ball possible (Fig. #11)

Clipping Claws and Throat


BLADE-WAHL REGULAR #1037-400

must not be used until a replacement is obtained. Information for obtaining the correct fuse carrier is marked on the carrier itself and in the bottom of the fuse cavity on the plug. These may be obtained from Wahl UK

If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.

For an appliance that is equipped with a grounded plug

GROUNDING INSTRUCTIONS

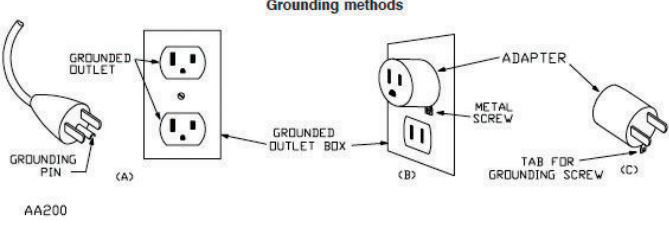

This appliance should be grounded. In the event of an electrical short circuit, grounding reduces the risk of electric shock by providing an escape wire for the electric current. This appliance is equipped with a cord having a grounding wire with an appropriate grounding plug. The plug must be plugged into an outlet that is properly installed and grounded in accordance with all local codes and ordinances.

DANGER - Improper use of the grounding plug can result in a risk of electric shock. If repair or replacement of the cord or plug is necessary, do not connect the grounding wire to other flat-blade terminal. The wire with insulation having an outer surface that is green with or without yellow stripes is the grounding wire.

Check with a qualified electrician or serviceman if the grounding instructions are not completely understood, or if in doubt as to whether the appliance is properly grounded. Do not modify the plug provided if it will not fit the outlet, have the proper outlet installed by a qualified electrician.

This appliance is for use on a nominal 120-V circuit, and has a grounding plug that looks like the plug illustrated in sketch A in

- tienen a mantener las cuchillas separadas y enganchan y tiran del pelo en vez de cortarlo limpiamente.
- El acedado de las cuchillas realiza dos funciones distintas:
 - Provee una película muy fina de lubricante de baja fricción entre las cuchillas, de forma que puedan cortar limpiamente sin calentarse por la fricción.
 - Elimina partículas abrasivas y pelo de entre las cuchillas.
- AVISO:** Si usted corta en suciedad, lave inmediatamente las cuchillas con el aceite para eliminarla. Si mueve la palanca de ajuste de delante hacia atrás, ayudará a eliminar las partículas de suciedad.

- CÓMO OPERAR SU CORTADORA WAHL** Siguiendo estos simples pasos, su cortadora Wahl Quality Pet, la debe afeitar de sereno y satisfactorio.
- ACEITE** Para máxima eficiencia, las cuchillas de su cortadora DEBEN estar aceitadas con cada corte de pelo. Coloque una o dos gotas de aceite en las cuchillas mientras la cortadora está funcionando. Si la cortadora es nueva o no ha sido usada las cuchillas de su cortadora están secas—requieren aceite. NO USE un aceite especial. Use solamente el aceite WAHL Clipper. Haciendo esto cada vez que se aceda a la cortadora, ayudará a mantener las cuchillas libres de pelo. Si su cortadora no corta y está procediendo no ayuda, sus cuchillas pueden estar desafiladas. Reemplázalas o devuélvalas a Wahl para su afilado.
- PALANCA DE CONTROL** Algunas cortadoras Wahl están equipadas con una palanca de control ajustable. La palanca de control está convenientemente situada cerca de su dedo pulgar (si usted usa su mano derecha), de forma que puede ser ajustada cómodamente mientras la cortadora está en su mano. La palanca de control afilado versatilidad a su cortadora y le permite cambiar gradualmente la clase de corte que necesita sin el peine guía. Cuando la palanca está en la posición más alta, las cuchillas le darán el corte más apurado y dejarán el pelo muy corto. Empujando la palanca hacia abajo, se incrementa gradualmente el largo de corte. En su posición más baja, la palanca de control dejará el pelo en un largo aproximadamente igual al largo de corte de un peine guía de 1/8" pulgadas. La palanca de control puede extenderá también el uso de sus cuchillas ya que se usa un diferente corte en cada posición. Además, si un corte en un pelo demasiado grueso ha atacado las cuchillas, ayudará a sacar el pelo que ha quedado atrapado entre las dos cuchillas. Mientras la cortadora está funcionando, mueva rápidamente la palanca de control de la posición más alta a la posición más baja, un par de veces. Haciendo esto cada vez que ha acabado de usar la cortadora, ayudará a mantener las cuchillas libres de pelo. Si su cortadora no corta y está procediendo no ayuda, sus cuchillas pueden estar desafiladas. Reemplázalas o devuélvalas a Wahl para su afilado.
- MANTENIMIENTO DE LA CORTADORA Y SERVICIO**
 - Para limpiar la unidad use un paño limpio y seco o húmedo. NO USE benceno o químicos para limpiar la unidad.
 - No guarde la cortadora en un entorno mojado o húmedo.
 - No toque los mecanismos internos. Si la cortadora necesitara reparación, no la repare usted mismo. Devuélvala a Wahl Clipper Corporation.
 - Cuando esté guardada, asegúrese de que el cable no esté enganchado.

"close cut" to "longer cut" a couple of times. Doing this each time you've finished using your clipper will help keep the blades clear of cut hair. If your clipper stops cutting and this does not help, your cutting blades may be dull. Either replace them or return them to Wahl for sharpening.

CLIPPER CARE AND SERVICE

- To clean the blades, use either a clean, dry or dampened cloth. Do NOT USE benzine or thinner to clean the unit.
- Do not store the clipper in a wet or moist environment.
- Do not touch any of the internal mechanisms. If the unit should need repair, do not repair it yourself. Return it to Wahl Clipper Corporation.
- When stored, make sure cord is not nicked, twisted or obstructed. It should be coiled and the unit placed in a dry place, away from children.
- Only use the specified electric power source shown on the rating plate.
- The cutting blades furnished with Wahl Pet Clippers are made of a special high carbon steel scientifically heat treated for correct hardness. Years of experience have created a special process for grinding these blades to a super sharpness.
- Be careful not to drop your clipper or to "nick" the blades.
- Always replace the blade guard when the clipper is not in use. This will help prevent accidental damage and blade dulling.
- Periodically flip the teeth of the blade in a shallow pan of Wahl Clipper Oil (with clipper running) to flush out dirt and hair.
- Run the clipper through the hair only as fast as it is able to completely cut until the hair falls. The taper lever adds versatility to your clipper by allowing you to gradually change the closeness of your cut without a guide comb. When the lever is in the uppermost position, Pushing the lever downward gradually increases the cutting length. In its lowest position, the taper lever will leave the hair approximately the same length as the 1/8" guide comb.
- The taper lever will also extend the use of your blades since a different cutting edge is used in each setting. In addition, if extremely heavy haircutting has jammed the blades, it will help you remove hair that has become wedged between the two blades without removing the blades. While the clipper is running, rapidly move the lever from

ADJ. LEVER SETTING-#15 POSITION
DIRECTION OF CUT-AGAINST THE GRAIN

CAUTION: This is a very sensitive area, too close of cut may cause razor burns. SUGGESTION: You may want to "rough trim" the face and throat by first clipping WITH the GRAIN.

BEFORE YOU START CUTTING read these points:

- The area to be clipped (Figure 12 to 15).
 - Turn the ears back or place a rubber band behind the head.
 - Figure #12 shows the boundary of the area to be clipped.
 - The clipper is NOT used above the eyes.
 - Use a RUBBER BAND or CLOTH BAND to keep the topknot (bangs) out of the clipping area.
- CLIPPING
- Sit dog on table facing you.
 - Hold muzzle (upper jaw and nose area) shut with your free hand.
 - Begin your cut from left ear to the outside of the left eye in a STRAIGHT LINE.
 - With your left hand, stretch the skin at the outside corner of left eye upward and backward. Clip CAREFULLY under the eye. USE Figure #12 as your guide.
 - Do the same thing on the right side. Hold the clipper with your left hand and repeat the same step on the right side.
 - Using the thumb of your free hand, keep the skin stretched at the corner of the mouth and your hand itself to hold the mouth closed.
 - Clip around the mouth and lips.
 - Clip the cheek and side of face.
 - REVERSE the procedure on the other side
 - With your free hand, hold the muzzle and clip the area looking like an upside down "V" between the eyes and down the nose. DO NOT cut above the eyes.
 - Hold the muzzle and clip away from the eyes toward the nose.
 - Hold your dog's head and clip the bottom of the muzzle (Figure #15). The Adam's apple area is usually the stopping

Figure 60.1. A temporary adapter, which