 


Wahl Professional Power Station
Model No. MPCS

Operating Manual
Manual De Operación
Manual D'Utilisation

Wahl Clipper Corporation offers a limited warranty on this product.
Please visit our website for full warranty terms.

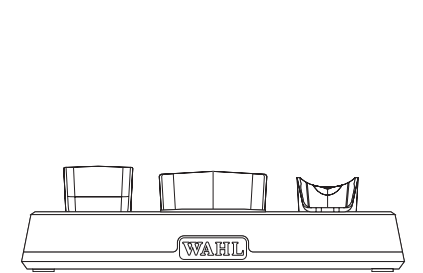

Fits:
Cord/Cordless Designer
Cord/Cordless Magic Clip
Cord/Cordless Senior
Cord/Cordless Sterling 4
Hi-Viz
Detailer Li
Align
Vanish

©2024 WAHL CLIPPER CORPORATION
Sterling, IL USA

FORM #1008268

IMPORTANT
SAFEGUARDS

When using your electrical appliance, basic precautions should always be followed, including the following:

READ ALL INSTRUCTIONS AND SAFEGUARDS
BEFORE USING THIS APPLIANCE.

DANGER

- To reduce the risk of death or injury by electric shock:
- Do not place or store appliance where it can fall or be pulled into a tub or sink. Do not place in or drop into water or other liquids.
 - Do not reach for an appliance that has fallen into water or other liquids. Immediately unplug from the outlet, then remove.
 - Always unplug this appliance before cleaning.
 - Only clean the appliance with a dry rag.

WARNING

- To reduce the risk of burns, fire, electric shock, or injury to persons:
- This appliance may be used by children aged 14 and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction, by a person responsible for their safety, concerning the use of the appliance in a safe way and understand the hazards involved. Children should be supervised to ensure that they do not play with the appliance. Cleaning and user maintenance shall not be done by children without supervision.
 - Do not use if the appliance has been dropped, damaged, has a damaged cord, has a damaged power supply, damaged plug, has fallen into liquids, or if it is not working properly. Return the appliance to Wahl Clipper Corporation for examination and repair.
 - Only use with Wahl approved appliances. Not all Wahl devices are approved for use with this appliance. Check for approved devices listed below or with Wahl customer service to verify which units may be used with this device.
 - Only use with the power supply provided with the appliance.
 - Keep the air openings free of lint, hair, and similar objects
 - Never drop or insert any object into any opening of the appliance unless specified to do so in this Instruction Book.
 - Make sure the power supply uses the appropriate plug prongs for the country of use.

TECHNICAL SUPPORT AND QUESTIONS

Phone: 1-800-776-9245
Email: techsupport@wahlclipper.com
Website: www.wahlpro.com

Wahl Clipper Corporation offers a limited warranty on this product.
Please visit our website for full warranty terms.

For servicing, please ship your product prepaid to:

Wahl Service Center
3001 North Locust Street
Sterling, IL 61081

For servicing or repair of products purchased in Canada,
please contact

Pour l'entretien ou la réparation des produits achetés au Canada,
veuillez nous contacter au

1-866-787-9245 or info@wahlcanada.com

f i t t o
FIND US ON SOCIAL MEDIA



©2024 WAHL CLIPPER CORPORATION
Sterling, IL USA

FORM #1008268

IMPORTANT
SAFEGUARDS

When using your electrical appliance, basic precautions should always be followed, including the following:

READ ALL INSTRUCTIONS AND SAFEGUARDS
BEFORE USING THIS APPLIANCE.

DANGER

- To reduce the risk of death or injury by electric shock:
- Do not place or store appliance where it can fall or be pulled into a tub or sink. Do not place in or drop into water or other liquids.
 - Do not reach for an appliance that has fallen into water or other liquids. Immediately unplug from the outlet, then remove.
 - Always unplug this appliance before cleaning.
 - Only clean the appliance with a dry rag.

WARNING

- To reduce the risk of burns, fire, electric shock, or injury to persons:
- This appliance may be used by children aged 14 and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction, by a person responsible for their safety, concerning the use of the appliance in a safe way and understand the hazards involved. Children should be supervised to ensure that they do not play with the appliance. Cleaning and user maintenance shall not be done by children without supervision.
 - Do not use if the appliance has been dropped, damaged, has a damaged cord, has a damaged power supply, damaged plug, has fallen into liquids, or if it is not working properly. Return the appliance to Wahl Clipper Corporation for examination and repair.
 - Only use with Wahl approved appliances. Not all Wahl devices are approved for use with this appliance. Check for approved devices listed below or with Wahl customer service to verify which units may be used with this device.
 - Only use with the power supply provided with the appliance.
 - Keep the air openings free of lint, hair, and similar objects
 - Never drop or insert any object into any opening of the appliance unless specified to do so in this Instruction Book.
 - Make sure the power supply uses the appropriate plug prongs for the country of use.

For Products Marked
with an FCC Approval:

- This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
- Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this device.
- Note: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

f i t t o
FIND US ON SOCIAL MEDIA



©2024 WAHL CLIPPER CORPORATION
Sterling, IL USA

FORM #1008268

IMPORTANT
SAFEGUARDS

When using your electrical appliance, basic precautions should always be followed, including the following:

READ ALL INSTRUCTIONS AND SAFEGUARDS
BEFORE USING THIS APPLIANCE.

DANGER

- To reduce the risk of death or injury by electric shock:
- Do not place or store appliance where it can fall or be pulled into a tub or sink. Do not place in or drop into water or other liquids.
 - Do not reach for an appliance that has fallen into water or other liquids. Immediately unplug from the outlet, then remove.
 - Always unplug this appliance before cleaning.
 - Only clean the appliance with a dry rag.

WARNING

- To reduce the risk of burns, fire, electric shock, or injury to persons:
- This appliance may be used by children aged 14 and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction, by a person responsible for their safety, concerning the use of the appliance in a safe way and understand the hazards involved. Children should be supervised to ensure that they do not play with the appliance. Cleaning and user maintenance shall not be done by children without supervision.
 - Do not use if the appliance has been dropped, damaged, has a damaged cord, has a damaged power supply, damaged plug, has fallen into liquids, or if it is not working properly. Return the appliance to Wahl Clipper Corporation for examination and repair.
 - Only use with Wahl approved appliances. Not all Wahl devices are approved for use with this appliance. Check for approved devices listed below or with Wahl customer service to verify which units may be used with this device.
 - Only use with the power supply provided with the appliance.
 - Keep the air openings free of lint, hair, and similar objects
 - Never drop or insert any object into any opening of the appliance unless specified to do so in this Instruction Book.
 - Make sure the power supply uses the appropriate plug prongs for the country of use.

Para Productos Marcados
con Aprobación de la FCC:

- Este dispositivo cumple con la parte 15 de las Reglas de la FCC. Su operación está sujeta a las dos condiciones siguientes: (1) Este dispositivo no puede causar interferencia nociva, y (2) este dispositivo debe aceptar cualquier interferencia recibida, incluyendo la interferencia que pueda causar una operación indeseada.
- Los cambios y modificaciones que no sean aprobados explícitamente por la parte responsable del cumplimiento podrían anular la autorización del usuario para usar este dispositivo.
- Nota: Este equipo ha sido probado y se ha determinado que cumple con los límites de un dispositivo digital de Clase A, en los términos de la parte 15 de las Reglas de la FCC. Estos límites están diseñados para brindar una protección razonable contra la interferencia nociva cuando el equipo se utiliza en un ambiente comercial. Este equipo genera, utiliza y puede emitir energía de radiofrecuencia y, de no instalarse y usarse de acuerdo con el manual de instrucciones, puede causar interferencia nociva a las radiocomunicaciones. El uso de este equipo en un área residencial tiene altas probabilidades de provocar interferencia nociva, en cuyo caso el usuario tendrá la obligación de corregir la interferencia por cuenta propia.

f i t t o
FIND US ON SOCIAL MEDIA



©2024 WAHL CLIPPER CORPORATION
Sterling, IL USA

FORM #1008268

IMPORTANT
SAFEGUARDS

When using your electrical appliance, basic precautions should always be followed, including the following:

READ ALL INSTRUCTIONS AND SAFEGUARDS
BEFORE USING THIS APPLIANCE.

DANGER

- To reduce the risk of death or injury by electric shock:
- Do not place or store appliance where it can fall or be pulled into a tub or sink. Do not place in or drop into water or other liquids.
 - Do not reach for an appliance that has fallen into water or other liquids. Immediately unplug from the outlet, then remove.
 - Always unplug this appliance before cleaning.
 - Only clean the appliance with a dry rag.

WARNING

- To reduce the risk of burns, fire, electric shock, or injury to persons:
- This appliance may be used by children aged 14 and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction, by a person responsible for their safety, concerning the use of the appliance in a safe way and understand the hazards involved. Children should be supervised to ensure that they do not play with the appliance. Cleaning and user maintenance shall not be done by children without supervision.
 - Do not use if the appliance has been dropped, damaged, has a damaged cord, has a damaged power supply, damaged plug, has fallen into liquids, or if it is not working properly. Return the appliance to Wahl Clipper Corporation for examination and repair.
 - Only use with Wahl approved appliances. Not all Wahl devices are approved for use with this appliance. Check for approved devices listed below or with Wahl customer service to verify which units may be used with this device.
 - Only use with the power supply provided with the appliance.
 - Keep the air openings free of lint, hair, and similar objects
 - Never drop or insert any object into any opening of the appliance unless specified to do so in this Instruction Book.
 - Make sure the power supply uses the appropriate plug prongs for the country of use.

For Products Marked
with an FCC Approval:

- This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
- Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this device.
- Note: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

f i t t o
FIND US ON SOCIAL MEDIA



©2024 WAHL CLIPPER CORPORATION
Sterling, IL USA

FORM #1008268

IMPORTANT
SAFEGUARDS

When using your electrical appliance, basic precautions should always be followed, including the following:

READ ALL INSTRUCTIONS AND SAFEGUARDS
BEFORE USING THIS APPLIANCE.

DANGER

- To reduce the risk of death or injury by electric shock:
- Do not place or store appliance where it can fall or be pulled into a tub or sink. Do not place in or drop into water or other liquids.
 - Do not reach for an appliance that has fallen into water or other liquids. Immediately unplug from the outlet, then remove.
 - Always unplug this appliance before cleaning.
 - Only clean the appliance with a dry rag.

WARNING

- To reduce the risk of burns, fire, electric shock, or injury to persons:
- This appliance may be used by children aged 14 and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction, by a person responsible for their safety, concerning the use of the appliance in a safe way and understand the hazards involved. Children should be supervised to ensure that they do not play with the appliance. Cleaning and user maintenance shall not be done by children without supervision.
 - Do not use if the appliance has been dropped, damaged, has a damaged cord, has a damaged power supply, damaged plug, has fallen into liquids, or if it is not working properly. Return the appliance to Wahl Clipper Corporation for examination and repair.
 - Only use with Wahl approved appliances. Not all Wahl devices are approved for use with this appliance. Check for approved devices listed below or with Wahl customer service to verify which units may be used with this device.
 - Only use with the power supply provided with the appliance.
 - Keep the air openings free of lint, hair, and similar objects
 - Never drop or insert any object into any opening of the appliance unless specified to do so in this Instruction Book.
 - Make sure the power supply uses the appropriate plug prongs for the country of use.

Para Productos Marcados
con Aprobación de la FCC:

- Este dispositivo cumple con la parte 15 de las Reglas de la FCC. Su operación está sujeta a las dos condiciones siguientes: (1) Este dispositivo no puede causar interferencia nociva, y (2) este dispositivo debe aceptar cualquier interferencia recibida, incluyendo la interferencia que pueda causar una operación indeseada.
- Los cambios y modificaciones que no sean aprobados explícitamente por la parte responsable del cumplimiento podrían anular la autorización del usuario para usar este dispositivo.
- Nota: Este equipo ha sido probado y se ha determinado que cumple con los límites de un dispositivo digital de Clase A, en los términos de la parte 15 de las Reglas de la FCC. Estos límites están diseñados para brindar una protección razonable contra la interferencia nociva cuando el equipo se utiliza en un ambiente comercial. Este equipo genera, utiliza y puede emitir energía de radiofrecuencia y, de no instalarse y usarse de acuerdo con el manual de instrucciones, puede causar interferencia nociva a las radiocomunicaciones. El uso de este equipo en un área residencial tiene altas probabilidades de provocar interferencia nociva, en cuyo caso el usuario tendrá la obligación de corregir la interferencia por cuenta propia.

f i t t o
FIND US ON SOCIAL MEDIA



©2024 WAHL CLIPPER CORPORATION
Sterling, IL USA

FORM #1008268

IMPORTANT
SAFEGUARDS

When using your electrical appliance, basic precautions should always be followed, including the following:

READ ALL INSTRUCTIONS AND SAFEGUARDS
BEFORE USING THIS APPLIANCE.

DANGER

- To reduce the risk of death or injury by electric shock:
- Do not place or store appliance where it can fall or be pulled into a tub or sink. Do not place in or drop into water or other liquids.
 - Do not reach for an appliance that has fallen into water or other liquids. Immediately unplug from the outlet, then remove.
 - Always unplug this appliance before cleaning.
 - Only clean the appliance with a dry rag.

WARNING

- To reduce the risk of burns, fire, electric shock, or injury to persons:
- This appliance may be used by children aged 14 and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction, by a person responsible for their safety, concerning the use of the appliance in a safe way and understand the hazards involved. Children should be supervised to ensure that they do not play with the appliance. Cleaning and user maintenance shall not be done by children without supervision.
 - Do not use if the appliance has been dropped, damaged, has a damaged cord, has a damaged power supply, damaged plug, has fallen into liquids, or if it is not working properly. Return the appliance to Wahl Clipper Corporation for examination and repair.
 - Only use with Wahl approved appliances. Not all Wahl devices are approved for use with this appliance. Check for approved devices listed below or with Wahl customer service to verify which units may be used with this device.
 - Only use with the power supply provided with the appliance.
 - Keep the air openings free of lint, hair, and similar objects
 - Never drop or insert any object into any opening of the appliance unless specified to do so in this Instruction Book.
 - Make sure the power supply uses the appropriate plug prongs for the country of use.

For Products Marked
with an FCC Approval:

- This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
- Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this device.
- Note: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

f i t t o
FIND US ON SOCIAL MEDIA



©2024 WAHL CLIPPER CORPORATION
Sterling, IL USA

FORM #1008268

IMPORTANT
SAFEGUARDS

When using your electrical appliance, basic precautions should always be followed, including the following:

READ ALL INSTRUCTIONS AND SAFEGUARDS
BEFORE USING THIS APPLIANCE.

DANGER

- To reduce the risk of death or injury by electric shock:
- Do not place or store appliance where it can fall or be pulled into a tub or sink. Do not place in or drop into water or other liquids.
 - Do not reach for an appliance that has fallen into water or other liquids. Immediately unplug from the outlet, then remove.
 - Always unplug this appliance before cleaning.
 - Only clean the appliance with a dry rag.

WARNING

- To reduce the risk of burns, fire, electric shock, or injury to persons:
- This appliance may be used by children aged 14 and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction, by a person responsible for their safety, concerning the use of the appliance in a safe way and understand the hazards involved. Children should be supervised to ensure that they do not play with the appliance. Cleaning and user maintenance shall not be done by children without supervision.
 - Do not use if the appliance has been dropped, damaged, has a damaged cord, has a damaged power supply, damaged plug, has fallen into liquids, or if it is not working properly. Return the appliance to Wahl Clipper Corporation for examination and repair.
 - Only use with Wahl approved appliances. Not all Wahl devices are approved for use with this appliance. Check for approved devices listed below or with Wahl customer service to verify which units may be used with this device.
 - Only use with the power supply provided with the appliance.
 - Keep the air openings free of lint, hair, and similar objects
 - Never drop or insert any object into any opening of the appliance unless specified to do so in this Instruction Book.
 - Make sure the power supply uses the appropriate plug prongs for the country of use.

Para Productos Marcados
con Aprobación de la FCC:

- Este dispositivo cumple con la parte 15 de las Reglas de la FCC. Su operación está sujeta a las dos condiciones siguientes: (1) Este dispositivo no puede causar interferencia nociva, y (2) este dispositivo debe aceptar cualquier interferencia recibida, incluyendo la interferencia que pueda causar una operación indeseada.
- Los cambios y modificaciones que no sean aprobados explícitamente por la parte responsable del cumplimiento podrían anular la autorización del usuario para usar este dispositivo.
- Nota: Este equipo ha sido probado y se ha determinado que cumple con los límites de un dispositivo digital de Clase A, en los términos de la parte 15 de las Reglas de la FCC. Estos límites están diseñados para brindar una protección razonable contra la interferencia nociva cuando el equipo se utiliza en un ambiente comercial. Este equipo genera, utiliza y puede emitir energía de radiofrecuencia y, de no instalarse y usarse de acuerdo con el manual de instrucciones, puede causar interferencia nociva a las radiocomunicaciones. El uso de este equipo en un área residencial tiene altas probabilidades de provocar interferencia nociva, en cuyo caso el usuario tendrá la obligación de corregir la interferencia por cuenta propia.

f i t t o
FIND US ON SOCIAL MEDIA



©2024 WAHL CLIPPER CORPORATION
Sterling, IL USA

FORM #1008268

IMPORTANT
SAFEGUARDS

When using your electrical appliance, basic precautions should always be followed, including the following:

READ ALL INSTRUCTIONS AND SAFEGUARDS
BEFORE USING THIS APPLIANCE.

DANGER

- To reduce the risk of death or injury by electric shock:
- Do not place or store appliance where it can fall or be pulled into a tub or sink. Do not place in or drop into water or other liquids.
 - Do not reach for an appliance that has fallen into water or other liquids. Immediately unplug from the outlet, then remove.
 - Always unplug this appliance before cleaning.
 - Only clean the appliance with a dry rag.

WARNING

- To reduce the risk of burns, fire, electric shock, or injury to persons:
- This appliance may be used by children aged 14 and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction, by a person responsible for their safety, concerning the use of the appliance in a safe way and understand the hazards involved. Children should be supervised to ensure that they do not play with the appliance. Cleaning and user maintenance shall not be done by children without supervision.
 - Do not use if the appliance has been dropped, damaged, has a damaged cord, has a damaged power supply, damaged plug, has fallen into liquids, or if it is not working properly. Return the appliance to Wahl Clipper Corporation for examination and repair.
 - Only use with Wahl approved appliances. Not all Wahl devices are approved for use with this appliance. Check for approved devices listed below or with Wahl customer service to verify which units may be used with this device.
 - Only use with the power supply provided with the appliance.
 - Keep the air openings free of lint, hair, and similar objects
 - Never drop or insert any object into any opening of the appliance unless specified to do so in this Instruction Book.
 - Make sure the power supply uses the appropriate plug prongs for the country of use.

FORM #1008268

FORM #1008268

FORM #1008268

FORM #1008268

FORM #1008268

FORM #1008268

FORM #1008268

FORM #1008268

MEDIDAS DE SEGURIDAD IMPORTANTES

Cuando use su aparato eléctrico, siempre debe cumplir ciertas precauciones de seguridad básicas, incluidas las siguientes: **LEA TODAS LAS INSTRUCCIONES Y MEDIDAS DE SEGURIDAD ANTES DE USAR ESTE APARATO.**

PELIGRO

- Para reducir el riesgo de muerte o lesiones por descarga eléctrica:**
- No coloque ni guarde el aparato donde pueda caerse o ser arrastrado a una tina o un fregadero. No lo coloque ni lo deje caer en la agua u otros líquidos.
 - No trate de tomar un aparato que haya caído en la agua o en otros líquidos. Desconéctelo de inmediato del tomacorriente, y luego sáquelo.
 - Siempre desenchufe este aparato antes de limpiarlo.
 - Solo limpie el aparato con un trapo seco.

ADVERTENCIA

- Para reducir el riesgo de quemaduras, incendios, descargas eléctricas o lesiones a personas:**
- Este aparato puede ser utilizado por niños de 14 años de edad en adelante y por personas con capacidades físicas, sensoriales o mentales reducidas, o que carezcan de experiencia y conocimientos, si han recibido supervisión o instrucción por parte de una persona responsable de su seguridad respecto al uso del aparato de manera segura, y si comprenden los peligros que conlleva. Es necesario supervisar a los niños para asegurarse de que no jueguen con el aparato. Los niños no deben realizar la limpieza ni el mantenimiento sin supervisión.
 - No utilice el aparato si se ha caído al suelo, dañado, presenta daños en el cable, en la fuente de poder o en el enchufe, se ha caído en un líquido o si no funciona correctamente. Devuelva el aparato a Wahl Clipper Corporation para su revisión y reparación.
 - Usar solamente con aparatos aprobados por Wahl. No está aprobado el uso de todos los dispositivos Wahl con este aparato. Revise los dispositivos aprobados en la lista siguiente o consulte a servicio al cliente de Wahl para verificar cuáles unidades pueden usarse con este dispositivo.

CLAUSES DE SAUVEGARDE IMPORTANTES

Lorsque vous utilisez votre appareil électrique, des précautions de base devraient toujours être suivies, incluant ce qui suit : **LIRE TOUTES LES INSTRUCTIONS ET CLAUSES DE SAUVEGARDE AVANT DE COMMENCER À UTILISER CET APPAREIL.**

DANGER

- Pour réduire le risque de mort ou de blessure par décharge électrique :**
- Évitez de placer ou de ranger l'appareil dans un endroit où il peut tomber ou être poussé dans une baignoire ou un lavabo. Ne pas le placer ou le déposer dans l'eau ou dans d'autres liquides.
 - Ne touchez pas à un appareil qui est tombé dans l'eau ou dans d'autres liquides. Débranchez immédiatement la prise de courant, puis retirez-le.
 - Débranchez toujours cet appareil avant de le nettoyer.
 - Ne nettoyez l'appareil qu'avec un chiffon sec.

AVERTISSEMENT

- Pour réduire les risques de brûlures, d'incendie, de décharge électrique ou de blessures :**
- Cet appareil peut être utilisé par des enfants âgés de 14 ans et plus et par les personnes présentant des capacités physiques, sensorielles ou mentales réduites ou bien dénuées d'expérience ou de connaissances si elles ont été informées de la manière d'utiliser l'appareil par une personne responsable de la sécurité et avec la compréhension nécessaire des dangers inhérents à la tâche. Les enfants doivent être sous surveillance afin de s'assurer qu'ils ne jouent pas avec l'appareil. Le nettoyage et l'entretien par les utilisateurs ne doivent pas être effectués par des enfants sans surveillance.
 - N'utilisez pas l'appareil s'il est tombé, s'il a été endommagé, si son cordon d'alimentation est endommagé, si sa fiche est endommagée, s'il est tombé dans un liquide ou s'il ne fonctionne pas correctement. Renvoyez l'appareil à Wahl Clipper Corporation pour examen et réparation.
 - A n'utiliser qu'avec les appareils approuvés par Wahl. Tous les appareils

- Solamente debe usarse con la fuente de poder incluida con el aparato.
- Mantenga las aberturas de ventilación libres de pelusa, polvo y objetos similares.
- Nunca deje caer el aparato ni introduzca objetos en ninguna de sus aberturas, a menos que este instructivo especifique que lo haga.
- Asegúrese de que la fuente de poder tenga la clavija apropiada para el país donde se usa.
- Nunca intente quitar las puntas del enchufe de la fuente de poder mientras el aparato se está cargando.
- Mantenga el cable alejado de superficies calientes.
- Siempre conecte primero el enchufe al aparato y luego al tomacorriente.
- No lo use al aire libre, ni en lugares donde se usen productos en aerosol (rociadores) o donde se administre oxígeno.
- Durante el uso, no coloque ni deje el aparato en un lugar donde un animal pueda dañarlo, ni en donde esté expuesto a la intemperie.
- Mantenga seco este aparato.
- No exponga ni almacene el aparato a temperaturas inferiores a 0°C (32°F) o superiores a 45°C (113°F). Evite la exposición directa a la luz solar.
- Siga todas las instrucciones de carga, y no cargue el aparato fuera de un rango de temperaturas de 0-45°C (32-113°F). Cargar la batería de forma incorrecta o a temperaturas fuera de este rango específico podría dañarla y aumentar el riesgo de incendio.

GUARDE ESTAS INSTRUCCIONES

ESTE APARATO SÓLO ESTÁ DISEÑADO PARA USO COMERCIAL

La estación de carga solamente puede usarse con los modelos de cortadora inalámbrica 8504L1 y 8591L1; los modelos de recortadora inalámbrica 8171L y 8172L; y el modelo de afeitadora 8173L.

LA ESTACIÓN DE CARGA SOLAMENTE DEBE USARSE CON CORTADORAS, RECORTADORAS Y AFEITADORAS ALÁMBRICAS O INALÁMBRICAS, ADITAMENTOS Y FUENTES DE PODER WAHL.
Aditamentos incluidos: 3 aditamentos de cortadora, 2 aditamentos de recortadora y 1 aditamento de afeitadora.



INSTRUCCIONES DE USO

- Conecte el enchufe a la fuente de poder. *(Figura A)*
- Conecte el cable de alimentación a la fuente de poder. *(Figura B)*




La station d'alimentation peut être utilisée avec les modèles de tondeuse sans fil 8504L1 et 8591L1; les modèles de tondeuse sans fil 8171L et 8172L; et le modèle de rasoir 8173L.

LA STATION D'ALIMENTATION DOIT UNIQUEMENT ÊTRE UTILISÉE AVEC LES TONDEUSES WAHL/SANS FIL, LES TONDEUSES, LES RASOIRS, LES INSERTS D'OUTIL ET LES ALIMENTATIONS ÉLECTRIQUES. Inserts d'outils inclus : 3 inserts tondeuse, 2 inserts tondeuse et 1 insert rasoir.




MODE D'EMPLOI


- Fixez la fiche à l'alimentation électrique. *(Figure A)*
- Fixez le cordon d'alimentation à l'alimentation électrique. *(Figure B)*

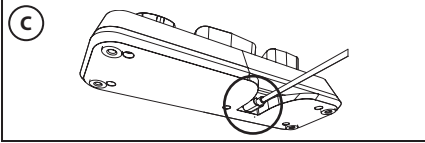


- Conecte el cable de alimentación al receptáculo situado en la parte inferior de la estación de carga. *(Figura C)*
- Después conecte la fuente de poder al tomacorriente.

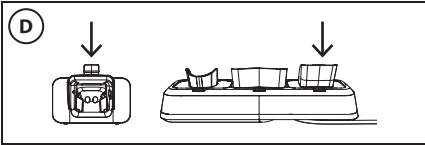


- Conecte cualquier combinación de tres aditamentos de la cortadora, recortadora y afeitadora en los tres receptáculos de la estación de carga. Coloque el aditamento sobre la clavija de carga y oprima hacia abajo hasta insertarlo en su sitio. Para sacar el aditamento, mueva la lengüeta trasera del aditamento y levántelo. *(Figura D)*

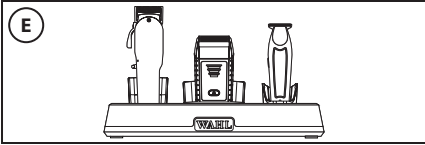


- Coloque la cortadora, recortadora o afeitadora en el aditamento correcto de la estación de carga, de modo que la placa con el nombre voltee hacia adelante. *(Figura E)*
 - El logotipo de Wahl en la estación de carga se iluminará en azul cuando la estación de carga esté conectada y lista para cargar.
 - El logotipo de Wahl en la estación de carga se encenderá en rojo de manera intermitente cuando la base esté conectada a una fuente de poder o a un cable que sean incompatibles (consulte la sección "Solución de problemas" para ver más información).

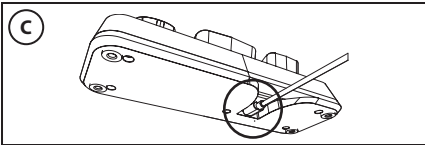


- Fixez le cordon d'alimentation dans le réceptacle situé au bas de la station d'alimentation. *(Figure C)*
- Ensuite, fixez l'alimentation électrique à la prise.

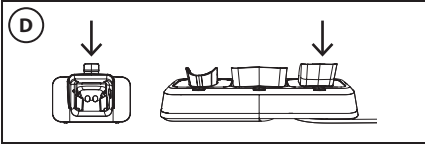


- Branchez trois des inserts de la tondeuse, de la tondeuse et du rasoir dans l'une des trois prises de la station d'alimentation. Placez l'insert de l'outil sur les broches de chargement et appuyez pour le mettre en place. Pour retirer l'insert de l'outil, relâchez la languette arrière de l'insert de l'outil et tirez vers le haut. *(Figure D)*

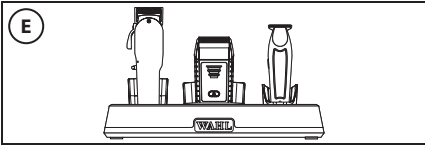

- Placez la tondeuse, la tondeuse ou le rasoir dans l'emplacement approprié de l'outil sur la station d'alimentation de sorte que la plaque signalétique soit orientée vers l'avant. *(Figure E)*
 - Le logo Wahl de la centrale s'allume en bleu lorsque le support est alimenté et prêt à délivrer une charge.
 - Le logo Wahl de la station d'alimentation clignote en rouge lorsque le socle est connecté à une alimentation ou un cordon incompatible (voir la section Dépannage pour plus d'informations).

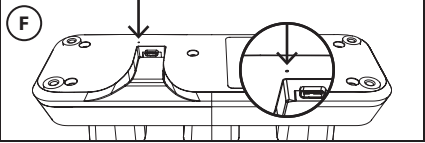

- Modo ecológico: Para ayudar a reducir el consumo de energía, la estación de carga puede ponerse en modo ecológico, que deshabilita las funciones accesorias de la base. Para activar el modo ecológico, use una herramienta apropiada (es decir, un clip de papel, una herramienta para tarjetas SIM, etc.) para oprimir el botón de modo ecológico a través del orificio en la parte inferior de la base *(Figura F)* mientras la estación está conectada. Mientras está en modo ecológico, el logotipo de Wahl no se iluminará. Para salir del modo ecológico, desconecte la estación de carga durante **30 segundos** y vuelva a conectarla.

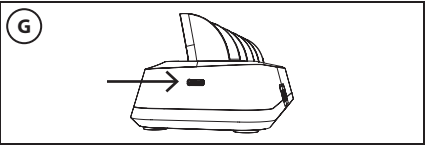

- La estación de carga puede cargar tres unidades Wahl a la vez, además de suministrar energía a un dispositivo USB desde el puerto USB-C en el lado de la base. *(Figura G)*

ANTES DE USAR POR PRIMERA VEZ


Antes de usar la unidad por primera vez en la estación de carga; debe cargar la cortadora, recortadora o instrumento de acabado durante **2 horas**. **Recomendación: La cortadora, recortadora o instrumento de acabado solo deben recargarse cuando el desempeño de la unidad se deteriore considerablemente.**

SOLUCIÓN DE PROBLEMAS

Si su estación de carga no parece funcionar o cargar correctamente (el logotipo de Wahl se ilumina en rojo de forma intermitente), revise lo siguiente:

- Revise la electricidad del tomacorriente conectando otro aparato (que sepa que funciona bien).
- Asegúrese de que la estación de carga no esté conectada a una fuente de energía que corta la cuando se apagan las luces.
- Asegúrese de que los contactos de cada unidad y de la estación de carga estén limpios y no tengan cabellos u otros contaminantes.

Si aún tiene problemas con su estación de carga, envíe la estación de carga, la fuente de poder y el cable de alimentación a Wahl Clipper Corporation con una nota en la que explique el problema.

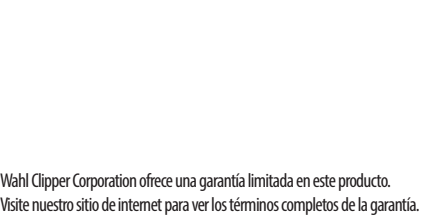

Wahl Clipper Corporation ofrece una garantía limitada en este producto. Visite nuestro sitio de internet para ver los términos completos de la garantía.

Si necesita servicio, envíe su producto con franqueo prepago a:

Wahl Service Center
3001 North Locust Street
Sterling, IL 61081

AVANT LA PREMIÈRE UTILISATION


Avant la première utilisation de l'appareil dans la station de charge, la tondeuse, le rasoir ou l'outil de finition doit être chargé pendant **2 heures**. **Recommandation : La tondeuse, le rasoir ou l'outil de finition ne doivent être rechargés que lorsque les performances de l'appareil se sont sensiblement détériorées.**

DÉPANNAGE

Si votre station de charge ne semble pas fonctionner ou se charger correctement (logo Wahl clignotant en rouge), veuillez vérifier ce qui suit :

- Vérifiez le courant de la prise en branchant un autre appareil (un appareil qui selon vous est en bon état de fonctionnement) dans la prise.
- Assurez-vous que l'alimentation de charge n'est pas connectée à une source d'alimentation qui s'éteint d'elle-même lorsque les lumières sont éteintes.
- Assurez-vous que les contacts de chaque unité et de la station de charge sont propres et exempts de cheveux ou d'autres contaminants.

Si vous rencontrez toujours des problèmes avec votre station de charge, envoyez votre station de charge, l'alimentation électrique et le cordon d'alimentation à Wahl Clipper Corporation avec une note expliquant le problème.

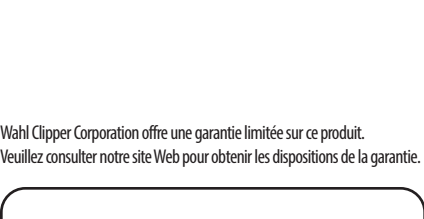

Wahl Clipper Corporation offre une garantie limitée sur ce produit. Veuillez consulter notre site Web pour obtenir les dispositions de la garantie.

Pour l'entretien, veuillez expédier votre produit prépayé à :

Wahl Service Center
3001 North Locust Street
Sterling, IL 61081