


WaterdrOp

Reverse Osmosis Water
Filtration System

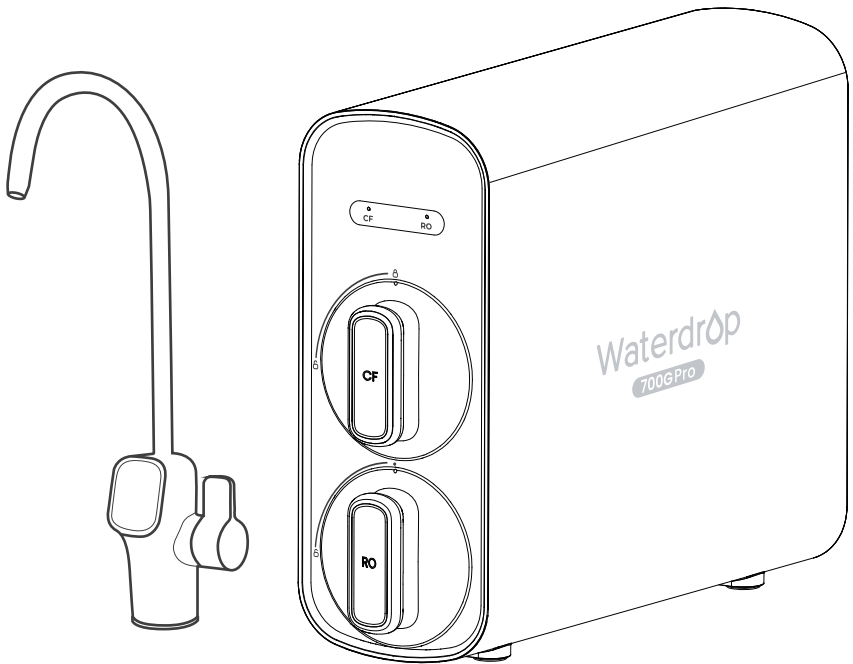

Product User Manual

Model: WD-RG17W-BCN/WD-RG17W-BAN

Double insulation equipment Description: This equipment meets the double insulation standard (Class II) and does not need to be grounded. Do not use a ground plug or connect the device to a ground power supply.

Electrical Safety Warning: This device has been designed as a double insulated device to provide safe use. Do not attempt to disassemble or modify the device. Otherwise, the insulation layer may be damaged and security risks may arise.

Maintenance warning: The insulation layer of the equipment should not be removed or damaged at will. In case of equipment failure, seek professionally certified repair services.

The new hose-sets supplied with the appliance are to be used and that old hose-sets should not be reused.

The appliance is only to be used with the power supply unit provided with the appliance.

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children shall not play with the appliance.

Cleaning and user maintenance shall not be made by children without supervision.

The appliance is only to be used with the unit provided.

If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.

Contents

Before Installation.....	1
Inspect the Package.....	1
Required Tools.....	1
Specifications.....	1
Product Introduction	2
Installation Sample.....	3
Installation Tips.....	3
Installation Steps.....	5
Step 1: Connect the water supply (cold water only)	5
Step 2: Install the Smart Faucet (Non-Air Gap Faucet)	6
Step 3: Install the Drain Saddle	6
Step 4: Position the System Housing	7
Step 5: Connect Tubing.....	8
Step 6: Connect Power Cord.....	9
Step 7: Start up the System.....	9
Display and Operation	10
TDS Display	10
Screen Wake	10
Filter Replacement Guide	11
Filter Life Reminder.....	11
How to Replace Filters	11
How to Reset the Filter Life Indicator.....	12
How to Flush the Filter after Replacement.....	12
Malfunction Display.....	13
System Maintenance.....	14
Troubleshooting	15
Limited Product Warranty	17
Return & Repair	18

Before Installation

Inspect the Package

Open the box and take out the system housing, all the components and connection fittings. Inspect them according to the parts list to ensure nothing is left out or damaged during shipping. If there are any parts cracked or broken, please do not proceed with the installation and contact our customer service **+1-888-352-3558 (U.S.)** or send an email to **service@waterdropfilter.com** to identify and get familiar with all components for quick installation.

Required Tools

- Variable speed drill
- Utility knife or scissors
- Drill bit: 1/4" (for drainpipe), 1" (for faucet hole)
- Adjustable wrench, pliers
- Screwdriver
- Flashlight
- Towel

Specifications

To achieve the optimal performance, it is highly recommended to use the system within the operational parameters.


Product model	WD-RG17W-BCN/WD-RG17W-BAN
Overall size	16.69" × 5.69" × 13.90"
Maximum daily pure water production	700 GPD
Feed water pressure	14.5-87 psi/0.1-0.6 Mpa
Feed water temperature	41-100 °F/5-38 °C
Feed water source	Municipal tap water
Rated voltage/current	100-240 V~ 3.0 A
Rated frequency	50/60 Hz

NOTE:


- The daily production rate is measured under 30 psi dynamic feed water pressure and 77 °F water temperature.
- If you are using well water as the source, please ensure that the feed water has been through a pre-filtration system.

Product Introduction

1. Parts List

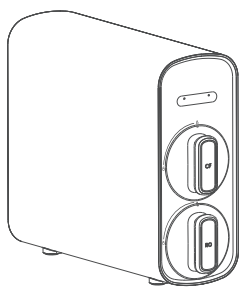


System*1

 

Smart faucet assembly*1

 
T adapter
(with 3 detachable converters)




Lock clip*6
(larger clip*4, smaller*2)



 c. Red 1/4" PE tubing*60"
(Drain water tubing)




Power adapter*1

 


Drain saddle*1



 Teflon tape*2




 a. Inlet hose




b. Outlet hose

2. System Introduction

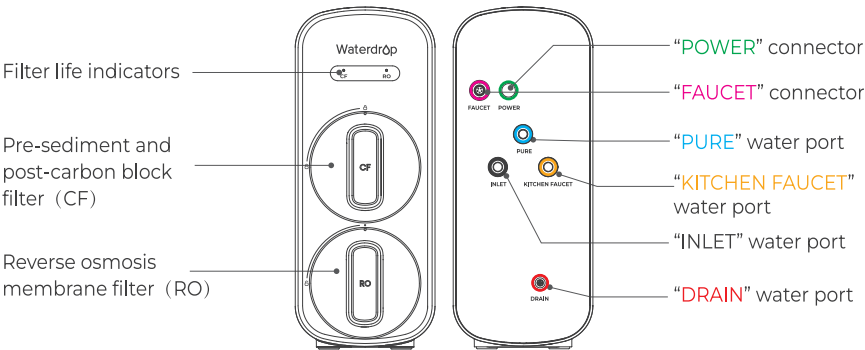

Installation Sample

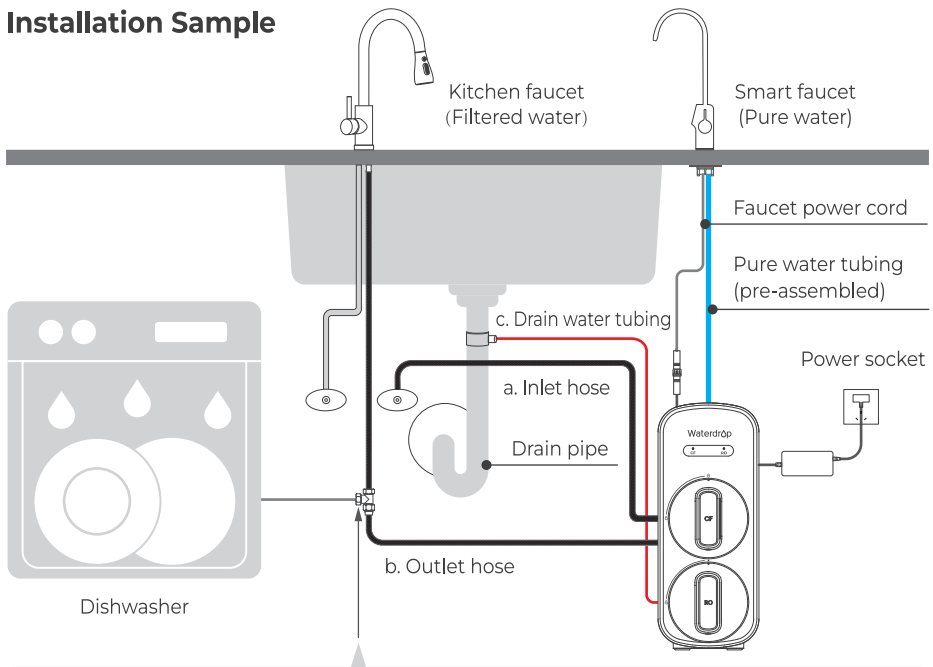

If this device is not used to supply water to the dishwasher, then this T adapter does not need to be installed. The inlet pipe of the kitchen faucet is directly connected to the outlet host.

Installation Tips

1. How to Use the Quick-Connect Fittings

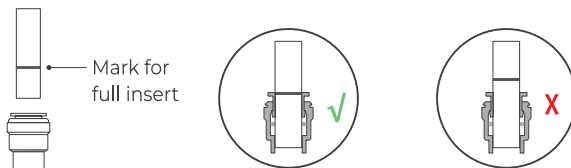


Figure 1

To connect:

- There is an existing mark (**Figure 1**) at the end of the tubing for you to confirm if the tubing is fully inserted into the fitting.
- Please push the tubing into the fitting until it reaches the mark on the tubing (about 0.8").
- Put the blue lock clip on the fitting. It will lock the tubing in place and prevent it from falling off.

NOTE:

- If the tubing is not fully inserted, no seal will be created and leakage will occur.
- If the tubing is too long, cut it to a suitable length with a sharp utility knife or scissors. Cut the tubing squarely and cleanly (**Figure 2**).

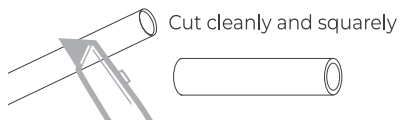


Figure 2

To disconnect:

- Remove the blue lock clip from the fitting.
- Use your thumb and index finger to press down the lock sleeve. Use your other hand to pull out the tubing from the fitting (**Figure 3**).

NOTE: Please do not pull out the tubing directly. This will damage the fitting and cause leakage.

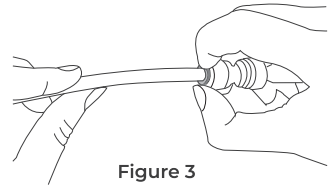


Figure 3

2. How to Drill a Hole into Your Sink or Countertop (Optional)

NOTE: Please confirm if there is an existing hole available to install the smart faucet. If not, please drill a hole in accordance with the following steps.

It's highly recommended to watch the YouTube video "How to Drill Faucet Holes" for a better understanding of the process. There is also a reference sticker to help you drill the hole. Remember to wear safety glasses to protect your eyes while drilling the faucet hole.

- Choose a suitable place to install the faucet and leave enough space for the mounting washer to avoid touching the wall or sink. (**Figure 4**).
- Choose a diamond core bit for granite, and a carbide drill bit for stainless steel. Do not use a hammer drill on natural stone, glass or ceramic.
- Glue the sticker on your sink or countertop, and then drill a hole the size of the sticker hole (1").
- Make an indent with a center punch on a stainless-steel sink before drilling to help guide the bit.
- Be careful when drilling on a porcelain sink, as it can be easily chipped. Apply downward pressure firmly on the bit until you break through the surface.
- Starting at the lowest speed, and hold the drill straight with firm pressure to prevent the bit from walking on the counter.
- Once you break through the surface, swirl the drill a little to apply pressure in a circle evenly.

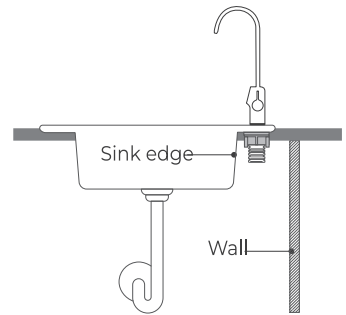


Figure 4

Installation Steps

NOTE: The RO system must be connected to the COLD water supply ONLY.

- Do not install the system in exposure to direct sunlight or harmful chemicals, nor any place where it may be damaged.
- Do not install the system near any heat source.
- Do not install the system outdoors.

Step 1: Connect the water supply (cold water only)

1. Shut off the water supply. Remove the faucet hose. **(Figure 5)**

2. Connect the inlet hose to the cold water valve.

- If the cold water valve outlet is $\frac{3}{8}$ " , it can be directly connected to the water supply . **(Figure 6)**
- If the cold water valve outlet is $\frac{1}{2}$ " , connect it to the converter (which is unscrewed from the T adapter) at first. **(Figure 7)**

Figure 5

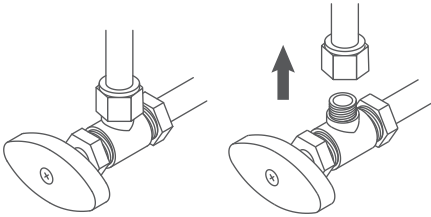


Figure 6



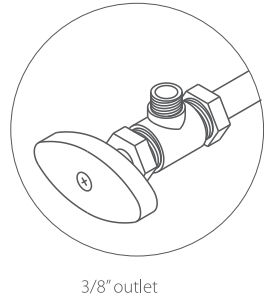


Figure 7

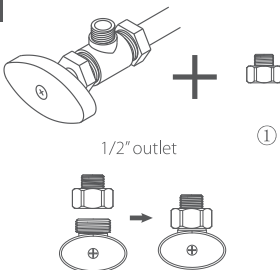

Connect ① to the cold water valve

Figure 8

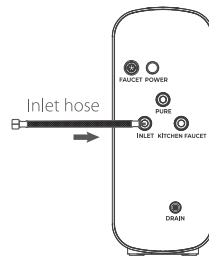


3. Insert the "Inlet hose" into the "INLET" water port (white water port). **(Figure 8)**

NOTE: When the hose is tightly inserted, there will be a $\frac{1}{8}$ inch gap between the hose and the water port, which is designed for easy replacement and won't affect the sealing performance.

Step 2: Install the Smart Faucet (Non-Air Gap Faucet) (Figure 9)

NOTE: If your kitchen sink or countertop does not have an existing hole, you will have to drill one (1"). (Refer to Page 4)

- a. Insert the faucet spout into the faucet body.
- b. Insert the faucet stem, power cord and pure water tubing into the hole on countertop.
- c. Under the sink, slip on the mouting washer and tighten it up.

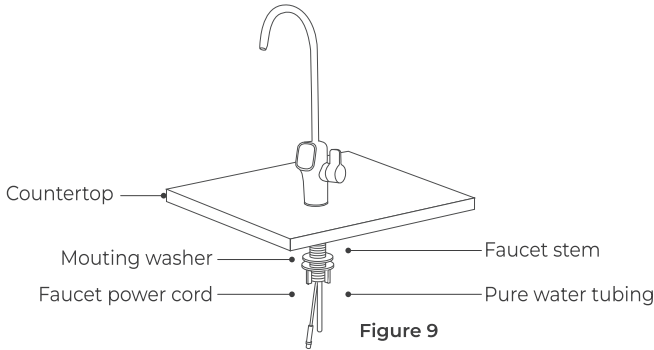

Step 3: Install the Drain Saddle

a. Stick the foam seal on the front plate of the drain saddle. Ensure that the hole of the foam seal is aligned with the hole of the front plate (**Figure 10**).

b. Choose a spot on the drainpipe that is convenient for installing the drain saddle. Drill a 1/4" hole in the drainpipe. Be sure not to penetrate the opposite side of the pipe.




NOTE: It's recommended to install the drain saddle on the vertical drainpipe.

c. Slip the front plate over one end of the tubing (without a mark) and insert the tubing into the drilled hole for about 0.6" (**Figure 11**) .

d. Position the back plate on the drainpipe by tightening the screws and nuts evenly while leaving the tubing in the hole.

e. Pop the lock clip onto the fitting to secure the connection (**Figure 12**).

NOTE: In some areas, the drain tubing must be connected to the drainpipe through the air gap. Consumers must purchase air gap accessories separately.

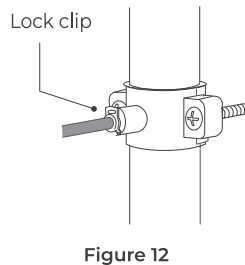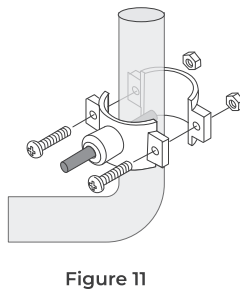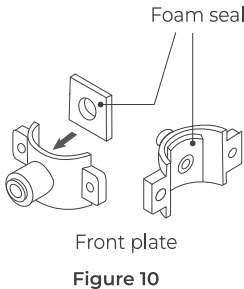

Step 4: Position the System Housing

Ensure that there is sufficient space under the countertop to install the system (16.69" * 5.69" * 13.90") (Figure 13). Set aside 2 inches of space around the system to avoid placing the system against the cabinet.

- a. The power-supply receptacle for the appliance shall be installed in the cabinet or on the wall adjacent to the undercounter space in which the appliance is to be installed.
- b. There should be an opening through the partition between the compartments specified in (a) that is large enough for the attachment plug to pass through. The longest dimension of the opening shall not be more than 1.5" (38 mm).
- c. If the partition is made of wood, the edges of the opening specified in (b) should be smooth and rounded. If the partition is made of metal, it should be protected with an edge protector provided by the manufacturer.
- d. Caution should be exercised when installing or removing the appliance to reduce the possibility of damage to the supply cord.

NOTE: Position the front panel facing you, which will be convenient for future filter replacement and indicator checking. You can also adjust the placement direction of the system according to the layout under the sink.

The system must be installed horizontally, not tilted, placed on the side, lying on the side, or inverted.

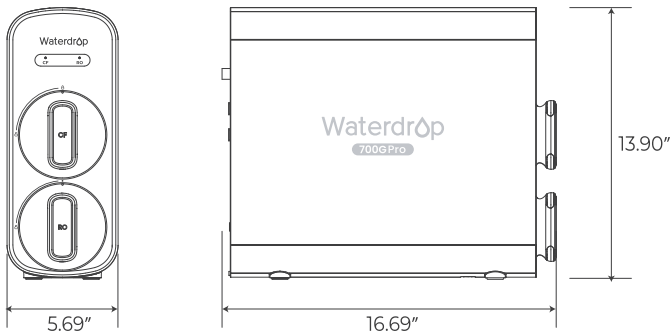


Figure 13

Step 5: Connect Tubing

NOTE: Confirm the tubing length you need first, and then cut the tubing if it's too long, referring to "How to Use the Quick-Connect Fittings" on page 3.

Before connecting the PE tubing to the system, remove the plugs from corresponding water ports (Figure 14).

Connect Tubing Step (Figure 15)

a. Insert "PURE" water tubing (blue tubing, which has been attached to the Smart Faucet) into "PURE" water port (blue water port).

b. Insert "DRAIN" water tubing (red tubing) into "DRAIN" water port (red water port).

NOTE: Make sure it is fully inserted until you reach the mark on the tubing and pop up the lock clips into every water port to avoid leaking water (Figure 16).

c-1. If you need this system to supply water to the dishwasher, first connect the kitchen faucet inlet hose to the A end of the T adapter, then connect the dishwasher inlet hose to the B end of the T adapter, then connect the outlet hose to the C end of the T adapter, and finally insert the outlet hose into the "Kitchen Faucet" water port via the L converter (Figure17).

c-2. If you do not need this system to supply water to the dishwasher, connect the outlet hose to the kitchen faucet hose; Insert the outlet hose into the "Kitchen Faucet" water port (Figure 18).

NOTE: Each converter on the T adapter can be removed for separate use, you can decide whether to remove according to the interface size of your pipe

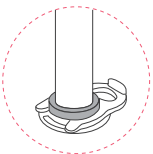


Figure 16

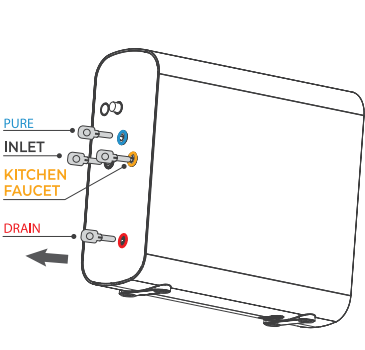


Figure 14

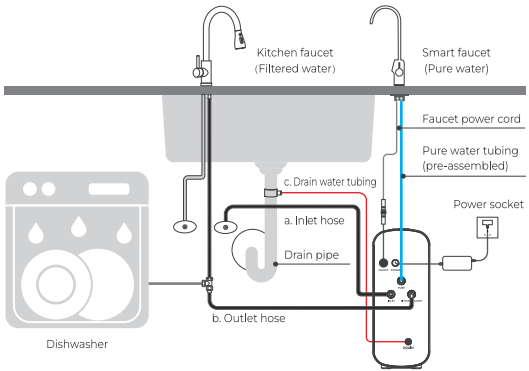


Figure 15

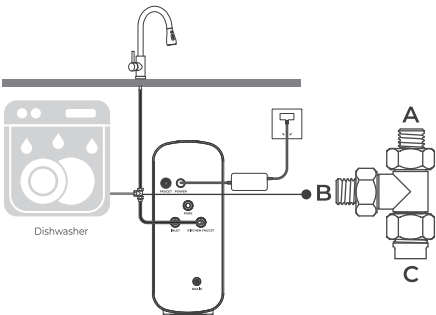


Figure 17

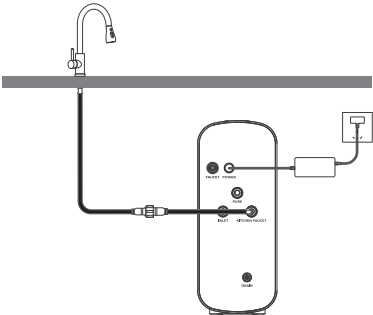


Figure 18

Step 6: Connect Power Cord

Connect the smart faucet to the system: Insert the power cord which is attached to the smart faucet into the “FAUCET” connector (**Figure 19**) at the back of the housing, and tighten the nut.

Meanwhile, secure the power adapter to a suitable location on the wall using two screws through its elongated mounting holes.

NOTE: Please do not connect power socket now.

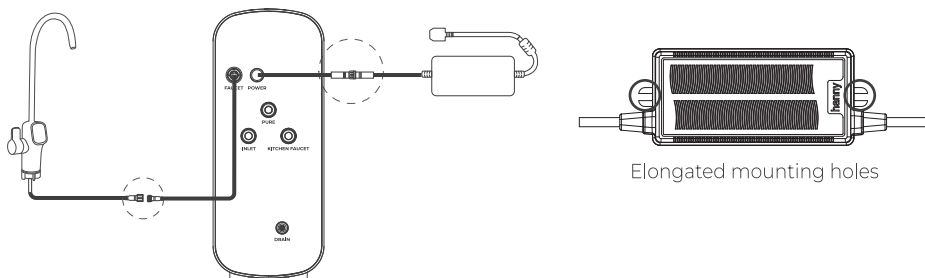


Figure 19

Step 7: Start up the System

a. Turn on the cold water supply valve. Check for leaks.

b. Insert the plug of power adapter into the socket.

⚠ WARNING:

· The system plug must be inserted into a grounding socket that complies with local codes and regulations.

· If the system can't be powered on after you insert the power plug, check whether the power plug is live, if the power plug is live and the system still cannot be powered on normally, please feel free to contact us.

c. Flush for 35 minutes for first time use: After being powered up, turn on the RO faucet. The system starts flushing automatically for 35 minutes. The faucet displays flushing status and the outer ring light will flash clockwise dynamically. Until the faucet screen start displaying a TDS reading.

NOTE: During the flushing process, it is normal for the faucet flow to be unstable, and water is not drinkable during the automatic flush.



Flushing status



TDS reading

- d. Confirm the flush is completed before turning off the Smart Faucet and ensure it's not leaking.
 - e. Please use cable ties to secure the power adapter firmly in place to prevent it from moving when impacted, thus avoiding malfunction. Stay away from any water sources, including pipe fittings, the bottom of the basement, and wet floors.
- NOTE:** The reading in the figure is only used as an example, and the actual reading may vary according to different water conditions.

Display and Operation

TDS Display

The built-in TDS sensor detects the water quality when the system begins to work, and shows the TDS reading on the RO faucet screen.

NOTE: Please note that the reading in the figure is only used as an example, and the actual reading may vary according to different water conditions. For the weakly alkaline mineralized version of the machine, the TDS is slightly higher.




TDS reading

Screen Wake

After the water filtration is finished, the faucet screen turns off. When the faucet is turned on for water discharge, it wakes up the faucet display.

Filter Replacement Guide

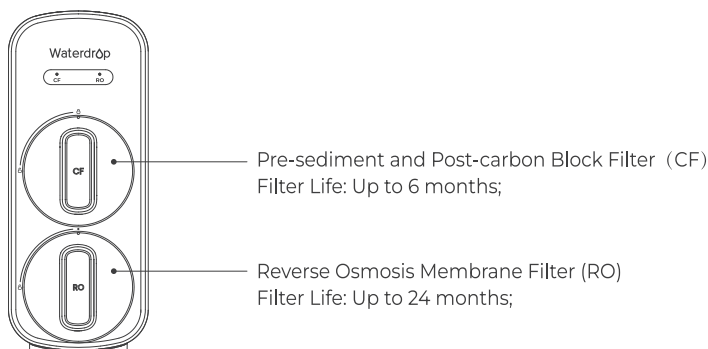

Filter Life Reminder

NOTE: Filter life may vary depending on source water quality and water usage. Please replace the filter according to the reminder of the filter life indicators.

Filter Life Indicator on System Housing and Faucet Screen

There are helpful electronic filter indicators (CF/RO) on the panel that will notify you to perform a routine filter replacement by color change.

Status	Remaining life (day)	Remaining capacity (G)	Indication	
			Light(System and faucet screen)	Buzzer
Normal	>15	>40	Blue	N/A
Pre-warning	≤15	>0, ≤40	Yellow	Beep twice when getting water
Warning	≤0	≤0	Red	Constant beeps when getting water


NOTE: The indicators will notify you according to the usage time or process capacity of the filters, whichever comes first.

How to Replace Filters: (Take CF filter for an example)


If the filter expires, please purchase and replace the filter immediately. Otherwise, the filtration efficiency will decrease significantly and affect the performance.

1. Before removing the filter, please turn off the faucet first and wait 5 min to fully release the internal pressure of the RO system, which makes the filter easier to remove and install.
2. Twist off the filter that needs to be replaced in a counter clockwise direction (If the filter cannot be removed at this time, it is necessary to close the water supply, turn on the faucet, relieve the pressure inside the filter, and then remove the filter).
3. Twist the new filter into the housing in a clockwise direction.
4. Reset the filter life indicator and flush the filter after replacement refer to the following steps.

NOTE: When removing the filter, if the filter cannot be unscrewed counterclockwise, it can be removed with the aid of tools.

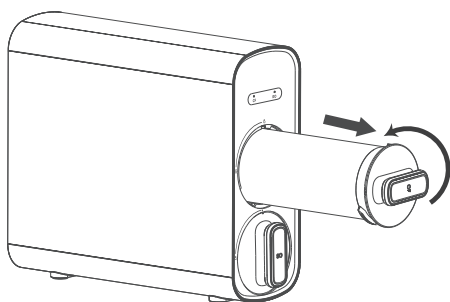

Filter removal

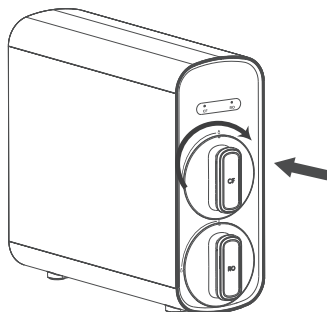


Filter installation

How to Reset the Filter Life Indicator (Take CF Filter Life Indicator as an Example):

Hold the CF icon for 7 seconds until the system beeps.

NOTE: Refer to the above method, hold down the RO icon to reset the filter.

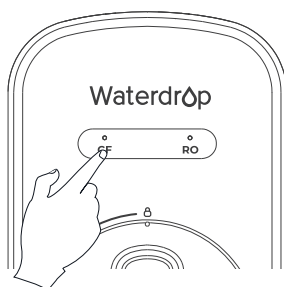

How to Flush the Filter after Replacement:

NOTE: The display screen on front panel and faucet will show the flushing status during the process.

For CF filter: Turn on the faucet to flush for 15 minutes.

For RO filter: Turn on the faucet to flush for 30 minutes.



Flushing status

Malfunction Display

When the system is in fault, the malfunction indicates as follows:

E02: For inside water leakage, the buzzer keeps beeping .

NOTE: Turn off the cold water supply valve, unplug the power supply, and please contact the customer service hotline +1-888-352-3558 Mon-Fri 8:00 AM-5:00 PM (PST) for assistance.

E03: If the booster pump overworks, the buzzer beeps for 3 minutes. The system will need to be powered on again to recover;

E04: If the booster pump starts and stops frequently, the buzzer sounds 5 times. The system will need to be powered on again to recover.

E09: If there is an abnormal communication between the faucet and the machine,the faucet will display E09. Check if the faucet power cord is properly connected.Unplug and replug the faucet power cord to recover.

NOTE: Please refer to "Troubleshooting" for detailed solutions concerning malfunction code reminders.

System Maintenance

- If you don't use the system for more than one week, turn on the Smart Faucet, shut off the cold water supply valve, and disconnect the power. Seal the filters and store them in the refrigerator (not the freezer). You need to open the Smart Faucet and allow it to run for 10 minutes first before using the system again. Otherwise, you need to replace the filters, as bacteria may grow when the system is not used for a long time.

- Please replace the filter regularly according to the filter life indicator.

NOTE: While the testing was performed under standard laboratory conditions, actual performance may vary depending on the source water quality and water usage. In case of premature blockage and failure of the filters, it's recommended to replace the filter in accordance with the actual usage.

Clean the system with clear water. Do not spray the water directly. Do not use steel wool, abrasive cleaner or corrosive liquid such as gasoline or acetone.

When cleaning, do not pour other liquids into the filter to avoid damage to the filter system.

- Keep the waste water pipe unobstructed to avoid damage to the filter or internal components.

When the drain pipe is blocked, do not use the system (please turn off the power) to avoid waste water from soaking the floor.

- Check the system and water pipe fittings regularly for water leakage to avoid any property damage. Regularly check whether the power supply and wires are damaged or loose to avoid major accidents caused by electric leakage.

- If you are using well water as the source, please ensure that the feed water has been through a pre-filtration system. Otherwise, large particles in the well water will easily clog the filter and shorten the filter life.

Troubleshooting

. If the System Can't Be Powered on After You Insert the Plug of Power Adapter

Check the power under the sink, as this mostly occurs when the power under the sink is off. Also, check the connection between the plug and the power outlet, and ensure that the system has been plugged correctly into the power outlet, as this may occur in a few cases. To test if there is a problem with the system itself, just pick up the system and try another power outlet. Please contact us if the system can't be powered on. We will help you figure it out.

. No Output Water from Smart Faucet

- a. Filter expired. Check the filter life indicators to confirm which filter need to be replaced and replace it immediately.
- b. Low water pressure. Check and confirm the water pressure is between 14.5 psi and 87 psi.
- c. Water supply is off. Turn on the feed water adapter or water supply valve.
- d. Incorrect filter installation. Re-install the three filters, and make sure they are fitted properly.
- e. A tubing is crimped. Check all tubing and remove any crimps.

• Low Water Flow at the Smart Faucet

- a. Leak from tubing connection. Check and ensure all tubing is installed correctly and completely
- b. Filter expired. Check the filter life indicators to confirm which filter needs to be replaced and replace it immediately.
- c. Low water temperature. Be sure to use the system at a temperature of 41-100°F.
- d. Use well water as the source and the feed water has not been through a filtration system, the filter has been clogged. If you are using well water as the source, please ensure that the feed water has been through a pre-filtration system. Otherwise, large particles in the well water will easily clog the filter and shorten the filter life.

• Water Leakage

- a. Check all joints, fittings and tubing connections to locate the leakage. Make sure the filters are well installed.
- b. Turn off the feed water adapter, unplug the power supply, and please contact the customer service hotline +1-888 - 352 - 3558 or send email to service@waterdropfilter.com for assistance.

• No Display on the System

- a. To save power, the faucet screen will go off after 1 minute when the system stops dispensing water, and the front panel screen will go off after 5 minutes when the system stops filtering water.
- b. No power or power adapter is broken. Check and make sure the power adapter is plugged in. Change a new power adapter if it is broken.

• High TDS in Filtered Water

The system will provide a 90%+ TDS rejection rate (tested under standard laboratory conditions) after full flushing when working properly. If the TDS reading is high, the following possible causes:

- a. The system hasn't been used for a long time. Open the Smart Faucet, allow it to run for a while. The TDS reading will return to normal.
- b. The RO filter expired. Replace the RO filter immediately.
- c. The waste water pipe may be crimped or clogged. Check and remove crimps. Re-align the drain saddle and drain pipe.
- d. The source water may have a high TDS. Test the source water and filtered water. The filtered water's TDS shall be about 5%-10% of your source water's TDS. This is a normal range. If there is a high TDS in the source water, it may reduce the service life of the system. When the filtered water's TDS creeps up to 15%-20% of the source water's TDS, please perform routine filter replacement.

e. The mineralized version of the machine, because it has an alkaline mineralization filter, will produce water with a higher TDS, which is a normal phenomenon.

• **TDS Reading Fluctuates When Dispensing Water**

- a. The TDS reading displayed is the TDS of the flowing filtered water. Therefore, the content of the dissolved solids may vary slightly as the water flows, causing the fluctuation of the TDS reading.
- b. The built-in TDS sensor has deviation, causing the fluctuation of the TDS reading.

• **The Difference between the TDS Reading Tested by the TDS Meter and the Displayed Reading**

- a. The reading tested by the TDS Meter is the TDS of static water in the container while the TDS reading displayed by the system is the TDS of flowing water. As a result, the TDS readings are different.
- b. There are errors in the TDS Meter tests.
- c. Calibration of TDS display for single water discharge over 50 seconds.

• **Filtered Water from the Smart Faucet Tastes Like Tap Water**

- a. The filters are not well-installed. Make sure the filters are placed properly.
- b. Filter expires. Check the filter life indicators to confirm which filter needs to be replaced and replace immediately.

• **Booster Pump Overworked Reminder**

- a. Smart Faucet screen shows code E03. The buzzer keeps beeping for 3 minutes.
- b. Continuously dispensing water for more than 30 minutes. Power on the system again to recover
- c. There is a leak at the tubing connection between the system and the Smart Faucet. Turn off the power. Check the tubing connection, make sure the tubing is inserted into the quick-connect fitting properly and firmly and power on the system again.

• **Booster Pump Starting and Stopping Frequently Reminder**

Smart Faucet screen shows code E04. The buzzer sounds 5 times.

There is an internal pressure imbalance. Disconnect the power. Turn on or turn off the Smart Faucet completely and remove all tubing crimps. Make sure the faucet is not blocked and power on the system again.

• **Loud Sound of RO System**

The sound will not exceed 65 dB, which makes no difference to everyday lives (65 dB is tested under standard laboratory conditions, where the feed water pressure is between 14.5 psi and 87 psi). A loud sound may be caused by the following reasons:

- a. The system is not positioned in a flat area. Make sure the system is placed smoothly without shaking.
- b. The system is placed against the cabinet. Do not place the system against the cabinet. The system may vibrate when it works.
- c. The water pressure is unstable. Check and confirm the water pressure is between 14.5 psi and 87 psi. The sound will decrease when the water pressure becomes stable.

Limited Product Warranty

At Waterdrop, we are proud to offer our customers a wide array of high-quality products, including reverse osmosis systems. We offer a 30-day money-back return guarantee, a 1-year manufacturer warranty, and lifetime tech support for all our products from the date the product is received. During the warranty period, we will replace or repair any part deemed defective, as long as the product has not been subjected to tampering, alteration, lack of regular maintenance or improper use after delivery. The cost of repair or replacement under those excluded circumstances shall be borne by the consumer.

Conditions of Validity of this Limited Product Warranty

THIS LIMITED PRODUCT WARRANTY SHALL ONLY BE VALID IF:

1. The feed water pressure is no less than 14.5 psi and no higher than 87 psi.
2. The feed water temperature must be no less than 41 °F and no more than 100°F.
3. The feed water must have a pH between 6.5 and 8.5.
4. Turbidity must be less than 1.0 NTU.
5. The feed water must be municipal tap water. If you are using well water as the source, please ensure that the feed water has been through a pre-filtration system.
6. The Total Dissolved Solids (TDS) must be less than 750 ppm.
7. The max hardness must be less than 7 grains per gallon.

Any information or suggestion with respect to our product concerning applications, specifications or standards is provided solely for your convenient reference. The quality of water supplies may vary seasonably or over a period of time. Your water usage may vary as well. The manufacturer assumes no liability for the determination of the proper equipment necessary to meet your requirements, and we do not authorize others to assume such obligation on our behalf. You must verify and test the suitability of any information with respect to the product for your specific application.

Conditions that render this Limited Product Warranty void:

THIS LIMITED PRODUCT WARRANTY SHALL ONLY BE VALID IF:

1. The product is purchased from someone other than our official website or our authorized dealers, as we cannot verify or guarantee the integrity or authenticity of the Product.
2. Improper storage, installation, maintenance, handling, use and/or alterations of the Product, including, but not limited to, non-compliance with the installation, maintenance and standard operation conditions stated in the Manual and this Limited Product Warranty.
3. Unreasonable use, unintended use, or misuse of the product for something other than its intended purpose as a reverse osmosis system.
4. Use of replacement parts, filters, membranes or other accessories that are not sold or manufactured by Waterdrop for use with this particular product.
5. Damage not resulting from manufacturing defects that occur while the product is in the original purchaser's possession.
6. Installation of the product with known or visible manufacturing defects at the time of installation.
7. Damage caused by freezing, flood, fire or Act of God.

Our sole obligation under this warranty shall be repair or replacement of a non-conforming product or parts of this product, or at our option, return of the product and a refund of the purchase price.

Our obligation does not include the cost of transportation. We are not responsible for damage in transit, and claims for such damage should be presented to the carrier by the customer.

The warranties set forth herein are the only warranties made by us with respect to the product. We make no warranties, expressed or implied, including, but not limited to, any warranties of fitness or merchantability, except as expressly set forth above.

NOTE: In case some states do not allow limitations on how long an implied warranty lasts, you may choose to return the system. If you choose to keep it, you agree that the above limitations still apply to you.

Return & Repair

We accept returns within the return window if you are not satisfied with your product. In order to fulfill the warranty requirement, please contact us by phone at 1-888-352-3558, by email at service@waterdropfilter.com providing your name, order number, phone number, a description of the product involved and an explanation of the defect, and we will be more than happy to assist you.

Disposal

Dispose of the packaging material in an environmentally friendly manner so that it can be recycled.

The device is governed by the European Directive 2012/19/EU on waste electrical and electronic equipment (WEEE). Do not dispose of the device as normal domestic waste, but rather in an environmentally friendly manner via an officially approved disposal company.



This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.



Waterdrop

Filter Better Live Healthier

Manufacturer Technical Support

Tel: 1-888-352-3558 (U.S.)

E-mail: service@waterdropfilter.com

Made in China P001

Qingdao Ecopure Filter Co., Ltd.

