

WEMAX Laser TV 4K Cinema

User Manual

WEMAX[®]

Table of Contents

User Notice.....	3	Heat Dissipation Maintenance	20
Legal Notice.....	3	Cleaning & Maintenance.....	20
Laser Safety Information.....	5	Specifications	21
Safety Instructions.....	6	Troubleshooting.....	23
Package Contents	8	Product Certifications	24
Product Overview	9	Product Warranty.....	25
Exterior	9		
Connection Ports	10		
Power Indicator	11		
Remote Control	12		
Projection Distance & Screen Size	13		
Suspended ceiling installation	14		
Getting Started	15		
Pairing the Remote	15		
Image Focus	16		
Keystone Correction.....	16		
Network & Internet.....	17		
Smart Temperature Control.....	17		
Safety & Protection.....	18		
Bluetooth Speakers.....	19		
Care & Maintenance	20		

User Notice

Thank you for choosing the **WEMAX Laser TV 4K Cinema**.

Read this manual carefully before use, and retain it for future reference. Illustrations of product, accessories, and user interface in the user manual are for reference purposes only. Actual product and functions may vary due to product enhancements.

Legal Notice

CE Hereby, [Fengmi (Beijing) Technology Co., Ltd.] declares that the radio equipment type [Formovie Laser TV 4K Cinema / L176FGN] is in compliance with Directive 2014/53/EU, 2009/125/EC, 2011/65/EU. The full text of the EU declaration of conformity is available at the following internet address: <http://www.formovie.com/global/service/support/declaration.html>

This device is restricted to indoor use when operating in the 5150 to 5350 MHz frequency range.

BT max transmitter power : 100mW at 2.4GHz – 2.4835GHz

Wi-Fi max transmitter power : 100mW at 2.4GHz–2.4835GHz, 200mW at 5.15GHz–5.35GHz & 5.47GHz–5.725GHz



Correct Disposal of This Product (Waste Electrical & Electronic Equipment)
(Applicable in countries with separate collection systems)

This marking on the product, accessories or literature indicates that the product and its electronic accessories should not be disposed of with other household waste at the end of their working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate these items from other types of waste and recycle them responsibly to promote the sustainable reuse of material resources. Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take these items for environmentally safe recycling. Business users should contact their supplier and check the terms and conditions of the purchase contract. This product and its electronic accessories should not be mixed with other commercial wastes for disposal.

Battery Disposal Information

Dispose of batteries according to your local environmental laws and guidelines.

FCC Compliance Statement



This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions,

may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

 
Important: You are cautioned that changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

RF Exposure Information: The radiated output power of this device meets the limits of FCC/IC radio frequency exposure limits. This device should be operated with a minimum separation distance of 20cm (8 inches) between the equipment and a person's body.



WARNING: Cancer and Reproductive Harm - www.P65Warnings.ca.gov

Laser Safety Information

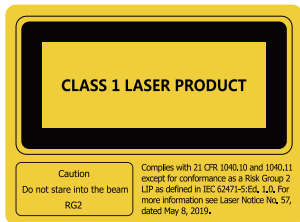

Laser Information Label

For Europe

The product complies with IEC 60825-1:2014 Class 1 and RG2 IEC 62471-5:2015.

As with any bright light source, do not stare into the beam, RG2 IEC 62471-5:2015

For U.S.A.

Complies with 21 CFR 1040.10 and 1040.11 except for conformance as a Risk Group 2 LIP as defined in IEC 62471-5:Ed. 1.0.

For more information see Laser Notice No. 57, dated May 8, 2019.

CAUTION:

- Notice is given to supervise children and to never allow them to stare into the projector beam at any distance from the projector.
- Notice is given to use caution when using the remote control for starting the projector while in front of the projection lens.
- Notice is given to the user to avoid the use of optical aids such as binoculars or telescopes inside the beam.



Note: Under normal use of condition, this equipment should be kept a separation distance of at least 20 cm between the antenna and the body of the user.

Safety Instructions

Before using the product, please carefully read the following safety instructions.

Safety Label Description



This warning symbol informs the user that this product contains non-insulated voltage sources that can cause an electric shock. Coming into contact with any internal component may result in an electric shock.



This symbol informs the user about important handling and maintenance related information. Please read this information carefully to ensure proper use.



This symbol informs the user to be aware of high temperatures.



This symbol informs the user to avoid touching this part.



Grounding Warning: This product must be grounded when in use.



Transportation Instructions: It is recommended to transport this projector in its original or similar packaging.



Preventing Electric Shocks and Fire Hazards:

- Using an incorrect power cord may result in decreased product performance and even electric shock or fire. To ensure the projector's performance and safety, only use its original power cord or an identical replacement.

- If you use an extension cord, it must not have a current rating lower than the projector's original power cord. Failure to heed this warning may result in the extension cord overheating and could pose hazards such as electric shock and fire.
- To avoid damage caused by a power surge or lightning strike, unplug the projector from the power outlet during thunderstorms or when it is not in use for a long time.
- Do not place any flammable objects near this projector so as to avoid fire.
- Do not block the lens with any object when the projector is turned on. Any object placed close to the lens may get very hot and/or deformed, and may even cause a fire.
- Do not block any of the vents of the projector, as this may cause a buildup of heat within the product and result in a fire.



Safety Precautions

- Do not place this projector on an unstable platform, stand or table so as to prevent it from falling and causing serious damage or personal injury.
- Do not look directly into the lens when the projector is turned on to avoid eye damage.
- Do not attempt to disassemble this projector as it may contain dangerous high voltage components. This projector must only be maintained and repaired by a qualified or authorized technician.
- Do not place this projector in an upright position, as it may fall over and cause injury or damage.
- Do not expose this projector to rain or moisture (operating humidity is 20%-80%).
- Do not immerse this projector in, nor expose it to water or other liquids. Immediately unplug the projector if any liquid or object got into its housing, and have it checked by a qualified technician before using it again.
- Do not place this projector in any of the following environments:
 - In poorly ventilated or narrow spaces.
 - Near devices that produce a strong magnetic field.
 - In direct sunlight.
 - Close to a fire alarm.
 - In extremely hot, cold or humid environments.

Package Contents

When opening the packaging, check the contents of the box against the list below. If there is anything missing, please contact the seller in time.



Laser Projector



Remote Control



Power Cord



User Manual



Cleaning Cloth

 
 
 
 
 


Note:

- The actual contents may vary depending on the country (or region) of sale, please refer to the actual product.
- Retain the original packaging for future storage or transportation.

Product Overview


Exterior

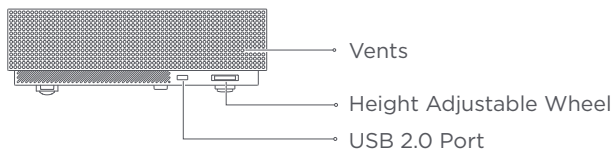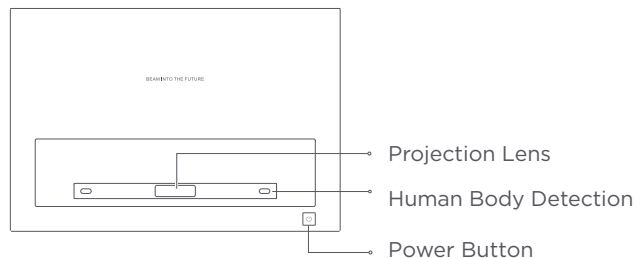

Caution


- Do not place any flammable objects near the heat dissipation vent.
- Do not place any objects near the vents, as this may cause heat to build up inside the projector.
- Do not look directly into the lens so as to avoid eye damage as this projector emits strong light during use.

 Connection Ports

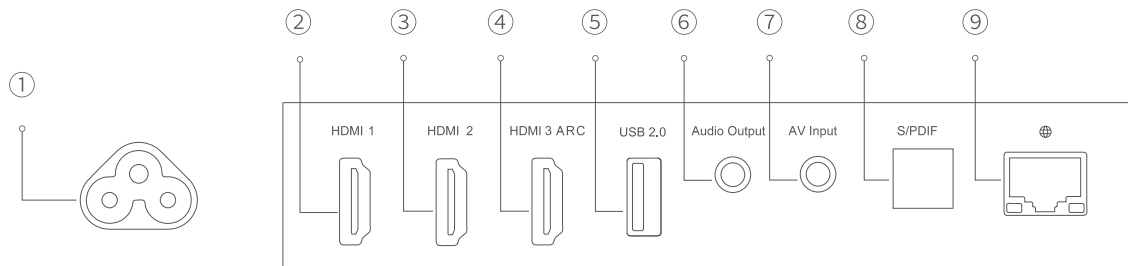

- | | |
|--|--|
| ① Power Port | ⑤ Supports USB 2.0 communication protocol |
| ② HDMI input port 1 | ⑥ Audio output port |
| ③ HDMI input port 2 | ⑦ AV input port (3.5 mm composite AV port) |
| ④ HDMI input port 3
(ARC) Audio return channel port | ⑧ Optical digital audio signal output port |
| | ⑨ Ethernet port |

 Power Indicator

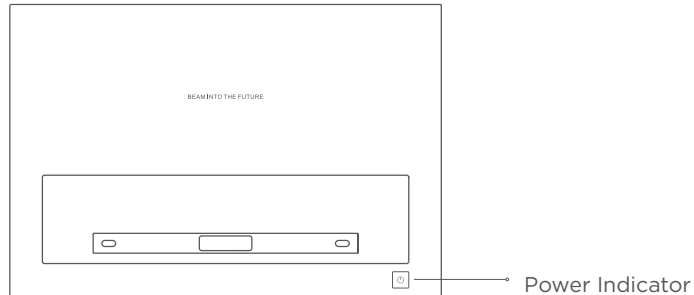

The power indicator (a white light) to the corresponding projector's status is as follows:

- The indicator blinks when the projector is turning on.
- The indicator turns off after the project is turned on.
- The indicator remains on after turning off the screen.
- The indicator blinks when the projector is turning off.
- The indicator turns off after the projector is turned off.

Remote Control

Power Button:

When the projector is turned off, press to turn on.

When the projector is on, press to select Power off, Restart, Bluetooth speaker mode or Screenshot.

Google Assistant:

Press the Assistant button on your remote to talk to Google Assistant

Directional Pad (Left):

Move Left

App:

Access the app interface

Volume + :

Increase the volume



Launch Board: Access the launch board interface

Directional Pad (Up): Move Up

OK: Confirm the selected option or setting

Directional Pad (Right): Move Right

Directional Pad (Down): Move Down

 
Home: Return to the home screen

Return: Return to the previous menu

Volume - : Decrease the volume

Battery Cover:

Slide down the battery cover, and install or replace the batteries with two new AAA batteries.


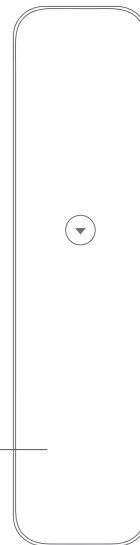


Note:

- Pay attention to the positive and negative poles when installing batteries in the remote control.
- When battery leaks, immediately wipe away any fluid with a dry cloth and replace the batteries with new ones.
- Dispose of used batteries according to local waste disposal rules and regulations of the country or area you live in.

Note: With the Google Assistant, you can quickly access entertainment, control smart devices, get answers on screen, and more using your voice.

  Projection Distance & Screen Size

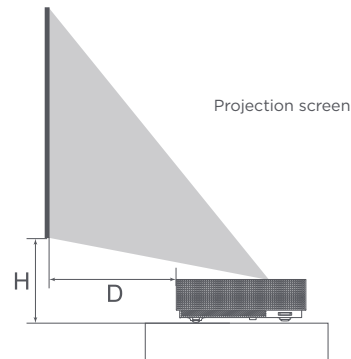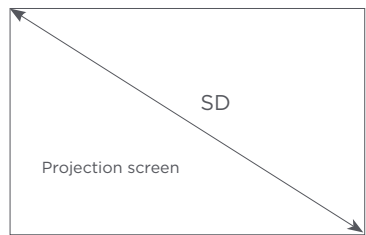

Determine the distance between the projector and the wall or screen according to the desired screen size.

Screen Dimensions (SD)	Relative Distance (D)	Relative Height (H)
80"	5.5"	11.8"
90"	7.1"	13.4"
100"	9.1"	14.6"
120"	13"	16.9"
150"	19.3"	19.7"

Screen Dimensions (SD)

The diagonal size of the projection screen (in inches).

Relative Distance (D)

The distance between the projector and the wall/screen (in inches).

Relative Height (H)

The distance from the bottom of the projector to the bottom edge of the projected image (in inches).

Note: The dimensions in the table above are for reference only. They are approximate and may slightly differ from the actual values.

Suspended Ceiling Installation

Suspended ceiling installation is one of the installation methods that you hang the projector in an overhead location, for example, on a high ceiling, through a ceiling mount. A projector supporting suspended ceiling installation has threaded holes on the bottom, you can install the project on the mount by attaching the screws into the holes.

The installation steps are as follows:

1. Install the mount.

Make sure the mount used to install the projector onto can support at least five times the weight of the projector. It requires

a professional to carry out the installation.

2. When installing the projector onto a ceiling mount, make sure the screws meet the following specifications:

 
Screw Type: Non self-tapping screw M4 10 (diameter: 4 mm, length: 10 mm), 4 pieces.

Assembly Dimensions: See the figure on the right.

3. Adjust the mount depending on your needs and firmly fix the screws to complete the installation.

Cautions:

- To avoid the convective heat transfer between the air inlets and air outlets, make sure there are no obstructions within 20 inches of the air inlets and heat dissipation vents.
- Keep the bottom of the projector 4 inches away from the ceiling when suspending it.
- Damage caused by incorrect installation will void the warranty.

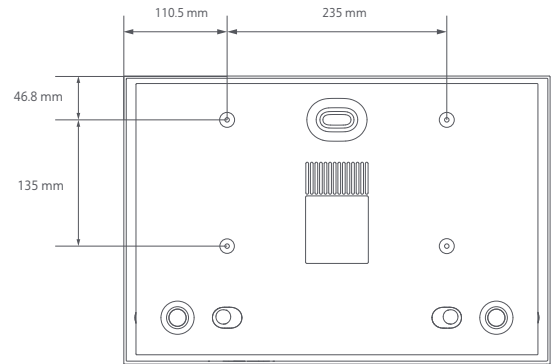


Getting Started


Pairing the Remote



 After installing the batteries in the remote control, press the OK button to start pairing.

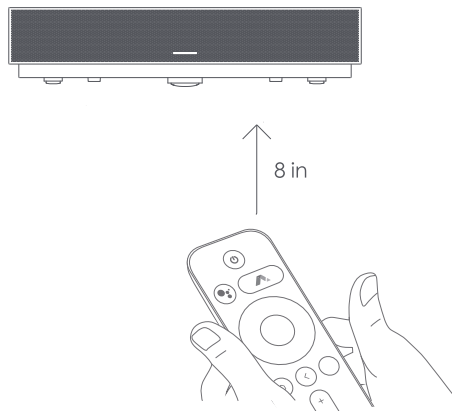

 Place the remote control close to the bottom right corner of the projector, then simultaneously press and hold the Home and the App buttons. Release the buttons once you hear a beep, then the remote control is paired with the projector.

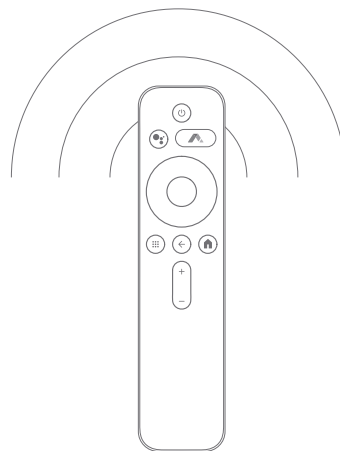


A notification will appear on the projected image once the remote control has been paired successfully.

Note: Keep the remote control within 8 inches of the projector during the pairing process.


Image Focus

 Go to **Settings > Projector > Focus**, press the left and right button on the remote control to manually fine tune.

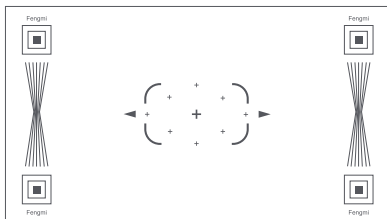


Keystone Correction

 To perform keystone correction, go to **Settings > Projector > Keystone Correction**. Use the Left and Right remote buttons to select 8-Point Keystone Correction, Fine Tune, or Reset. Press the OK button to select a mode, then use the remote's directional pad to adjust the shape of the projected image.

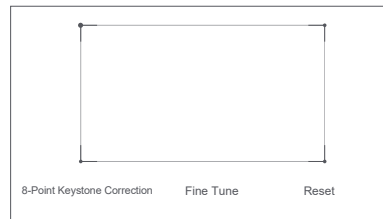

Network & Internet

 Go to **Settings > Network & Internet**. Select a wireless network to connect to, enter the password, and wait for the projector to connect.

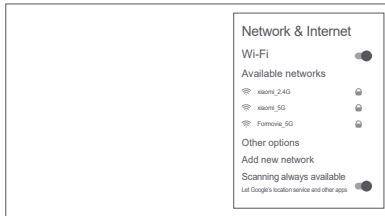

Smart Temperature Control

The projector automatically monitors the ambient temperature (operating temperature range is 0°C to 40°C), projector temperature, and color wheel temperature, and the projector's fan speed is automatically adjusted based on the detected temperature values.

 
- The projector has two brightness modes to choose from when operating at a normal temperature. To adjust the projector's brightness level, go to Settings > Image > Brightness Mode.
- If the projector gets too hot, an overheating warning will appear and the projector will automatically switch to low brightness mode. Temperature and error warnings will be displayed automatically whenever the temperature exceeds its maximum range to inform you that the projector will be automatically turned off.

Safety & Protection


The projector comes with an infrared sensor which is able to intelligently detect and protect the human eye from damage caused by strong light within the projected area.

The projector will reduce its brightness to the lowest possible value when the sensor is triggered and issue the following notification: "Do not look directly at the light source." Press any button on the remote to exit.


Human infrared sensor & fresnel optical lens

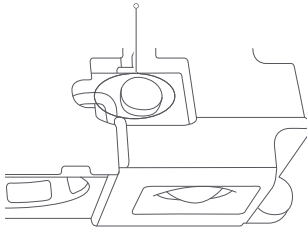

Front sensor range: Approximately 55°

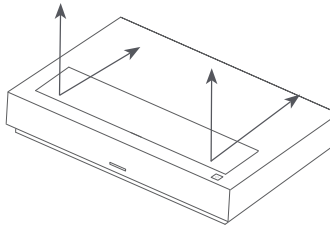 


 Left and right side sensor range: Approximately 70°

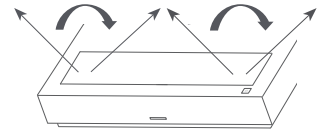

Bluetooth Speakers

 The projector has four high-quality built-in speakers with a total output of about 30 W. The speakers can also be used as a stand-alone Bluetooth stereo.

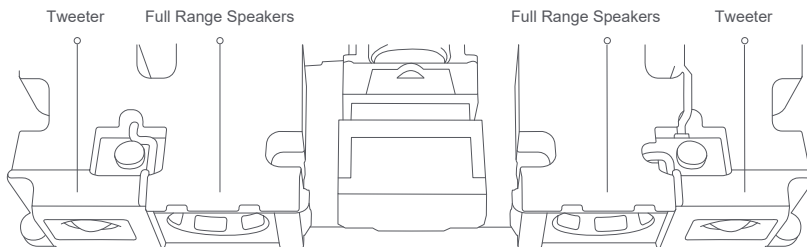


To use speakers as the Bluetooth stereo, press the Home button, then select **Settings > Remotes & Accessories > Bluetooth speaker mode** from the home screen. Enable the Bluetooth function on your phone. Search and locate the projector name in the Bluetooth list, then pair the projector with your phone.

Note:

To connect and pair with other Bluetooth devices such as speakers and earphones, select **Settings > Remotes & Accessories > Add accessory**. Make sure the device is in an awaiting connection mode with its Bluetooth function enabled.

Care & Maintenance

 Heat Dissipation Maintenance

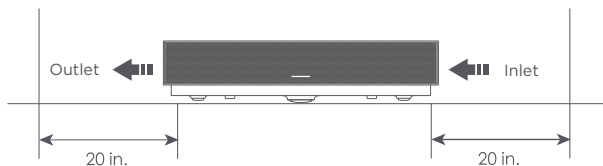


Note: Do not touch the heat dissipation vent or ventilation vents as temperatures can reach up to 65°C.



Note: Do not place any objects within 20 inches of the projector's air vents, as this will affect its heat dissipation effect.

 Cleaning & Maintenance

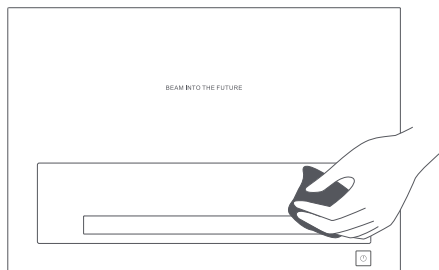

Turn off and unplug the projector before cleaning.

Only use the cleaning cloth that comes with the projector or a professional grade cleaning cloth to clean the projector's glass.

Do not use any abrasive cleaning products, solvents, chemicals, or other rough objects so as to avoid scratches or corrosion.



Note:

- The projector is not water resistant. Do not allow liquids to penetrate the projector, especially areas such as the power indicator, glass cover, air vents, connection ports, and speaker grilles.
- Only use the cleaning cloth that comes with the projector or a professional grade cleaning cloth to clean the projector's lens.

Specifications

Basic Information	Name	WEMAX Laser TV 4K Cinema
	Model	L176FGN
	Item Dimensions	456 x 308 x 91mm
	Net Weight	7.0kg
Electrical Specifications	Power Consumption	< 300W (Highlight Mode)
	Rated Input	100-120/200-240V~ 3/2.5A 50/60Hz
	Standby Power Consumption	< 0.5W
Optical Parameters	Display Technology	0.47"DMD
	Light Source Technology	ALPD
	Standard Resolution	4K (3840 x 2160)
Projection Parameters	Throw Ratio (TR)	0.233:1
	Screen Size	80" to 150"
	Lens Focus	Motor Focus
	Keystone Correction	8-point Keystone Correction, 4-point Keystone Correction
RAM	RAM	2GB DDR3
	Built-in Storage	32GB eMMC High-speed Flash Memory
System Software	Operating System	Android TV
	APP	Pre-installed Third-party APPs
	Brightness Mode	Highlight Mode, View Mode
	Bluetooth	Bluetooth 4.1/BLE

Speaker Audio	Audio Effects	Dolby Audio/DTS-HD
	Speaker	Full Range x 2/Tweeters x 2
Power Supply	Built-in Power Supply	Built-in AC-DC
Safety & Protection	Smart Temperature Control	Automatic Brightness Adjustment/Smart Fan Speed Adjustment
	Temperature Switch	Overheating Auto Turn-off
	Laser Projector Eye Protection	Human Body Detection Sensor (can be disabled)
Others	Noise Level	≤ 32 dB (View mode at an ambient temperature of 25°C)
	Remote Control	Bluetooth Remote Control
	Indicator	White light
	Storage Temperature	-20°C to 55°C
	Operating Temperature	0°C to 40°C
	Operating Humidity	20%-80%

Troubleshooting

Issue	Solution
No projected image	Turn off the projector and disconnect from the power, then plug in the power cord and turn on the projector.
Android system crashes	Turn off the projector and disconnect from the power, then plug in the power cord and turn on the projector. Check to see if a system update is available. Go to Settings -> Device Preferences -> About -> System update .
Screen display error	Turn off the projector and disconnect from the power, then plug in the power cord and turn on the projector.
Remote control is not paired and the projector cannot be turned on remotely.	Turn off the projector and disconnect from the power. Wait for five minutes, then plug in the power cord and turn on the projector. After the projector has been restarted, pair the remote control again.
If the projector overheats, it will automatically turn off.	Please remove any obstacles from the air inlets and outlets so as to ensure a smooth airflow through the projector. Follow the instructions above to restart the projector.
Projected display is warped	It is possible that some walls are not flat or level, and this can affect the display. An ALR screen is highly recommended for the best experience. Be sure that the surface under the projector is entirely level.
Google Play apps are crashing	Check to see if there are any updates available. Open the Google Play Store and go to My Apps. Any available updates will there for download.
HDMI source isn't visible	Go to the AndroidTV home dashboard. Navigate the cursor to the Inputs menu in the top right corner and select Inputs. For laptops or PC's, check the settings on the device to allow permission for screen sharing or extension.
HDMI input source isn't playing 4K	From the HDMI input, press and hold the Select button on the remote to open the TV Options menu. Choose Settings and enable HDMI 2.0. Next, check the display settings on the source device to output 4K @ 60 Hz.
The game console connected via HDMI has too much input lag.	From the HDMI input, press and hold the Select button on the remote to open the TV Options menu. Choose Image -> Game Mode .

Product Certifications



HIGH-DEFINITION MULTIMEDIA INTERFACE

The terms HDMI, HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.



For DTS patents, see <http://patents.dts.com>. Manufactured under license from DTS Licensing Limited. DTS, the Symbol, DTS and the Symbol together, DTS-HD, and the DTS-HD logo are registered trademarks and/or trademarks of DTS, Inc. in the United States and/or other countries. © DTS, Inc. All Rights Reserved.



Manufactured under license from Dolby Laboratories. Dolby, Dolby Audio, and the double-D symbol are trademarks of Dolby Laboratories.

WEMAX®, a brand of Ampula Inc., Bellevue, WA 98005

For further information, please go to www.wemax.com

Product Warranty

As a WEMAX consumer, you benefit under certain conditions from additional warranties. WEMAX offers specific consumer warranty benefits which are in addition to, and not instead of, any legal warranties provided by your national consumer law.

The duration and conditions related to the legal warranties are provided by respective local laws. Except as prohibited by laws or otherwise promised by WeMax, the after-sales services shall be limited to the country or region of the original purchase.

Under the consumer warranty, to the fullest extent permitted by law, WEMAX will at its discretion, repair, replace, or refund you product. Normal wear and tear, force majeure, abuse or damage caused by the user's fault are not warranted. The contact person for the after-sales service may be any person in WEMAX's authorized service network, WEMAX's authorized distributors, or the final vendor who sold the products to you. If in doubt, please contact the relevant party that WEMAX may identify.

Products which were not duly imported and/or were not duly manufactured by WEMAX or its partners, and/or were not duly acquired from WEMAX or a WEMAX-authorized seller are not covered by the present warranties. As per applicable law, you may benefit from warranties from the non-authorized retailer who sold the product. Therefore, WEMAX invites you to contact the retailer from whom you purchased the product.



D66050000162

B