 


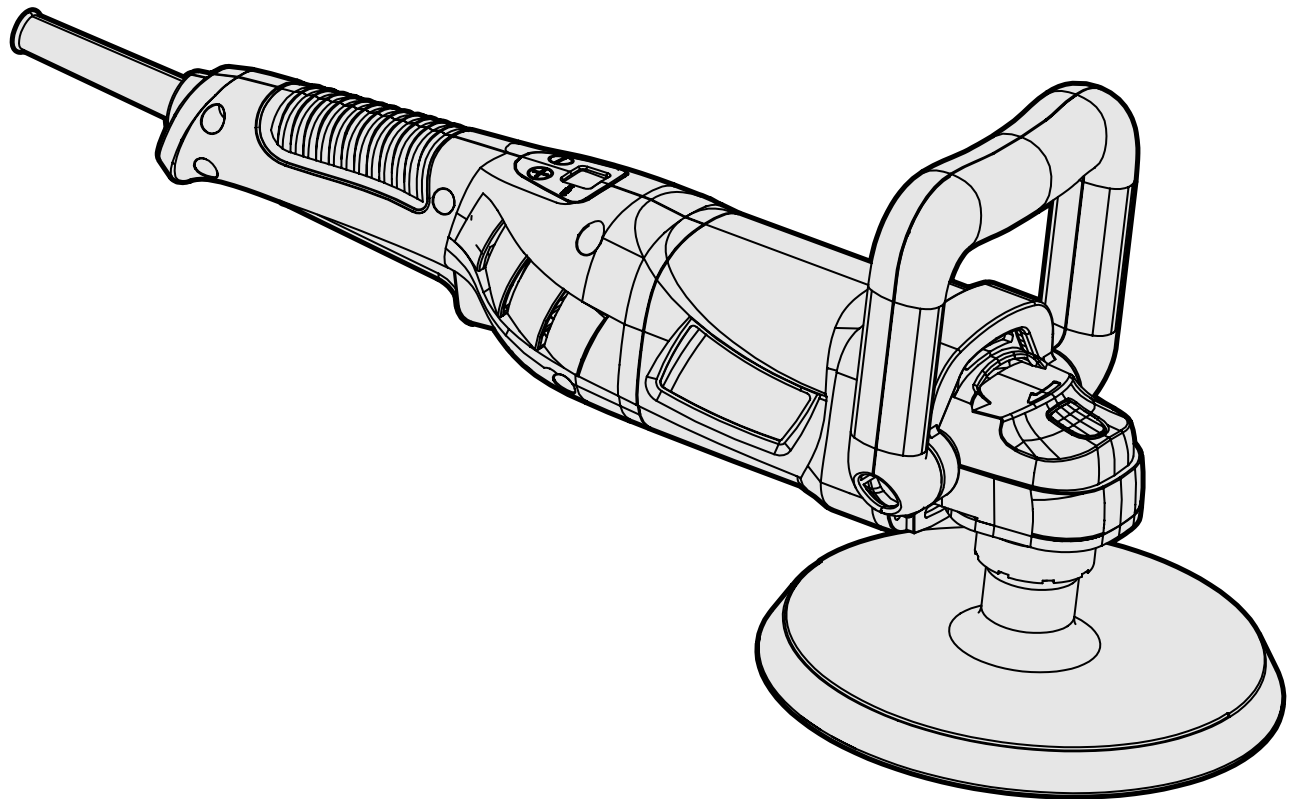

MODEL 948

7-INCH POLISHER

Instruction Manual



NEED HELP? CONTACT US!

Have product questions? Need technical support? Please feel free to contact us:



1-847-429-9263 (M-F 8AM-5PM CST)



TECHSUPPORT@WENPRODUCTS.COM

IMPORTANT: Your new tool has been engineered and manufactured to WEN's highest standards for dependability, ease of operation, and operator safety. When properly cared for, this product will supply you years of rugged, trouble-free performance. Pay close attention to the rules for safe operation, warnings, and cautions. If you use your tool properly and for its intended purpose, you will enjoy years of safe, reliable service.

For replacement parts and the most up-to-date instruction manuals, visit ***WENPRODUCTS.COM***

CONTENTS

WELCOME	3
Introduction	3
Specifications.....	3
 SAFETY	 4
General Safety Rules.....	4
Specific Rules for Your Polisher.....	6
Electrical Information	7
 BEFORE OPERATING	 8
Unpacking & Packing List.....	8
Know Your Polisher	8
Assembly & Adjustments.....	9
 OPERATION & MAINTENANCE	 9
Operation	9
Maintenance.....	11
Exploded View & Parts List.....	12
Warranty Statement	14

To purchase accessories for your tool, visit ***WENPRODUCTS.COM***

Replacement Polishing Disc (Part 948-046)
Hook and Loop Foam Polishing Pad, 3-Pack (Model 94810-052-3)
7-Inch Synthetic Wool Polishing Bonnets (2-Pack) (Model 7A345)
7-Inch Terry Cloth Polishing Bonnets (2-Pack) (Model 7A323)
7-Inch Terry Cloth Applicator Bonnets (2-Pack) (Model 7A324)
7-Inch Microfiber Polishing Bonnets (2-Pack) (Model 7A326)

INTRODUCTION

Thanks for purchasing the WEN 7-Inch Polisher. We know you are excited to put your tool to work, but first, please take a moment to read through the manual. Safe operation of this tool requires that you read and understand this operator's manual and all the labels affixed to the tool. This manual provides information regarding potential safety concerns, as well as helpful assembly and operating instructions for your tool.

 Indicates danger, warning, or caution. The safety symbols and the explanations with them deserve your careful attention and understanding. Always follow the safety precautions to reduce the risk of fire, electric shock or personal injury. However, please note that these instructions and warnings are not substitutes for proper accident prevention measures.

NOTE: The following safety information is not meant to cover all possible conditions and situations that may occur. WEN reserves the right to change this product and specifications at any time without prior notice.

At WEN, we are continuously improving our products. If you find that your tool does not exactly match this manual, please visit **wenproducts.com** for the most up-to-date manual or contact our customer service at **1-847-429-9263**.

Keep this manual available to all users during the entire life of the tool and review it frequently to maximize safety for both yourself and others.

SPECIFICATIONS

Model Number	948
Motor	120V, 60 Hz, 10A
Speed	1000 - 3500 RPM
Pad Size	7 Inches
Arbor Thread	5/8"-11
Cord Length	6-1/2 Feet
Product Weight	5 Pounds
Product Dimensions	7 in. x 8 in. x 17 in.

GENERAL SAFETY RULES

 **WARNING!** Read all safety warnings and all instructions. Failure to follow the warnings and instructions may result in electric shock, fire and/or serious injury.

Safety is a combination of common sense, staying alert and knowing how your item works. The term “power tool” in the warnings refers to your mains-operated (corded) power tool or battery-operated (cordless) power tool.

SAVE THESE SAFETY INSTRUCTIONS.

WORK AREA SAFETY

- 1. Keep work area clean and well lit.** Cluttered or dark areas invite accidents.
- 2. Do not operate power tools in explosive atmospheres, such as in the presence of flammable liquids, gases or dust.** Power tools create sparks which may ignite the dust or fumes.
- 3. Keep children and bystanders away while operating a power tool.** Distractions can cause you to lose control.

ELECTRICAL SAFETY

- 1. Power tool plugs must match the outlet. Never modify the plug in any way. Do not use any adapter plugs with earthed (grounded) power tools.** Unmodified plugs and matching outlets will reduce risk of electric shock.
- 2. Avoid body contact with earthed or grounded surfaces such as pipes, radiators, ranges and refrigerators.** There is an increased risk of electric shock if your body is earthed or grounded.
- 3. Do not expose power tools to rain or wet conditions.** Water entering a power tool will increase the risk of electric shock.
- 4. Do not abuse the cord. Never use the cord for carrying, pulling or unplugging the power tool. Keep cord away from heat, oil, sharp edges or moving parts.** Damaged or entangled cords increase the risk of electric shock.
- 5. When operating a power tool outdoors, use an extension cord suitable for outdoor use.** Use of a cord suitable for outdoor use reduces the risk of electric shock.

- 6. If operating a power tool in a damp location is unavoidable, use a ground fault circuit interrupter (GFCI) protected supply.** Use of a GFCI reduces the risk of electric shock.

PERSONAL SAFETY

- 1. Stay alert, watch what you are doing and use common sense when operating a power tool. Do not use a power tool while you are tired or under the influence of drugs, alcohol or medication.** A moment of inattention while operating power tools may result in serious personal injury.
- 2. Use personal protective equipment. Always wear eye protection.** Protective equipment such as a respiratory mask, non-skid safety shoes and hearing protection used for appropriate conditions will reduce the risk of personal injury.
- 3. Prevent unintentional starting. Ensure the switch is in the off-position before connecting to power source and/or battery pack, picking up or carrying the tool.** Carrying power tools with your finger on the switch or energizing power tools that have the switch on invites accidents.
- 4. Remove any adjusting key or wrench before turning the power tool on.** A wrench or a key left attached to a rotating part of the power tool may result in personal injury.
- 5. Do not overreach. Keep proper footing and balance at all times.** This enables better control of the power tool in unexpected situations.
- 6. Dress properly. Do not wear loose clothing or jewelry. Keep your hair and clothing away from moving parts.** Loose clothes, jewelry or long hair can be caught in moving parts.

GENERAL SAFETY RULES

 **WARNING!** Read all safety warnings and all instructions. Failure to follow the warnings and instructions may result in electric shock, fire and/or serious injury.

Safety is a combination of common sense, staying alert and knowing how your item works. The term “power tool” in the warnings refers to your mains-operated (corded) power tool or battery-operated (cordless) power tool.

SAVE THESE SAFETY INSTRUCTIONS.

7. If devices are provided for the connection of dust extraction and collection facilities, ensure these are connected and properly used. Use of dust collection can reduce dust-related hazards.

POWER TOOL USE AND CARE

1. Do not force the power tool. Use the correct power tool for your application. The correct power tool will do the job better and safer at the rate for which it was designed.

2. Do not use the power tool if the switch does not turn it on and off. Any power tool that cannot be controlled with the switch is dangerous and must be repaired.

3. Disconnect the plug from the power source and/or the battery pack from the power tool before making any adjustments, changing accessories, or storing power tools. Such preventive safety measures reduce the risk of starting the power tool accidentally.

4. Store idle power tools out of the reach of children and do not allow persons unfamiliar with the power tool or these instructions to operate the power tool. Power tools are dangerous in the hands of untrained users.

5. Maintain power tools. Check for misalignment or binding of moving parts, breakage of parts and any other condition that may affect the power tool's operation. If damaged, have the power tool repaired before use. Many accidents are caused by poorly maintained power tools.

6. Keep cutting tools sharp and clean. Properly maintained cutting tools with sharp cutting edges are less likely to bind and are easier to control.

7. Use the power tool, accessories and tool bits, etc. in accordance with these instructions, taking into account the working conditions and the work to be performed. Use of the power tool for operations different from those intended could result in a hazardous situation.

8. Use clamps to secure your workpiece to a stable surface. Holding a workpiece by hand or using your body to support it may lead to loss of control.

9. KEEP GUARDS IN PLACE and in working order.

SERVICE

1. Have your power tool serviced by a qualified repair person using only identical replacement parts. This will ensure that the safety of the power tool is maintained.

CALIFORNIA PROPOSITION 65 WARNING

Some dust created by power sanding, sawing, grinding, drilling, and other construction activities may contain chemicals, including lead, known to the State of California to cause cancer, birth defects, or other reproductive harm. Wash hands after handling. Some examples of these chemicals are:

- Lead from lead-based paints.
- Crystalline silica from bricks, cement, and other masonry products.
- Arsenic and chromium from chemically treated lumber.

Your risk from these exposures varies depending on how often you do this type of work. To reduce your exposure to these chemicals, work in a well-ventilated area with approved safety equipment such as dust masks specially designed to filter out microscopic particles.

SPECIFIC RULES FOR YOUR POLISHER

 **WARNING!** Do not operate the power tool until you have read and understood the following instructions and the warning labels.

POLISHER SAFETY

1. This polisher is for personal use only. Using this polisher for professional purposes will reduce the unit's lifespan and may cause the unit to overheat.
2. Only use the polisher for its intended use.
3. Only use accessories that have been specifically designed or recommended by the manufacturer.
4. Only use accessories that have a rated speed equal to or greater than the maximum speed of the polisher.
5. Do not use accessories that do not match the specifications of the polisher.
6. Do not use damaged accessories. Before beginning operation, make sure that all accessories are in full working order.
7. Make sure that the power cord is clear of the spinning accessory.
8. Never set the polisher down before the tool has come to a complete stop.
9. Regularly clean the air vents of dust and debris.
10. Never operate the polisher near flammable materials.
11. Do not use accessories that require liquid coolants. Using water or other liquid coolants may result in risk of electric shock.
12. Hold your power tool by the insulated gripping surfaces, especially when performing an operation where the polishing accessory could contact hidden wiring.
13. Protect your lungs. Wear a face or dust mask during operation. Following this rule will reduce the risk of serious respiratory injury.
14. Protect your hearing. Wear hearing protection during extended periods of operation. Following this rule will reduce the risk of serious personal injury.
15. Inspect power cords periodically and repair them as needed at your nearest authorized service center. Constantly stay aware of cord location. Following this rule will reduce the risk of electric shock or fire.

16. Check damaged parts. Before further use of the tool, determine that it will operate properly and perform its intended function. Check for alignment, binding or breakage of moving parts or any other conditions that may affect its operation. A guard or other part that is damaged should be properly repaired or replaced by an authorized service center. Following this rule will reduce the risk of shock, fire, or serious injury.

17. If the power cord is damaged, it must be replaced only by the manufacturer or by an authorized service center.

18. Save these instructions. Refer to them frequently and use them to instruct others who may use this product.

VIBRATION SAFETY

This tool vibrates during use. Repeated or long-term exposure to vibration may cause temporary or permanent physical injury, particularly to the hands, arms and shoulders.

 
To reduce the risk of any vibration-related injury:

1. First be examined by a doctor and then have regular medical check-ups to ensure medical problems are not being caused or worsened from use. Pregnant women or people who have impaired blood circulation to the hand, past hand injuries, nervous system disorders, diabetes, or Raynaud's Disease should not use this tool. If you feel any symptoms related to vibration (such as tingling, numbness, and white or blue fingers), seek medical advice as soon as possible.
2. Do not smoke during use. Nicotine reduces the blood supply to the hands and fingers, increasing the risk of vibration-related injury.
3. Wear suitable gloves to reduce the vibration effects on the user.
4. Use tools with the lowest vibration when there is a choice.
5. Take vibration-free breaks during each day of work.
6. Grip tool as lightly as possible (while still keeping safe control of it). Let the tool do the work.
7. To reduce vibration, maintain the tool as explained in this manual. If any abnormal vibration occurs, stop use immediately.

ELECTRICAL INFORMATION

DOUBLE-INSULATED TOOLS

The tool's electrical system is double-insulated where two systems of insulation are provided. This eliminates the need for the usual three-wire grounded power cord. Double-insulated tools do not need to be grounded, nor should a means for grounding be added to the product. All exposed metal parts are isolated from the internal metal motor components with protecting insulation.

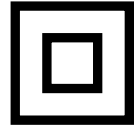

IMPORTANT: Servicing a double-insulated product requires extreme care and knowledge of the system, and should be done only by qualified service personnel using identical replacement parts. Always use original factory replacement parts when servicing.

1. Polarized Plugs. To reduce the risk of electric shock, this equipment has a polarized plug (one blade is wider than the other). This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician to install a proper outlet. Do not modify the machine plug or the extension cord in any way.

2. Ground fault circuit interrupter protection (GFCI) should be provided on the circuit or outlet used for this power tool to reduce the risk of electric shock.

3. Service and repair. To avoid danger, electrical appliances must only be repaired by a qualified service technician using original replacement parts.

GUIDELINES AND RECOMMENDATIONS FOR EXTENSION CORDS

When using an extension cord, be sure to use one heavy enough to carry the current your product will draw. An undersized cord will cause a drop in line voltage, resulting in loss of power and overheating. The table below shows the correct size to be used according to cord length and ampere rating. When in doubt, use a heavier cord. The smaller the gauge number, the heavier the cord.

AMPERAGE	REQUIRED GAUGE FOR EXTENSION CORDS			
	25 ft.	50 ft.	100 ft.	150 ft.
10A	16 gauge	16 gauge	14 gauge	12 gauge

1. Examine extension cord before use. Make sure your extension cord is properly wired and in good condition. Always replace a damaged extension cord or have it repaired by a qualified person before using it.

2. Do not abuse extension cord. Do not pull on cord to disconnect from receptacle; always disconnect by pulling on plug. Disconnect the extension cord from the receptacle before disconnecting the product from the extension cord. Protect your extension cords from sharp objects, excessive heat and damp/wet areas.

3. Use a separate electrical circuit for your tool. This circuit must not be less than a 12-gauge wire and should be protected with a 15A time-delayed fuse. Before connecting the motor to the power line, make sure the switch is in the OFF position and the electric current is rated the same as the current stamped on the motor nameplate. Running at a lower voltage will damage the motor.

UNPACKING & PACKING LIST

UNPACKING

Carefully remove the polisher from the packaging and place it on a sturdy, flat surface. Make sure to take out all contents and accessories. Do not discard the packaging until everything is removed. Check the packing list below to make sure you have all of the parts and accessories. If any part is missing or broken, please contact customer service at **1-847-429-9263** (M-F 8-5 CST), or email techsupport@wenproducts.com.


PACKING LIST

DESCRIPTION	QUANTITY
Polisher	1
Auxiliary Handle	1
Hook & Loop Base Pad	1
Synthetic Wool Polishing Bonnet	1
M8x20 Socket Head Cap Screws	2
8mm Flat Washers	2
6mm Hex Wrench	1

KNOW YOUR POLISHER

TOOL PURPOSE

 Give your car the love it deserves with your WEN Polisher. Refer to the following diagrams to become familiarized with all the parts and controls of your polisher. The components will be referred to later in the manual for assembly and operation instructions.

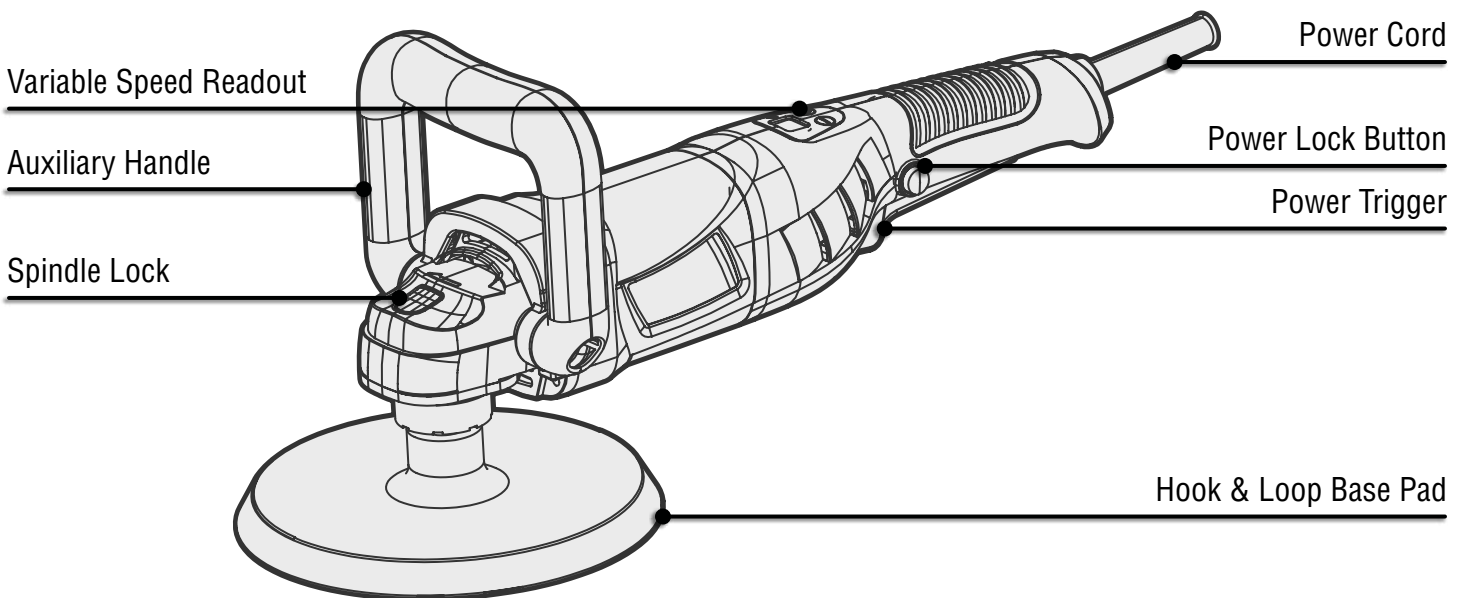

ASSEMBLY & ADJUSTMENTS

⚠ WARNING! To avoid injury from accidental startups, make sure that the tool is switched OFF and the power cord is unplugged from the power source when assembling the tool or making adjustments.

ASSEMBLING THE POLISHER

1. Press the spindle lock button located on top of the polisher. This prevents the spindle from rotating when installing the hook & loop base pad. While pressing the spindle lock button, screw the base pad into place. Make sure that the base pad is secure before beginning operation.
2. Attach the handle by sliding each end into the handle thread holes. Fasten the handle in place by using the included hex key to tighten the socket head cap screws and washers on either side of the handle.
3. Choose the correct accessory (pad, bonnet, etc.) for your operation. Securely attach the accessory to the center of the hook and loop base pad.

OPERATION

⚠ WARNING! To avoid injury from accidental startups, make sure that the tool is switched OFF and the power cord is unplugged from the power source when assembling the tool or making adjustments.

ON / OFF SWITCH

1. Plug the power cord into the power source.
2. To turn the polisher ON, pull the trigger.
3. For continuous power, press the power lock button.
4. To turn the polisher OFF, release the trigger. Wait for the polisher to come to a complete stop before setting it down.

VARIABLE SPEED

Your polisher has the ability to reach speeds ranging from 1000 - 3500 RPM.

1. To increase the speed of your polisher, press the plus (+) button under the variable speed readout. The readout displays the speed in 500-RPM increments from 1000 - 3500 RPM, in units of 100 (e.g. if the readout shows "10", the speed is 1000 RPM. If it shows "25", the speed is 2500 RPM, etc.).
2. To decrease the speed of your polisher, press the minus (-) button under the variable speed readout.

Below are speed suggestions for different waxing operations. These are purely guidelines for beginners - advanced users are advised to follow their own preferences.

SPEED RANGE	OPERATION
1000 to 1500 RPM	Compounding and Waxing
1500 to 2500 RPM	Polishing and Buffing
2500 to 3500 RPM	Heavy Correction Work

WAXING & POLISHING TIPS

1. Be mindful when polishing around or over sharp corners or contours of an object. Use less pressure than you would elsewhere.
2. Wax at a 15° angle to avoid streaking on the body of the car. Do not hold the polisher completely flat against a surface in one location, otherwise you run the risk of damaging the coat.
3. Before applying any wax or compounding solution, make sure to wash the vehicle with soap and water. Remove all dirt and bug residue from the surface, and dry completely with a clean microfiber towel. Use polishing clay after cleaning if you want to give the extra 10 percent.
4. Mask off areas such as handles, mirrors, bumpers, molding, and decals to combat possible damage from the polisher.
5. Attach a clean polishing pad to your tool when beginning a new job.
6. Try to keep the pad dry, otherwise waxing and application will become increasingly difficult.
7. Apply all solutions to a two by two foot area before moving on to the next two by two foot area of the car.
8. It is recommended to not compound and wax in direct sunlight; use a shaded area or a garage if possible.
9. Read the instructions on your bottles of wax and compound to ensure that these are the right directions, as suggested application changes slightly depending on the product.
10. If done correctly, water droplets will form tiny beads on the surface of the car's finish.

MAINTENANCE

⚠ WARNING! To avoid accidents, turn OFF and unplug the tool from the electrical outlet before cleaning, adjusting, or performing any maintenance work.

⚠ WARNING! Any attempt to repair or replace electrical parts on this tool may be hazardous. Servicing of the tool must be performed by a qualified technician. When servicing, use only identical WEN replacement parts. Use of other parts may be hazardous or induce product failure.

ROUTINE INSPECTION

Before each use, inspect the general condition of the tool. If any of these following conditions exist, do not use until parts are replaced or the saw is properly repaired.

Check for:

- Loose hardware
- Misalignment or binding of moving parts
- Damaged cord / electrical wiring
- Cracked or broken parts
- Any other condition that may affect its safe operation

NOTE: Electric tools used on fiberglass material, wall-board, spackling compounds, or plaster are subject to accelerated wear and possible premature failure because the fiberglass chips and grindings are highly abrasive to bearings, brushes, commutators, etc. Consequently, we do not recommend using this tool for extended work on these types of materials. However, if you do work with any of these materials, it is extremely important to clean the tool using compressed air after operation.

CLEANING & STORAGE

1. Keep the ventilation openings free from dust and debris to prevent the motor from overheating.
2. Wipe the tool surfaces clean with a clean cloth. Make sure water does not get into the tool.

CAUTION! Most plastics are susceptible to damage from various types of commercial solvents. Do not use any solvents or cleaning products that could damage the plastic parts. Some of these include, but are not limited to, gasoline, carbon tetrachloride, chlorinated cleaning solvents, and detergents that contain ammonia.

3. Store the tool in a clean and dry place away from the reach of children. Store in temperatures between 41° to 86°F.

 
PRODUCT DISPOSAL

Used power tools should not be disposed of together with household waste. This product contains electronic components that should be recycled. Please take this product to your local recycling facility for responsible disposal and to minimize its environmental impact.



Please recycle the packaging and electronic components where facilities exist.

EXPLODED VIEW & PARTS LIST

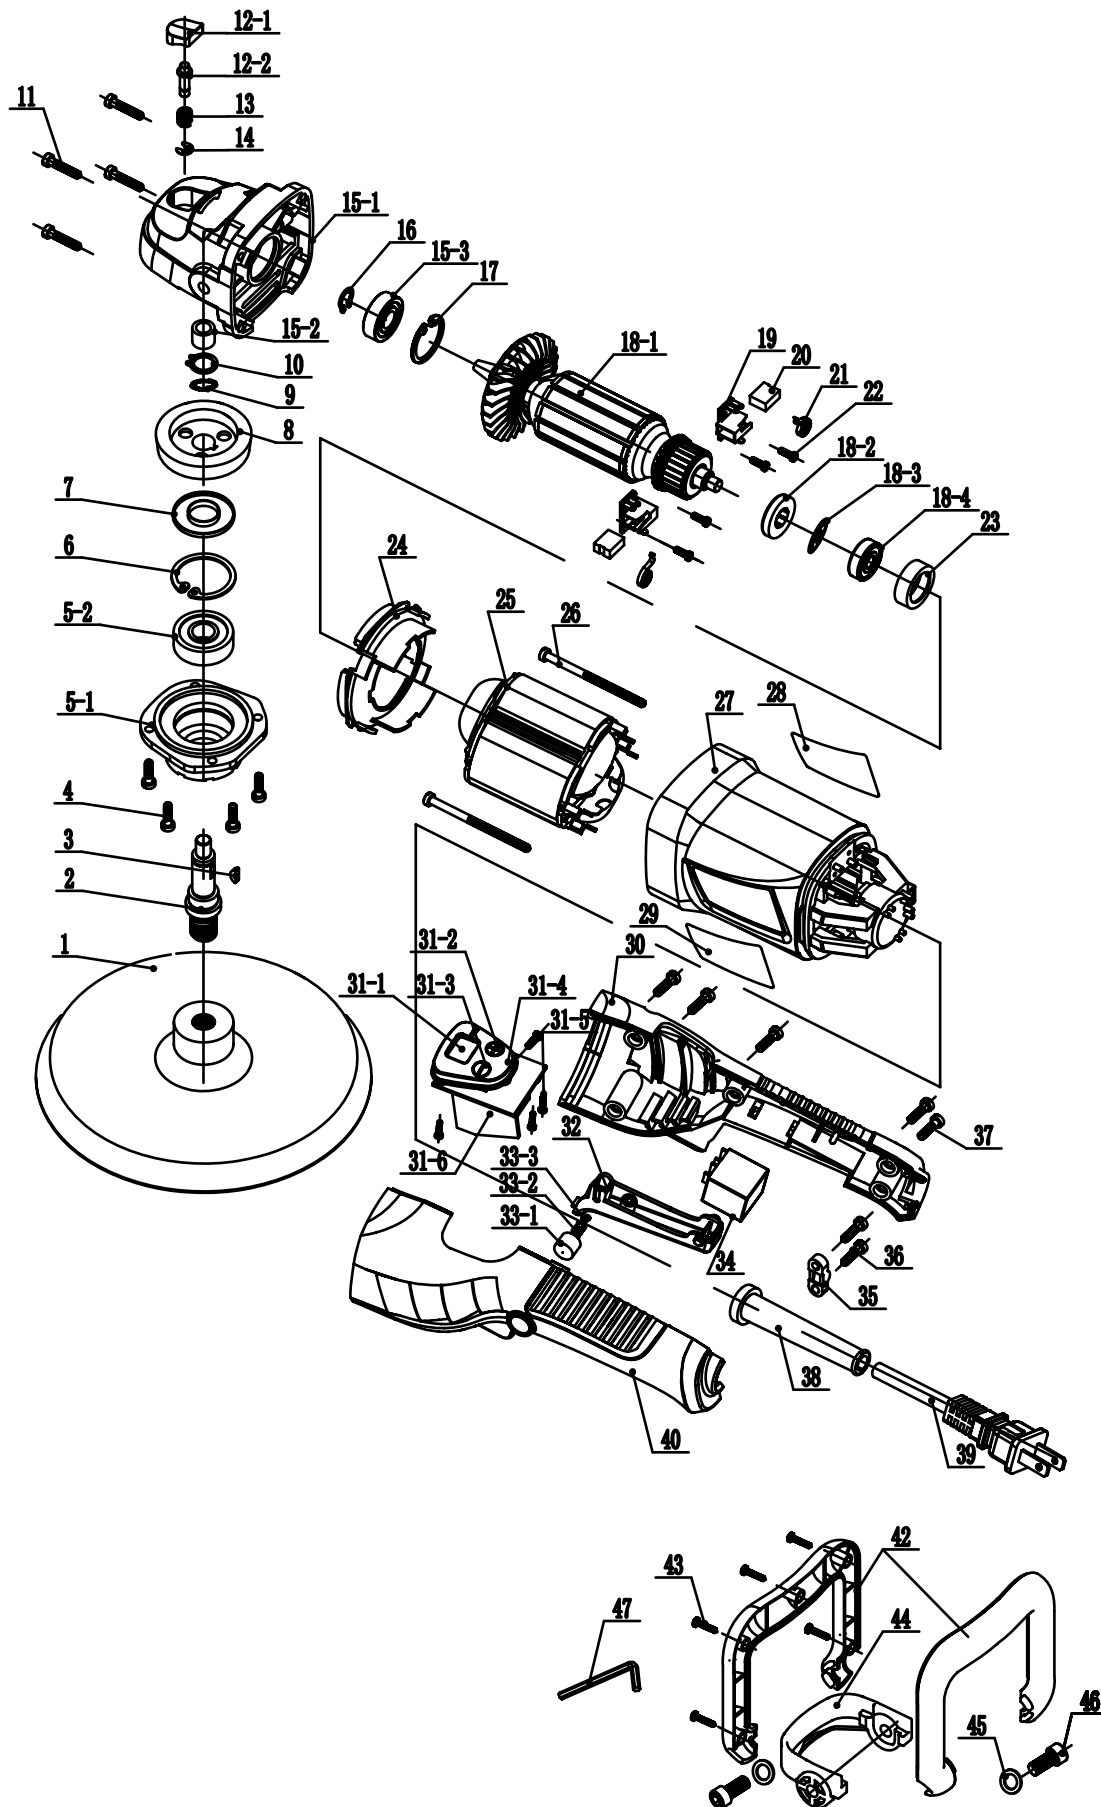

EXPLODED VIEW & PARTS LIST

NO	PART NO	DESCRIPTION	QTY	NO	PART NO	DESCRIPTION	QTY
1	948-046	Polishing Disk	1	25	948-027	Stator	1
2	948-042	Output Shaft	1	26	948-028	Self-tapping Screw, ST4x70	2
3	948-043	Key, 3x10mm	1	27	948-015	Motor Housing	1
4	948-044	Triple Set Screw, M4x12	4	28	948-028B	Label 1	1
5	948-045	Front Cover Assembly	1	29	948-029B	Label 2	1
5-1		Front Cover	1	30	948-011B	Right Housing	1
5-2		Bearing, 6200	1	31	948-007B	PCB and Screen Assembly	1
6	948-039	Circlip, 30mm	1	31-1		Display Screen	1
7	948-041	Gear Shield	1	31-2		Switch Button, +	1
8	948-038	Large Gear	1	31-3		Switch Button, -	1
9	948-036	Washer, 10mm	1	31-4		Switch Base	1
10	948-037	Circlip, 10mm	1	31-5		Self-tapping Screw, ST3x8	4
11	948-034	Self-tapping Screw, ST4x18-F	4	31-6		PCB	1
12	948-030	Spindle Lock Assembly	1	32	948-032B	Trigger	1
12-1		Spindle Lock Button	1	33	948-033B	Trigger Lock Assembly	1
12-2		Spindle Lock Pin	1	33-1		Trigger Lock Button	1
13	948-032	Spindle Lock Spring	1	33-2		Trigger Lock Spring	1
14	948-033	Circlip, 4mm	1	33-3		Trigger Lock Pin	1
15	948-035	Gearbox Assembly	1	34	948-034B	Switch	1
15-1		Gear Box	1	35	948-003	Cord Clamp	1
15-2		Bearing, HK0810	1	36	948-002	Self-tapping Screw, ST4x14-F	2
15-3		Bearing, 629	1	37	948-012	Self-tapping Screw, ST4x16-F	5
16	948-026	Circlip, 9mm	1	38	948-006	Strain Relief	1
17	948-024	Circlip, 26mm	1	39	948-001	Power Cord	1
18	948-023	Rotor Assembly	1	40	948-014B	Left Housing	1
18-1		Rotor	1	42	948-051B	D-handle Assembly	1
18-2		Magnetic Ring	1	43			
18-3		Dustproof Washer	1	44			
18-4		Bearing, 627	1	45	948-054	Washer, 8mm	2
19	948-022	Carbon Brush Holder	2	46	948-053	Socket Head Cap Screw, M8x20	2
20	948-021	Carbon Brush	2	47	948-047B	Hex Wrench, 6mm	1
21	948-020	Coil Spring	2				
22	948-019	Self-tapping Screw, ST3x8	4				
23	948-016	Bearing Sleeve	1				
24	948-029	Stator Cover	1				

NOTE: Not all parts may be available for purchase. Parts and accessories that wear down over the course of normal use are not covered under the warranty.

WARRANTY STATEMENT

WEN Products is committed to building tools that are dependable for years. Our warranties are consistent with this commitment and our dedication to quality.

LIMITED WARRANTY OF WEN PRODUCTS FOR HOME USE

GREAT LAKES TECHNOLOGIES, LLC ("Seller") warrants to the original purchaser only, that all WEN consumer power tools will be free from defects in material or workmanship during personal use for a period of two (2) years from date of purchase or 500 hours of use; whichever comes first. Ninety days for all WEN products if the tool is used for professional or commercial use. Purchaser has 30 days from the date of purchase to report missing or damaged parts.

SELLER'S SOLE OBLIGATION AND YOUR EXCLUSIVE REMEDY under this Limited Warranty and, to the extent permitted by law, any warranty or condition implied by law, shall be the replacement of parts, without charge, which are defective in material or workmanship and which have not been subjected to misuse, alteration, careless handling, misrepair, abuse, neglect, normal wear and tear, improper maintenance, or other conditions adversely affecting the Product or the component of the Product, whether by accident or intentionally, by persons other than Seller. To make a claim under this Limited Warranty, you must make sure to keep a copy of your proof of purchase that clearly defines the Date of Purchase (month and year) and the Place of Purchase. Place of Purchase must be a direct vendor of Great Lakes Technologies, LLC. Purchasing through third party vendors, including but not limited to garage sales, pawn shops, resale shops, or any other secondhand merchant, voids the warranty included with this product. Contact techsupport@wenproducts.com or 1-847-429-9263 with the following information to make arrangements: your shipping address, phone number, serial number, required part numbers, and proof of purchase. Damaged or defective parts and products may need to be sent to WEN before the replacements can be shipped out.

Upon the confirmation of a WEN representative, your product may qualify for repairs and service work. When returning a product for warranty service, the shipping charges must be prepaid by the purchaser. The product must be shipped in its original container (or an equivalent), properly packed to withstand the hazards of shipment. The product must be fully insured with a copy of the proof of purchase enclosed. There must also be a description of the problem in order to help our repairs department diagnose and fix the issue. Repairs will be made and the product will be returned and shipped back to the purchaser at no charge for addresses within the contiguous United States.

THIS LIMITED WARRANTY DOES NOT APPLY TO ITEMS THAT WEAR OUT FROM REGULAR USAGE OVER TIME, INCLUDING BELTS, BRUSHES, BLADES, BATTERIES, ETC. ANY IMPLIED WARRANTIES SHALL BE LIMITED IN DURATION TO TWO (2) YEARS FROM DATE OF PURCHASE. SOME STATES IN THE U.S. AND SOME CANADIAN PROVINCES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU.

IN NO EVENT SHALL SELLER BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES (INCLUDING BUT NOT LIMITED TO LIABILITY FOR LOSS OF PROFITS) ARISING FROM THE SALE OR USE OF THIS PRODUCT. SOME STATES IN THE U.S. AND SOME CANADIAN PROVINCES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU.

THIS LIMITED WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE IN THE U.S., PROVINCE TO PROVINCE IN CANADA AND FROM COUNTRY TO COUNTRY.

THIS LIMITED WARRANTY APPLIES ONLY TO ITEMS SOLD WITHIN THE UNITED STATES OF AMERICA, CANADA AND THE COMMONWEALTH OF PUERTO RICO. FOR WARRANTY COVERAGE WITHIN OTHER COUNTRIES, CONTACT THE WEN CUSTOMER SUPPORT LINE. FOR WARRANTY PARTS OR PRODUCTS REPAIRED UNDER WARRANTY SHIPPING TO ADDRESSES OUTSIDE OF THE CONTIGUOUS UNITED STATES, ADDITIONAL SHIPPING CHARGES MAY APPLY.

**THANKS FOR
REMEMBERING**

