

INSTRUCTION MANUAL

WEN Products is committed to building tools that are dependable for years. Our warranties are consistent with this commitment and our dedication to quality.

LIMITED WARRANTY OF WEN PRODUCTS FOR HOME USE

GREAT LAKES TECHNOLOGIES, LLC ("Seller") warrants to the original purchaser only, that all WEN consumer power tools will be free from defects in material or workmanship during personal use for a period of two (2) years from date of purchase or 500 hours of use; whichever comes first. Ninety days for all WEN products if the tool is used for professional or commercial use. Purchaser has 30 days from the date of purchase to report missing or damaged parts.

SELLER'S SOLE OBLIGATION AND YOUR EXCLUSIVE REMEDY under this Limited Warranty and, to the extent permitted by law, any warranty or condition implied by law, shall be the replacement of parts, without charge, which are defective in material or workmanship and which have not been subjected to misuse, alteration, careless handling, misrepair, abuse, neglect, normal wear and tear, improper maintenance, or other conditions adversely affecting the Product or the component of the Product, whether by accident or intentionally, by persons other than Seller. To make a claim under this Limited Warranty, you must make sure to keep a copy of your proof of purchase that clearly defines the Date of Purchase (month and year) and the Place of Purchase. Place of Purchase must be a direct vendor of Great Lakes Technologies, LLC. Purchasing through third party vendors, including but not limited to garage sales, pawn shops, resale shops, or any other secondhand merchant, voids the warranty included with this product. Contact techsupport@wenproducts.com or 1-847-429-9263 with the following information to make arrangements: your shipping address, phone number, serial number, required part numbers, and proof of purchase. Damaged or defective parts and products may need to be sent to WEN before the replacements can be shipped out.

Upon the confirmation of a WEN representative, your product may qualify for repairs and service work. When returning a product for warranty service, the shipping charges must be prepaid by the purchaser. The product must be shipped in its original container (or an equivalent), properly packed to withstand the hazards of shipment. The product must be fully insured with a copy of the proof of purchase enclosed. There must also be a description of the problem in order to help our repairs department diagnose and fix the issue. Repairs will be made and the product will be returned and shipped back to the purchaser at no charge for addresses within the contiguous United States.

THIS LIMITED WARRANTY DOES NOT APPLY TO ITEMS THAT WEAR OUT FROM REGULAR USAGE OVER TIME, INCLUDING BELTS, BRUSHES, BLADES, BATTERIES, ETC. ANY IMPLIED WARRANTIES SHALL BE LIMITED IN DURATION TO TWO (2) YEARS FROM DATE OF PURCHASE. SOME STATES IN THE U.S. AND SOME CANADIAN PROVINCES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU.

IN NO EVENT SHALL SELLER BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES (INCLUDING BUT NOT LIMITED TO LIABILITY FOR LOSS OF PROFITS) ARISING FROM THE SALE OR USE OF THIS PRODUCT. SOME STATES IN THE U.S. AND SOME CANADIAN PROVINCES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU.

THIS LIMITED WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE IN THE U.S., PROVINCE TO PROVINCE IN CANADA AND FROM COUNTRY TO COUNTRY.

THIS LIMITED WARRANTY APPLIES ONLY TO ITEMS SOLD WITHIN THE UNITED STATES OF AMERICA, CANADA AND THE COMMONWEALTH OF PUERTO RICO. FOR WARRANTY COVERAGE WITHIN OTHER COUNTRIES, CONTACT THE WEN CUSTOMER SUPPORT LINE. FOR WARRANTY PARTS OR PRODUCTS REPAIRED UNDER WARRANTY SHIPPING TO ADDRESSES OUTSIDE OF THE CONTIGUOUS UNITED STATES, ADDITIONAL SHIPPING CHARGES MAY APPLY.

INSTRUCTION MANUAL



MODEL CLP122, CLP502

 
PARALLEL CLAMPS (2 PACK)

SPECIFICATIONS

Clamping Capacity	CLP122: 24 Inches
	CLP502: 50 Inches
Jaw Throat Depth	4.13 Inches
Jaw Width	1.83 Inches
Clamping Force	1700 - 2000 Pounds
Product Dimensions	CLP122: 31.2 in. x 6.1 in. x 1.8 in.
	CLP502: 57.1 in. x 6.1 in. x 1.8 in.
Product Weight	CLP122: 6.6 Pounds
	CLP502: 9.8 Pounds


PACKING LIST

Model CLP122

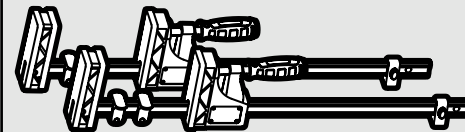

24-Inch Parallel Clamps (2)

 Model CLP502

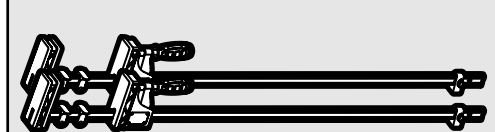

50-Inch Parallel Clamps (2)

To purchase accessories for your tool, visit **WENPRODUCTS.COM**

INSTRUCTION MANUAL

GENERAL SAFETY WARNINGS

WORK AREA SAFETY

1. Keep work area clean and well lit. Cluttered or dark areas invite accidents.

PERSONAL SAFETY

1. Stay alert, watch what you are doing and use common sense when operating a tool. Do not use a tool while you are tired or under the influence of drugs, alcohol or medication. A moment of inattention while operating tools may result in serious personal injury.

2. Use personal protective equipment. Always wear eye protection. Protective equipment such as a respiratory mask, non-skid safety shoes and hearing protection used for appropriate conditions will reduce the risk of personal injury.

3. Dress properly. Do not wear loose clothing or jewelry. Keep your hair and clothing away from moving parts. Loose clothes, jewelry or long hair can be caught in moving parts.

TOOL USE AND CARE

1. Do not force the tool. Use the correct tool for your application. The correct tool will do the job better and safer at the rate for which it was designed.

2. Do not use the tool if the switch does not turn it on and off. Any tool that cannot be controlled with the switch is dangerous and must be repaired.

3. Store idle tools out of the reach of children and do not allow persons unfamiliar with the tool or these instructions to operate the tool. Tools are dangerous in the hands of untrained users.

4. Maintain tools. Check for misalignment or binding of moving parts, breakage of parts and any other condition that may affect the tool's operation. If damaged, have the tool repaired before use. Many accidents are caused by poorly maintained tools.

5. Use the tool, accessories, and tool bits, etc. in accordance with these instructions, taking into account the working conditions and the work to be performed. Use of the tool for operations different from those intended could result in a hazardous situation.

NOTE: If moving across hardwood floors, scratching or damage may occur if floor is unprotected. Protect floors using a moving blanket or a protective layer between the wheels and the floor.

SERVICE

1. Have your power tool serviced by a qualified repair person using only identical replacement parts. This will ensure that the safety of the power tool is maintained.

CALIFORNIA PROP 65 WARNING

 
Some dust created by power sanding, sawing, grinding, drilling, and other construction activities may contain chemicals, including lead, known to the State of California to cause cancer, birth defects, or other reproductive harm. Wash hands after handling. **Some examples of these chemicals are:**

- Lead from lead-based paints.
- Crystalline silica from bricks, cement, and other masonry products.
- Arsenic and chromium from chemically treated lumber.

Your risk from these exposures varies depending on how often you do this type of work. To reduce your exposure to these chemicals, work in a well-ventilated area with approved safety equipment such as dust masks specially designed to filter out microscopic particles.

INSTRUCTION MANUAL

KNOW YOUR PARALLEL CLAMPS

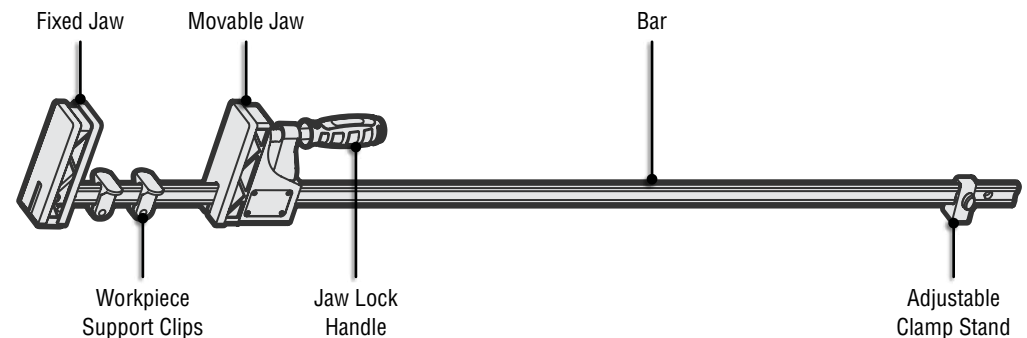

OPERATION

1. Rest the clamp face up on a sturdy, flat surface.

NOTE: Adjust the clamp stand by loosening the locking knob, then sliding it up or down the bar to fit on your work surface. The clamp stand allows for hands-free operation. Tighten the locking knob when the stand is in position.

2. Twist the jaw lock handle to unlock the movable jaw.

3. Lift up on the jaw lock handle and slide the movable jaw down the bar until there is enough room for your workpiece to fit between the fixed and movable jaws.

4. Rest the workpiece against the fixed jaw and on top of the workpiece support clips. The workpiece support clips are adjustable and can be moved up or down the bar based on the size of your workpiece.

5. With the jaw lock handle loosened, slide the movable jaw up until it rests firmly against the side of the workpiece.

6. Once the workpiece is secure between the clamps, twist the jaw lock handle to lock the movable jaw in place.

CONVERTING TO A SPREADER CLAMP

 
Use spreader clamps when you need to provide support or apply internal pressure to a workpiece.

1. Remove the adjustable clamp stand from the end of the bar.

2. Slide the movable jaw off the bar.

3. Flip the movable jaw and replace it on the bar so that the jaw lock handle faces the fixed jaw.

4. Fit the clamps between the workpiece and the work surface. Lock the movable jaw in place once it rests securely against the workpiece as shown in Fig. 1.

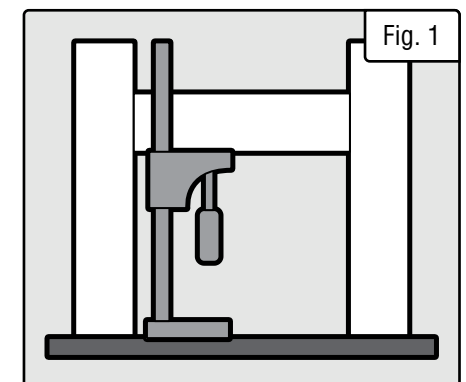

NEED HELP? CONTACT US!

Have product questions? Need technical support? Please feel free to contact us:



1-847-429-9263 (M-F 8AM-5PM CST)



TECHSUPPORT@WENPRODUCTS.COM