


Exson M

Portable Bluetooth® Speaker /
Power Bank / Flashlight

W WHARFEDALE

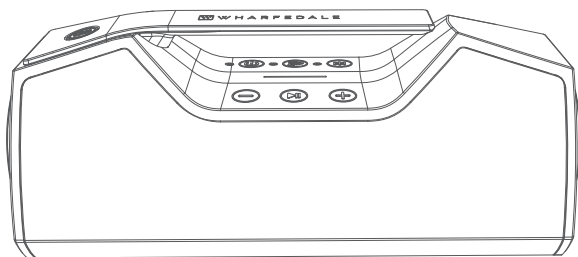

USER MANUAL



Warning:

This product contains magnets.
We recommend that you keep
the magnetically sensitive items
away from it.

Notice:

Do not disassemble or remove any part of the Exson M –
there are no user serviceable parts and any such process
will void the warranty.

Please keep the Exson M away from extreme heat and
fire. Do not incinerate or dispose of in fire.

Should you notice any bloating or shape changing of the
Exson M, this may indicate a damaged battery cell. In this
very unlikely event, please do not use the Exson M. We
recommend that you contact your local Wharfedale
service centre.

Please only use certified USB Type-C cables for
charging. Do not attempt to charge in any other way. This
may cause damage to the battery with risk of fire or
explosion.

Please follow the instructions for correct disposal of the
Exson M, in compliance with all local environmental laws.

Safety Instruction:

- 1) Please follow the rules outlined in this guide closely to
enjoy the Exson M fully and ensure safe operation.
- 2) The Exson M is waterproof and IPX7 rated (waterproof
at a depth of up to 1 meter for 30 minutes) but to
ensure waterproof functionality, all cables must be
removed, and the charging / aux connection cover
must be securely closed. Failure to do so will risk
damage to the speaker.
- 3) In case of any damage to the Exson M, be cautious of
any edges, uneven surface, metal parts etc to prevent
possible injury or damage.

4) Keep out of reach of children due to small parts and
choking hazard.

5) Please do not modify, repair or dismantle the product.
Incorrect handling may cause short circuit, damage
and even fire and it will void the warranty.

6) Please do not clean the speaker's surface with any
harsh bleach or cleaning solvent. The device should
only can be wiped with a clean damp cloth and mild
soap.

7) Refrain from dropping, bumping or asserting pressure
on the speaker.

8) Please do not use it in hazardous locations or around
sensitive equipment due the presence of wireless
signals which may cause interference.

9) Should any abnormal situations or problems occur
while using this product, discontinue its use
immediately.

10) Do not expose to open fire and high temperature, as
this may damage the internal circuitry and recharge-
able battery, with risk of explosion.


Introduction

Wharfedale Exson M is the ultimate versatile portable
Bluetooth® speaker for the active lifestyle. The Exson M is
loud, detailed and rumbles with bass! For the true
adventurer, the Wharfedale Exson M features a built-in
power bank and also uniquely features a high-power
LED flashlight functionality. So, unlike any other portable
Bluetooth® speaker, the Wharfedale Exson M is your
one-stop solution of portable power, torch and music for
the great outdoors!

Accessories

- 1) 1 x Exson M portable Bluetooth® speaker
- 2) 1 x type-C USB cable
- 3) 1 x user manual

Connectors

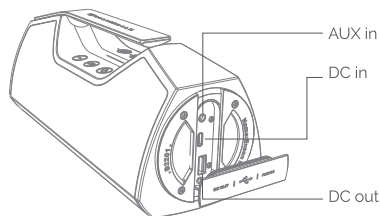


AUX in: 3.5mm stereo AUX connector for connecting auxiliary devices e.g. MP3 player, computer, laptop etc

DC in (5V $\overline{\text{---}}$ 1-3A): charge the device with USB via Type-C connector.

DC out (DC 5V $\overline{\text{---}}$ 1A): power bank charging for portable devices (phone, tablet etc).

Buttons and power indicator light

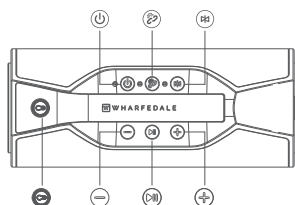

- ① Power on / off: press and hold for 2 seconds for power on. Short press to indicate current battery charge.
- ② TWS on / off: connect two Exson M speakers by short pressing this button on each device. Short press the TWS button again to exit TWS mode and unlink two speakers.

③ Bluetooth[®] on / off: short press to turn on the Bluetooth[®] mode. Short press again the button to turn off the Bluetooth[®] mode.

⊞ Power indicator light: visible when speaker is on.
White: dump energy $\geq$ 75%.
Blue: dump energy 25% - 75%.
Red: low battery / time to recharge

⊕ Increase volume / next song: short press to increase the volume. Press and hold for 2 seconds to play the next music.

⊞ Play / pause: short press to play or pause. When answering the phone call, short press to receive the call and activate the speakerphone. Short press again to end the call. Press and hold for 2 seconds to refuse a call.

⊖ Decrease volume / previous song: short press to decrease the volume. Press and hold for 2 seconds to play the previous song.

⊞ Emergency LED light switch

Connect to a Bluetooth[®] device

- 1) The first time you connect your Bluetooth[®] device to Exson M, you need to pair your device to this portable speaker.
- 2) Make sure your playback source device (eg. phone, tablet or computer) has Bluetooth[®] connectivity turned, then press the Bluetooth[®] button on the Exson M to activate pairing.
- 3) Simply view the Bluetooth[®] device list on your playback device and select 'Exson M'.
- 4) If your device asks for a password, enter '0000' for the password if necessary. The Exson M will notify you of successful pairing with a sound alert to confirm.

True Wireless Stereo connection (TWS)

- 1) To activate the TWS mode, press and hold for 2 seconds until the white indicator light flashes on the first Exson Bluetooth[®] speaker.

2) Repeat similarly on the second Exson Bluetooth[®] speaker.

3) Once both are successfully connected, a steady white indicator light is shown and you will hear a short beep notification.

4) Press the TWS button again to exit TWS mode and disconnect the two speakers.

A: Check whether the battery is charged.

If playing via AUX input check whether the AUX line is connected correctly to your playback device. Finally, if still no sound or connection, press the "Restart" button located inside the AUX IN port

2) Q: Speaker has sound distortion at high volume.

A: Please check the battery is adequately charged.

A: Please check whether AUX line input is well connected and not damaged.

FAQs

Please refer to the following for simple troubleshooting. For further questions visit Wharfedale.co.uk or contact your local Wharfedale distributor or dealer.

1) Q: The Exson M powers on but no music or sound

A: Check to confirm speaker is powered on (e.g. LEDs on, buttons illuminated).

A: Check to confirm the Bluetooth[®] connection is complete (i.e. Exson M shows as connected in your Bluetooth[®] settings on your playback device)

For technical support, servicing or product queries and information please contact your local service centre.

For international regions:
IAG House, 13/14 Glebe Road, Huntingdon,
Cambridgeshire, PE29 7DL, UK.

Tel: +44 (0) 1480 452561
Eml: service@wharfedale.co.uk