 


Exson Pro

Portable Bluetooth® Speaker / Power Bank

W H A R F E D A L E

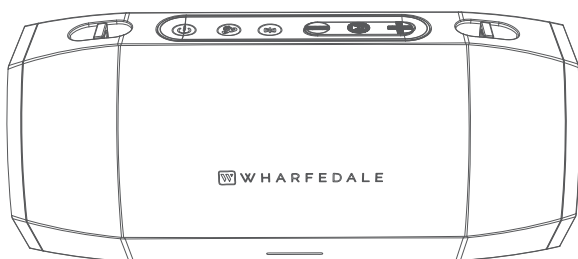


USER MANUAL



Warning:

This product contains magnets. We recommend that you keep the magnetically sensitive items away from it.

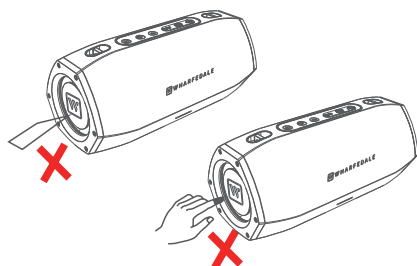

Notice:

Do not disassemble or remove any part of the Exson Pro – there are no user serviceable parts and any such process will void the warranty.

Please keep the Exson Pro away from extreme heat and fire. Do not incinerate or dispose of in fire.

Should you notice any bloating or shape changing of the Exson Pro, this may indicate a damaged battery cell. In this very unlikely event, please do not use the Exson Pro. We recommend that you contact your local Wharfedale service centre.

Please only use certified USB Type-C cables for charging. Do not attempt to charge in any other way. This may cause damage to the battery with risk of fire or explosion.

Please follow the instructions for correct disposal of the Exson Pro, in compliance with all local environmental laws.

Safety Instruction

- 1) Please follow the rules outlined in this guide closely to enjoy the Exson Pro fully and ensure safe operation.
- 2) The Exson Pro is waterproof and IPX7 rated (waterproof at a depth of up to 1 metre for 30 minutes) but to ensure waterproof functionality, all cables must be removed, and the charging / aux connection cover must be securely closed. Failure to do so will risk damage to the speaker.
- 3) In case of any damage to the Exson Pro, be cautious of any edges, uneven surface, metal parts etc to prevent possible injury or damage.
- 4) Keep out of reach of children due to small parts and choking hazard.
- 5) Please do not modify, repair or dismantle the product. Incorrect handling may cause short circuit, damage and even fire and it will void the warranty.
- 6) Please do not clean the speaker's surface with any harsh bleach or cleaning solvent. The device should only can be wiped with a clean damp cloth and mild soap.
- 7) Refrain from dropping, bumping or asserting pressure on the speaker.
- 8) Please do not use it in hazardous locations or around sensitive equipment due the presence of wireless signals which may cause interference.
- 9) Should any abnormal situations or problems occur while using this product, discontinue its use immediately.
- 10) Do not expose to open fire and high temperature, as this may damage the internal circuitry and rechargeable battery, with risk of explosion.


Introduction

Wharfedale Exson Pro is a portable Bluetooth® speaker that offers an excellent combination of portability and tremendous sound performance. A high-volume output, dual Wharfedale radiators and a Maxx Bass DSP, ensure the tunes are loud with deep bass extension. A built-in high-capacity rechargeable battery and power bank will keep the music playing all day or all night and also charge your mobile phone or tablet devices. The True Wireless Stereo (TWS) pairing capability enables streaming across two Wharfedale Exson Pro speakers for increased volume and a genuine immersive stereo sound. The Wharfedale Exson Pro is also IPX7 rated – waterproof and drop-proof – enjoy your music anywhere!

Accessories

- 1) 1 x Exson Pro portable Bluetooth® speaker
- 2) 1 x power adapter
- 3) 1 x carrying strap
- 4) 1 x user manual

Connectors

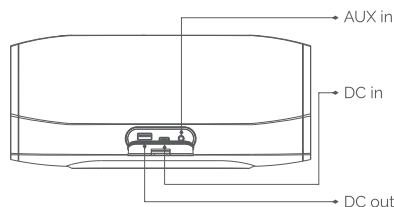


AUX in: 3.5mm stereo AUX connector for connecting auxiliary devices e.g. MP3 player, computer, laptop etc

DC in (12V $\approx$ 2-3A): charge the device with USB via Type-C connector.

DC out (DC 5V $\approx$ 500mA-1.5A): power bank charging for portable devices (phone, tablet etc).

Buttons and power indicator light

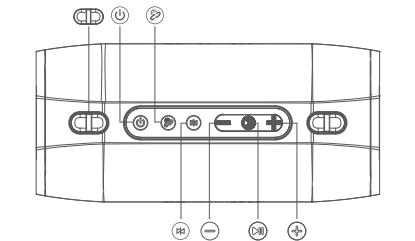

- 1 Carrying loop: lock the shoulder carrying strap here. The length of the strap can be adjusted by loosening or tightening the buckle.
- 2 Power on / off: press and hold for 3 seconds for power on. Short press to indicate current battery charge.

- 3 TWS on / off: connect two Exson Pro speakers by short pressing this button on each device. Short press the TWS button again to exit TWS mode and unlink two speakers.
- 4 Bluetooth® on / off: short press to turn on the Bluetooth® mode. Short press again the button to turn off the Bluetooth® mode.
- 5 Decrease volume / previous song: short press to decrease the volume. Press and hold for 3 seconds to play the previous song.
- 6 Play / pause: short press to play or pause. When answering the phone call, short press to receive the call and activate the speakerphone. Short press again to end the call. Press and hold for 3 seconds to refuse a call.
- 7 Increase volume / next song: short press to increase the volume. Press and hold for 3 seconds to play the next music.

- Power indicator light: visible when speaker is on.
White: dump energy ≥ 75%.
Blue: dump energy 25% - 75%.
Red: low battery / time to recharge

Connect to a Bluetooth® device

- 1) The first time you connect your Bluetooth® device to Exson Pro, you need to pair your device to this portable speaker.
- 2) Make sure your playback source device (eg. phone, tablet or computer) has Bluetooth® connectivity turned, then press the Bluetooth® button on the Exson Pro to activate pairing.
- 3) Simply view the Bluetooth® device list on your playback device and select 'Exson Pro'.
- 4) If your device asks for a password, enter '0000' for the password. The Exson Pro will notify you of successful pairing with a sound alert to confirm.

True Wireless Stereo connection (TWS)

- 1) To activate the TWS mode, press and hold for 2 seconds until the white indicator light flashes on the first Exson Bluetooth® speaker.
- 2) Repeat similarly on the second Exson Bluetooth® speaker.
- 3) Once both are successfully connected, a steady white indicator light is shown and you will hear a short beep notification.
- 4) Press the TWS button again to exit TWS mode and disconnect the two speakers.

FAQs

Please refer to the following for simple troubleshooting. For further questions visit Wharfedale.co.uk or contact your local Wharfedale distributor or dealer.

- Q: The Exson Pro powers on but no music or sound
- A: Check to confirm speaker is powered on (e.g. LEDs on, buttons illuminated.)
- A: Check to confirm the Bluetooth® connection is complete (i.e. Exson Pro shows as connected in your Bluetooth® settings on your playback device)
- A: Check whether the battery is charged.
If playing via AUX input check whether the AUX line is connected correctly to your playback device. Finally, if still no sound or connection, press the "Restart" button located inside the AUX IN port
- Q: Speaker has sound distortion at high volume.
- A: Please check the battery is adequately charged.
- A: Please check whether AUX line input is well connected and not damaged.

For technical support, servicing or product queries and information please contact your local service centre.

For international regions:
IAG House, 13/14 Glebe Road, Huntingdon,
Cambridgeshire, PE29 7DL, UK.

Tel: +44 (0) 1480 452561
Eml: service@wharfedale.co.uk