

Whirlpool® Top Mount Refrigerator

PRODUCT MODEL NUMBERS

ET4WSKXK
 ET6WSKYK

 
ET4WSKYK
 ET6WSMXK

ET5WSEXK
 ET8AHKXP

ET6WSKXK


Electrical: A 115 Volt, 60 Hz., AC only 15 or 20 amp fused (or circuit breaker), grounded electrical supply is required. It is recommended that a separate circuit serving only your refrigerator be provided. Use an outlet that cannot be turned off by a switch. Do not use an extension cord.

OVERALL DIMENSIONS

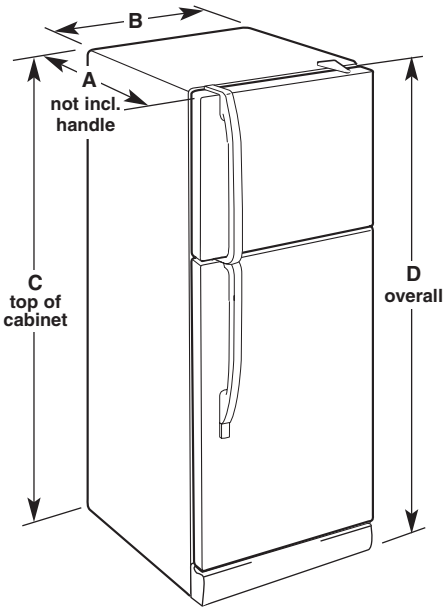

Model size	Depth "A"	Width "B"	Cab. Height "C"	Overall Height "D"
14 cu.ft.	29 3/4"	28"	62 1/8"	62 3/4"
15 cu.ft.	31 1/8"	28"	62 1/8"	62 3/4"
16 cu.ft.	31 1/8"	28"	65 1/4"	65 3/4"
18 cu.ft.	31 1/8"	28"	67 3/8"	67 7/8"

 LOCATION REQUIREMENTS

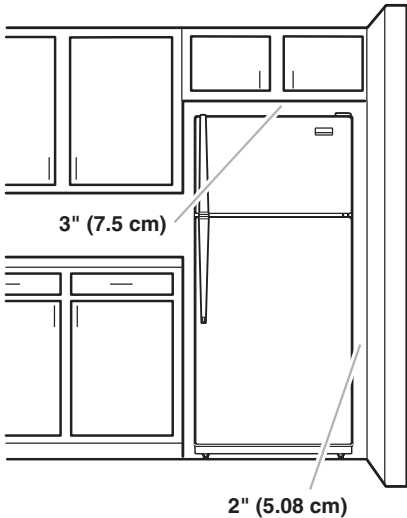

To ensure proper ventilation for your refrigerator, allow for 1/2 in. (1.25 cm) space on each side, 3 in. (7.5 cm) at the top, and 1 in. (2.5 cm) at the back. (At the top, when using half depth cabinet, use top of cabinet height "C" dimension. When using full depth cabinet, use overall "D" dimension.) When installing your refrigerator next to a fixed wall, leave 2 in. (5.08 cm) minimum on hinge side (depending on your model) to allow for the door to swing open.

NOTE: Do not install the refrigerator near an oven, radiator, or other heat source, nor in a location where the temperature will fall below 40°F (5°C).