

1 YEAR LIMITED WARRANTY

Your Wolfgang Puck Wine Set is warranted to be free of defects under normal household use for a period of one year from the date of original purchase to the original purchaser.

This warranty excludes damage caused by accident, misuse or abuse and does not apply to scratches, stains, chips or other damage which does not impair the functionality of the wine set.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Proof of purchase required to validate the warranty.

Shipping and handling charges may apply.

For questions or concerns please contact customer service at:

W.P. Productions, Inc. • P.O. Box 3150 • Hallandale, FL 33008

Toll-free: 800-275-8273 • Hours: M - F 8:30am - 5:00pm EST
www.wphousewares.com • Printed in China

WOLFGANG PUCK

USE AND CARE

6 PIECE WINE SET



*Set Includes:
Wine Opener with built-in Foil Cutter, Champagne Recorker, Wine Aerator,
Wine Stopper and two replacement Corkscrews*



Wolfgang Puck

6 Piece Wine Set Use and Care

Before Your First Use

Before using your Wolfgang Puck Wine Opener and Wine Accessories, wipe clean with a damp sponge or cloth. Dry immediately.

Using The Foil Cutter

The Foil Cutter is built into the back handle of your Wine Opener (see Figure 1). To use, raise the top handle of the Wine Opener then position the back handle firmly against the foil cap of your wine bottle. Squeeze the front handle of the Wine Opener against the foil cap and turn to each side. Once the foil has been cut, release the handle then carefully remove the foil from the wine bottle.

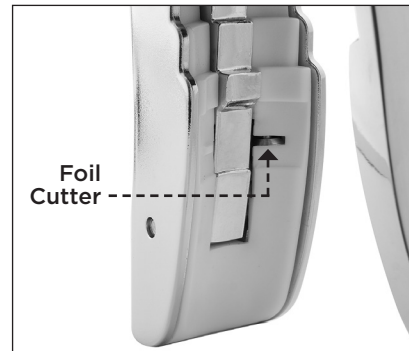


Figure 1

Using Your Wolfgang Puck Wine Opener

- Step 1 Remove the foil cap according to the instructions above. If your wine bottle is also sealed with wax, remove completely.
- Step 2 Raise the top handle of the Wine Opener and place over the wine bottle.
- Step 3 With one hand squeeze the front handle of the Wine Opener around the neck of the bottle. With your other hand bring the top handle down, carefully inserting the corkscrew into the center of the cork.
- Step 4 Slowly lift the top handle back until the cork is fully released from the bottle. Older corks may be fragile so use extreme caution.
- Step 5 To remove the cork from the corkscrew, firmly grip the cork with the front handle. In one smooth motion raise the top handle up and then back down. The cork will eject from the wine opener. Never manually remove the cork from the wine opener.

Replacing the Corkscrew

When your wine opener becomes more difficult to use it is a good sign the corkscrew needs to be replaced. To do so, lift the top handle up and untwist the knob under the handle. Lift the corkscrew out and insert the new corkscrew through the screw guide. Replace the knob and tighten.

In the beginning, there was Wolfgang Puck. There were cooks and there were kitchens and there were people eating food, but the world had never seen anything like Spago—with its California cuisine, its casual elegance, and its chef whose genuine warmth and love of craft redefined the dining experience. And they came—from LA and from everywhere—to experience the future. Wolfgang Puck shaped the modern culinary landscape: he was the first celebrity chef, the inventor of fusion cuisine, the first in farm-to-table. His work is inspired by California living, and an insistence on only the freshest ingredients. From his legendary fine dining icons, his entrepreneurial spirit has built an empire—from dining, to catering, to products for the home—touching the lives of millions around the globe. Today, as always, Chef Puck is earnestly, restlessly, tirelessly at work behind the scenes inventing what's next. He is driven by a genuine love of his craft, a passion for what's possible, and its potential to change the world.

Using Your Wolfgang Puck Champagne Recorker

- Step 1 Pull wings up to open.
- Step 2 Place rubber seal end on bottle top and push down.
- Step 3 Fold wings down to latch for secure seal.
- Step 4 Pull wings up while pressing downward to release seal.

Using Your Wolfgang Puck Wine Aerator/Pourer

The Wolfgang Puck Wine Aerator conveniently fits into the neck of a wine bottle decanting the wine as you pour. To use, simply insert the end of the wine aerator into the opening of the bottle, so that the rubber seal fits firmly inside. As you pour, the proper amount of air mixes into the wine resulting in a richer flavor and an enhanced bouquet.

Using Your Wolfgang Puck Wine Stopper

A Wine Stopper helps preserve your leftover wine. The rubber ring around the middle of the stopper fits snugly into the opening of the wine bottle forming an airtight seal which reduces oxidation. To use, simply place the Wine Stopper into the opening of the bottle so that the airtight rubber seal fits firmly inside.

Cleaning

To clean your Wine Opener and Wine Accessories, wipe with a damp sponge or cloth. Dry immediately. **DO NOT PLACE IN THE DISHWASHER.**

It is recommended to regularly clean the corkscrew to prevent build-up of cork or wine sediment.

To clean your wine set storage box wipe with a damp cloth and dry immediately. Do not submerge in water or use harsh cleaners.

Warnings

**Your Wine Opener and Wine Accessories are not toys.
KEEP OUT OF THE REACH OF CHILDREN.**

Do not use your Wine Opener without first removing the foil cap and/or wax from the wine bottle. This can damage the Wine Opener.

Your Wine Opener is not designed to recork an open bottle of wine. Doing so can damage the Wine Opener.

Never oil or grease your Wine Opener.