

Flex Canopy

Features & Instructions

Features



Unparalleled coverage & protection from harmful UV rays



Customizable to fit your specific needs



Removable front and back panels



Convertible side panels with mesh windows



Convenient storage pockets


Parts Check List



Flex Canopy - 1 pc



Front & Back Panels
1 pc each

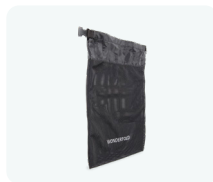

Storage Bag - 1 pc

Patent Pending

If there are any missing or broken parts or in need of immediate assistance in assembling your accessory. Please contact us at hello@wonderfold.com.

Flex Canopy

Features & Instructions

Attaching the Flex Canopy



Unlock all 4 canopy locks.



Take standard Canopy Fabric and Canopy Rods off of the stroller wagon if they are still installed.



Remove Canopy Fabric off of the Canopy Rods by sliding the ends of the fabric out of the rod. Store Canopy Fabric in rear basket.



Take each Canopy Rod and slide the ends all the way through on to both sides of the large piece from the Flex Canopy.



Insert Canopy Rods with the large Flex Canopy piece into the stroller wagon



Once the canopy is in place, lock all 4 canopy locks.



Use the zippers on the two end pieces of the Flex Canopy to attach to the large piece installed on the stroller wagon.

!WARNING!

- **Air Circulation:**
The Flex Canopy is designed to provide shade and protection. Although we use breathable fabric, it can still restrict air circulation in certain conditions. Be mindful of the temperature inside the stroller wagon and monitor your child's comfort. If the weather is hot or humid, consider partially or fully converting the Flex Canopy from full coverage to mesh windows.
- Do not exceed the storage pockets weight limit of 2.2 lbs (1 kg)